



ViTAM-8XX Series

**10.1", 12.1", 15", 15.6", 17", 19", 21.5", and 23.8" New Gen. IP66/IP69K
Stainless Steel Panel PC**

User Manual

Release Date

Revision

May 2020

V1.9

©2020 Aplex Technology, Inc.

All Rights Reserved.

Published in Taiwan

Aplex Technology, Inc.

15F-1, No.186, Jian Yi Road, Zhonghe District, New Taipei City 235, Taiwan

Tel: 886-2-82262881 Fax: 886-2-82262883 URL: <http://www.aplextec.com/zh/home.php>

Revision History

| Reversion | Date | Description |
|-----------|------------|---|
| 0.1 | 2016/12/14 | For Preliminary Release |
| 0.2 | 2016/12/22 | Update power consumption and net weight |
| 1.0 | 2017/01/10 | Official Version |
| 1.1 | 2017/03/07 | Revised VESA mounting size for 24" |
| 1.2 | 2017/07/28 | Add I/O drawing and definition |
| 1.3 | 2017/11/07 | Add UPS battery |
| 1.4 | 2018/02/14 | Modify LCD description |
| 1.5 | 2018/03/20 | Modify LCD inch of 824 |
| 1.6 | 2018/11/01 | Modify Operating temperature |
| 1.7 | 2018/11/22 | Revise Backlight Lifetime information |
| 1.8 | 2019/07/31 | Add Logistic Statement Modify SBC-7111 Information |
| 1.9 | 2020/05/20 | Modify 1.1 Spec. data |

Warning!

This equipment will generate, use and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at its own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

Caution

Risk of explosion if the battery is replaced with an incorrect type.

Batteries should be recycled where possible. Disposal of used batteries must be in accordance with local environmental regulations.

Disclaimer

This information in this document is subject to change without notice. In no event shall Apex Technology Inc. be liable for damages of any kind, whether incidental or consequential, arising from either the use or misuse of information in this document or in any related materials.

Packing List

| Accessories (as ticked) included in this package are: |
|--|
| <input type="checkbox"/> Adaptor |
| <input type="checkbox"/> Driver & manual CD disc |
| <input type="checkbox"/> Other. _____ (please specify) |

Safety Precautions

Follow the messages below to prevent your systems from damage:

- ◆ Avoid your system from static electricity on all occasions.
- ◆ Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- ◆ Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

Dear Valued Partners

Thank you for supporting APLEX Technology. Kindly note for ViTAM series, the pressure testing screw is loosen for half turn before shipment. The purpose is to avoid potential quality concerns caused by radical air pressure change during transportation. This especially applies to air shipment with unpressurized cabin.

Upon receiving the system, please tighten the pressure testing screw before deployment to ensure 100% functionality.

Here is our suggestion:

1. Prepare a 3mm hex screwdriver
2. Tighten the screw (indicated in circle) clockwise until it is well in place
3. Recommend torque is 8~10 kgf-cm

Apologies for any inconveniences caused and thank you for your cooperation.

Yours Sincerely



Table of Contents

| | |
|----------------------------------|---|
| Revision History..... | 1 |
| Warning!/Caution/Disclaimer..... | 2 |
| Packing List..... | 3 |
| Safety Precautions..... | 4 |
| Logistic Statement..... | 5 |

Chapter 1 Getting Started

| | |
|--|----|
| 1.1 Features..... | 8 |
| 1.2 Specifications..... | 8 |
| 1.3 Dimensions..... | 14 |
| 1.4 Brief Description of ViTAM-8XX Series..... | 18 |
| 1.5 Yoke Mounting and VESA Mounting..... | 19 |

Chapter 2 Hardware

| | |
|--|----|
| 2.1 Motherboard Introduction..... | 20 |
| 2.2 Specifications..... | 20 |
| 2.3 Jumpers and Connectors Location..... | 24 |
| 2.4 Jumpers Setting and Connectors..... | 25 |

Chapter 3 BIOS Setup

| | |
|---------------------------------------|----|
| 3.1 Operations after POST Screen..... | 39 |
| 3.2 BIOS Setup Utility..... | 39 |
| 3.3 Main Settings..... | 40 |
| 3.4 Advanced Settings..... | 41 |
| 3.5 Chipset Settings..... | 48 |
| 3.6 Security Settings..... | 50 |
| 3.7 Boot Settings..... | 52 |
| 3.8 Save & Exit Settings..... | 53 |

Chapter 4 Installation of Drivers

| | |
|--|----|
| 4.1 Intel® Atom™ SoC Chipset | 55 |
| 4.2 Intel® VGA Chipset..... | 59 |
| 4.3 Intel® LAN Driver..... | 63 |
| 4.4 Realtek ALC662 HD Audio Driver Installation..... | 66 |
| 4.5 USB 3.0 Driver..... | 67 |
| 4.6 Com Driver..... | 70 |

Chapter 5

Touch Screen Installation

| | |
|---|----|
| 5.1 Windows 7/8.1/10 Universal Driver Installation for PenMount 6000 Series..... | 73 |
| 5.2 Software Functions..... | 82 |

Figures

| | |
|--|----|
| Figure 1.1: Dimensions of ViTAM-810P/R/G(H)..... | 14 |
| Figure 1.2: Dimensions of ViTAM-812P/R/G(H)..... | 14 |
| Figure 1.3: Dimensions of ViTAM-815P/R/G(H)..... | 15 |
| Figure 1.4: Dimensions of ViTAM-816P/R/G(H)..... | 15 |
| Figure 1.5: Dimensions of ViTAM-817P/R/G(H)..... | 16 |
| Figure 1.6: Dimensions of ViTAM-819P/R/G(H)..... | 16 |
| Figure 1.7: Dimensions of ViTAM-821P/R/G(H)..... | 17 |
| Figure 1.8: Dimensions of ViTAM-824P/G(H)..... | 17 |
| Figure 1.9: Front View and Touch on/off Button of ViTAM-8XX Series.. | 18 |
| Figure 1.10: Rear View of ViTAM-8XX Series..... | 18 |
| Figure 1.11: Yoke Mounting of ViTAM-8XX Series..... | 19 |
| Figure 1.12: VESA Mounting of ViTAM-8XX Series..... | 19 |
| Figure 2.1: Motherboard Dimensions..... | 23 |
| Figure 2.2: Jumpers and Connectors Location-Board Top..... | 24 |
| Figure 2.3: Jumpers and Connectors Location-Board Bottom..... | 24 |


Chapter 1

Getting Started

1.1 Features

- 10.1"/12.1"/15"/15.6"/17"/19"/21.5"/23.8" New Gen. Stainless Steel Panel PC
- Intel Celeron N2930 1.83GHz onboard processor
- True Flat Front Bezel Design and Grade 304 Stainless Steel Enclosure (Grade 316 for option)
- IP66/IP69K Rated with M12 Connectors
- Support Resistive Touch, Projected Capacitive Touch, and Glass
- Touch on/off Button on the Side Edge for Hygienic Cleaning
- Support Ergonomic Versatile Mounting: Yoke mounting / space-saving VESA mounting

1.2 Specifications

| | | ViTAM-8XX Series | | | | | | | | | | | | | | | | | | | |
|--|---|---|-----|------------|---|---------|---|-----|---|-----|---|-----|---|---------|---|-----|---|-----|---|-----|---|
| System | | | | | | | | | | | | | | | | | | | | | |
| CPU | Onboard Intel Celeron N2930(1.83GHz) Processor | | | | | | | | | | | | | | | | | | | | |
| Chipset | SoC | | | | | | | | | | | | | | | | | | | | |
| Memory | Onboard 4GB DDR3L SDRAM/8GB (option) | | | | | | | | | | | | | | | | | | | | |
| Outside IO Port – Standard M12 I/O Connector on the Rear Side | | | | | | | | | | | | | | | | | | | | | |
| USB | 1 x M12 for USB 2.0 with waterproof cover and chain | <table border="1"> <thead> <tr> <th>CN1</th> <th>Pin Define</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>USB1 5V</td> </tr> <tr> <td>3</td> <td>D1-</td> </tr> <tr> <td>4</td> <td>D1+</td> </tr> <tr> <td>7</td> <td>GND</td> </tr> <tr> <td>2</td> <td>USB2 5V</td> </tr> <tr> <td>5</td> <td>D2-</td> </tr> <tr> <td>6</td> <td>D2+</td> </tr> <tr> <td>8</td> <td>GND</td> </tr> </tbody> </table> | CN1 | Pin Define | 1 | USB1 5V | 3 | D1- | 4 | D1+ | 7 | GND | 2 | USB2 5V | 5 | D2- | 6 | D2+ | 8 | GND |  <p>Pin Assignments Front View 正视图</p> |
| CN1 | Pin Define | | | | | | | | | | | | | | | | | | | | |
| 1 | USB1 5V | | | | | | | | | | | | | | | | | | | | |
| 3 | D1- | | | | | | | | | | | | | | | | | | | | |
| 4 | D1+ | | | | | | | | | | | | | | | | | | | | |
| 7 | GND | | | | | | | | | | | | | | | | | | | | |
| 2 | USB2 5V | | | | | | | | | | | | | | | | | | | | |
| 5 | D2- | | | | | | | | | | | | | | | | | | | | |
| 6 | D2+ | | | | | | | | | | | | | | | | | | | | |
| 8 | GND | | | | | | | | | | | | | | | | | | | | |
| Serial/Parallel | 1 x M12 for RS-232/422/485, Default RS-232 | | | | | | | | | | | | | | | | | | | | |

| | <table border="1"> <tr> <td>CN1</td> <td>RS-232/422/485</td> <td>CN2</td> </tr> <tr> <td>1</td> <td>DCD / 422R+</td> <td>1</td> </tr> <tr> <td>2</td> <td>RXD / 422R-</td> <td>2</td> </tr> <tr> <td>3</td> <td>TXD / 422T- / 485-</td> <td>3</td> </tr> <tr> <td>4</td> <td>DTR / 422T+ / 485+</td> <td>4</td> </tr> <tr> <td>5</td> <td>GND</td> <td>5</td> </tr> <tr> <td>6</td> <td>DSR</td> <td>6</td> </tr> <tr> <td>7</td> <td>RTS</td> <td>7</td> </tr> <tr> <td>8</td> <td>CTS</td> <td>8</td> </tr> </table> | CN1 | RS-232/422/485 | CN2 | 1 | DCD / 422R+ | 1 | 2 | RXD / 422R- | 2 | 3 | TXD / 422T- / 485- | 3 | 4 | DTR / 422T+ / 485+ | 4 | 5 | GND | 5 | 6 | DSR | 6 | 7 | RTS | 7 | 8 | CTS | 8 | <p>Pin Assignments Front View 正視圖</p> |
|------------------------|--|-----|----------------|-----|---------|-------------|---------|---|-------------|---------------------------------------|---------|--------------------|---------|---|--------------------|---|---------|-----|---------|---|-----|---|---|-----|---|---|-----|---|---|
| CN1 | RS-232/422/485 | CN2 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | DCD / 422R+ | 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | RXD / 422R- | 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | TXD / 422T- / 485- | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | DTR / 422T+ / 485+ | 4 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | GND | 5 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | DSR | 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | RTS | 7 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | CTS | 8 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| LAN | <p>1 x M12 8-pin for LAN with waterproof cover and chain</p> <table border="1"> <thead> <tr> <th></th> <th>Pin Define</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>LAN1_0+</td> </tr> <tr> <td>2</td> <td>LAN1_0-</td> </tr> <tr> <td>3</td> <td>LAN1_1+</td> </tr> <tr> <td>4</td> <td>LAN1_1-</td> </tr> <tr> <td>5</td> <td>LAN1_2+</td> </tr> <tr> <td>6</td> <td>LAN1_2-</td> </tr> <tr> <td>7</td> <td>LAN1_3+</td> </tr> <tr> <td>8</td> <td>LAN1_3-</td> </tr> </tbody> </table> | | Pin Define | 1 | LAN1_0+ | 2 | LAN1_0- | 3 | LAN1_1+ | 4 | LAN1_1- | 5 | LAN1_2+ | 6 | LAN1_2- | 7 | LAN1_3+ | 8 | LAN1_3- | <p>Pin Assignments Front View 正視圖</p> | | | | | | | | | |
| | Pin Define | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | LAN1_0+ | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | LAN1_0- | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | LAN1_1+ | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | LAN1_1- | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | LAN1_2+ | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | LAN1_2- | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | LAN1_3+ | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | LAN1_3- | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Power | <p>1 x DC power input (9~36V) by M12 connector</p> <table border="1"> <thead> <tr> <th></th> <th>Pin Define</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>NC</td> </tr> <tr> <td>3</td> <td>VCC</td> </tr> <tr> <td>4</td> <td>GND</td> </tr> </tbody> </table> | | Pin Define | 1 | NC | 3 | VCC | 4 | GND | <p>Pin Assignments Front View</p> | | | | | | | | | | | | | | | | | | | |
| | Pin Define | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | NC | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | VCC | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | GND | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Others | 1 x Power Switch on the rear | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Option IO Port: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Option | <p>2 x optional blank M12 connectors with waterproof cap for selecting two from the following options:</p> <ul style="list-style-type: none"> 2 x USB 2.0 via TB-528U2 1 x USB 3.0 via cable 1 x LAN (POE for option) | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | |
|---------------------------------|---|
| | 1 x COM Port via TB-528C1 1 x CAN via TB-528CAN2 |
| Storage Space | |
| HDD | 1 x 2.5" SATA3 HDD |
| Expansion | |
| Expansion Slot | 1 x Full-size mini-PCIe socket (PCIe + USB) for WIFI/BT/LTE(option) |
| RFID Module | RFID module design on the front side (optional) |
| Touch Screen | |
| Type | Resistive Touch (for R model) (not available for ViTAM-824) Projected Capacitive Touch (for P model) Glass (for G model) |
| Interface | USB |
| Light Transmission | Resistive touch window: over 80% Projected capacitive touch screen: over 90% |
| Glass Type | |
| Type | AR |
| Light Transmission | Over 90% |
| Power | |
| Power Input | DC 9~36V |
| Mechanical | |
| Color | 304 Stainless steel chassis (default) 316 Stainless steel chassis (option) |
| Construction | Stainless steel enclosure |
| IP Rating | IP66/IP69K |
| Environmental | |
| Operating temperature | 0~50°C 0~40°C(For 21.5" High Brightness model) |
| Storage temperature | -30~70°C |
| Storage humidity | 10 to 90% @ 40°C, non- condensing |
| Certification | CE / FCC Class A |
| Operating System Support | Windows Embedded 7, Windows Embedded 8.1, Windows 10 IoT ENT LTSC |

- **Power Consumption and Mechanical Specifications**

| | ViTAM-810 P/R/G/(H) | ViTAM-812 P/R/G/(H) | ViTAM-815 P/R/G/(H) | ViTAM-816 P/R/G/(H) |
|--------------------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|
| Power Consumption | | | | |
| Power Consumption | MAX: TBD(810R) MAX: 17W(810P) | MAX: 18.9W(812R) MAX: 21W(812P) | MAX: TBD(815R) MAX: 19W(815P) | MAX: TBD(816R) MAX: 24W(816P) |
| Mechanical | | | | |
| Mounting | VESA mount 75 x 75, Yoke mount | | | |
| Dimensions(mm) | 300 x 220 x 53 | 335 x 265 x 53 | 399 x 324 x 53 | 440 x 290 x 55 |
| Net Weight | 4 Kg | 5 Kg | 7.4 Kg | 7.0 Kg |

| | ViTAM-817 P/R/G/(H) | ViTAM-819 P/R/G/(H) | ViTAM-821 P/R/G/(H) | ViTAM-824 P/G/(H) |
|--------------------------|--------------------------------------|--------------------------------------|--------------------------------------|------------------------------------|
| Power Consumption | | | | |
| Power Consumption | MAX: TBD(817R) MAX: 29.2W(817P) | MAX: TBD(819R) MAX: 30W(819P) | MAX: 30W(821R) MAX: TBD(821P) | MAX: 43W (824P) |
| Mechanical | | | | |
| Mounting | VESA mount 75 x 75, Yoke mount | VESA mount 100 x 100, Yoke mount | | VESA mount 200 x 100, Yoke mount |
| Dimensions(mm) | 432 x 358 x 55 | 470 x 388.6 x 60 | 571 x 362 x 55 | 656 x 423 x 53 |
| Net Weight | 7.1 Kg | 9.5 Kg | 10 Kg | 12.5 Kg |

- **Standard LCD**

| | ViTAM-810P/ ViTAM-810R/ ViTAM-810G | ViTAM-812P/ ViTAM-812R/ ViTAM-812G | ViTAM-815P/ ViTAM-815R/ ViTAM-815G | ViTAM-816P/ ViTAM-816R/ ViTAM-816G |
|-------------------------------|---|---|---|---|
| Display | | | | |
| Display Type | 10.1" TFT LCD | 12.1" TFT LCD | 15" TFT LCD | 15.6" TFT LCD |
| Max. Resolution | 1280 x 800 | 800 x 600/ 1024 x 768(option) | 1024 x 768 | 1366 x 768 |
| Max. Color | 16.7M | 262K / 16.2M(option) | 16.2M | 16.7M |
| Luminance(cd/m ²) | 350 | 450 / 500(option) | 300 | 300 |
| Contrast Ratio | 800: 1 | 1500: 1(SVGA) 700: 1(XGA) | 2000: 1 | 500: 1 |
| Viewing angle | 170(H)/170(V) | 178(H)/780(V)-SVGA 178(H)/178(V)-XGA | 176(H)/176(V) | 160(H)/160(V) |
| Backlight Lifetime(Hrs) | 25,000 | 50,000/ 30,000 (option) | 70,000 | 50,000 |
| Option | Optical bonding | | | |

| | ViTAM-817P/ ViTAM-817R/ ViTAM-817G | ViTAM-819P/ ViTAM-819R/ ViTAM-819G | ViTAM-821P/ ViTAM-821R/ ViTAM-821G | ViTAM-824P/ ViTAM-824G |
|-------------------------------|---|---|---|-----------------------------------|
| Display | | | | |
| Display Type | 17" TFT LCD | 19" TFT LCD | 21.5" TFT LCD | 23.8" TFT LCD |
| Max. Resolution | 1280 x 1024 | 1280 x 1024 | 1920 x 1080 | 1920 x 1080 |
| Max. Color | 16.7M | 16.7M | 16.7M | 16.7M |
| Luminance(cd/m ²) | 350 | 350 | 250 | 250 |
| Contrast Ratio | 800: 1 | 1000: 1 | 3000: 1 | 3000: 1 |
| Viewing angle | 160(H)/140(V) | 170(H)/160(V) | 178(H)/178(V) | 178(H)/178(V) |
| Backlight Lifetime | 50,000 hrs | 50,000 hrs | 30,000 hrs | 30,000 hrs |
| Option | Optical bonding | | | |

- **High Brightness LCD (Option)**

| | ViTAM-810PH/ ViTAM-810RH/ ViTAM-810GH | ViTAM-812PH/ ViTAM-812RH/ ViTAM-812GH | ViTAM-815PH/ ViTAM-815RH/ ViTAM-815GH | ViTAM-816PH/ ViTAM-816RH/ ViTAM-816GH |
|-------------------------------|--|--|--|--|
| Display | | | | |
| Display Type | 10.1" TFT LCD | 12.1" TFT LCD | 15" TFT LCD | 15.6" TFT LCD |
| Max. Resolution | 1280 x 800 | 800 x 600 / 1024 x 768(option) | 1024 x 768 | 1366 x 768 |
| Max. Color | 16.7M | 262K / 16.2M(option) | 16.7M | 16.7M |
| Luminance(cd/m ²) | 1000 | 1000 | 1000 | 1000 |
| Contrast Ratio | 800: 1 | 700: 1 | 800: 1 | 800: 1 |
| Viewing angle | 170(H)/170(V) | 178(H)/178(V) / 160(H)/140(V)(option) | 160(H)/150(V) | 160(H)/160(V) |
| Backlight Lifetime(Hrs) | 50,000 | 50,000 | 50,000 | 50,000 |
| Option | Optical bonding | | | |

| | ViTAM-817PH/ ViTAM-817RH/ ViTAM-817GH | ViTAM-819PH/ ViTAM-819RH/ ViTAM-819GH | ViTAM-821PH/ ViTAM-821RH/ ViTAM-821GH | ViTAM-824PH/ ViTAM-824GH |
|-------------------------------|--|--|--|-------------------------------------|
| Display | | | | |
| Display Type | 17" TFT LCD | 19" TFT LCD | 21.5" TFT LCD | 23.8" TFT LCD |
| Max. Resolution | 1280 x 1024 | 1280 x 1024 | 1920 x 1080 | 1920 x 1080 |
| Max. Color | 16.7M | 16.7M | 16.7M | 16.7M |
| Luminance(cd/m ²) | 1000 | 1000 | 1000 | 3000 |
| Contrast Ratio | 1000: 1 | 1000: 1 | 3000: 1 | 5000: 1 |
| Viewing angle | 170(H)/160(V) | 170(H)/160(V) | 178(H)/178(V) | 178(H)/178(V) |
| Backlight Lifetime | 50,000 hrs | 50,000 hrs | 50,000 hrs | 30,000 hrs |
| Option | Optical bonding | | | |

1.3 Dimensions

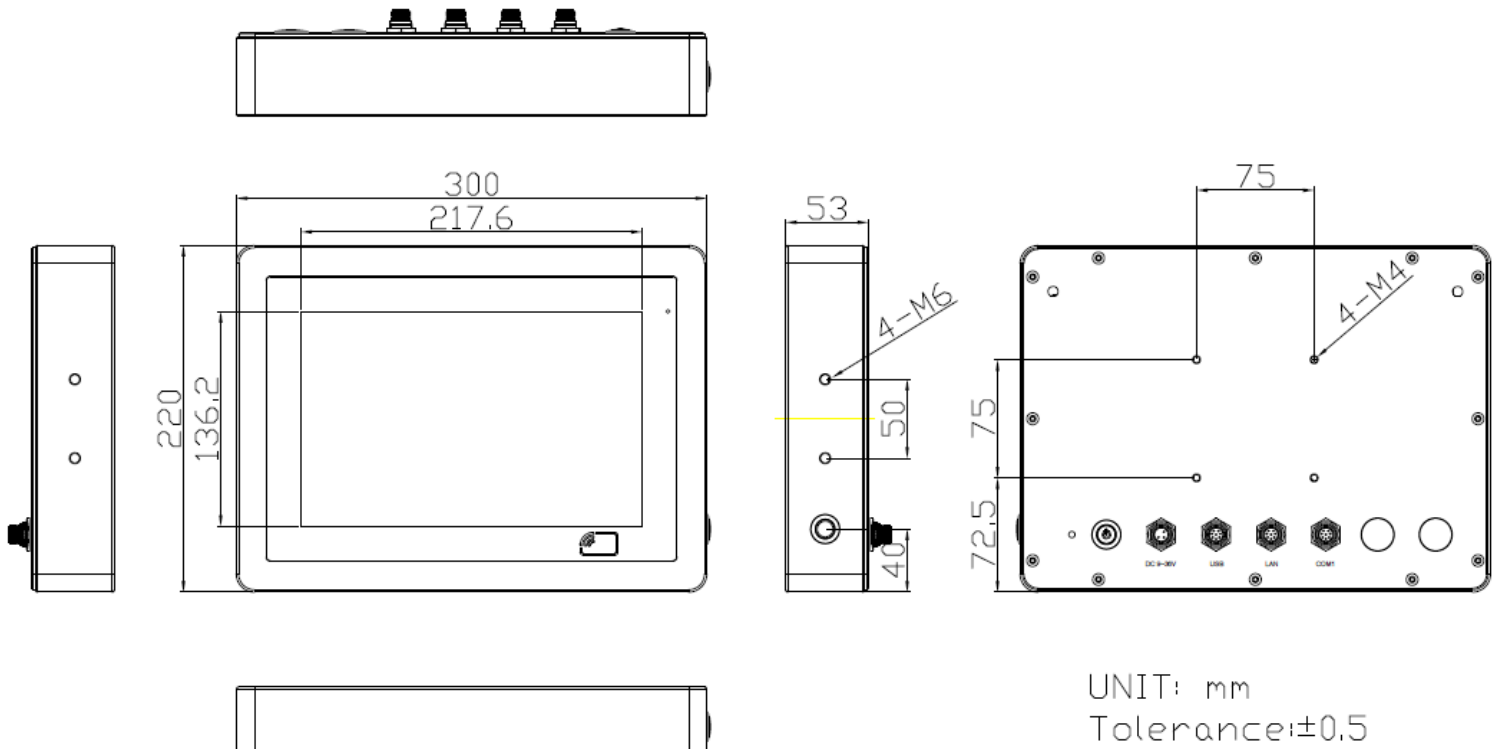


Figure 1.1: Dimensions of ViTAM-810P/R/G(H)

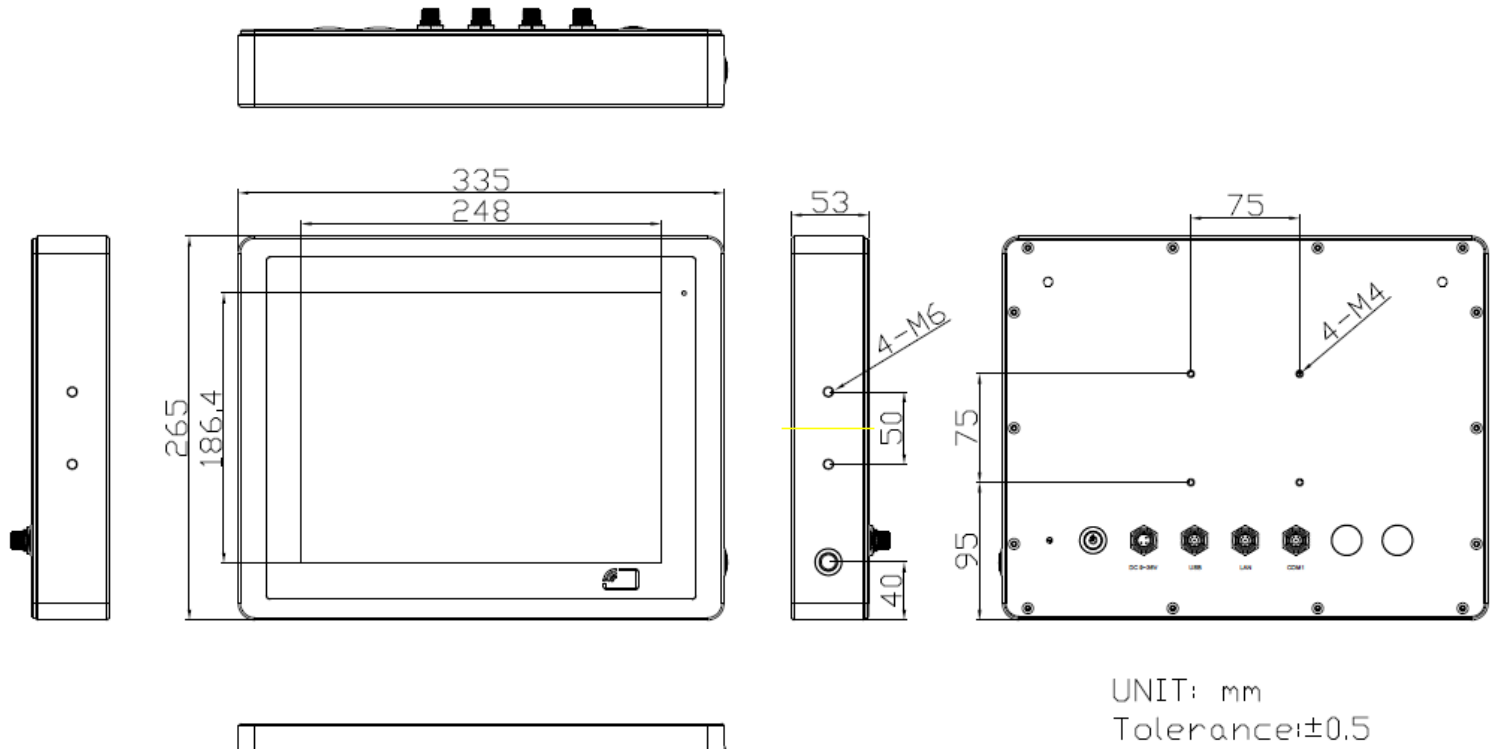


Figure 1.2: Dimensions of ViTAM-812P/R/G(H)

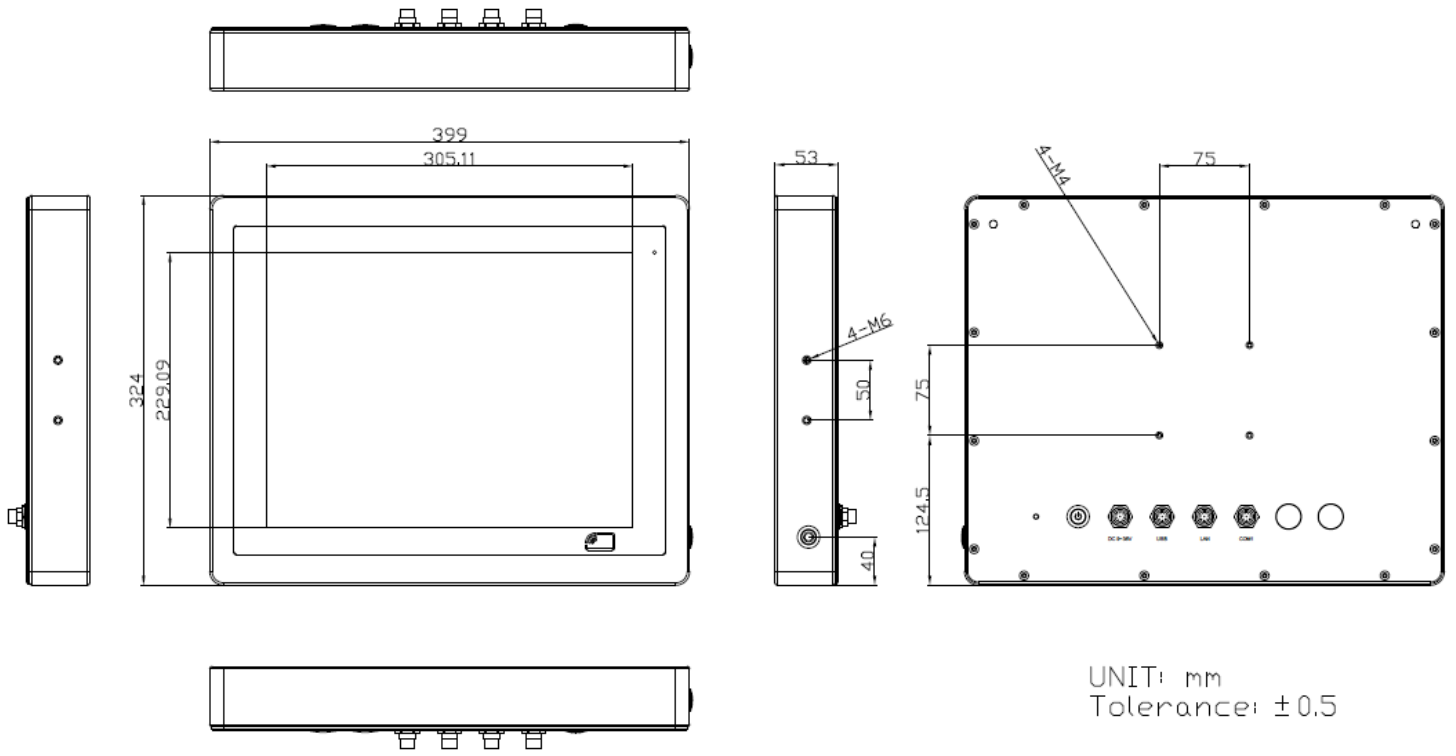


Figure 1.3: Dimensions of ViTAM-815P/R/G(H)

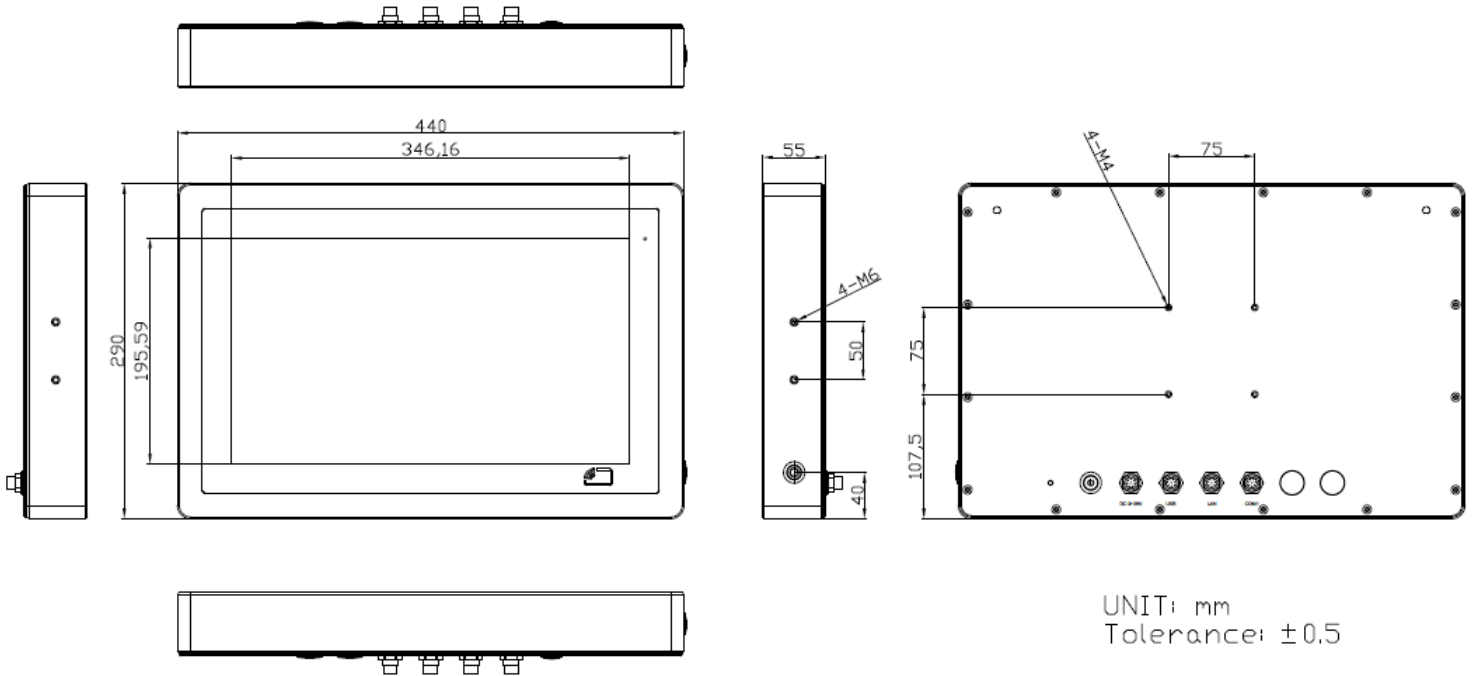


Figure 1.4: Dimensions of ViTAM-816P/R/G(H)

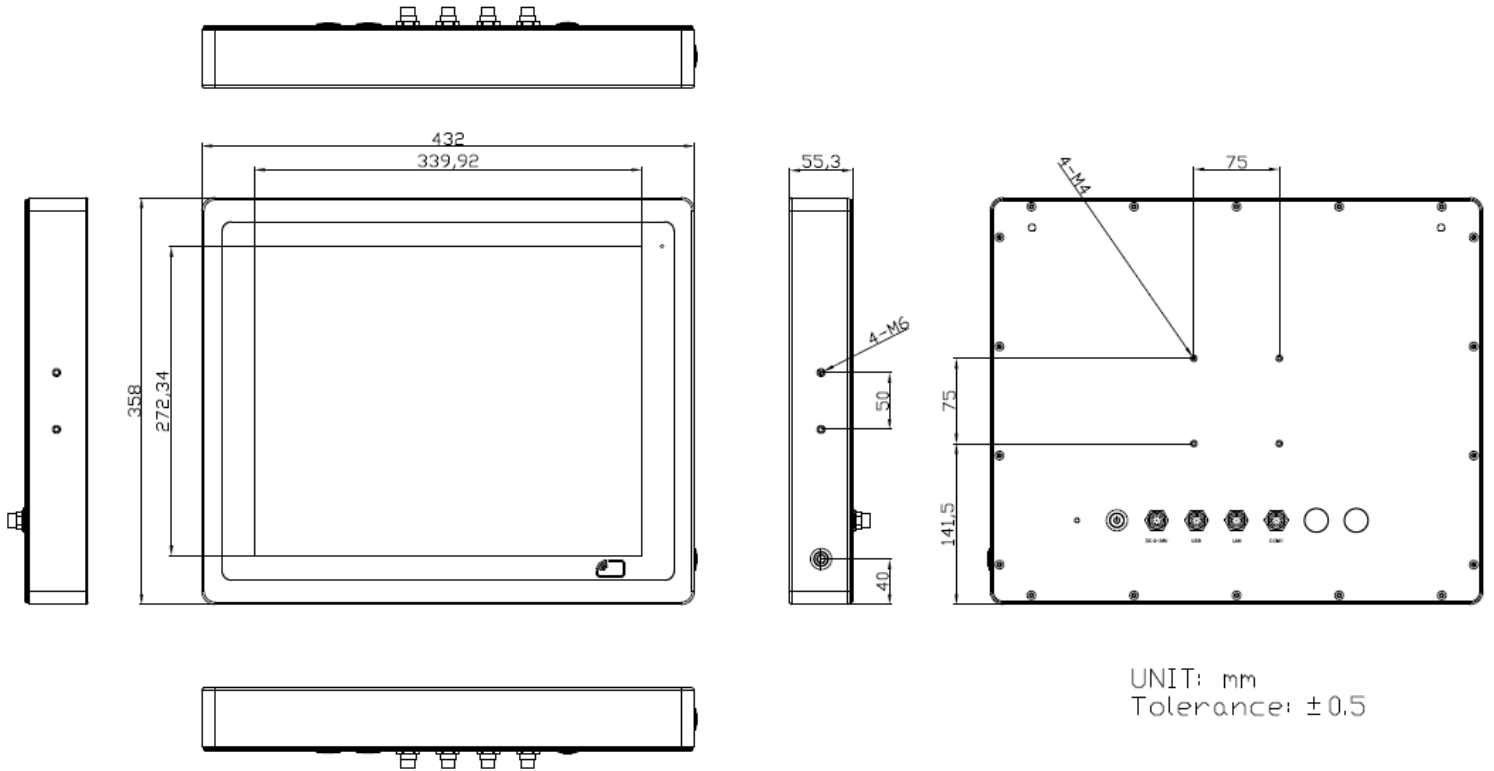


Figure 1.5: Dimensions of ViTAM-817P/R/G(H)

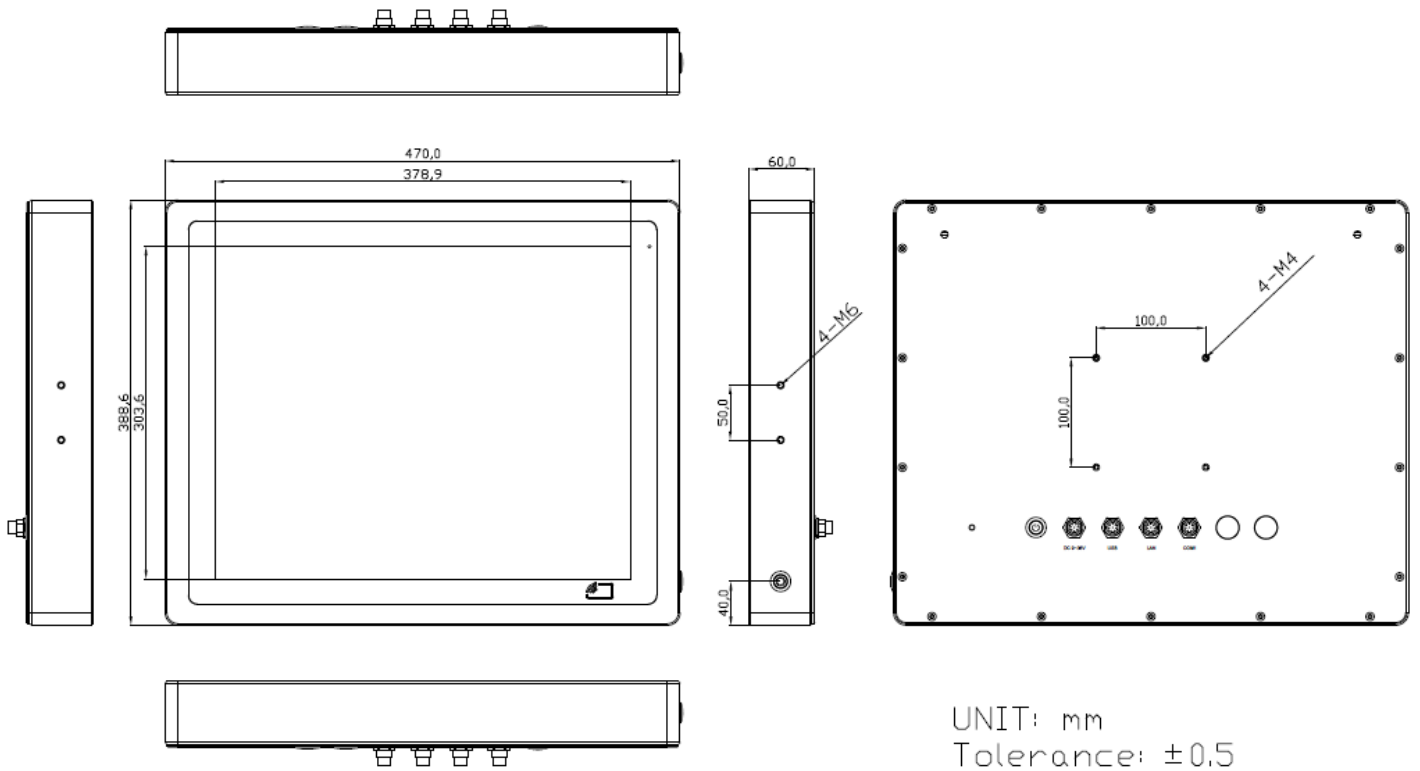


Figure 1.6: Dimensions of ViTAM-819P/R/G(H)

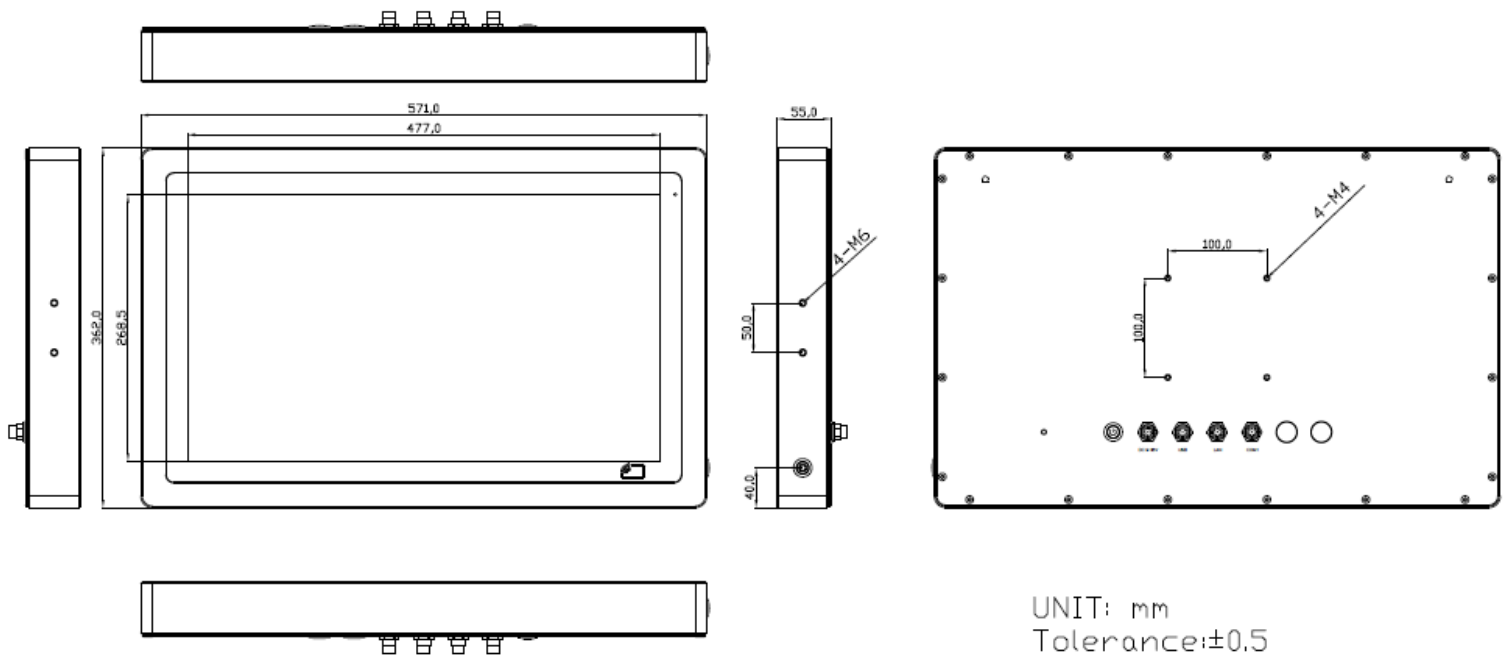


Figure 1.7: Dimensions of ViTAM-821P/R/G(H)

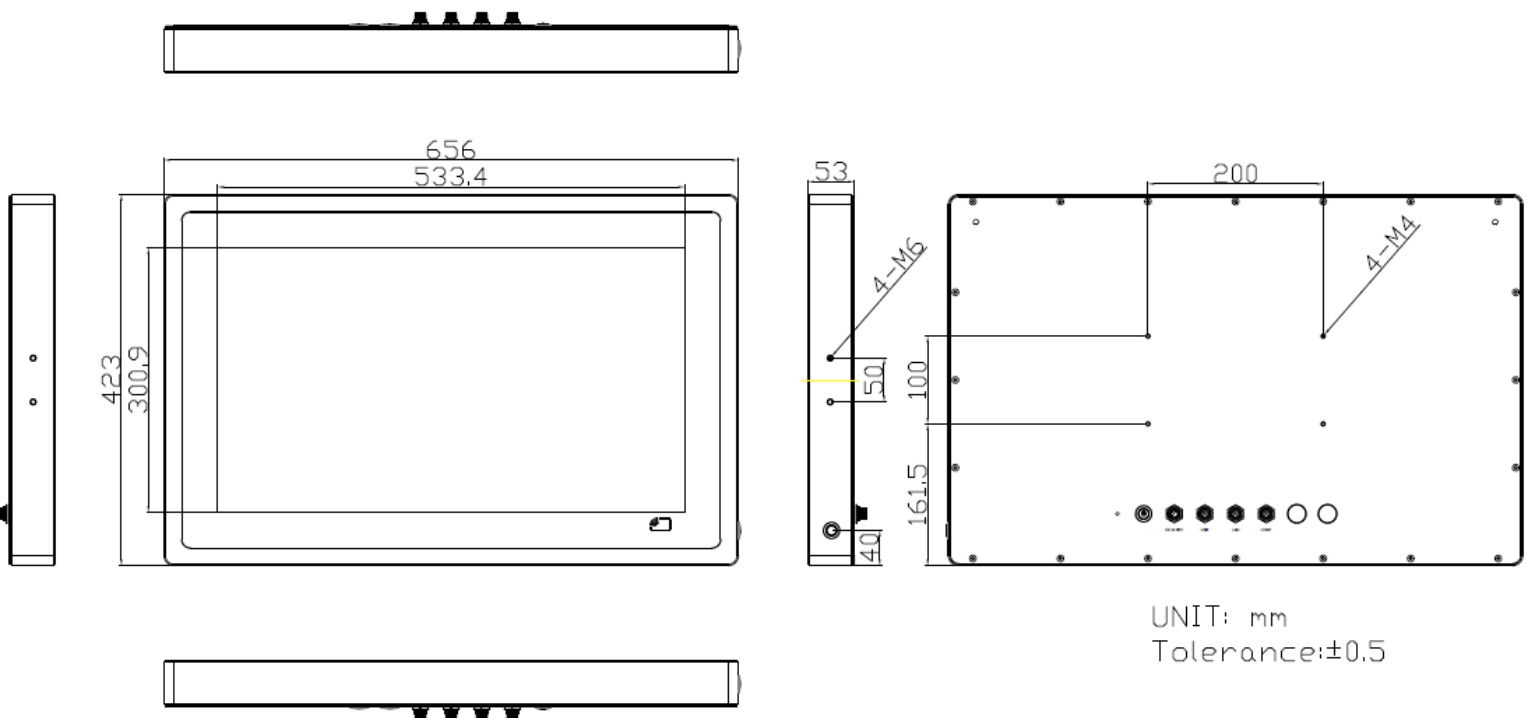


Figure 1.8: Dimensions of ViTAM-824P/G(H)

1.4 Brief Description of ViTAM-8XX Series

There are 10.1", 12.1", 15", 15.6", 17", 19", 21.5", and 23.8" new generation stainless steel panel PC in ViTAM-8XX series, which comes with true flat front bezel and fanless design. It powered by Intel Celeron N2930 processor onboard, 4GB DDR3L 1600MHz memory onboard, and 1 x 2.5" HDD/SSD space for storage. ViTAM-8XX series is wide range DC 9~36V power input and IP66/IP69K rated with M12 connectors. Furthermore, the models support resistive touch, projected capacitive touch, and glass for option, and can be high brightness LCD and optical bonding designed for option. It supports touch on/off button on the side edge for hygienic cleaning and ergonomic versatile mounting: Yoke mounting and space-saving VESA mounts.

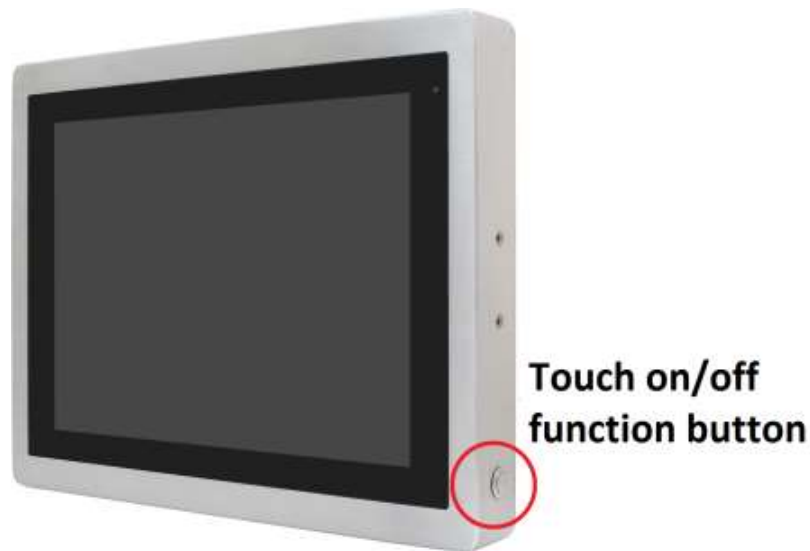


Figure 1.9: Front View and Touch on/off Button of ViTAM-8XX Series



Figure 1.10: Rear View of ViTAM-8XXP/R/G (H) Series

1.5 Yoke Mounting and VESA Mounting

The ViTAM-8XX Series model can be Yoke mounted and VESA mounted as shown in Picture below.



Figure 1.11: Yoke mounting of ViTAM-8XX Series



Figure 1.12: VESA mounting of ViTAM-8XX Series

2.1 Motherboard Introduction


SBC-7111 is a 4" industrial motherboard developed on the basis of Intel Bay trail-I/M Processors, which provides abundant peripheral interfaces to meet the needs of different customers. Also, it features dual GbE ports, 4-COM ports and one Mini PCIE configuration, one VGA port and one HDMI port, one LVDS interface. To satisfy the special needs of high-end customers, CN1, CN2 and CN3 richer extension functions. The product is widely used in various sectors of industrial control.

2.2 Specifications

| Specifications | |
|---------------------------|---|
| Board Size | 170mm x 113mm |
| CPU Support | Intel Atom E3845 / 1.91GHz (4cores, 10W, onboard) Intel Celeron N2930 / 1.83 up to 2.16GHz (4cores, option) |
| Chipset | SoC |
| Memory Support | Onboard 2GB DDR3L SDRAM (N2930, option) Onboard 4GB DDR3L SDRAM (E3845/N2930, option) Onboard 8GB DDR3L SDRAM (N2930, option) |
| Graphics | Intel® HD Graphics 313/854MHz (N2930) Intel® HD Graphics 542/792MHz (E3845) |
| Display Mode | 1 x HDMI Port 1 x LVDS (18/24-bit dual LVDS) 1 x CRT Port |
| Support Resolution | Up to 1920 x 1200 for HDMI Up to 1920 x 1200 for LVDS (PS8625) Up to 1920 x 1200 for CRT |
| Dual Display | HDMI + LVDS HDMI + CRT LVDS + CRT |
| Super I/O | ITE IT8518E Fintek F81216AD |

| | |
|-------------------------|--|
| BIOS | AMI/UEFI |
| Storage | 1 x SATAII Connector (7Pin, option) 1 x SATAII Connector (7Pin + 15Pin) 1 x SD Slot (USB2 to SD, option) |
| Ethernet | 2 x PCIe Gbe LAN by Intel 82574L |
| USB | USB 3.0 Hub (USB5534): 2 x USB 3.0/USB 2.0 (type A)stack ports (E2_USB5/E2_USB6) 1 x USB 2.0 for internal Touch controller (E2_USB7) 1 x USB 2.0 Pin header for CN1 (E2_USB8) USB 2.0 Hub (USB2514) 1 x USB 2.0 Pin header for CN2 (E-USB9) 2 x USB 2.0 Pin header for CN3 (E-USB10/E-USB11) 1 x USB 2.0 for MPCIE1 (E-USB12) |
| Serial | 1 x RS232/RS422/RS485 port, DB9 connector for external (COM1) Pin 9 w/5V/12V/Ring select 1 x RS232 port, DB9 connector for external (COM2) Pin 9 w/5V/12V/Ring select 2 x UART for CN3 (COM3,COM4) 2 x RS422/485 header for CN2 (IT8518E/COM5/COM6) |
| Digital I/O | 8-bit digital I/O by Pin header (CN2) 4-bit digital Input 4-bit digital Output 4-bit digital I/O by Pin header (CN3) 2-bit digital Input 2-bit digital Output |
| Battery | Support CR2477 Li battery by 2-pin header (BAT1/CMOS) |
| Audio | Support Audio via Realtek ALC662-VD HD audio codec Support Line-in, Line-out, MIC by 2x6-pin header |
| Expansion Bus | 1 x Full-size mini-PCI-express slot 1 x PCI-express (CN3) |
| Touch Ctrl | 1 x Touch ctrl header for TCH1 (PM6000 for USB4 or COM6) |
| Power Management | Wide Range DC6V~36V input 1 x 3-pin power input connector (DC_IN1/DC6~36V) 1 x 4-pin power input connector (DC_IN2/DC12V) |

| | |
|------------------------------------|--|
| Switches and LED Indicators | <ul style="list-style-type: none"> 1 x Power on/off switch (BT1/BT2/P_SW/CN2/CN3) 1 x Reset (CN2) 1 x Power LED status (CN1) 1 x HDD LED status (CN2) 1 x Buzzer |
| External I/O port | <ul style="list-style-type: none"> 2 x COM Ports (COM1/COM2) 2 x USB 3.0/2.0 Ports (stack) 2 x RJ45 GbE LAN Ports 1 x HDMI Port 1 x Stack audio Jack (Line out) 1 x Power on/off switch (BT1) |
| Temperature | <ul style="list-style-type: none"> Operating: -20°C to 70°C Storage: -40°C to 85°C |
| Humidity | 10% - 90%, non-condensing, operating |
| Power Consumption | <ul style="list-style-type: none"> 12V /0.80A (Intel Atom E3845 processor with 4GB DDR3L DRAM) 12V /0.60A (Intel Atom E3815 processor with 2GB DDR3L DRAM) 12V /0.70A (Intel Celeron N2930 processor with 4GB DDR3L DRAM) |
| EMI/EMS | Meet CE/FCC class A |

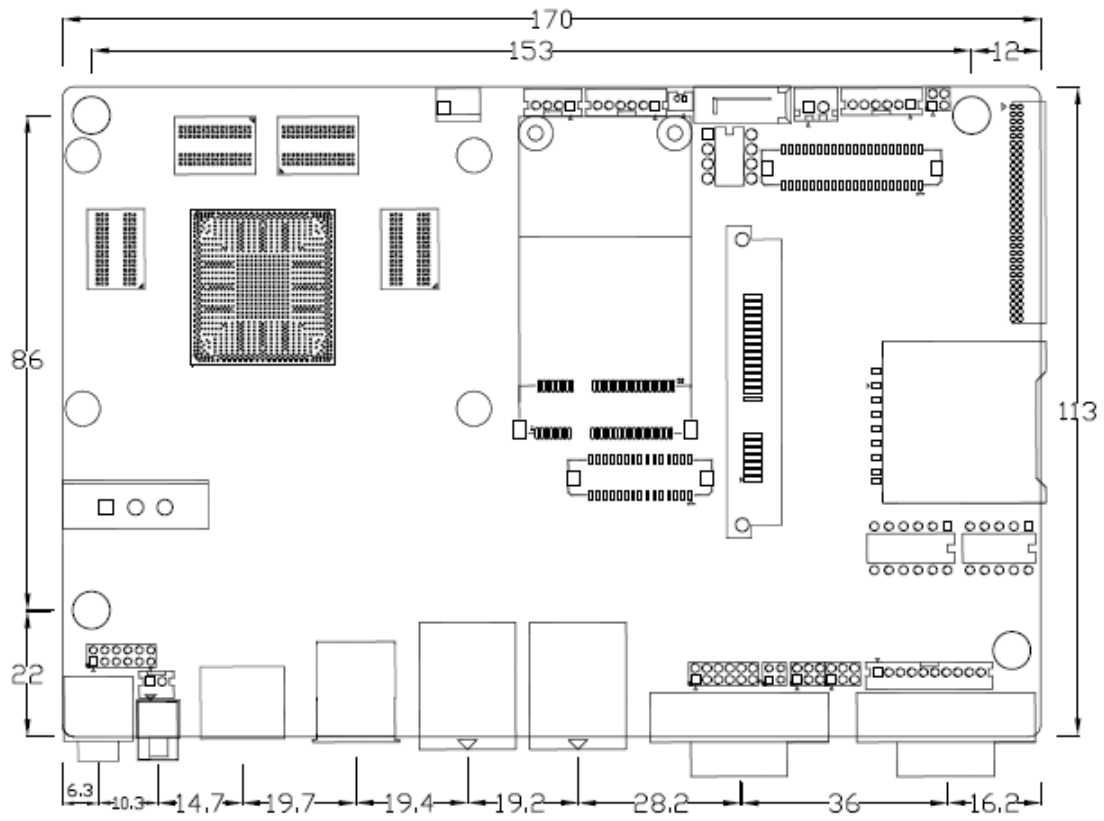

(unit: mm)

Figure 2.1: Motherboard Dimensions

2.3 Jumpers and Connectors Location

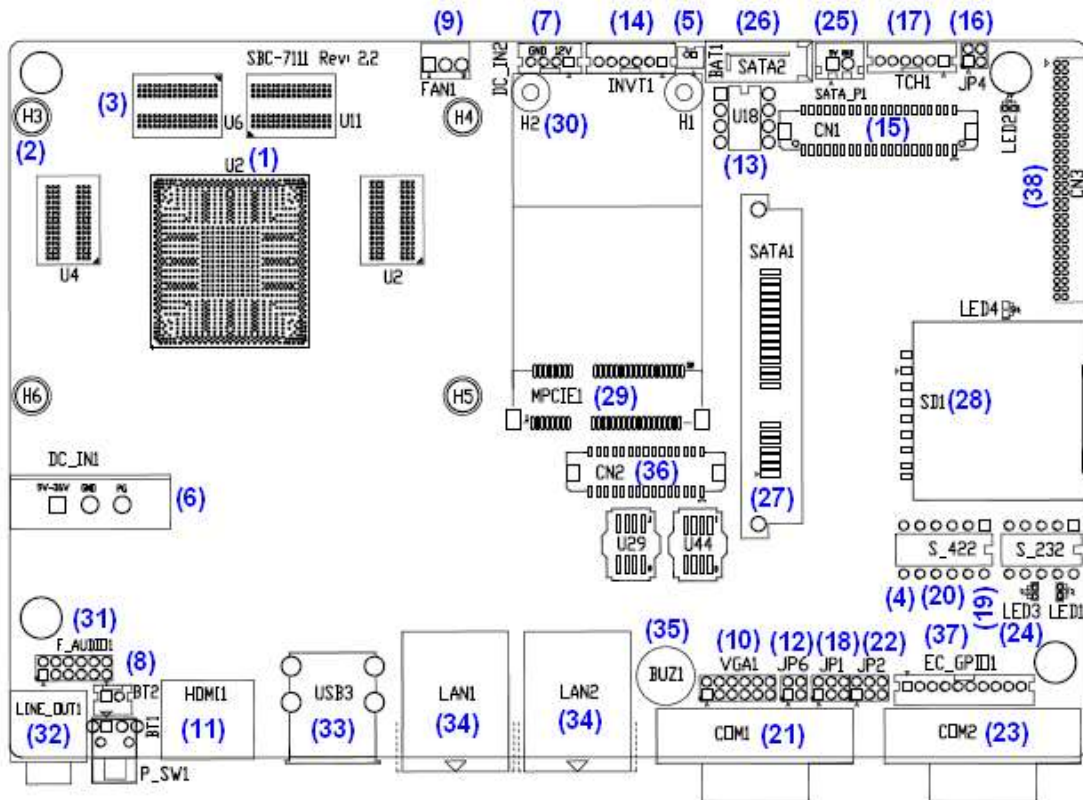


Figure 2.2: Jumpers and Connectors Location- Board Top

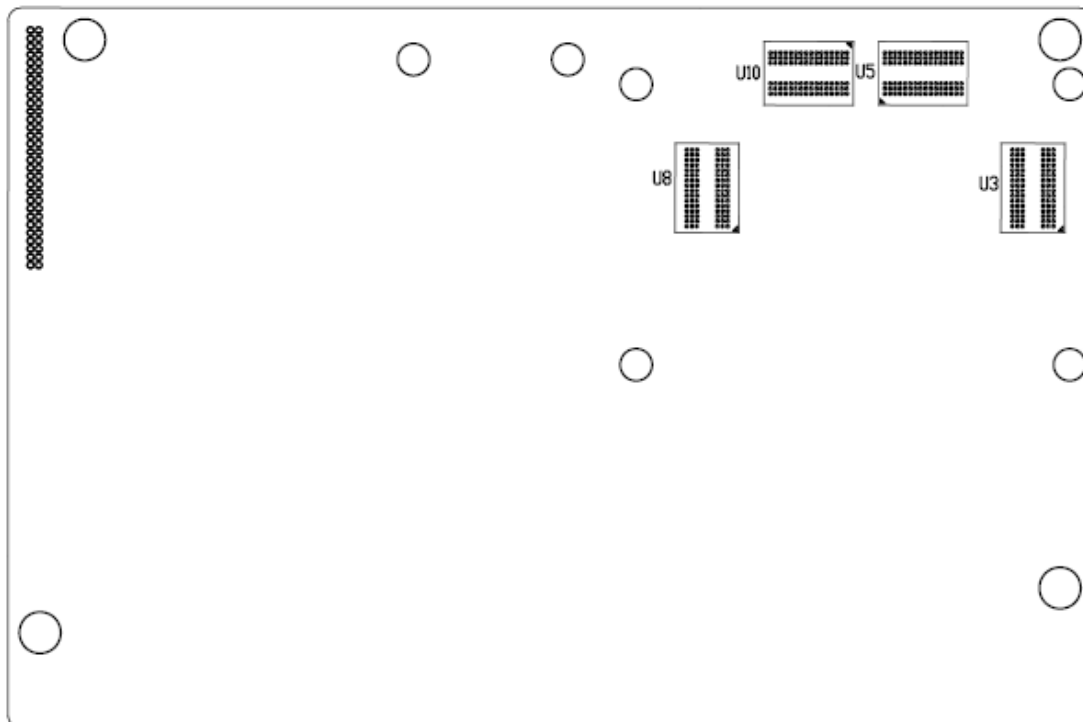


Figure 2.3: Jumpers and Connectors Location- Board Bottom

2.4 Jumpers Setting and Connectors

1. U2:

(FCBGA1170), onboard Intel Bay trail-I/M Processors.

| Model | Processor | | | | |
|-------------------------|-----------|-----------------------|---------------|-----------|---------|
| | Number | PBF | Cores/Threads | TDP | Remarks |
| SBC-7111-N2930-4G | N2930 | 1.83 up to 2.16GHz | 4 / 4 | 4.5 /7.5W | |
| SBC-7111-N2930-4G-SW | | | | | |
| SBC-7111-N2930P-4G | | | | | |
| SBC-7111-N2930-2G | | | | | |
| SBC-7111-N2930P-CN3V-2G | | | | | |
| SBC-7111-N2930-8G | | | | | |
| SBC-7111-E3845-4G | E3845 | 1.91GHz | 4 / 4 | 10W | option |

2. H3/H4/H5/H6 (option):

U2 Heat Sink Screw holes, four screw holes for Intel Bay trail-I/M Processors
Heat Sink assemble.

3. U3/U4/U5/U6/U8/U9/U10/U11:

(FBGA96), Onboard DDR3L Memory.

| Model | Memory |
|-------------------------|--------------|
| SBC-7111-N2930-4G | 4GB |
| SBC-7111-N2930-4G-SW | 4GB (option) |
| SBC-7111-N2930P-4G | 4GB (option) |
| SBC-7111-E3845-4G | 4GB (option) |
| SBC-7111-N2930-2G | 2GB (option) |
| SBC-7111-N2930P-CN3V-2G | 2GB (option) |
| SBC-7111-N2930-8G | 8GB (option) |

4. S-422 (PIN6):

(Switch), ATX Power and Auto Power on jumper setting.

| S-422(Switch) | Mode |
|---|--------------------------------|
| Pin6 (Off) | ATX Power |
| Pin6 (On) | Auto Power on (Default) |
| Note: ATX Power mode needs to change BIOS data, please contact technical support. | |

5. BAT1:

(1.25mm Pitch 1x2 Wafer Pin Header) 3.0V Li battery is embedded to provide power for CMOS.

| Pin# | Signal Name |
|------|-------------|
| 1 | VBAT |
| 2 | Ground |

6. DC_IN1:

(5.08mm Pitch 1x3 Pin Connector), DC9~36V System power input connector.

| Pin# | Power Input |
|------|-------------|
| 1 | DC+6V~36V |
| 2 | Ground |
| 3 | FG |

| Model | DC_IN1 |
|-------------------------|---------------|
| SBC-7111-N2930-4G | 180°Connector |
| SBC-7111-N2930-4G-SW | 180°Connector |
| SBC-7111-N2930-2G | 180°Connector |
| SBC-7111-N2930-8G | 180°Connector |
| SBC-7111-E3845-4G | 180°Connector |
| SBC-7111-N2930P-4G | 45°Connector |
| SBC-7111-N2930P-CN3V-2G | 45°Connector |

7. DC_IN2 (option):

(2.0mm Pitch 1x8 wafer Pin Header) DC12V System power input connector.

| Pin# | Signal Name |
|------|------------------------|
| 1 | VCC_BAT (DC+12V input) |
| 2 | VCC_BAT (DC+12V input) |
| 3 | Ground |
| 4 | Ground |

8. BT1/BT2/P_SW (option):

Power on/off button, it is used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

| Model | BT1 | BT2 | P_SW1 |
|-------------------|-----|-----|-------|
| SBC-7111-N2930-4G | ● | ● | ○ |

| | | | |
|-------------------------|---|---|---|
| SBC-7111-N2930P-4G | ● | ● | ○ |
| SBC-7111-N2930-2G | ● | ● | ○ |
| SBC-7111-N2930-8G | ● | ● | ○ |
| SBC-7111-E3845-4G | ● | ● | ○ |
| SBC-7111-N2930P-CN3V-2G | ○ | ● | ○ |
| SBC-7111-N2930-4G-SW | ○ | ● | ● |

9. FAN1 (option):

(2.54mm Pitch 1x3 Pin Header), Fan connector, cooling fans can be connected directly for use. You may set the rotation condition of cooling fan in menu of BIOS CMOS Setup.



| Pin# | Signal Name |
|------|--------------------|
| 1 | Ground |
| 2 | VCC |
| 3 | Rotation detection |



Note:

Output power of cooling fan must be limited under 5W.

| Model | FAN1 |
|-------------------------|------|
| SBC-7111-N2930-4G | ○ |
| SBC-7111-N2930-4G-SW | ○ |
| SBC-7111-N2930P-4G | ○ |
| SBC-7111-N2930P-CN3V-2G | ○ |
| SBC-7111-E3845-4G | ○ |
| SBC-7111-N2930-2G | ○ |
| SBC-7111-N2930-8G | ○ |

10. VGA1:

(CRT 2.0mm Pitch 2x6 Pin Header), Video Graphic Array Port, provide 2x6Pin cable to VGA Port.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| CRT_RED | 1 | 2 | Ground |
| CRT_GREEN | 3 | 4 | Ground |

| | | | |
|------------|----|----|-------------|
| CRT_BLUE | 5 | 6 | VGA_EN |
| CRT_H_SYNC | 7 | 8 | CRT_DDCDATA |
| CRT_V_SYNC | 9 | 10 | CRT_DDCCLK |
| Ground | 11 | 12 | Ground |

| VGA hot plug setting: | |
|---|-------------------------|
| VGA1 (Pin Header) | Function |
| Pin4-Pin6 (Close) | VGA Simulation Disabled |
| Pin4-Pin6 (Open) | VGA Simulation Enabled |
| Use the 2.0mm jumper cap to close pin4 and pin6 | |


11. HDMI1:

(HDMI 19P Connector), High Definition Multimedia Interface connector



12. JP6:

(2.0mm Pitch 2x2 Pin Header), LVDS jumper setting

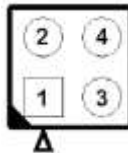

| JP6 | Function (CN1) |
|--------------------------|------------------------------------|
| Pin1-Pin2 (Close) | Single channel LVDS |
| Pin1-Pin2 (Open) | Dual channel LVDS (Default) |
| Pin3-Pin4 (Close) | 8/24 bit (Default) |
| Pin3-Pin4 (Open) | 6/18 bit |


13. U18:

AT24C02-DIP8, The EEPROM IC (U18) is the set of LVDS resolution. If you need other resolution settings, please upgrade U18 data.

| Model | LVDS resolution |
|-------------------------|---------------------|
| SBC-7111-N2930-4G | 1280*1024 (Default) |
| SBC-7111-N2930-4G-SW | 800*480 (option) |
| SBC-7111-N2930P-4G | 800*600 (option) |
| SBC-7111-N2930P-CN3V-2G | 1024*768 (option) |
| SBC-7111-N2930-2G | 1920*1080 (option) |
| SBC-7111-N2930-8G | |
| SBC-7111-E3845-4G | |

14. INVT1:

 (2.0mm Pitch 1x6 wafer Pin Header), Backlight control connector for LVDS



| Pin# | Signal Name |
|------|-------------|
| 1 | +DC12V |
| 2 | +DC12V |
| 3 | Ground |
| 4 | Ground |
| 5 | BKLT_EN_OUT |
| 6 | BKLT_CTRL |

15. CN1:

(1.25mm Pitch 2x20 Connector, DF13-40P), for 18/24-bit LVDS output connector, fully supported by Parad PS8625 (DP to LVDS), the interface features dual channel 24-bit output. Low Voltage Differential Signaling, A high speed, low power data transmission standard used for display connections to LCD panels.


| Function | Signal Name | Pin# | Pin# | Signal Name | Function |
|----------|-------------|------|---------|-------------|----------|
| LVDS | 12V_S0 | 2 | 1 | 12V_S0 | LVDS |
| | BKLT_EN_OUT | 4 | 3 | BKLT_CTRL | |
| | Ground | 6 | 5 | Ground | |
| | LVDS_VDD5 | 8 | 7 | LVDS_VDD5 | |
| | LVDS_VDD3 | 10 | 9 | LVDS_VDD3 | |
| | Ground | 12 | 11 | Ground | |
| | LA_D0_P | 14 | 13 | LA_D0_N | |
| | LA_D1_P | 16 | 15 | LA_D1_N | |
| | LA_D2_P | 18 | 17 | LA_D2_N | |
| | LA_D3_P | 20 | 19 | LA_D3_N | |
| | LA_CLKP | 22 | 21 | LA_CLKN | |
| | LB_D0_P | 24 | 23 | LB_D0_N | |
| | LB_D1_P | 26 | 25 | LB_D1_N | |
| | LB_D2_P | 28 | 27 | LB_D2_N | |
| | LB_D3_P | 30 | 29 | LB_D3_N | |
| LB_CLKP | 32 | 31 | LB_CLKN | | |

| | | | | | |
|-----------|-----------|----|----|-----------|-----------|
| | Ground | 34 | 33 | Ground | E2_USB8 |
| E2-USB8 | E2_USB8_P | 36 | 35 | E2_USB8_N | |
| | 5V_S5_USB | 38 | 37 | 5V_S5_USB | |
| Power LED | PWR_LED+ | 40 | 39 | Ground | Power LED |

16. JP4 (Reserve):

(2.0mm Pitch 2x2 wafer Pin Header).

| JP4 | Function |
|--------------------|------------------|
| Open 3-4 (default) | - |
| Open 1-2 (default) | - |
| Close 3-4 (option) | Hardware Enabled |

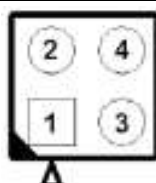

17. TCH1:

(2.0mm Pitch 1x6 wafer Pin Header), internal Touch controller connector

| Pin# | Signal Name |
|------|-------------|
| 1 | SENSE |
| 2 | X+ |
| 3 | X- |
| 4 | Y+ |
| 5 | Y- |
| 6 | GND_EARCH |

| Touch interface setting | EC(U44) Data |
|-------------------------|--------------|
| TCH1(PM6000) | option A |
| CN1(E2-USB8) | option B |

18. JP1:

(2.0mm Pitch 2x3 Pin Header), COM1 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM1 port.

| JP1 Pin# | Function |
|------------------|---|
| Close 1-2 | COM1 RI (Ring Indicator) (default) |
| Close 3-4 | COM1 Pin9: DC+5V (option) |
| Close 5-6 | COM1 Pin9: DC+12V (option) |

19. S_232:

(Switch), COM1 jumper setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

| Function | S_232 Pin# (switch) |
|------------------------|---|
| RS232 (Default) | ON: Pin1, Pin2, Pin3, Pin4, Pin5 |
| RS422 (option) | OFF: Pin1, Pin2, Pin3, Pin4, Pin5 |
| RS485 (option) | OFF: Pin1, Pin2, Pin3, Pin4, Pin5 |

20. S_422:


(Switch), COM1 setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

| Function | S_422 Pin# (switch) |
|------------------------|--|
| RS232 (Default) | OFF: Pin1, Pin2, Pin3, Pin4, Pin5 |
| RS422 (option) | ON: Pin1, Pin2, Pin3, Pin4, Pin5 |
| RS485 (option) | ON: Pin1, Pin2, Pin3, Pin4, Pin5 |

| S-422 (switch) | Mode |
|----------------|--------------------------------|
| Pin6 (Off) | ATX Power |
| Pin6 (On) | Auto Power on (Default) |

21. COM1:

(Type DB9M), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices. COM1 port is controlled by pins No.1~6 of JP1, select output Signal RI or 5V or 12V, for detail, please refer to description of JP1 and S_232 and S_422 setting.

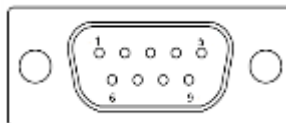

| RS232 (Default) | |
|------------------------|----------------------------|
| Pin# | Signal Name |
| 1 | DCD# (Data Carrier Detect) |
| 2 | RXD (Received Data) |
| 3 | TXD (Transmit Data) |
| 4 | DTR (Data Terminal Ready) |
| 5 | Ground |
| 6 | DSR (Data Set Ready) |
| 7 | RTS (Request To Send) |

| | |
|---|---------------------------------------|
| 8 | CTS (Clear To Send) |
| 9 | JP1 select Setting (RI/5V/12V) |
| BIOS Setup: Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration 【RS-232】 | |

| RS422 (option) | |
|---|-------------|
| Pin# | Signal Name |
| 1 | 422_RX+ |
| 2 | 422_RX- |
| 3 | 422_TX- |
| 4 | 422_TX+ |
| 5 | Ground |
| 6 | NC |
| 7 | NC |
| 8 | NC |
| 9 | NC |
| BIOS Setup: Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration 【RS-422】 | |

| RS485 (option) | |
|---|-------------|
| Pin# | Signal Name |
| 1 | NC |
| 2 | NC |
| 3 | 485- |
| 4 | 485+ |
| 5 | Ground |
| 6 | NC |
| 7 | NC |
| 8 | NC |
| 9 | NC |
| BIOS Setup: Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration 【RS-485】 | |


22. JP2:

(2.0mm Pitch 2x3 Pin Header), COM2 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM2 port.

| JP2 Pin# | Function |
|------------------|---|
| Close 1-2 | COM2 RI (Ring Indicator) (default) |
| Close 3-4 | COM2 Pin9: DC+5V (option) |
| Close 5-6 | COM2 Pin9: DC+12V (option) |

23. COM2:

 (Type DB9M),Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.



| Pin# | Signal Name |
|------|---------------------------------------|
| 1 | DCD# (Data Carrier Detect) |
| 2 | RXD (Received Data) |
| 3 | TXD (Transmit Data) |
| 4 | DTR (Data Terminal Ready) |
| 5 | Ground |
| 6 | DSR (Data Set Ready) |
| 7 | RTS (Request To Send) |
| 8 | CTS (Clear To Send) |
| 9 | JP2 select Setting (RI/5V/12V) |

24. LED1, LED2, LED3, LED4 (option):

LED1: LED STATUS. Green LED for Motherboard Power Good status.

LED2: LED STATUS. Green LED for Touch Power Status.

LED3: LED STATUS. Green LED for EC Power status.

LED4: LED STATUS. Green LED for Motherboard Power Good status.

25. SATA_P (option):

(2.5mm Pitch 1x2 box Pin Header), One onboard 5V output connector is reserved to provide power for SATA devices.

| Pin# | Signal Name |
|------|-------------|
| 1 | +DC5V |
| 2 | Ground |



Note:

Output current of the connector must not be above 1A.

| Model | SATA_P (Wafer) |
|-------------------------|----------------|
| SBC-7111-N2930-4G | ○ |
| SBC-7111-N2930-4G-SW | ○ |
| SBC-7111-N2930P-4G | ○ |
| SBC-7111-N2930P-CN3V-2G | ○ |
| SBC-7111-E3845-4G | ○ |
| SBC-7111-N2930-2G | ○ |
| SBC-7111-N2930-8G | ○ |

26. SATA2 (option):

(SATA 7Pin), SATA Connectors, one SATA connector are provided with transfer speed up to 3.0Gb/s.

| Model | SATA2 (Connectors) |
|-------------------------|--------------------|
| SBC-7111-N2930-4G | ○ |
| SBC-7111-N2930-4G-SW | ○ |
| SBC-7111-N2930P-4G | ○ |
| SBC-7111-N2930P-CN3V-2G | ○ |
| SBC-7111-E3845-4G | ○ |
| SBC-7111-N2930-2G | ○ |
| SBC-7111-N2930-8G | ○ |

27. SATA1:

(SATA 7Pin+15Pin), SATA Connectors, one SATA connector are provided with transfer speed up to 3.0Gb/s.

28. SD1:

(SD card slot), Secure Digital Memory Card socket

29. MPCIE1:

(Socket 52Pin), Full-size mini PCIe socket, it is located at the top, it supports mini PCIe devices with USB2.0 and SMBUS and PCIe signal. MPCIE card size is 30x50.95mm.

30. H1/H2:

MPCIE1 SCREW HOLES, H1and H2 for mini PCIE card (30mmx50.95mm) assemble.

31. F_AUDIO1:

(2.0mm Pitch 2X6 Pin Header), Front Audio, An onboard Realtek ALC662-VD codec is used to provide high-quality audio I/O ports. Line Out can be connected to a headphone or amplifier. Line In is used for the connection of external audio source via a Line in cable. MIC is the port for microphone input audio.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| +5V | 1 | 2 | GND_AUD |
| LINE-OUT-L | 3 | 4 | LINE-OUT-R |
| FRONT_JD | 5 | 6 | LINE1_JD |
| LINE_IN-L | 7 | 8 | LINE-IN-R |
| MIC-IN-L | 9 | 10 | MIC-IN-R |
| GND_AUD | 11 | 12 | MIC1_JD |

32. LINE_OUT1:


(Diameter 3.5mm Jack), HD Audio port, an onboard Realtek ALC662-VD codec is used to provide high quality audio I/O ports. Line Out can be connected to a headphone or amplifier.



| Model | LINE_OUT1 |
|-------------------------|-----------|
| SBC-7111-N2930-4G | ● |
| SBC-7111-N2930P-4G | ● |
| SBC-7111-N2930-2G | ● |
| SBC-7111-N2930-8G | ● |
| SBC-7111-E3845-4G | ● |
| SBC-7111-N2930P-CN3V-2G | ○ |
| SBC-7111-N2930-4G-SW | ● |

33. USB3:

USB0/USB3: (Double stack USB type A), Rear USB connector, it provides up to two USB3.0 ports, one USB2.0 port, support USB full-speed and low-speed signaling.

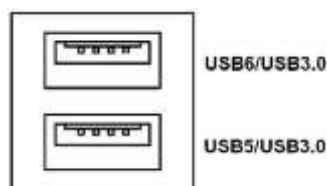

Each USB Type A Receptacle (2 Ports) Current limited value is 2.0A.

If the external USB device current exceeds 2.0A, please separate connectors into different Receptacle.

34. LAN1/LAN2:

LAN1/LAN2: (RJ45 Connector), Rear LAN port, Two standard 10/100/1000M RJ-45 Ethernet ports are provided. Used intel 82574L chipset, LINK LED (green) and ACTIVE LED (yellow) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.



| Model | RJ45(LAN1) | RJ45(LAN2) |
|-------------------------|------------|------------|
| SBC-7111-N2930-4G | ● | ● |
| SBC-7111-N2930P-4G | ● | ● |
| SBC-7111-N2930-2G | ● | ● |
| SBC-7111-N2930-8G | ● | ● |
| SBC-7111-E3845-4G | ● | ● |
| SBC-7111-N2930P-CN3V-2G | ● | ○ |
| SBC-7111-N2930-4G-SW | ● | ● |

35. BUZ1:

Onboard buzzer

36. CN2:

(DF13-30P Connector) For expand output connector, It provides eight GPIO, one RS422 or RS485, one USB2.0 and one Power on/off, one Reset.

| Function | Signal Name | Pin# | Pin# | Signal Name | Function |
|--------------|--------------|------|------|--------------|--------------|
| 5V | 5V_S5 | 2 | 1 | 5V_S5 | 5V |
| SOC_GPIO10 | GPIO_IN2 | 4 | 3 | GPIO_IN1 | SOC_SPIO09 |
| SOC_GPIO26 | GPIO_IN4 | 6 | 5 | GPIO_IN3 | SOC_GPIO17 |
| SOC_GPIO05 | GPIO_OUT2 | 8 | 7 | GPIO_OUT1 | SOC_GPIO04 |
| SOC_GPIO08 | GPIO_OUT4 | 10 | 9 | GPIO_OUT3 | SOC_GPIO06 |
| | Ground | 12 | 11 | Ground | |
| 485 or 422 | 485+_422TX5+ | 14 | 13 | 485-_422TX5- | 485 or 422 |
| RS422 (COM5) | 422_RX+ | 16 | 15 | 422_RX5- | RS422 (COM5) |
| 485 or 422 | 485+_422TX6+ | 18 | 17 | 485-_422TX6- | 485 or 422 |
| RS422 (COM6) | 422_RX6+ | 20 | 19 | 422_RX6- | RS422 (COM6) |

| | | | | | |
|---|-----------|----|----|----------|---------|
| 5V | 5V_S0 | 22 | 21 | HDD_LED+ | HDD LED |
| USB2.0 | 5V_USB09 | 24 | 23 | 5V_USB09 | USB2.0 |
| | E_USB9_P | 26 | 25 | E_USB9_N | |
| | Ground | 28 | 27 | FP_RST- | RESET |
| Power auto on | PWRBTN_ON | 30 | 29 | Ground | |
| COM5/COM6 BIOS Setup: Advanced/IT8518Super IO Configuration/Serial Port 1 Configuration 【RS-485】 Advanced/IT8518Super IO Configuration/Serial Port 1 Configuration 【RS-422】 Advanced/IT8518Super IO Configuration/Serial Port 2 Configuration 【RS-485】 Advanced/IT8518Super IO Configuration/Serial Port 2 Configuration 【RS-422】 | | | | | |

37. EC_GPIO1 (option):

(2.0mm Pitch 1X10 Pin Header)For expand connector, it provides eight GPIO.

| Pin# | Signal Name |
|------|----------------|
| 1 | Ground |
| 2 | GPA0_ONOFF |
| 3 | GPA1_SPK- |
| 4 | GPE6_BKLT- |
| 5 | GPE0_BKLT+ |
| 6 | GPC3_SPK+ |
| 7 | BKLT_CTRL_PWR |
| 8 | ADC6_BKLT_CTRL |
| 9 | ADC7_L_SENSE |
| 10 | 3.3V |

| Function | EC_GPIO1 |
|-----------------------------|-----------------------|
| Backlight Automatic dimming | <input type="radio"/> |
| Backlight manual dimming | <input type="radio"/> |

38. CN3:


(1.27mm Pitch 2X30 Female Header), for expand output connector, it provides four GPIO, two USB 2.0,one PS/2 mouse, one PS/2 keyboard, two uart, one PCIe1, one SMBus connect to the TB-528 riser Card.

| Function | Signal Name | Pin# | Pin# | Signal Name | Function |
|----------|-------------|------|------|-------------|----------|
| | 5V_S5_USB | 1 | 2 | 5V_S5_USB | |
| | 5V_S5_USB | 3 | 4 | 5V_S5_USB | |
| | USB1011_OC | 5 | 6 | PS0N_ATX- | |

| | | | | | |
|----------------|-----------------|----|----|-----------------|----------------|
| Exp-USB10 | E-USB10_N | 7 | 8 | E-USB10_P | Exp-USB10 |
| Exp-USB11 | E-USB11_N | 9 | 10 | E-USB11_P | Exp-USB11 |
| | Ground | 11 | 12 | Ground | |
| No Support | PS2_MSCLK | 13 | 14 | PS2_MSDATA | No Support |
| No Support | PS2_KBCLK | 15 | 16 | PS2_KBDATA | No Support |
| COM4 (UART) | COM4_RI | 17 | 18 | COM4_DCD- | COM4 (UART) |
| | COM4_TXD | 19 | 20 | COM4_RXD | |
| | COM4_DTR | 21 | 22 | RICOM4_RTS- | |
| | COM4_DSR | 23 | 24 | COM_CTS- | |
| | Ground | 25 | 26 | Ground | |
| COM3 (UART) | COM3_RI | 27 | 28 | COM3_DCD- | COM3 (UART) |
| | COM3_TXD | 29 | 30 | COM3_RXD | |
| | COM3_DTR | 31 | 32 | DSRCOM3_RTS- | |
| | COM3_DSR | 33 | 34 | DTRCOM3_CTS- | |
| GPIO23 | SOC_GPIO23 | 35 | 36 | ICH_GPIO22 | GPIO22 |
| GPIO25 | SOC_GPIO25 | 37 | 38 | ICH_GPIO24 | GPIO24 |
| | Ground | 39 | 40 | Ground | |
| PCIe 1X | PCIE_TX0_DN | 41 | 42 | PCIE_TX0_DP | PCIe 1X |
| | PCIE_RX0_DN | 43 | 44 | PCIE_RX0_DP | |
| | Ground | 45 | 46 | Ground | |
| | PCIE_REFCLK0_DN | 47 | 48 | PCIE_REFCLK0_DP | |
| | PCIE0_WAKE_N | 49 | 50 | PLTRST_OUT- | |
| SMBUS | SMB_CLK_S0 | 51 | 52 | SMB_DATA_S0 | SMBUS |
| PCIE | PCIE_CLKREQ0_N | 53 | 54 | Ground | |
| | 3P3V_S5 | 55 | 56 | PWRBTN_ON- | Power Auto on |
| | 3P3V_S5 | 57 | 58 | 3P3V_S5 | |
| 12V | 12V_S0 | 59 | 60 | 12V_S0 | 12V |

| Model | CN3(connector) |
|-------------------------|----------------|
| SBC-7111-N2930-4G | 90°Connector |
| SBC-7111-N2930-4G-SW | 90°Connector |
| SBC-7111-N2930-2G | 90°Connector |
| SBC-7111-N2930-8G | 90°Connector |
| SBC-7111-E3845-4G | 90°Connector |
| SBC-7111-N2930P-4G | 90°Connector |
| SBC-7111-N2930P-CN3V-2G | 180°Connector |

39. TB-528Series:

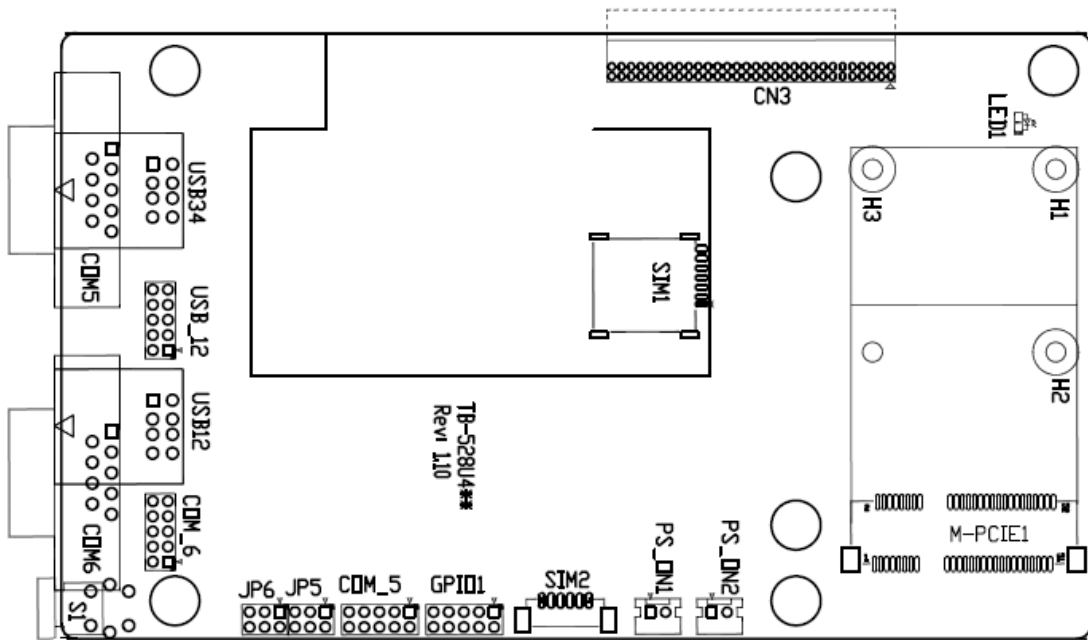

| No. | Model | CN3 2*30P | S1 | USB12 TypeA | USB34 TypeA | USB_12 2*5P | COM5 DB9 | COM6 DB9 | COM_5 2*5P | COM_6 2*5P | JP5 2*3P | JP6 2*3P | GPIO 2*5P | SIM1 Socket | SIM2 1*6P | M_PCIE1 52P | PS_ON1 1*2P | PS_ON2 1*2P |
|-----|----------------------|--------------|----|----------------|----------------|----------------|-------------|-------------|---------------|---------------|-------------|-------------|--------------|----------------|--------------|----------------|----------------|----------------|
| 1 | TB-528U4C2ME1P1 R110 | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● | ● |
| 2 | TB-528U4ME1 R110 | ● | ● | ● | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ● | ● | ○ | ● | ● | ● |
| 3 | TB-528U4 R110 | ● | ○ | ● | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| 4 | TB-528C1U2P1 R110 | ● | ● | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| 5 | TB-528C1U2 R110 | ● | ○ | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| 6 | TB-528C2ME1 R110 | ● | ○ | ○ | ○ | ○ | ● | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ● | ● | ● |
| 7 | TB-528C2 R110 | ● | ○ | ○ | ○ | ○ | ● | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |

CN3:

(1.27mm Pitch 2X30 Pin Header),connect to SBC-7118 CN2 pin Header.

M-PCIE1:

(Socket 52Pin),mini PCIe socket, it is located at the top, it supports mini PCIe devices with **USB2.0(USB3)**,Smbus,SIM and PCIe signal. MPCle card size is 30x30mm or 30x50.95mm.

| Signal Name | Function support |
|---------------|------------------|
| PCIe 1X | ● |
| USB2.0 (USB2) | ● |
| SMBus | ● |
| SIM | ● |

H1/H2:

MPCIE1 SCREW HOLES, H2 for mini PCIE card (30mmx30mm) assemble. H1 for mini PCIE card (30mmx50.95mm) assemble.

LED1:

Mini PCIe devices LED Status

SIM1:

(Nano SIM Socket 6 Pin), Support SIM Card devices

SIM2 (option):

(1.25mm Pitch 1X6 Pin Wafer), For expansion SIM Card devices.


GPIO1:

(2.0mm Pitch 2x5 Pin Header), General-purpose input/output port, it provides a group of self-programming interfaces to customers for flexible use.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| Ground | 1 | 2 | GPIO_OUT1 |
| GPIO_OUT2 | 3 | 4 | SMB_DATA_R |
| SMB_CLK_R | 5 | 6 | GPIO_IN1 |
| GPIO_IN2 | 7 | 8 | GPIO_IN3 |
| GPIO_IN4 | 9 | 10 | +5V |

USB12/USB34(USB-HUB):

(Double stack USB type A), Rear USB connector, it provides up to 4 USB2.0 ports, speed up to 480Mb/s.

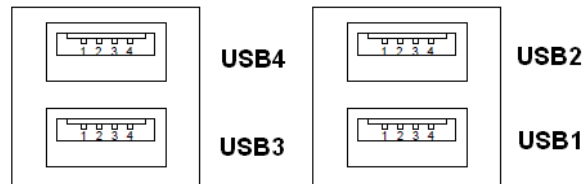**USB_12:**

(2.0mm Pitch 2x5 Pin Header) ,Front USB connector, it provides two USB port via a dedicated USB cable, speed up to 480Mb/s.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| 5V_USB12 | 1 | 2 | 5V_USB12 |
| E_USB1_N | 3 | 4 | E_USB2_N |
| E_USB1_P | 5 | 6 | E_USB2_P |
| Ground | 7 | 8 | Ground |
| NC | 9 | 10 | Ground |



Note:

Before connection, make sure that pinout of the USB Cable is in accordance with that of the said tables. Any inconformity may cause system down and even hardware damages.


JP5:

(2.0mm Pitch 2x3 Pin Header), COM5 setting jumper, pin 1~6 are used to select signal out of pin 9 of COM5 port.

| JP5 Pin# | Function |
|------------------|--------------------------------------|
| Close 1-2 | RI (Ring Indicator) (default) |
| Close 3-4 | COM5 Pin9=+5V (option) |
| Close 5-6 | COM5 Pin9=+12V (option) |

COM5:

(Type DB9), serial port, standard DB9 serial port is provided to make a direct connection to serial devices. COM5 port is controlled by pins No.1~6 of **JP5**,select output Signal RI or 5V or 12v, For details, please refer to description of JP3.

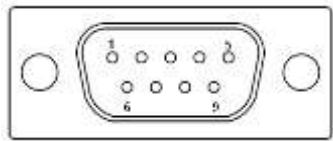

| Pin# | Signal Name |
|------|----------------------------|
| 1 | DCD# (Data Carrier Detect) |
| 2 | RXD (Received Data) |
| 3 | TXD (Transmit Data) |
| 4 | DTR (Data Terminal Ready) |
| 5 | Ground |
| 6 | DSR (Data Set Ready) |

| | |
|---|---|
| 7 | RTS (Request To Send) |
| 8 | CTS (Clear To Send) |
| 9 | <p>JP5 Setting:</p> <p>Pin1-2 : RI (Ring Indicator) (default)</p> <p>Pin3-4 : 5V Standby power (option)</p> <p>Pin5-6:12V Standby power (option)</p> |

COM_5:

(2.0mm Pitch 2X5 Pin Header), COM5 Port, up to one standard RS232 port are provided. They can be used directly via COM cable connection.

| Signal Name | Pin# | Pin# | Signal Name |
|---------------------------|------|------|-------------|
| DCD | 1 | 2 | RXD |
| TXD | 3 | 4 | DTR |
| Ground | 5 | 6 | DSR |
| RTS | 7 | 8 | CTS |
| JP6 Setting: RI/5V/12V | 9 | 10 | NC |


JP6:

(2.0mm Pitch 2x3 Pin Header), COM6 setting jumper, pin 1~6 are used to select signal out of pin 9 of COM6 port.

| JP6 Pin# | Function |
|------------------|--------------------------------------|
| Close 1-2 | RI (Ring Indicator) (default) |
| Close 3-4 | COM6 Pin9=+5V (option) |
| Close 5-6 | COM6 Pin9=+12V (option) |

COM6:

(Type DB9), serial port, standard DB9 serial port is provided to make a direct connection to serial devices. COM6 port is controlled by pins No.1~6 of **JP6**, select output Signal RI or 5V or 12v, For details, please refer to description of JP6.

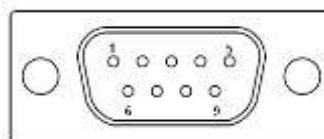

| Pin# | Signal Name |
|------|--|
| 1 | DCD# (Data Carrier Detect) |
| 2 | RXD (Received Data) |
| 3 | TXD (Transmit Data) |
| 4 | DTR (Data Terminal Ready) |
| 5 | Ground |
| 6 | DSR (Data Set Ready) |
| 7 | RTS (Request To Send) |
| 8 | CTS (Clear To Send) |
| 9 | JP6 Setting: Pin1-2 : RI (Ring Indicator) (default) Pin3-4 : 5V Standby power (option) Pin5-6:12V Standby power (option) |

COM_6:

(2.0mm Pitch 2X5 Pin Header), COM6 Port, up to one standard RS232 port are provided. They can be used directly via COM cable connection.

| Signal Name | Pin# | Pin# | Signal Name |
|---------------------------|------|------|-------------|
| DCD | 1 | 2 | RXD |
| TXD | 3 | 4 | DTR |
| Ground | 5 | 6 | DSR |
| RTS | 7 | 8 | CTS |
| JP6 Setting: RI/5V/12V | 9 | 10 | NC |

PS_ON1:

(2.0mm Pitch 1X2 Pin Wafer), ATX Power and Auto Power on jumper setting

| PS_ON | Mode |
|------------------|--------------------------------|
| Close 1-2 | Auto Power on (Default) |
| Open 1-2 | ATX Power |

PS_ON2 (option) :

(2.0mm Pitch 1X2 Pin Wafer)

S1:


PWR BT: POWER on/off Button, it is used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

PWR LED: POWER LED status.

40. TB-528CAN2 R2.00:

SBC-7118 IO expansion card, provides two CAN-bus interfaces.

TB-528CAN2 Top:

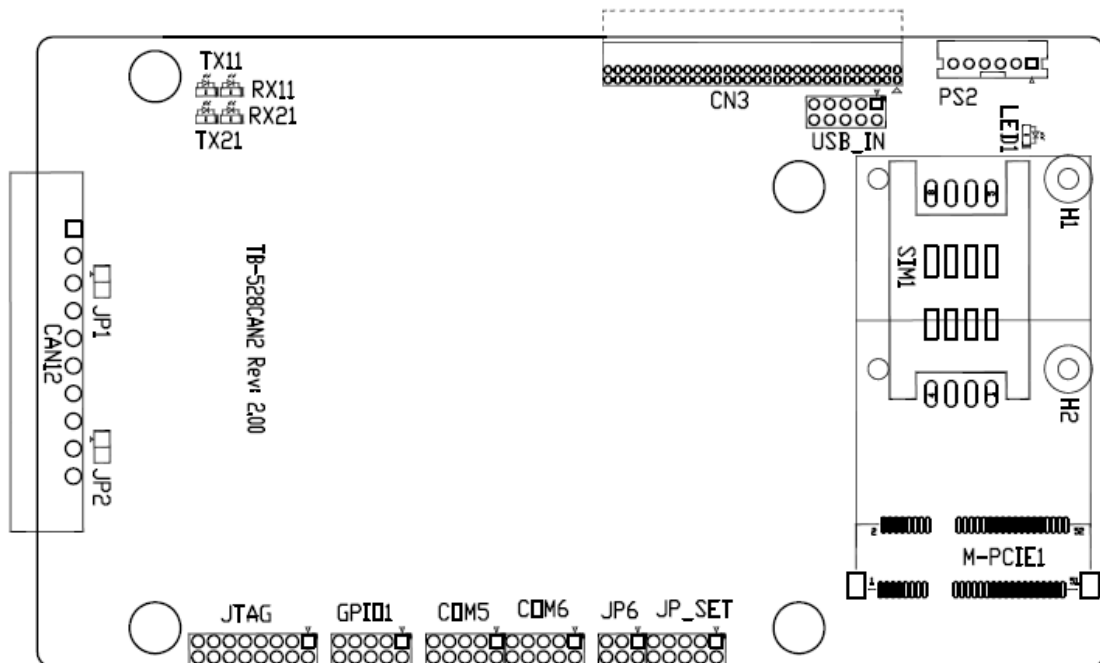

CN3:

(1.27mm Pitch 2X30 Pin Header), connect to SBC-7118 CN2 pin Header.

M-PCIE1:

(Socket 52Pin), Full-size mini PCIe socket, it is located at the top, it supports mini PCIe devices with Smbus, USB2.0, SIM and PCIe signal. MPCie card size is 30x30mm or 30x50.95mm.

| Signal Name | Function support |
|---------------|------------------|
| PCIe 1X | Yes |
| USB2.0 (USB2) | Yes |
| SMBus | Yes |
| SIM | Yes |

H1/H2:

MPCIE1 SCREW HOLES, H2 for mini PCIE card (30mmx30mm) assemble. H1 for mini PCIE card (30mmx50.95mm) assemble.

LED1:

Mini PCIe devices LED Status

SIM1 (option):

(SIM Socket 6 Pin), Support SIM Card devices

PS2:

(2.0mm Pitch 1X6 Pin Wafer), PS/2 keyboard and mouse port, the port can be connected to PS/2 keyboard or mouse via a dedicated cable for direct used.

| Pin# | Signal Name |
|------|-------------|
| 1 | KBDATA |
| 2 | MSDATA |
| 3 | Ground |
| 4 | +5V |
| 5 | KBCLK |
| 6 | MSCLK |

USB_IN (option):

(2.0mm Pitch 2x5 Pin Header) ,Front USB connector, it provides two USB port via a dedicated USB cable, speed up to 480Mb/s.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| 5V_USB34 | 1 | 2 | 5V_USB34 |
| NC (USB4_N) | 3 | 4 | NC (USB3_N) |
| NC (USB4_P) | 5 | 6 | NC (USB3_P) |
| Ground | 7 | 8 | Ground |
| NC | 9 | 10 | Ground |

**Note:**

Before connection, make sure that pinout of the USB Cable is in accordance with that of the said tables. Any inconformity may cause system down and even hardware damages.

JP_SET (option):

(2.0mm Pitch 2x5 Pin Header).

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| 3P3V_S5_USB | 1 | 2 | 3P3V_S5 |
| 3P3V_S5_USB | 3 | 4 | 3P3V_S5 |
| 3P3V_S5_USB | 5 | 6 | 3P3V_S5 |
| PSON_ATX | 7 | 8 | Ground |
| PSON_ATX | 9 | 10 | Ground |

JP6:

(2.0mm Pitch 2x3 Pin Header), COM6 setting jumper, pin 1~6 are used to select signal out of pin 9 of COM6 port.

| JP3 Pin# | Function |
|------------------|--------------------------------------|
| Close 1-2 | RI (Ring Indicator) (default) |
| Close 3-4 | COM6 Pin9: +5V (option) |
| Close 5-6 | COM6 Pin9: +12V (option) |

COM6(SBC-7114/COM4):

(2.0mm Pitch 2X5 Pin Header), COM6 Port, up to one standard RS232 port is provided. They can be used directly via COM cable connection.

| Signal Name | Pin# | Pin# | Signal Name |
|------------------------|------|------|-------------|
| DCD | 1 | 2 | RXD |
| TXD | 3 | 4 | DTR |
| Ground | 5 | 6 | DSR |
| RTS | 7 | 8 | CTS |
| JP6 Setting: RI/5V/12V | 9 | 10 | NC |

COM5 (SBC-7114/COM3):

(2.0mm Pitch 2X5 Pin Header), COM5 Port, up to one standard RS232 port is provided. They can be used directly via COM cable connection.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| DCD | 1 | 2 | RXD |
| TXD | 3 | 4 | DTR |
| Ground | 5 | 6 | DSR |
| RTS | 7 | 8 | CTS |
| RI | 9 | 10 | NC |

GPIO1:

(2.0mm Pitch 2x5 Pin Header), General-purpose input/output port, it provides a group of self-programming interfaces to customers for flexible use.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| Ground | 1 | 2 | NC |
| NC | 3 | 4 | SMB_DATA_R |
| SMB_CLK_R | 5 | 6 | PCH-GPIO56 |
| PCH -GPIO57 | 7 | 8 | PCH -GPIO59 |
| PCH -GPIO58 | 9 | 10 | +5V |

JTAG:

(2.0mm Pitch 2x5 Pin Header), Reserve.

JP1:

(2.0mm Pitch 1x2 Pin Header), Reserve.

JP2:

(2.0mm Pitch 1x2 Pin Header), Reserve.

CAN1/CAN2:

(3.5mm Pitch 1x10 Pin connector), it provides two CAN-bus interfaces.

| Pin# | Channel | Signal Name | Function |
|------|---------|-------------|---|
| 1 | CAN2 | CANL2 | CAN bus Signal L |
| 2 | | R2- | Terminal resistor R-(internally connected to CANL2) |


| | | | |
|----|------|-------|--|
| 3 | | FG | Shield cable (FG) |
| 4 | | R2+ | Terminal resistor R+(internally connected to CANH2) |
| 5 | | CANH2 | CAN bus Signal H |
| 6 | CAN1 | CANL1 | CAN bus Signal L |
| 7 | | R1- | Terminal resistor R-(internally connected to CANL1) |
| 8 | | FG | Shield cable (FG) |
| 9 | | R1+ | Terminal resistor R+(internally connected to CANH1) |
| 10 | | CANH1 | CAN bus Signal H |

【See TB-528CAN2 Manual】

41. TB-528E1U2/TB-528E1U2POE/TB-528E1U2UPOE:

SBC-7118 IO expansion card, providing USB2.0 and 1xGbE Lan expansion, it can support POE (Power over Ethernet) powered device via onboard POE module

TB-528E1U2POE Top:

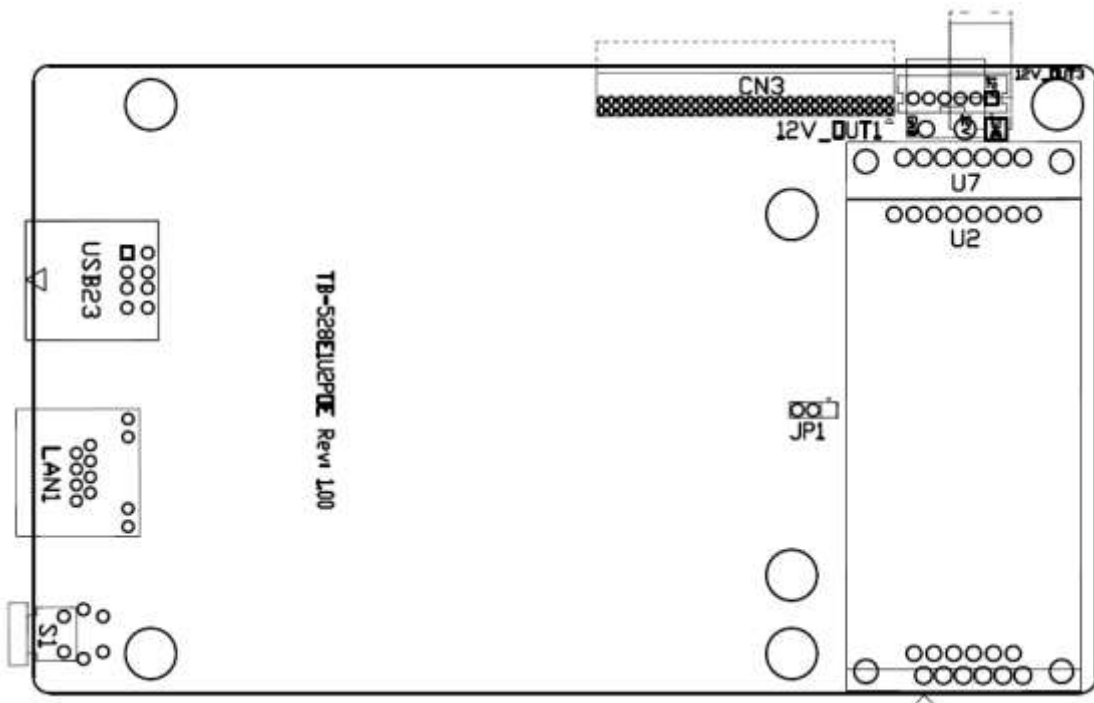


CN3:

(1.27mm Pitch 2X30 Pin Header), connect to SBC-7118 CN2 pin Header.


USB23 (SBC-7114 USB3/USB4):

(Double stack USB type A), Rear USB connector, it provides up to 2 USB2.0 ports, speed up to 480Mb/s.

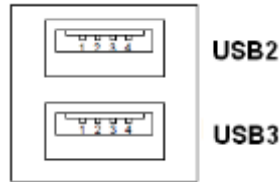

LAN1:

(RJ45 Connector), Rear LAN port, one standard 10/100/1000M RJ-45 Ethernet ports are provided. Used intel I211-AT chipset, LINK LED (green) and ACTIVE LED (green) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.

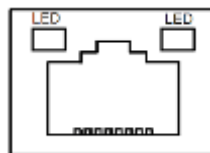


| | |
|----------------------|-----------|
| PSE Function support | |
| PSE output Voltage | DC44~ 57V |

U2/U7 (Option):

For onboard POE powered device module.

12V_OUT1:

(3.96mm Pitch 1x2 Pin Header), POE DC12V Output.

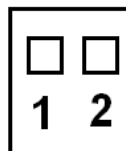

| Pin# | Output Voltage |
|------|----------------|
| 1 | 12V_POE |
| 2 | Ground |

| Model | U7 | Maximum Output Power | SBC-7114 |
|--------------|--------|----------------------|----------|
| TB-528E1UPOE | AG5510 | 40W | ● |

12V_OUT3 (option) :

(2.0mm Pitch 1x6 Pin Header), Reserve.

12V_OUT1 (option) :

(3.96mm Pitch 1x2 Pin Header), Reserve.

JP3 (option) :

(2.0mm Pitch 1x3 Pin Header), Reserve.

S1 (option) : Reserve.

3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation, press [Delete] key to enter CMOS Setup.



After optimizing and exiting CMOS Setup, the POST screen displayed for the first time is as follows and includes basic information on BIOS, CPU, memory, and storage devices.

3.2 BIOS Setup Utility

Press [Delete] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.

3.3 Main Settings

| Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc. | | | | | |
|--|----------|---------------------|----------|------|---------------------------|
| Main | Advanced | Chipset | Security | Boot | Save & Exit |
| BIOS Information | | | | | Choose the system default |
| BIOS Vendor | | American Megatrends | | | Language |
| Core Version | | 5.010 | | | |
| Compliancy | | UEFI 2.4; PI 1.3 | | | |
| Project Version | | 7111I 4.07 x64 | | | |
| Build Date and Time | | 03/03/2016 15:18:10 | | | |
| CPU Configuration | | | | | |
| Microcode Patch | | 901 | | | |
| BayTrail SoC | | DO Stepping | | | |
| KSC Information | | | | | |
| KSC Version | | N/A | | | |
| Memory Information | | | | | |
| Total Memory | | 4096 MB (DDR3L) | | | |
| GOP Information | | | | | |
| Intel® GOP Driver | | [N/A] | | | |
| TXE Information | | | | | →←: Select Screen |
| Sec RC Version | | 00.05.00.00 | | | ↑↓ : Select Item |
| TXE FW Version | | 01.01.00.1089 | | | Enter: Select |
| System Language | | [English] | | | +/- : Change Opt. |
| System Date | | [Sun 01/01/2012] | | | F1 : General Help |
| System Time | | [00:00:10] | | | F2: Previous Values |
| | | | | | F3:Optimized Defaults |
| | | | | | F4:Save and Exit |
| | | | | | ESC Exit |
| Version 2.17.1246. Copyright (C) 2016 American Megatrends , Inc. | | | | | |

System Time:

Set the system time, the time format is:

Hour : 0 to 23

Minute : 0 to 59

Second : 0 to 59

System Date:

Set the system date, the date format is:


Day: Note that the 'Day' automatically changes when you set the date.

Month: 01 to 12

Date: 01 to 31

Year: 1998 to 2099

3.4 Advanced Settings

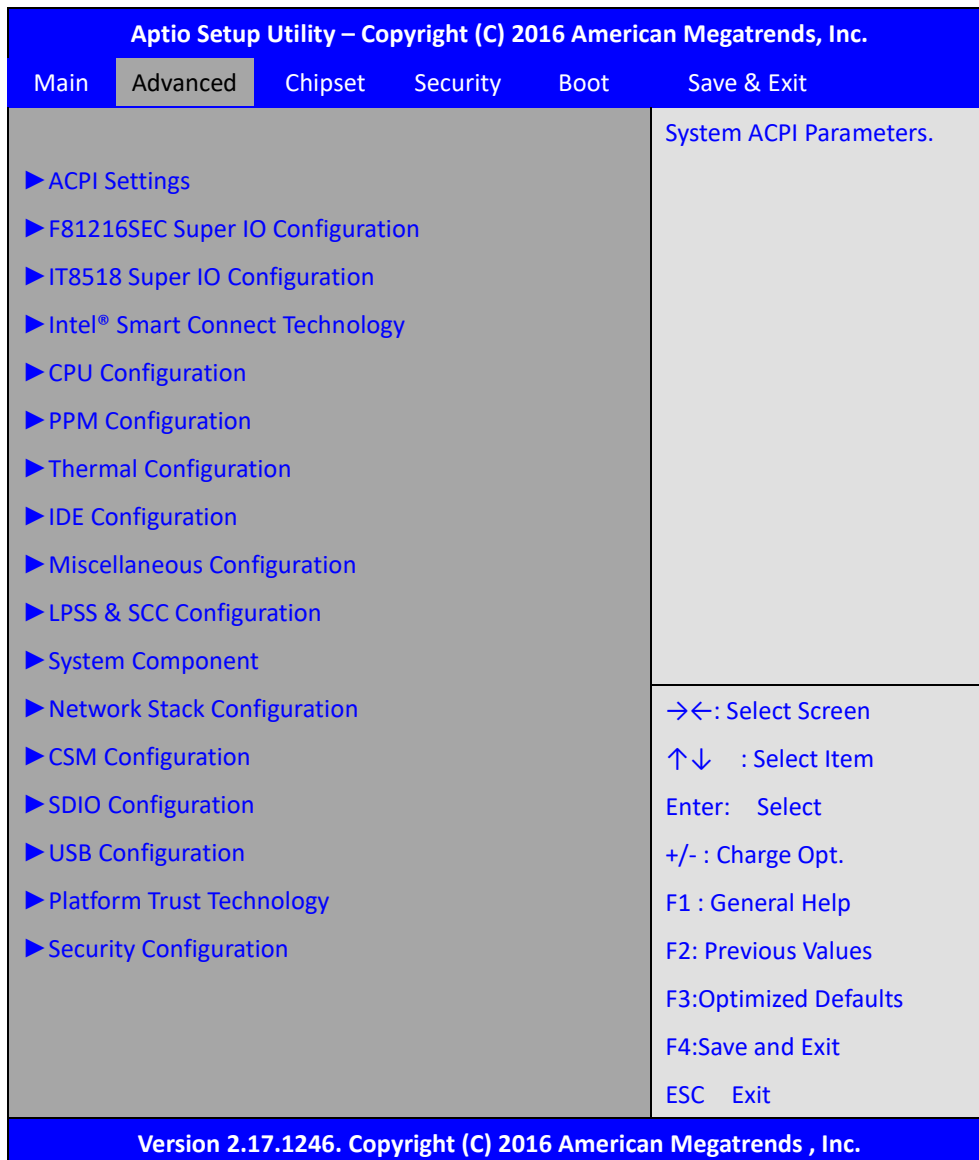

3.4.1 ACPI Settings

Enable ACPI Auto Conf:

[Disabled]

[Enabled]

Enable Hibernation:

[Enabled]

[Disabled]

ACPI Sleep State:

[S3 (Suspend to RAM)]

[Suspend Disabled]

Lock Legacy Resources:

[Disabled]

[Enabled]

3.4.2 F81216SEC Super IO Configuration

Super IO chip F81216SEC

Serial Port 1 Configuration

UART1 Mode Selection:

[RS-232]

[RS-485]

[RS-422]

Serial Port 2 Configuration

Change Settings [Auto]

Serial Port 3 Configuration

Change Settings [Auto]

Serial Port 4 Configuration

Change Settings [Auto]

3.4.3 IT8518 Super IO Configuration

Super IO chip IT8518/IT8519

Serial Port 1 Configuration

Backlight PWM Controller(COM5):

[RS-485]

[RS-422]

Serial Port 2 Configuration (COM6)

Change Settings [Auto]

3.4.4 Intel® Smart Connect Technology

ISCT Support

[Disabled]

[Enabled]

3.4.5 CPU Configuration

Socket 0 CPU Information

Intel® Atom™ CPU E3845 @ 1.91GHz

| | |
|-----------------------|---------------|
| CPU Signature | 30679 |
| Microcode Patch | 901 |
| Max CPU Speed | 1910 MHz |
| Mix CPU Speed | 500 MHz |
| Processor Cores | 4 |
| Intel HT Technology | Not Supported |
| Intel HT-X Technology | Supported |
| L1 Data Cache | 24KB x 4 |
| L1 Code Cache | 32KB x 4 |
| L2 Cache | 1024KB x 2 |
| L2 Cache | Not Present |

CPU Thermal configuration

CPU Speed 1918 MHz

64-bit Supported

Hyper-Threading:

[Enabled]

[Disabled]

Limit CPUID Maximum:

[Disabled]

[Enabled]

Execute Disable Bit:

[Enabled]

[Disabled]

Intel Virtualization Technology:

[Enabled]

[Disabled]

Power Technology

[Energy Efficient]

[Disabled]

[Custom]

3.4.6 PPM Configuration

CPU C State Report

[Enabled]

[Disabled]

Max CPU C-state

[C7]

[C6]

[C1]

SOix

[Disabled]

[Enabled]

3.4.7 Thermal Configuration Parameters

3.4.8 IDE Configuration

Serial-ATA(SATA)

[Enabled]

[Disabled]

SATA Test Mode

[Disabled]

[Enabled]

SATA Speed Support

[Gen2]

[Gen1]

SATA ODD Port

[No ODD]

[Port0 ODD]

[Port1 ODD]

[Disabled]

SATA Mode

[AHCI Mode]

[IDE Mode]

| | |
|--------------------|------------|
| Serial-ATA Port 0 | [Enabled] |
| | [Disabled] |
| SATA Port0 Hotplug | [Disabled] |
| | [Enabled] |
| Serial-ATA Port 1 | [Enabled] |
| | [Disabled] |
| SATA Port1 Hotplug | [Disabled] |
| | [Enabled] |
| SATA Port0 | |
| Not Present | |
| SATA Port1 | |
| Not Present | |

3.4.9 Miscellaneous Configuration

3.4.10 LPSS & SCC Configuration

| | |
|----------------------------|------------------|
| LPSS & SCC Configuration | [ACPI Mode] |
| SCC Configuration | |
| SCC eMMC Support | [eMMC AUTO MODE] |
| SCC eMMC 4.5 DDR50 Support | [Enabled] |
| SCC eMMC 4.5 HS200 Support | [Disabled] |
| eMMC Secure Erase | [Disabled] |
| SCC SDIO Support | [Enabled] |
| SCC SD Card Support | [Enabled] |
| SDR25 Support for SDCard | [Disabled] |
| SDR50 Support for SDCard | [Enabled] |
| MIPI HSI Support | [Disabled] |
| LPSS Configuration | [Enabled] |
| LPSS DMA #1 Support | [Enabled] |
| LPSS DMA #2 Support | [Enabled] |
| LPSS I2C #1 Support | [Enabled] |
| LPSS I2C #2 Support | [Enabled] |
| LPSS I2C #3 Support | [Enabled] |

| | |
|--------------------------|------------|
| LPSS I2C #4 Support | [Enabled] |
| LPSS I2C #5 Support | [Enabled] |
| LPSS I2C #6 Support | [Enabled] |
| LPSS I2C #7 Support | [Enabled] |
| NFC | [Disabled] |
| Touch Pad | [Disabled] |
| I2C touch Device Address | |
| LPSS HSUART #1 Support | [Disabled] |
| LPSS HSUART #2 Support | [Disabled] |
| LPSS PWM #1 Support | [Enabled] |
| LPSS PWM #2 Support | [Enabled] |
| LPSS SPI Support | [Enabled] |

3.4.11 System Component

3.4.12 Network Stack Configuration

| | |
|---------------|------------|
| Network Stack | [Disabled] |
|---------------|------------|

3.4.13 CSM Configuration

| | |
|----------------------|-------------------|
| CSM Support | [Enabled] |
| CSM16 Module Version | 07.76 |
| GateA20 Active | [Upon Request] |
| | [Always] |
| Option ROM Messages | [Force BIOS] |
| | [Keep Current] |
| Boot option filter | [UEFI and Legacy] |
| | [Legacy only] |
| | [UEFI only] |
| Network | |
| | [UEFI] |
| | [Do not launch] |
| | [Legacy] |
| Storage | |
| | [UEFI] |
| | [Do not launch] |
| | [Legacy] |
| Video | |
| | [Legacy] |

[UEFI]
[Do not launch]

Other PCI devices

[UEFI]
[Do not launch]
[Legacy]

3.4.14 SDIO Configuration

3.4.15 USB Configuration

USB Configuration

USB Module Version 8.11.02

USB Devices:

1 keyboard, 2 Mice, 3 Hubs

Legacy USB Support:

[Enabled]
[Disabled]

XHCI Hand-off:

[Enabled]
[Disabled]

EHCI Hand-off:

[Disabled]
[Enabled]

USB Mass Storage Driver Support

[Enabled]
[Disabled]

USB hardware delays and time-outs:

USB transfer time-out:

[20 sec]
[10 sec]
[5 sec]
[1 sec]

Device reset time-out:

[20 sec]
[10 sec]
[30 sec]
[40 sec]

Device power-up delay

[Auto]

[Manual]

3.4.16 Platform Trust Technology

Ftpm

[Disabled]

[Enabled]

3.4.17 Security Configuration

3.5 Chipset Settings



3.5.1 Host Bridge

▶ Intel IGD Configuration

▶ IGD – LCD Control

Force Lid Status

[On]

[Off]

BIA

[Auto]

ALS Support

[Disabled]

IGD Flat Panel [Auto]
Pannel Scaling [Auto]

▶ **Memory Frequency and Timing**

▶ **Graphics Power Management Control**

Memory Information

Total Memory 4096 MB(DDR3L)
Memory Slot0 4096 MB(DDR3L)
DIMM#1 Not Present
Max TOLUD

[Dynamic]

[2GB]

[2.25GB]

[2.5GB]

[2.75GB]

[3GB]

Backlight PWM or DC Control

[PWM]

[DC]

Backlight PWM Control

[PWM Normal by BIOS]

BIOS Control Backlight Level

[Level 7]

[Level 0]

[Level 1]

[Level 2]

[Level 3]

[Level 4]

[Level 5]

[Level 6]

[Level 8]

[Level 9]

[Level 10]

[Level 11]

[Level 12]

[Level 13]

[Level 14]

[Level 15]

LCD Minimum brightness By Knob

[0%]

[1%]

[20%]

3.5.2 South Bridge

▶ Azalia HD Audio

▶ USB Configuration

USB OTG Support [Disabled]

USB VBUS [On]

XHCI Mode [Smart Auto]

USB2 Link Power Management [Enabled]

USB 2.0(EHCI) Support [Enabled]

USB EHCI debug [Disabled]

USB Per Port Control [Enabled]


USB Port 0 [Enabled]


USB Port 1 [Enabled]

USB Port 2 [Enabled]


USB Port 3 [Enabled]

3.6 Security Settings

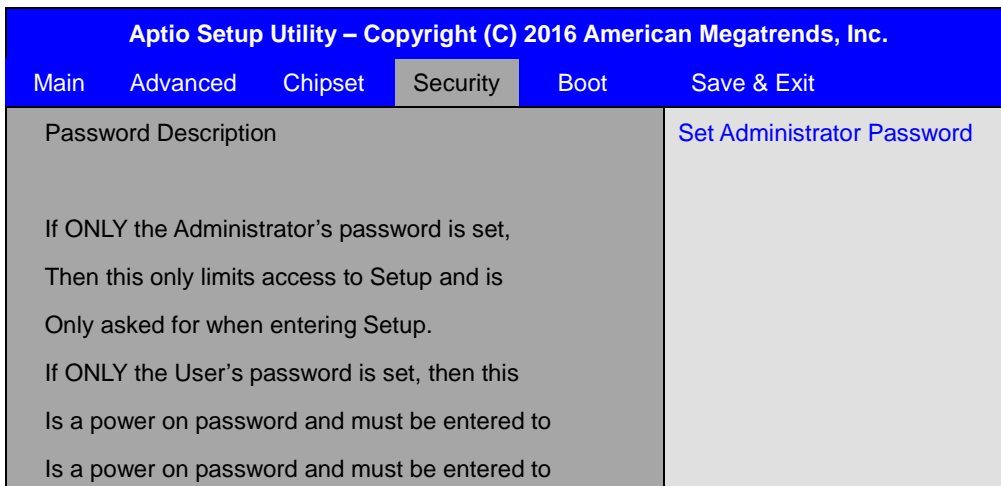

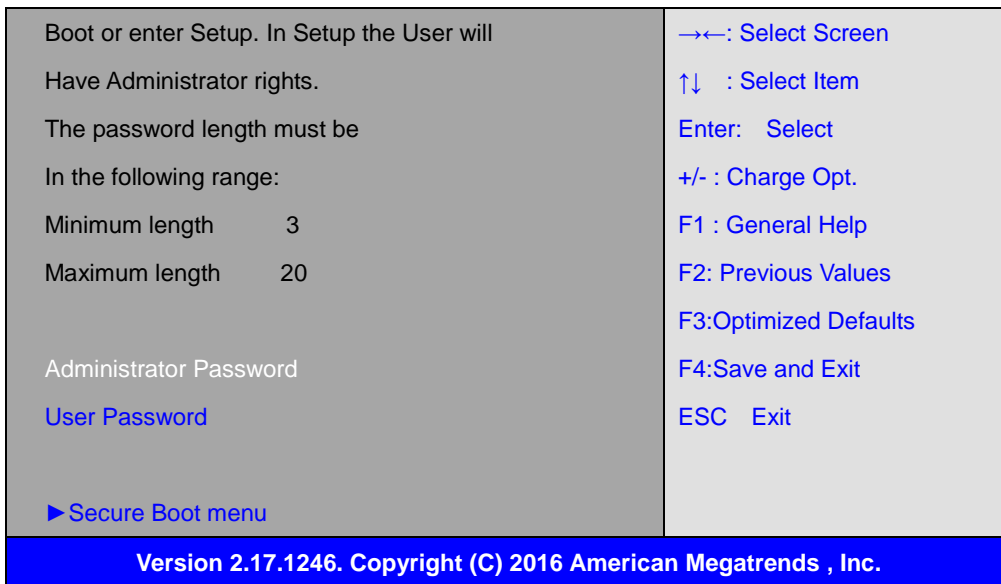

 3.6.1 Administrator Password



3.6.2 User Password



Type the password with up to 20 characters and then press **<Enter>** key. This will clear all previously typed CMOS passwords. You will be requested to confirm the password. Type the password again and press **<Enter>** key. You may press **<Esc>** key to abandon password entry operation.

To clear the password, just press **<Enter>** key when password input window pops up. A confirmation message will be shown on the screen as to whether the password will be disabled. You will have direct access to BIOS setup without typing any password after system reboot once the password is disabled.

Once the password feature is used, you will be requested to type the password each time you enter BIOS setup. This will prevent unauthorized persons from changing your system configurations.

Also, the feature is capable of requesting users to enter the password prior to system boot to control unauthorized access to your computer. Users may enable the feature in Security Option of Advanced BIOS Features. If Security Option is set to System, you will be requested to enter the password before system boot and when entering BIOS setup; if Security Option is set to Setup, you will be requested for password for entering BIOS setup.

3.7 Boot Settings

| Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc. | | | | | |
|--|------------------------|---------|----------|------|--|
| Main | Advanced | Chipset | Security | Boot | Save & Exit |
| Boot Configuration | | | | | Number of seconds toWait for Setup Activation key. 65535(0xFFFF)means Indefinite waiting. |
| Setup Prompt Timeout | 1 | | | | |
| Bootup Numlock State | [On] | | | | |
| Quiet Boot | [Disabled] | | | | |
| Fast Boot | [Enabled] | | | | |
| Boot Option Priorities | | | | | →←: Select Screen ↑↓ : Select Item Enter: Select +/- : Change Opt. F1 : General Help F2: Previous Values F3:Optimized Defaults F4:Save and Exit ESC Exit |
| Boot Option #1 | [UEFI:Built-in EFI...] | | | | |

Version 2.17.1246. Copyright (C) 2016 American Megatrends , Inc.

| | |
|---------------------------|----------------------------|
| Setup Prompt Timeout | [1] |
| Bootup Numlock State | [On] |
| | [off] |
| Quiet Boot | [Disabled] |
| | [Enabled] |
| Fast Boot | [Disabled] |
| | [Enabled] |
| Boot Option Priorities | |
| Boot Option #1 | Sets the system boot order |
| Hard Drive BBS Priorities | [SATA PM:*** ...] |

Boot Option #1

SATA PM:***...

Disabled

3.8 Save & Exit Settings



Save Changes and Exit

Save & Exit Setup save Configuration and exit?

[Yes]

[No]

Discard Changes and Ext

Exit Without Saving Quit without saving?

[Yes]

[No]

Save Changes and Reset

| | |
|---|-------|
| Save & reset Save Configuration and reset? | [Yes] |
| | [No] |
| Discard Changes and Reset | |
| Reset Without Saving Reset without saving? | [Yes] |
| | [No] |
| Save Changes | |
| Save Setup Values Save configuration? | [Yes] |
| | [No] |
| Discard Changes | |
| Load Previous Values Load Previous Values? | [Yes] |
| | [No] |
| Restore Defaults | |
| Load Optimized Defaults Load optimized Defaults? | [Yes] |
| | [No] |
| Save user Defaults | |
| Save Values as User Defaults Save configuration? | [Yes] |
| | [No] |
| Restore user Defaults | |
| Restore User Defaults Restore User Defaults? | [Yes] |
| | [No] |
| Launch EFI Shell from filesystem device | |
| WARNING Not Found | [ok] |
| Reset System with ME disable ModeMEUD000 | |
| ME will runs into the temporary disable mode, Ignore if ME Ignition FWMEUD001. | |

Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows 7. The software and drivers are included with the motherboard. The contents include **Intel chipset driver, VGA driver, LAN drivers, Audio driver, USB 3.0 Driver, and Com Driver** Installation instructions are given below.

Important Note:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.



4.1 Intel® Atom™ SoC Chipset

To install the Intel chipset driver, please follow the steps below.

Step 1. Select Intel® Atom™ SoC Chipset from the list



Step 2. Click **Next** to setup program.



Step 3. Read the license agreement. Click **Yes** to accept all of the terms of the license agreement.



Step 4. Click **Next** to continue.



Step 5. Click Next.



Step 6. Select Yes, I want to restart this computer now. Click **Finish**, then remove any installation media from the drives.




4.2 Intel® VGA Chipset

To install the VGA drivers, follow the steps below to proceed with the installation.


Step 1. Select Intel® VGA Chipset




Step 2. Click **Automatically run WinSAT and enable the Windows Aero desktop theme (if supported)**. Click **Next**.

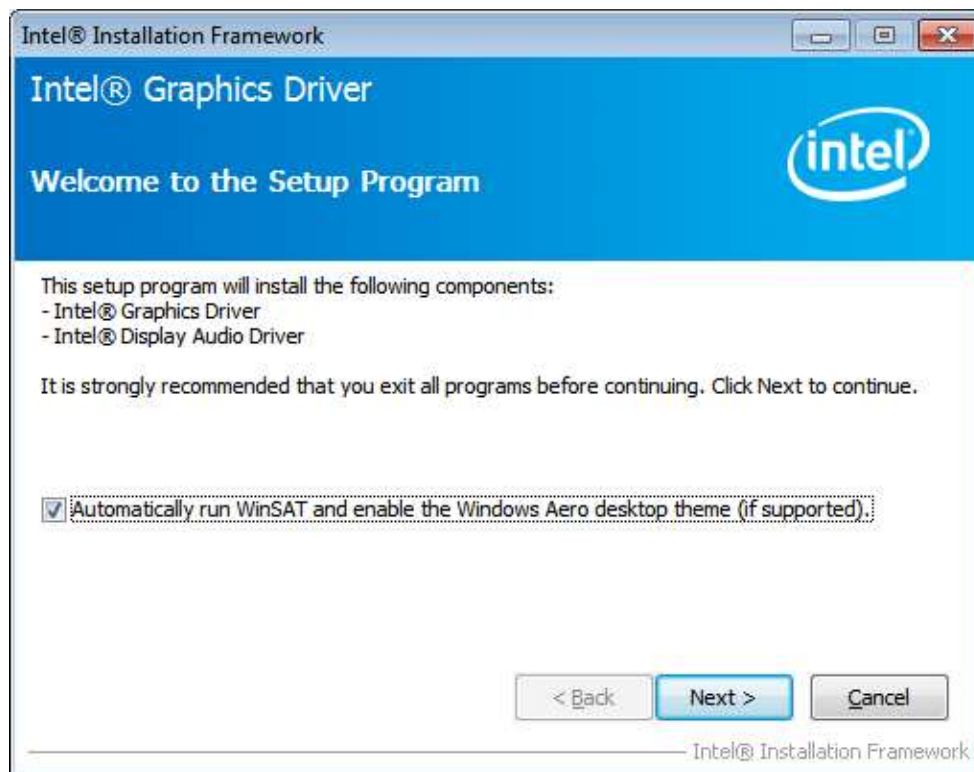


Step 3. Read license agreement. Click **Yes**.

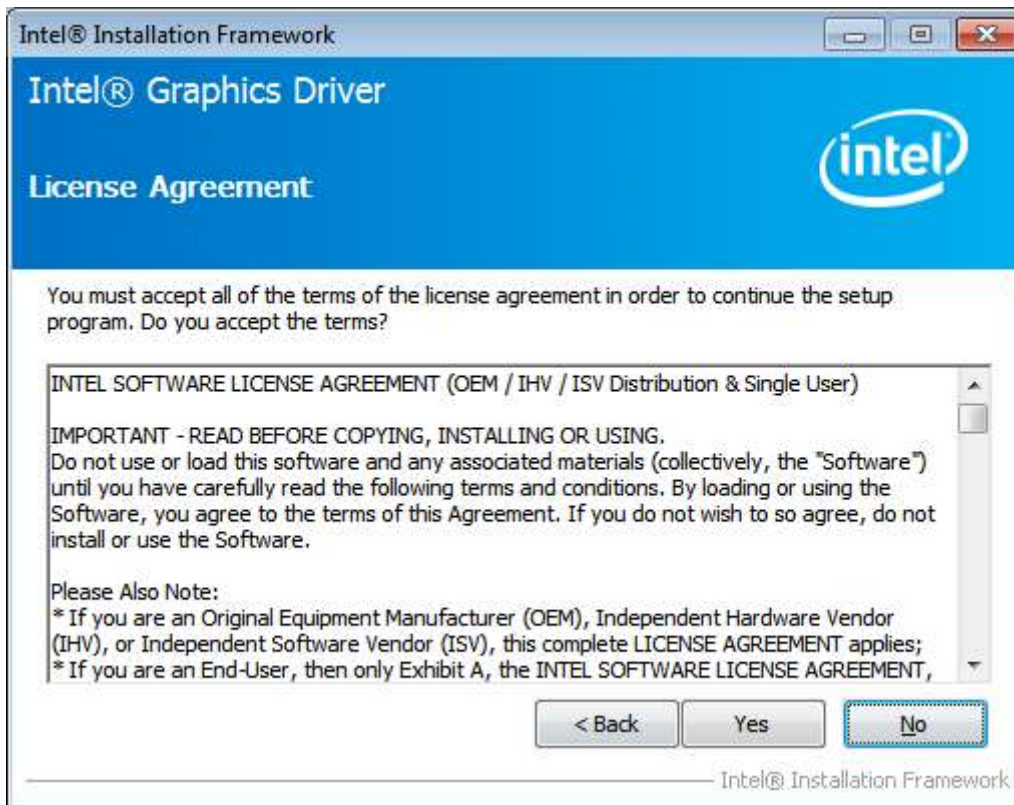


Step 4. Click **Next**.

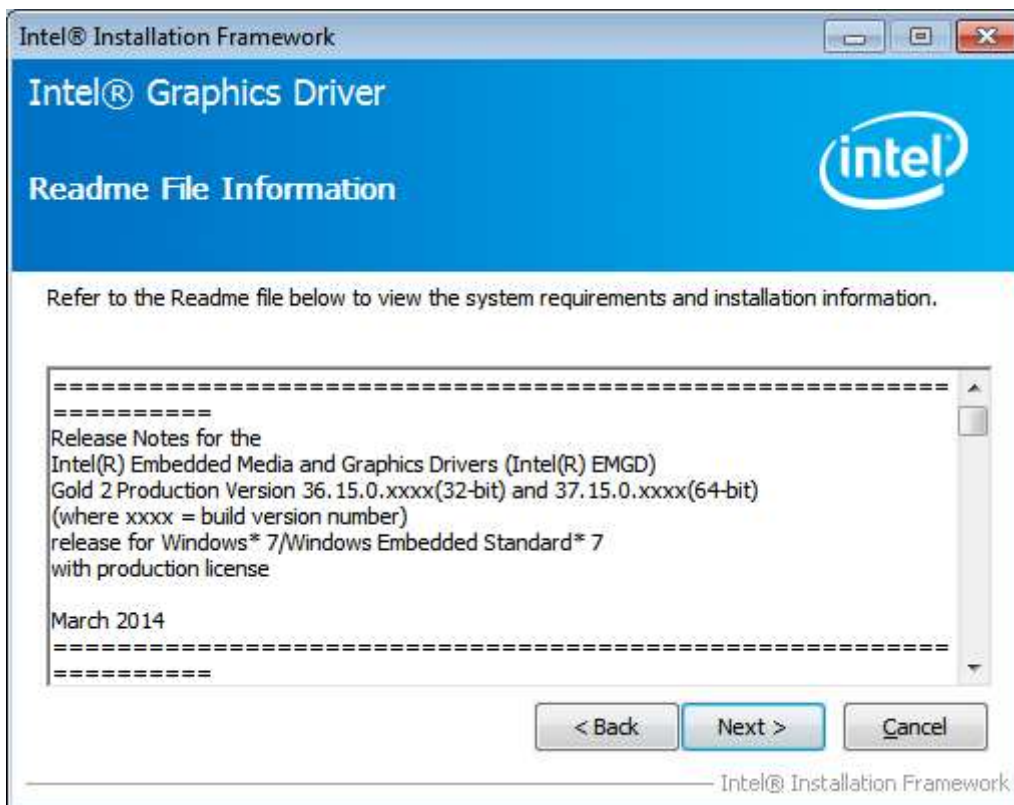


Step 5. Click Install.

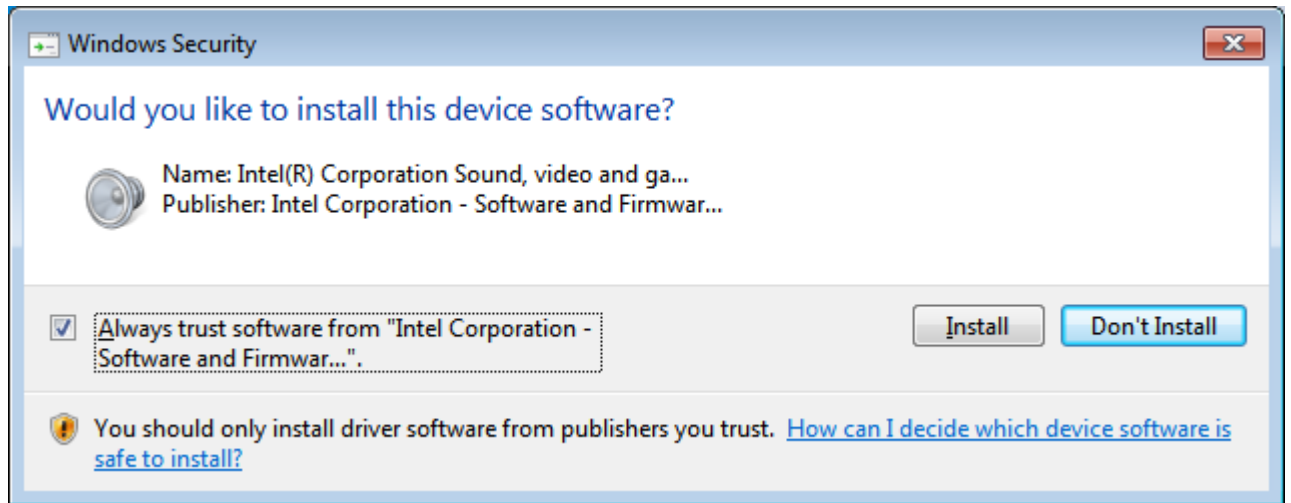


Step 6. Click Install.

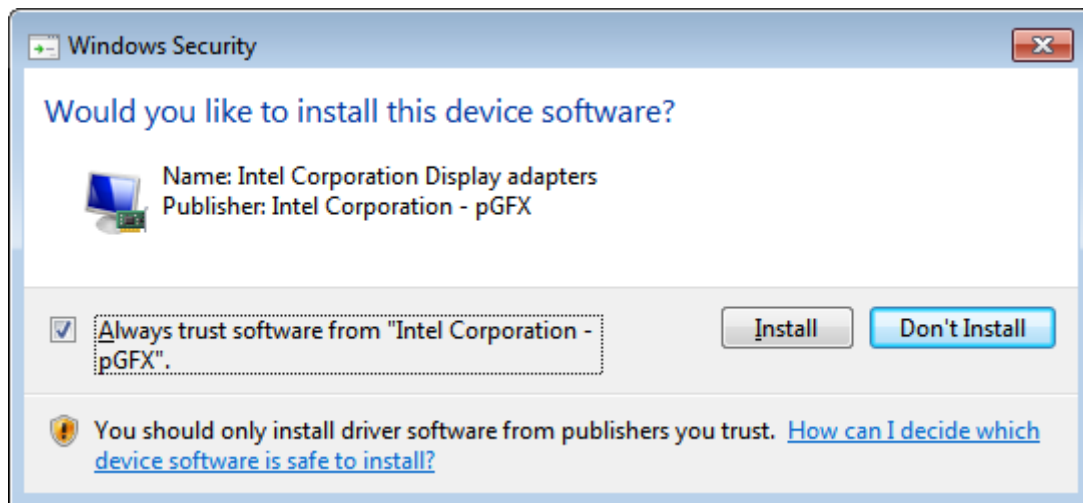

Step 7. Click Next.

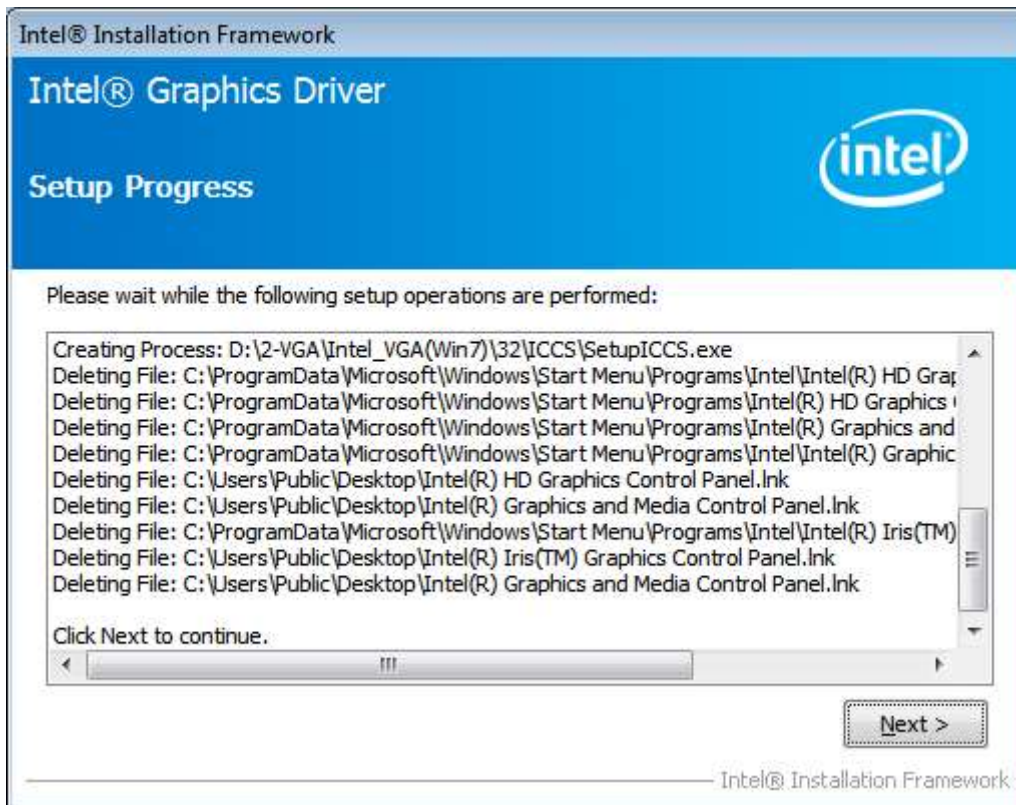

Step 8. Click Yes, I want to restart this computer now. Then click Finish.

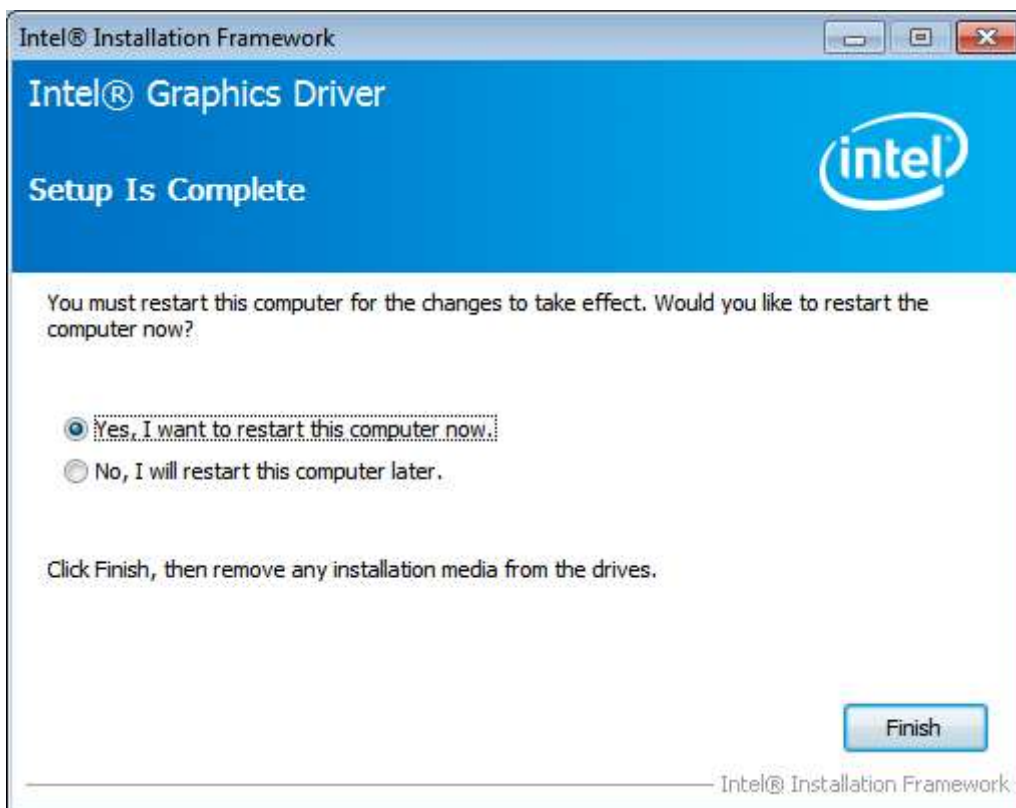


4.3 Intel® LAN Driver

To install the Intel® LAN driver, please follow the steps below.


Step 1. Select Intel® 82574L LAN Driver from the list.




Step 2. . Click Next.

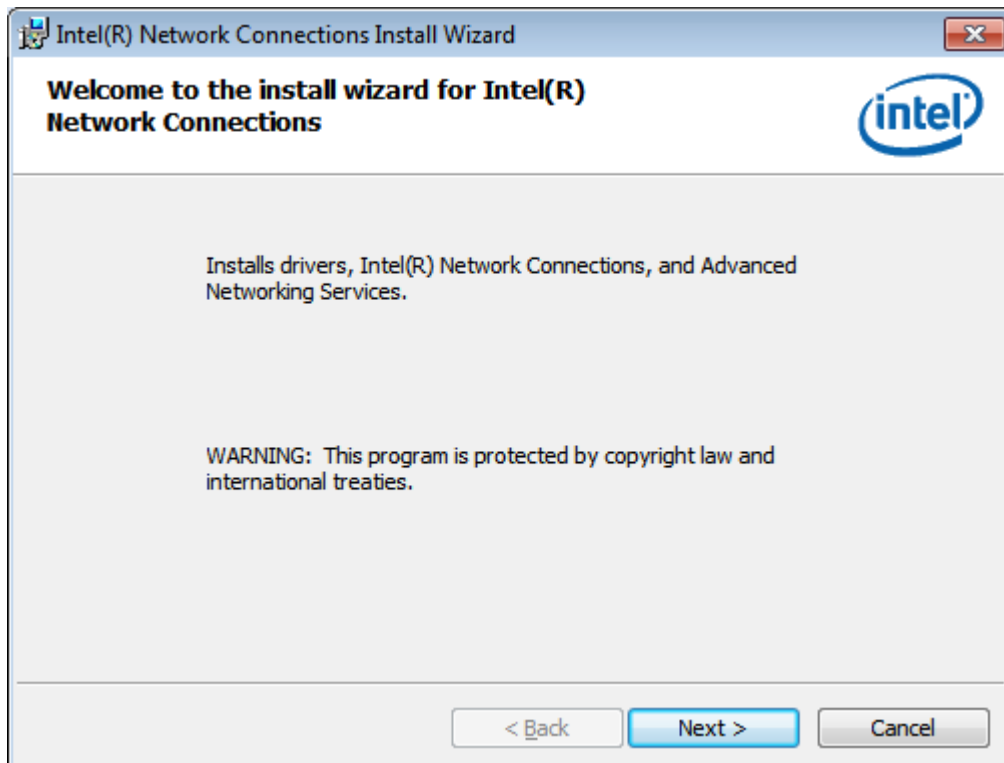


Step 3. Read license agreement. Click **I accept the terms in the license agreement**.
Click **Next**.

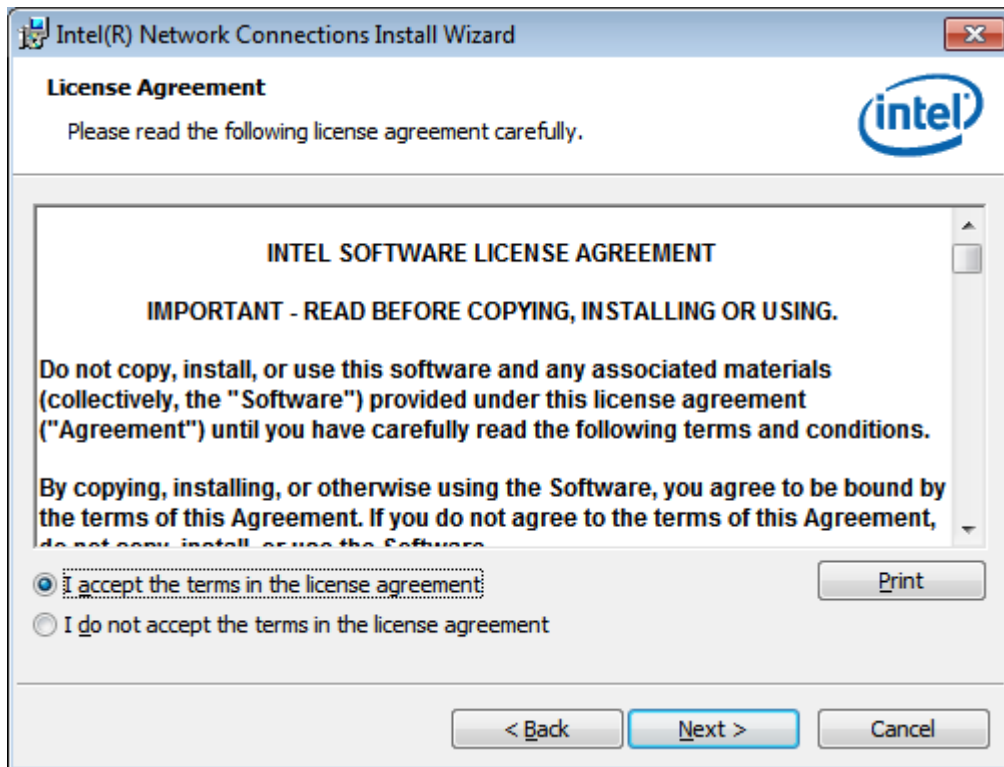


Step 4. Click **Next** to continue.

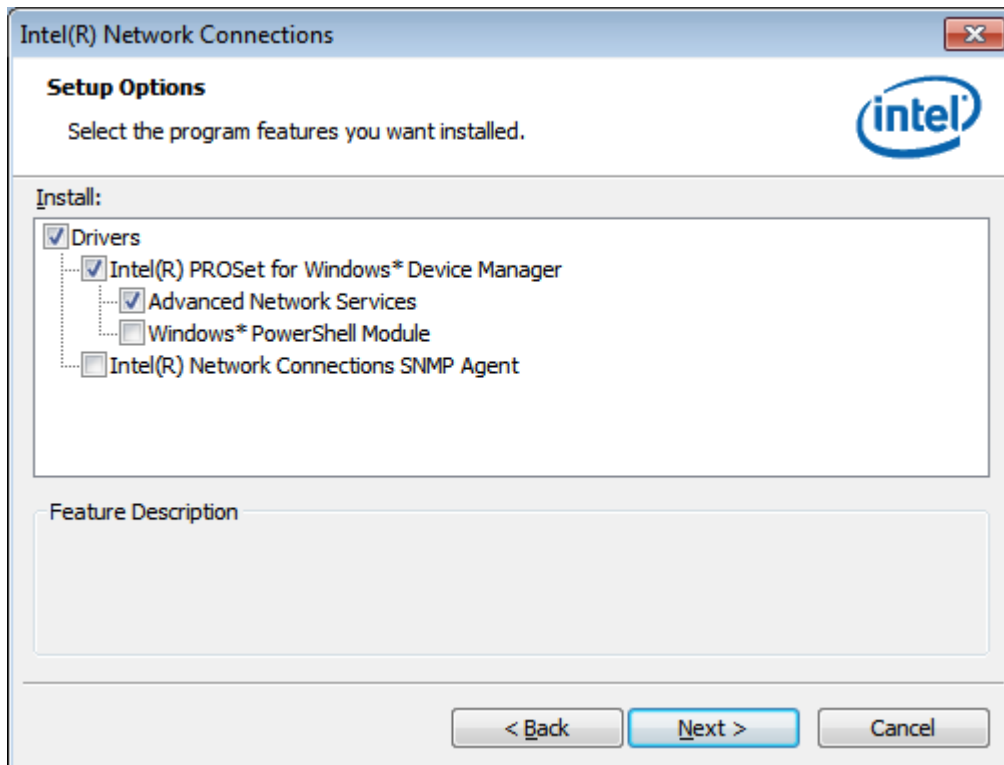

Step 5. Click **Install** to begin the installation.

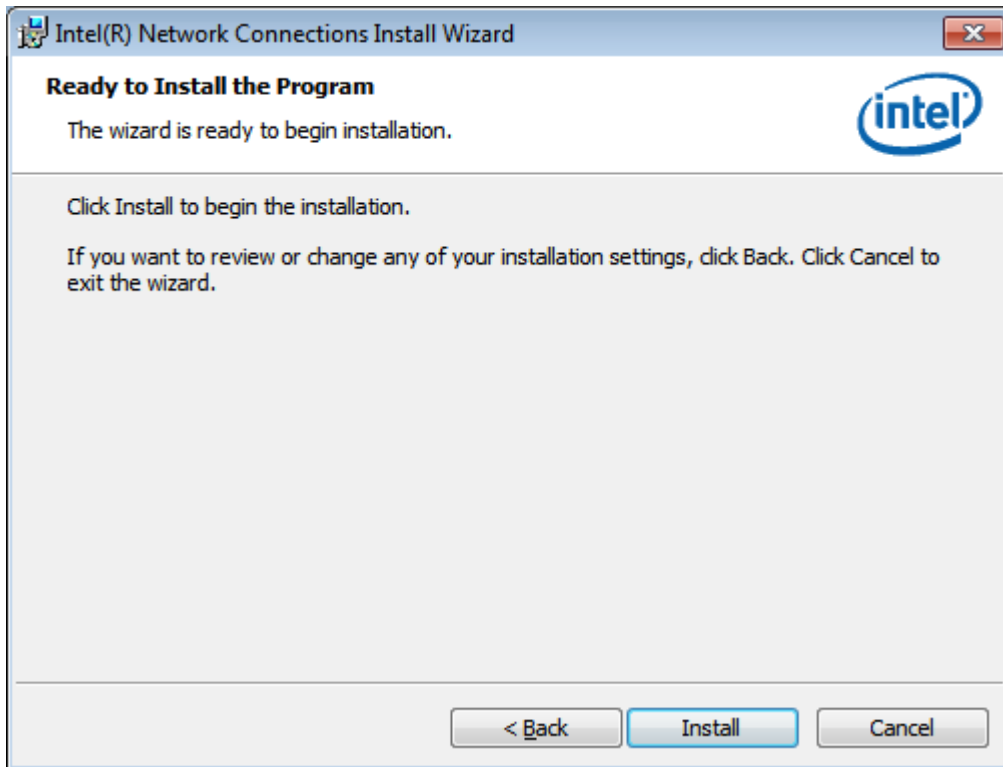

Step 6. Click **Finish** to exit the wizard.

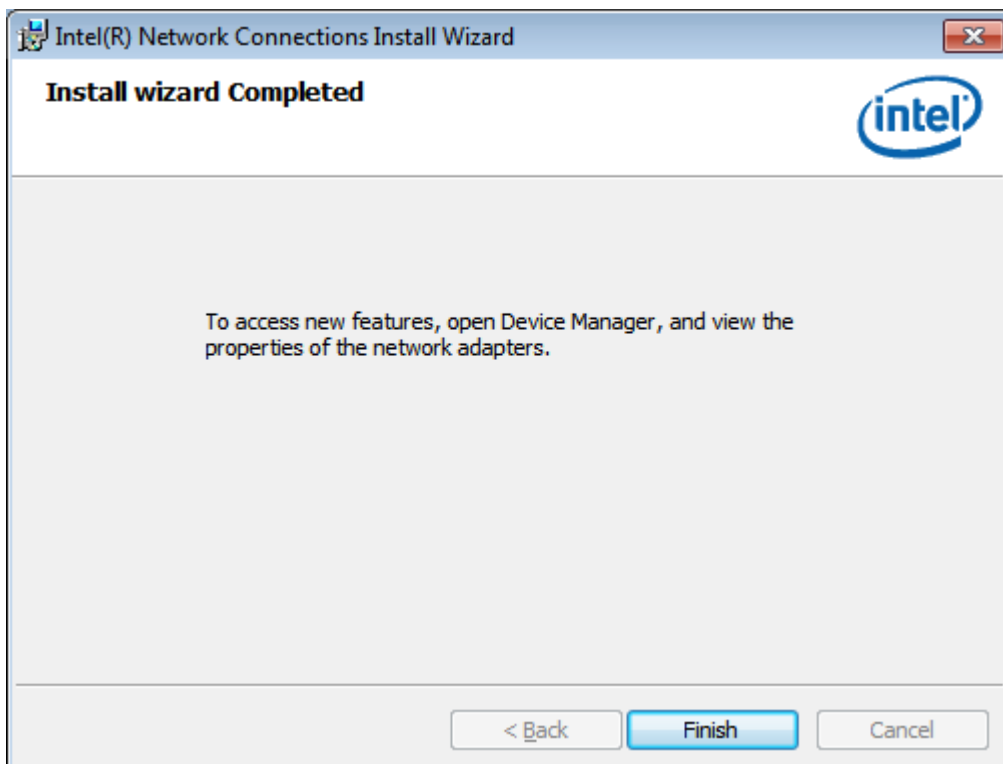


4.4 Realtek ALC662 HD Audio Driver Installation

To install the Realtek ALC662 HD Audio Driver, please follow the steps below.


Step 1. Select Realtek AL662 HD Audio Driver from the list



Step 2. Click **Next** to continue.

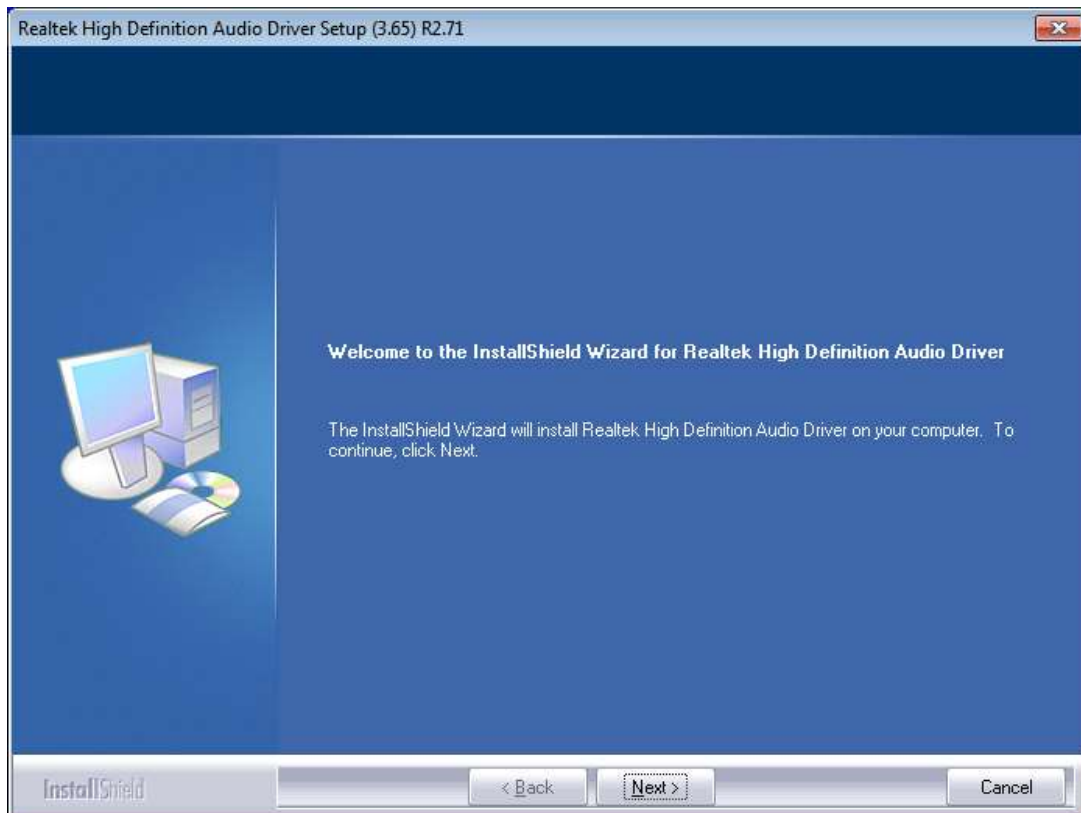

Step 3. Click **Yes, I want to restart my computer now.** Click **Finish** to complete the installation.

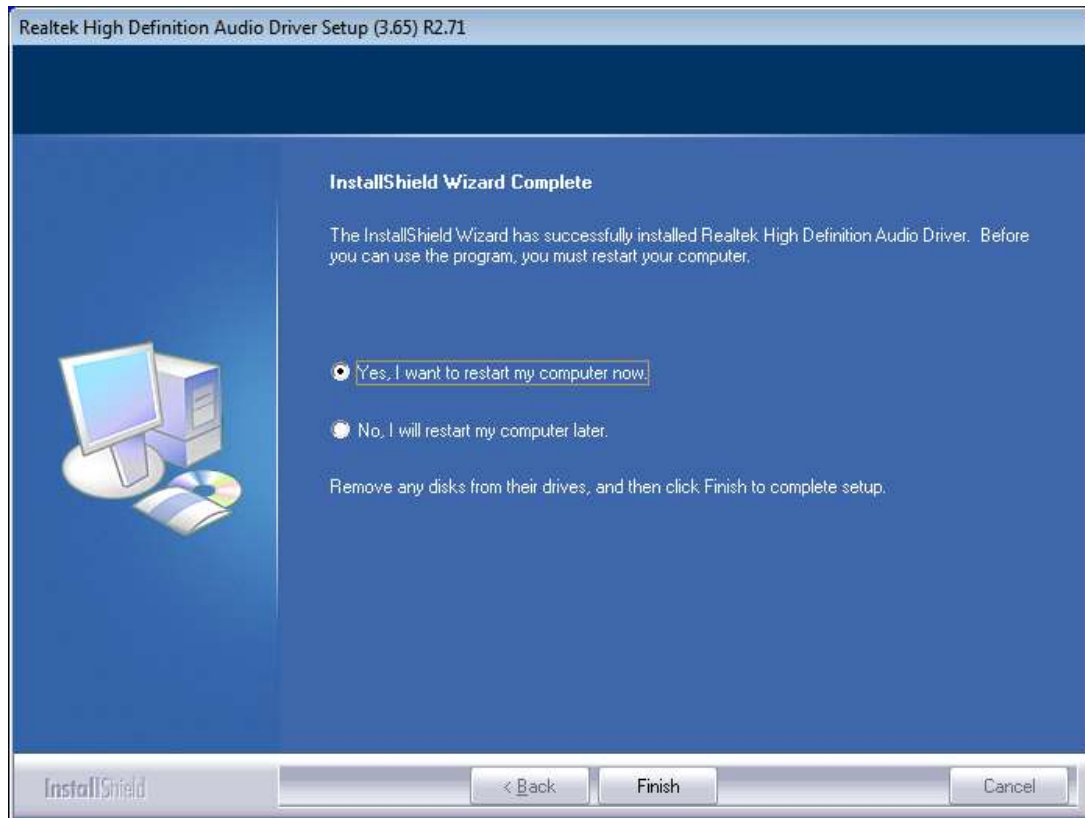

4.5 USB 3.0 Driver

To install the USB 3.0 Driver, please follow the steps below.


Step 1. Select **USB 3.0 Driver** from the list




Step 2. Click **Next** to continue.




Step 3. Read the license agreement. Then click **Yes** to continue.

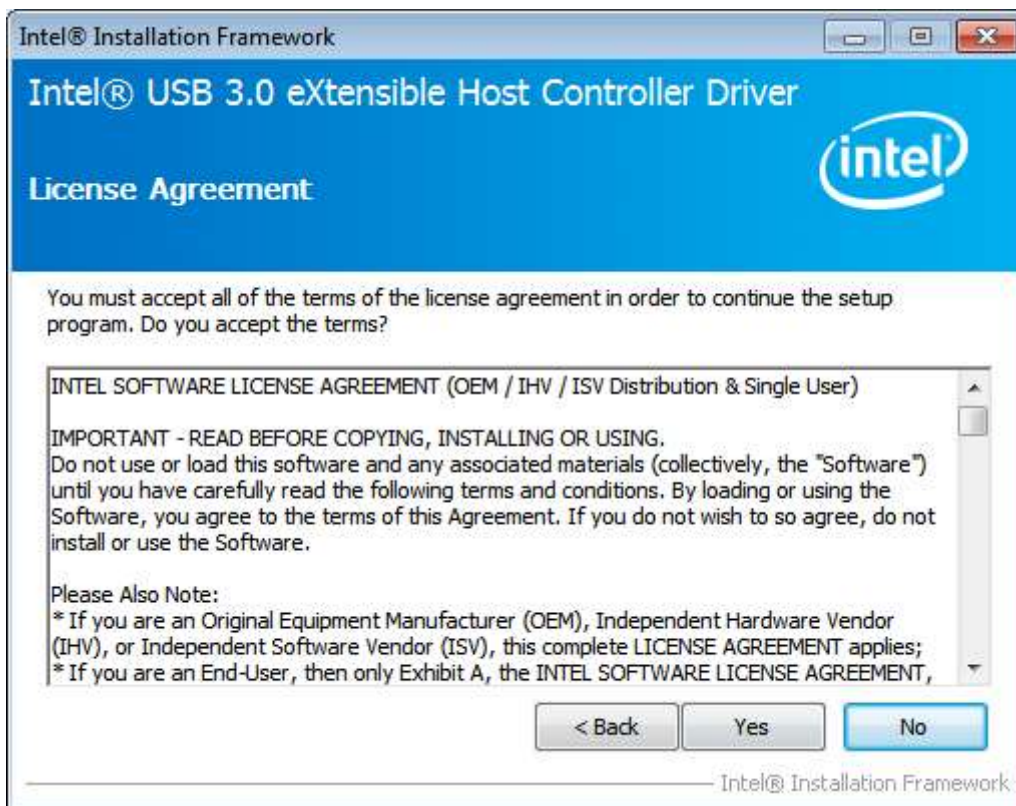


Step 4. Click **Next** to continue.

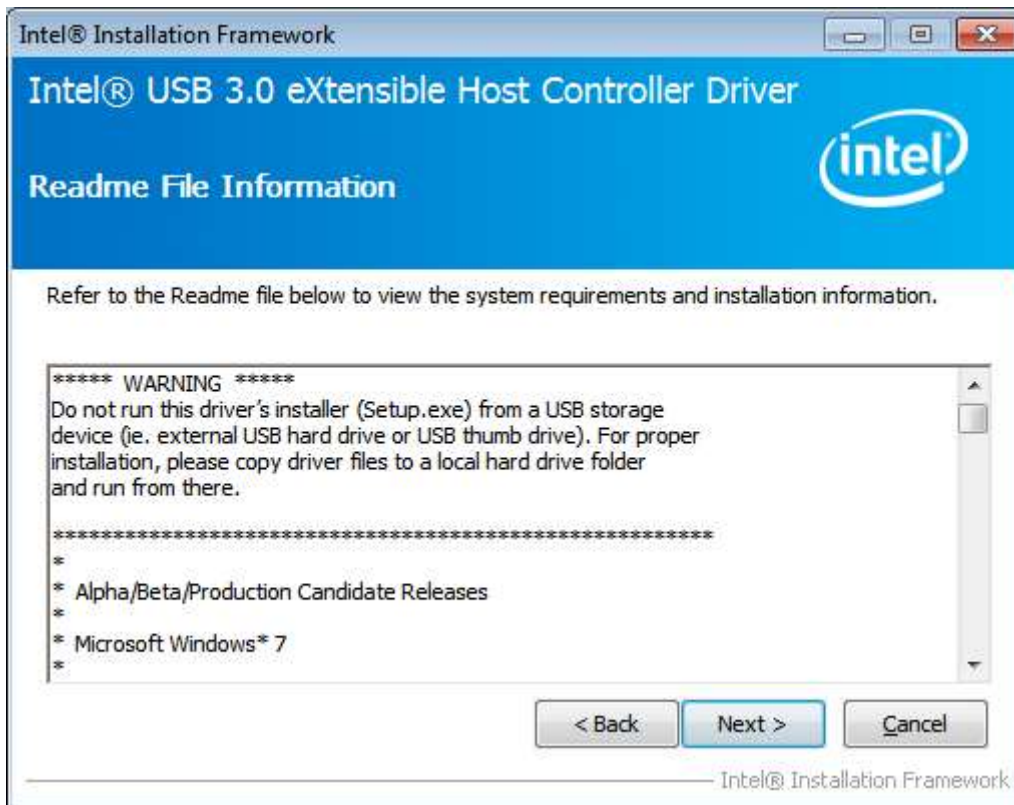

Step 5. Click **Next** to continue.

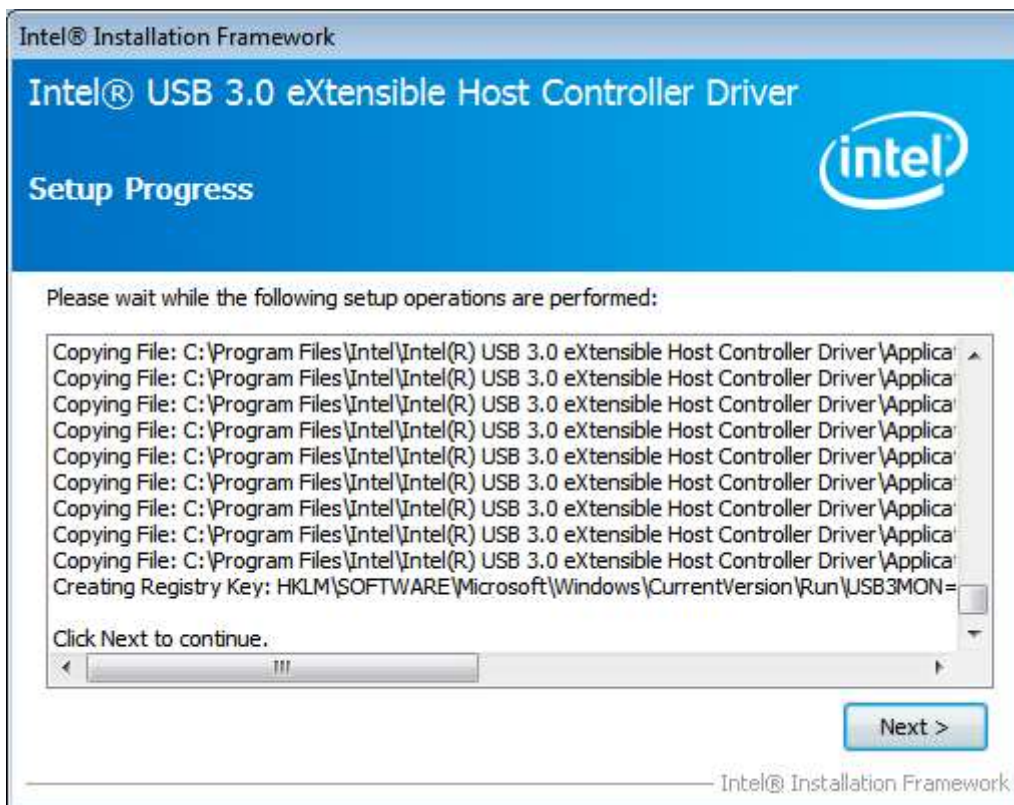

Step 6. Select **Yes, I want to restart this computer now.** Then click **Finish** to complete the installation.

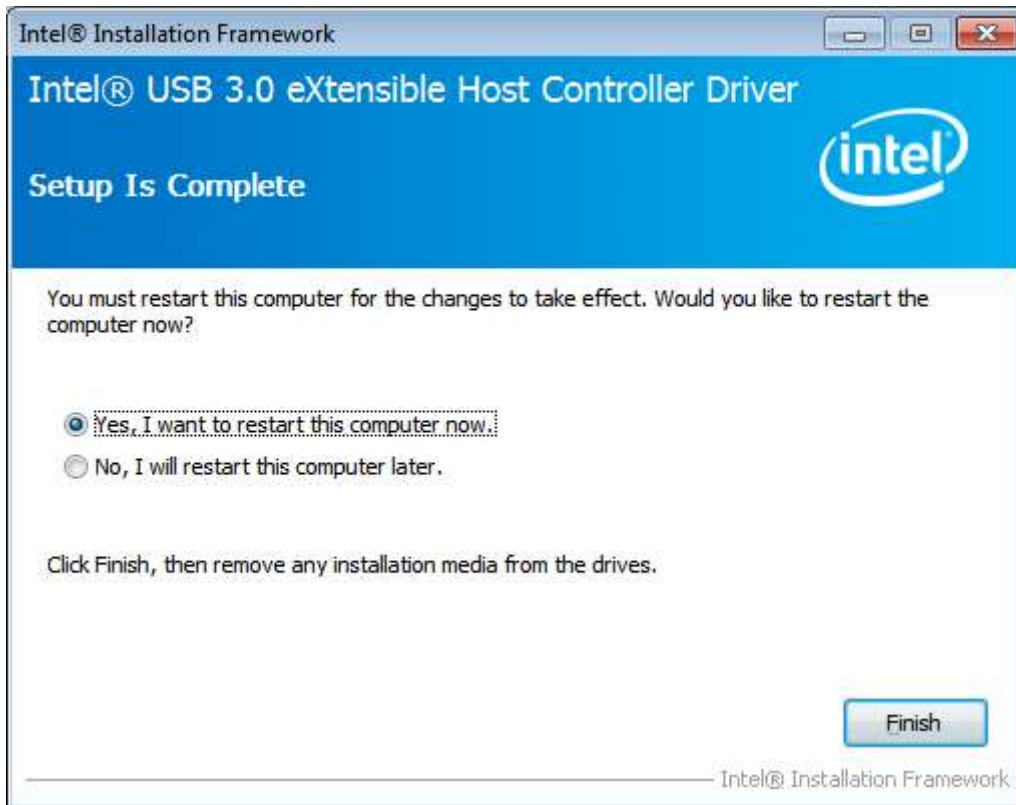


4.6 Com Driver

To install the Com Driver, please follow the steps below.


Step 1. Select **Com Driver** from the list




Step 2. Click **Next** to continue.

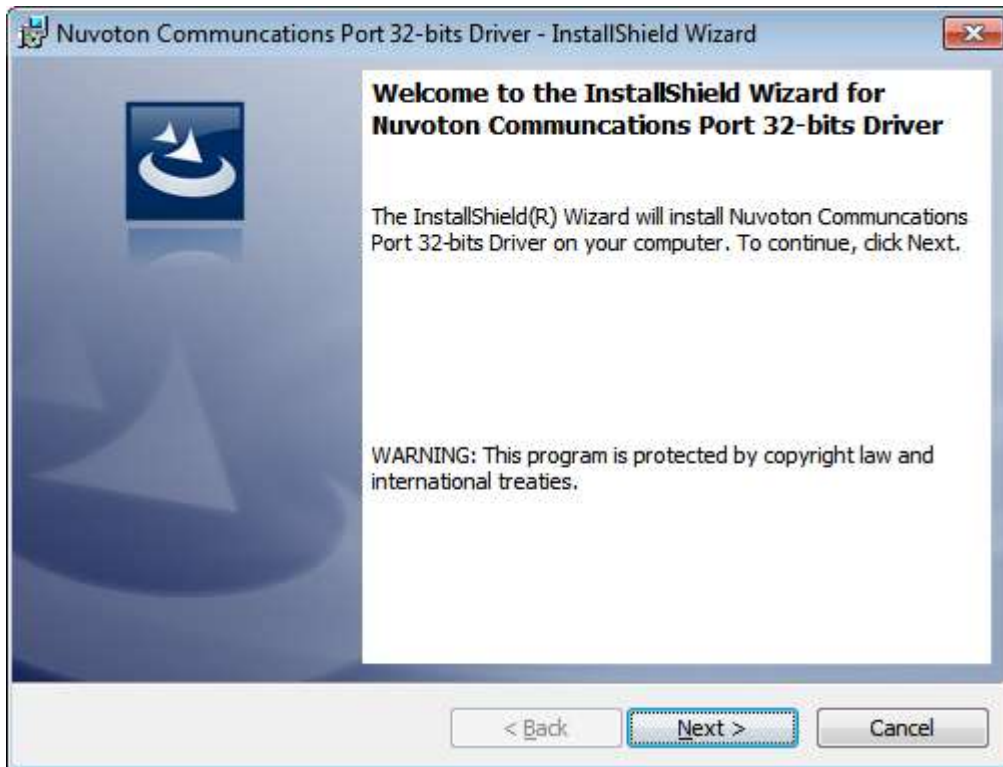

Step 3. Click **install** to begin the installation.

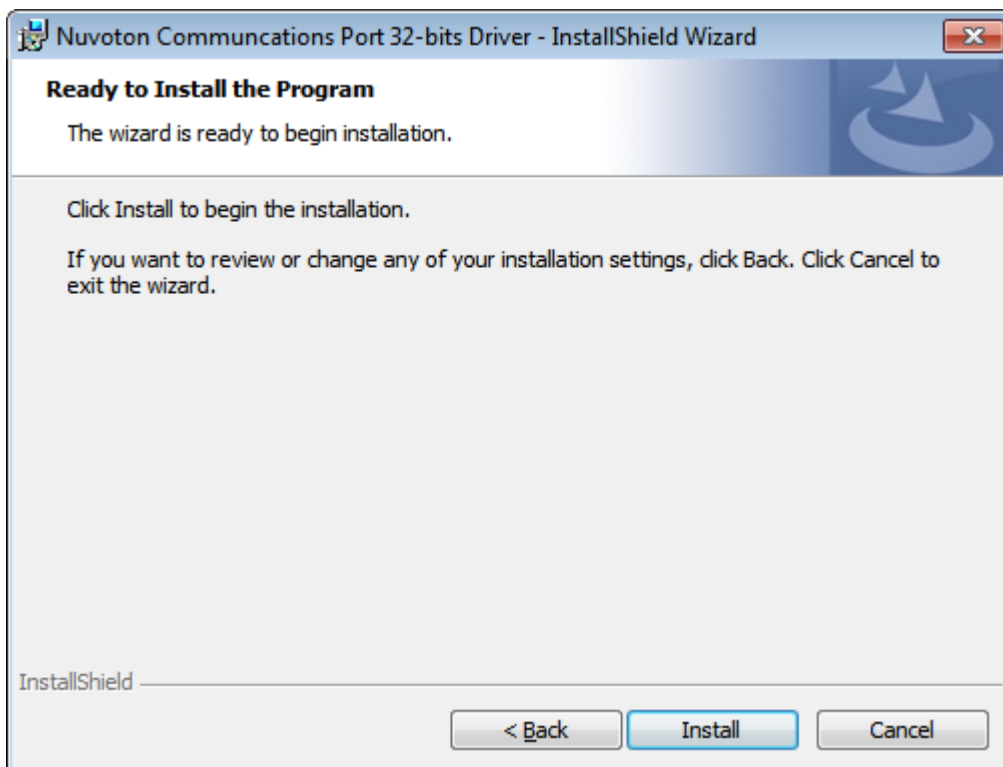

Step 4. Click **Finish** to complete the installation.

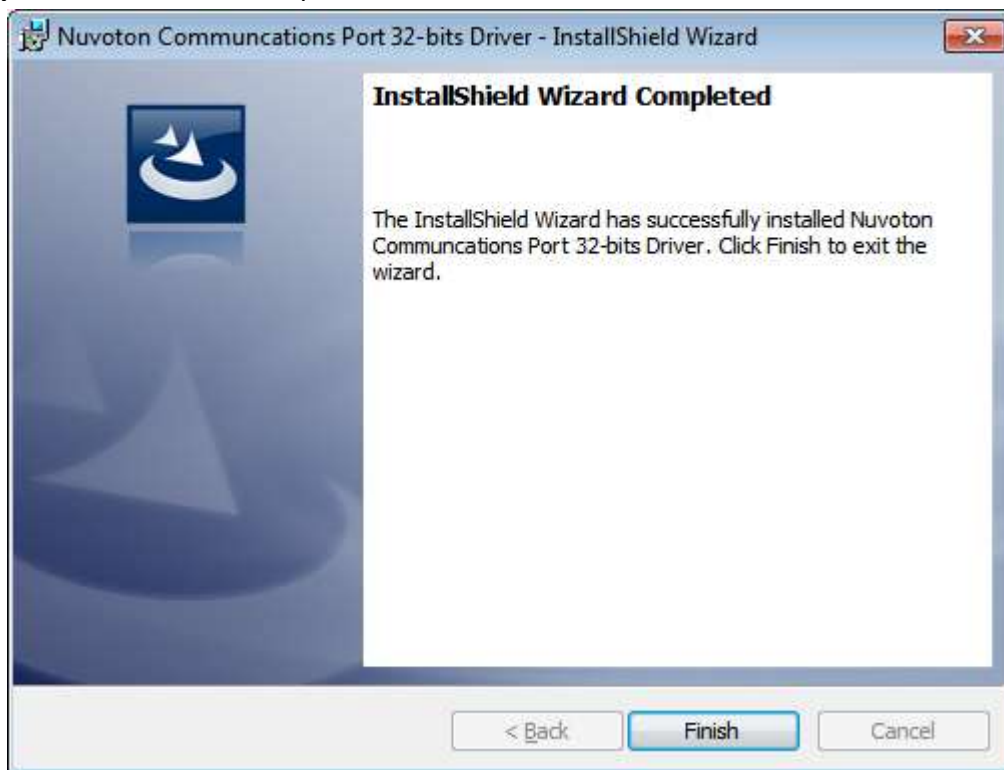

Chapter 5 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your touch screen work with different operating systems.

5.1 Windows 7/8.1/10 Universal Driver Installation for PenMount 6000 Series

Before installing the Windows 7/8.1/10 driver software, you must have the Windows 7/8.1/10 system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.


5.1.1 Installing Software (Resistive Touch)

If you have an older version of the PenMount Windows 7 driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 Windows 7 driver.


Step 1. Insert the product CD, the screen below would appear. Click **Touch Panel Driver**.




Step 2. Click **Next** to continue.

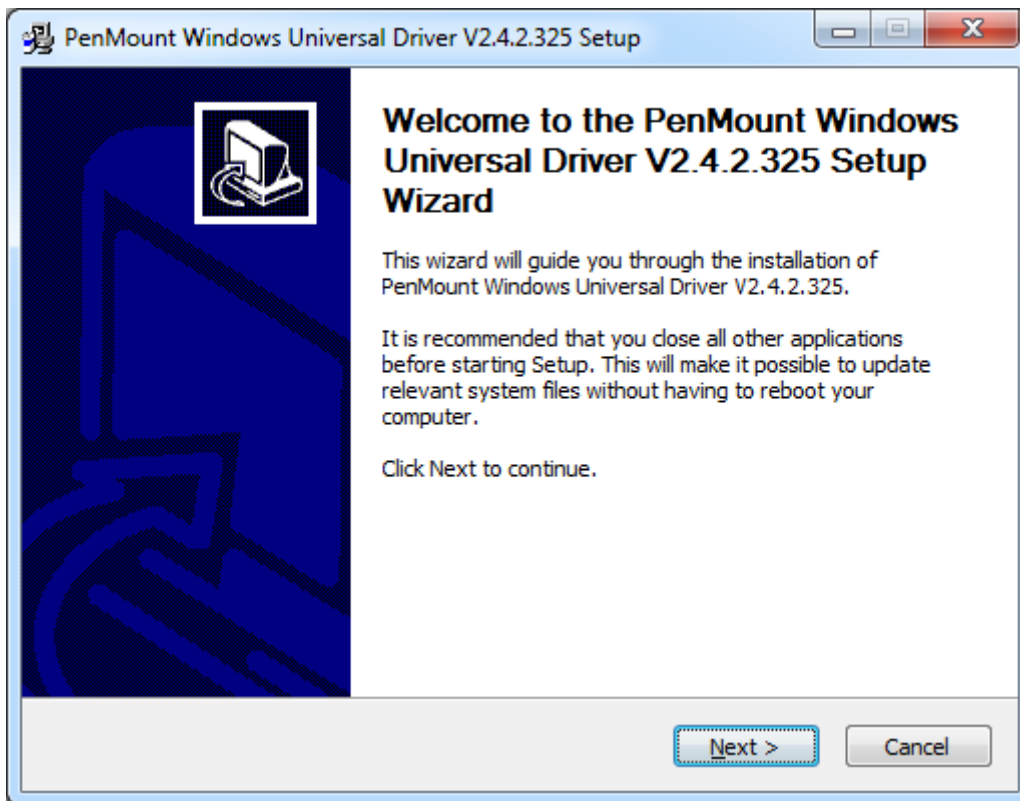


Step 3. Read the license agreement. Click **I Agree** to agree the license agreement.

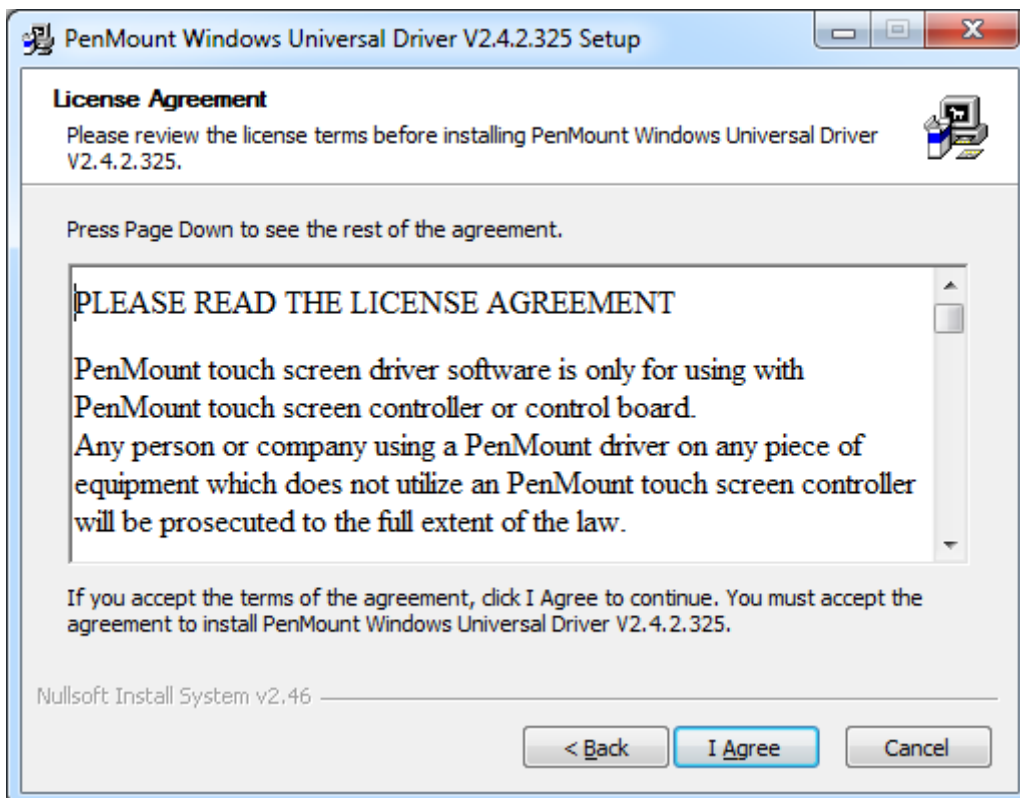


Step 4. Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

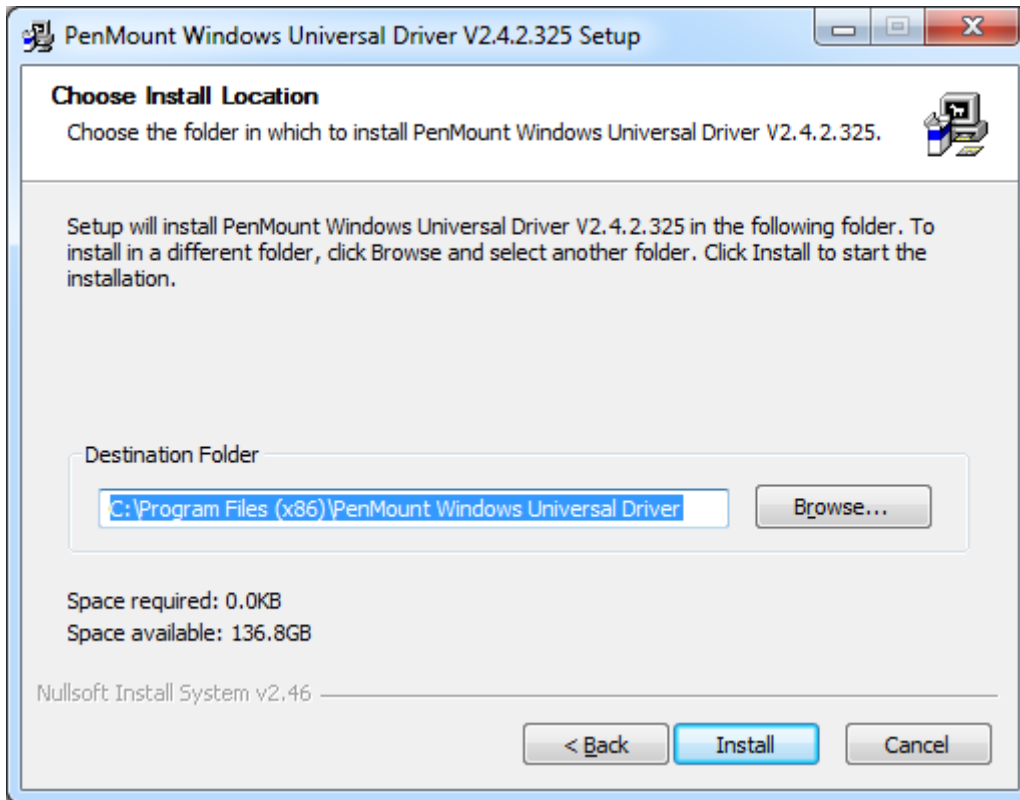

Step 5. Click **Yes** to continue.

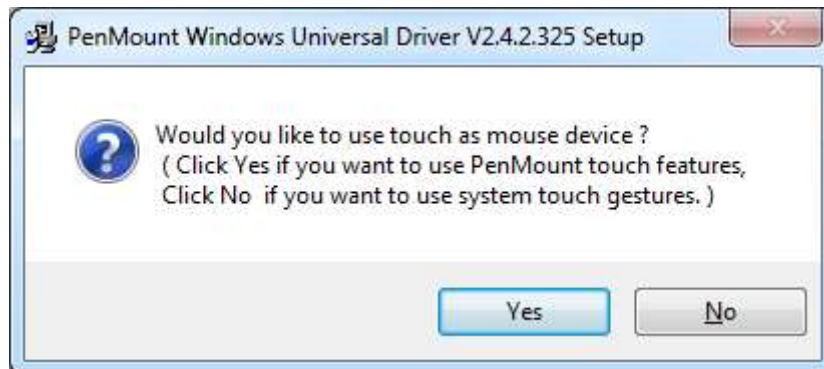

Step 6. Click **Finish** to complete installation.

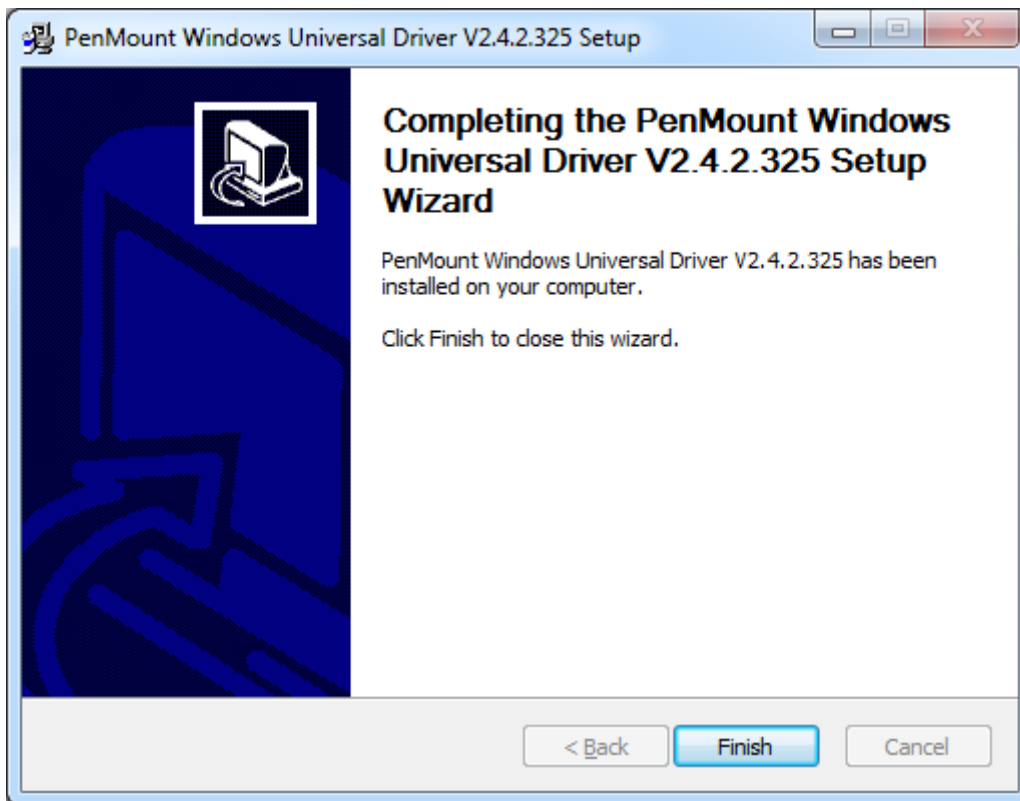


5.1.2 Installing Software (Projected Capacitive)


Step 1. Insert the product CD, the screen below would appear. Click touch panel driver.




Step 2. Click **Next** to continue.

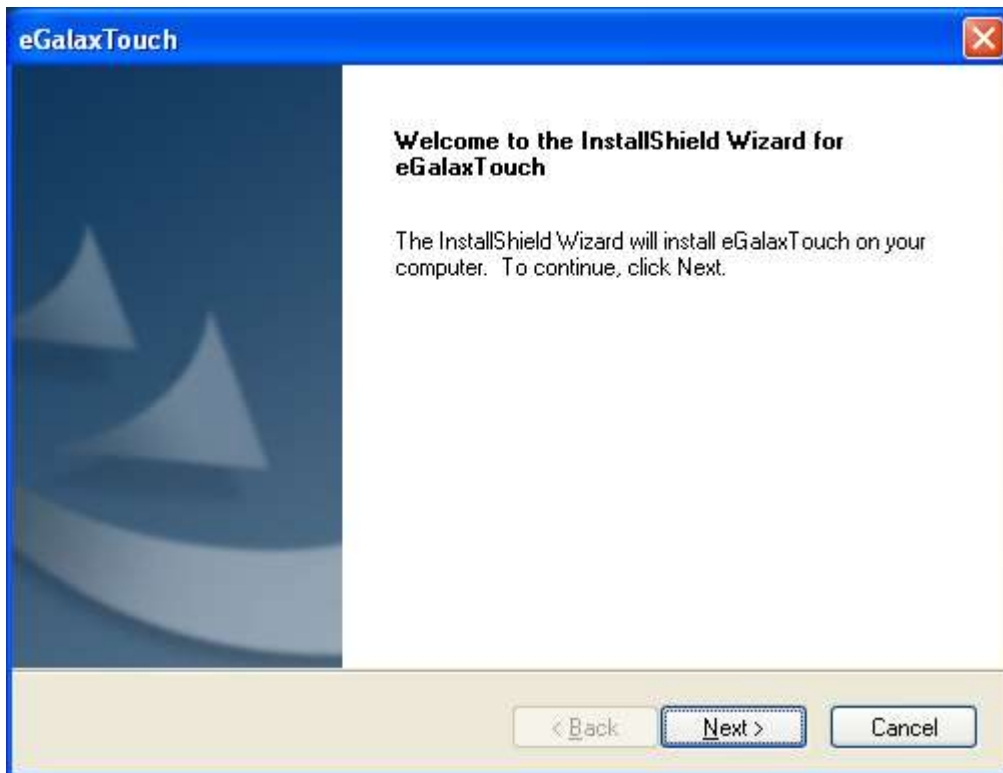


Step 3. Select **I accept the terms of the license agreement.** Click **Next.**

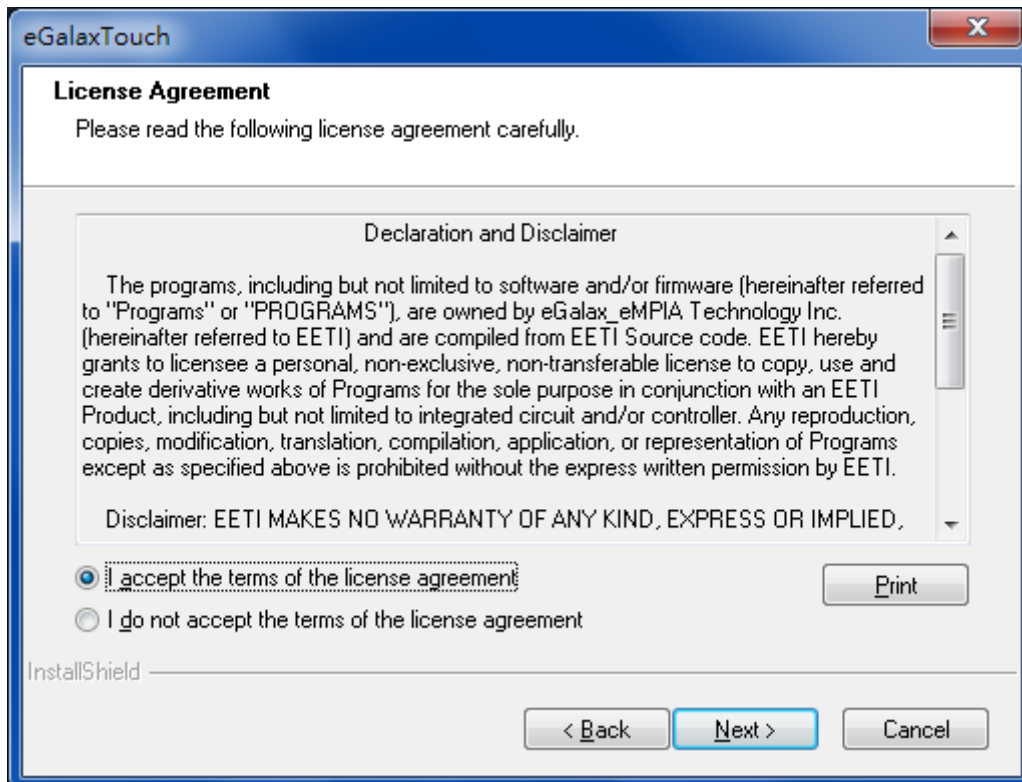


Step.4. Click **Next** to continue.

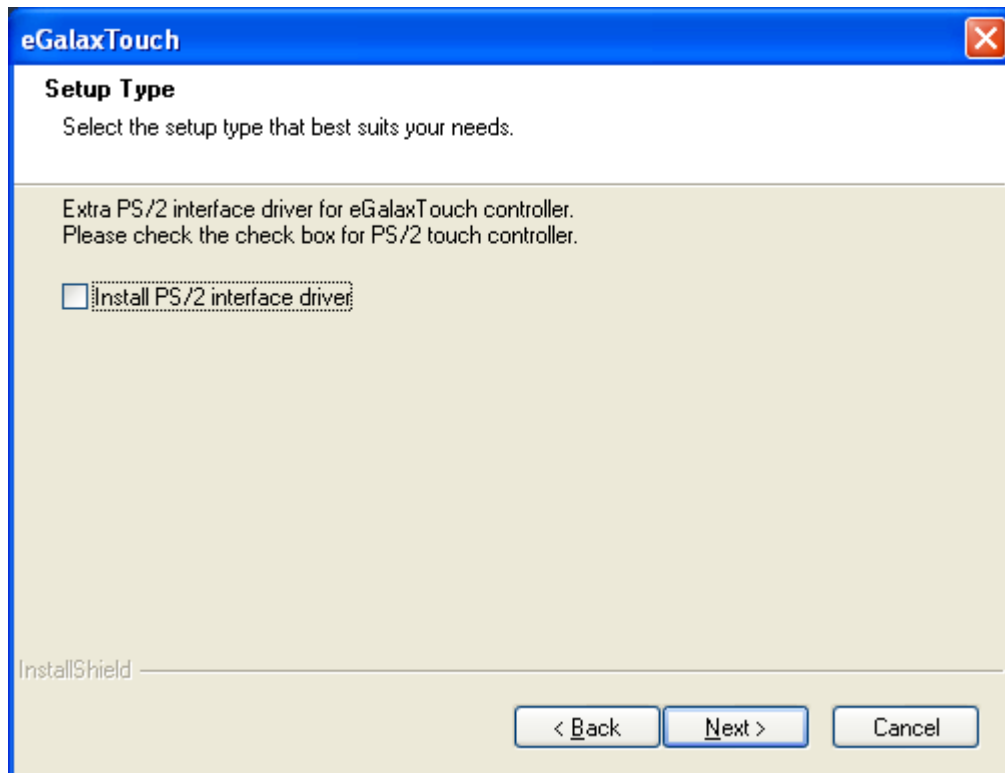


Step 5. Click **Install RS232 interface driver**.

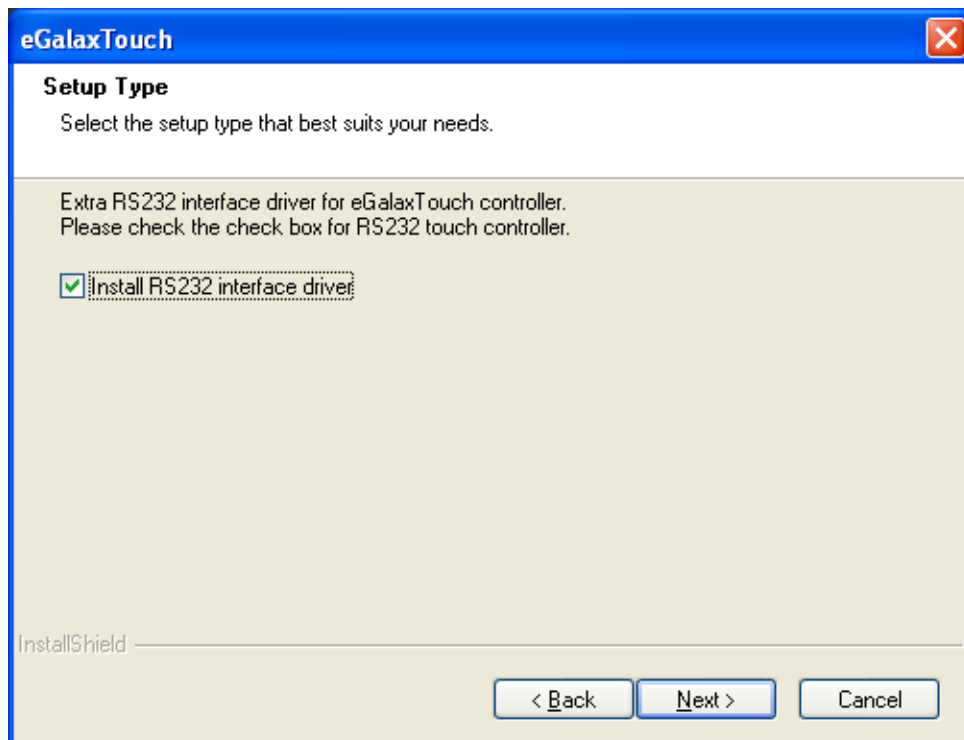


Step 6. Select None. Click Next.

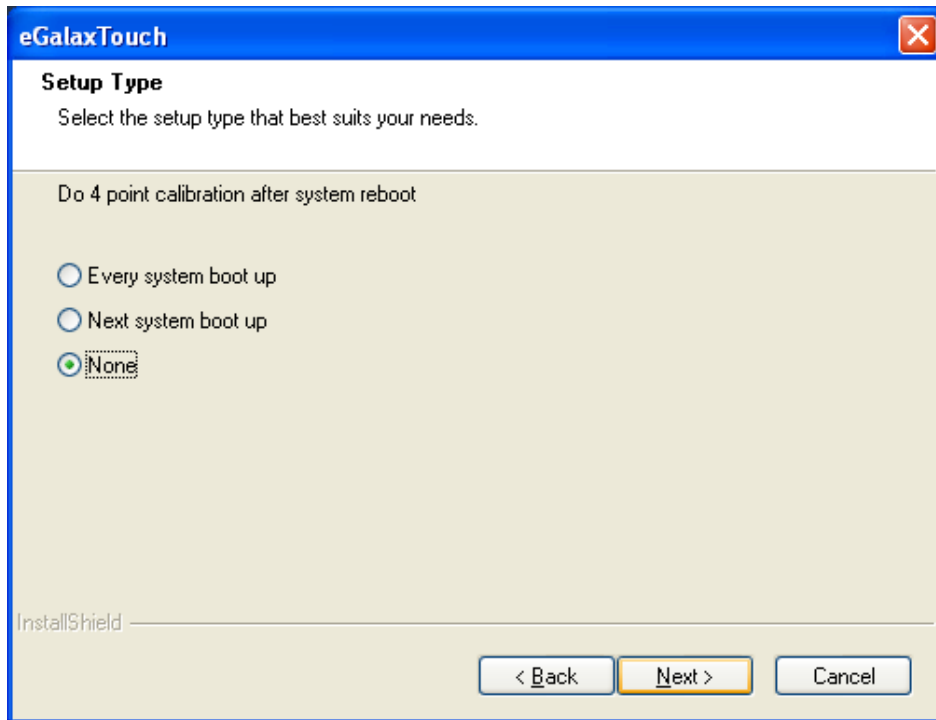


Step 7. Click OK.

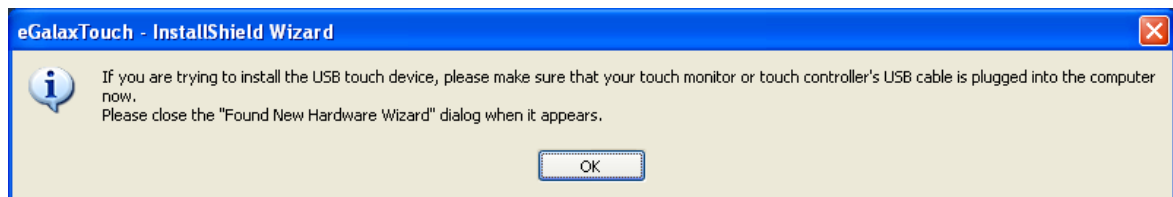


Step 8. Click Support Multi-Monitor System. Click Next.

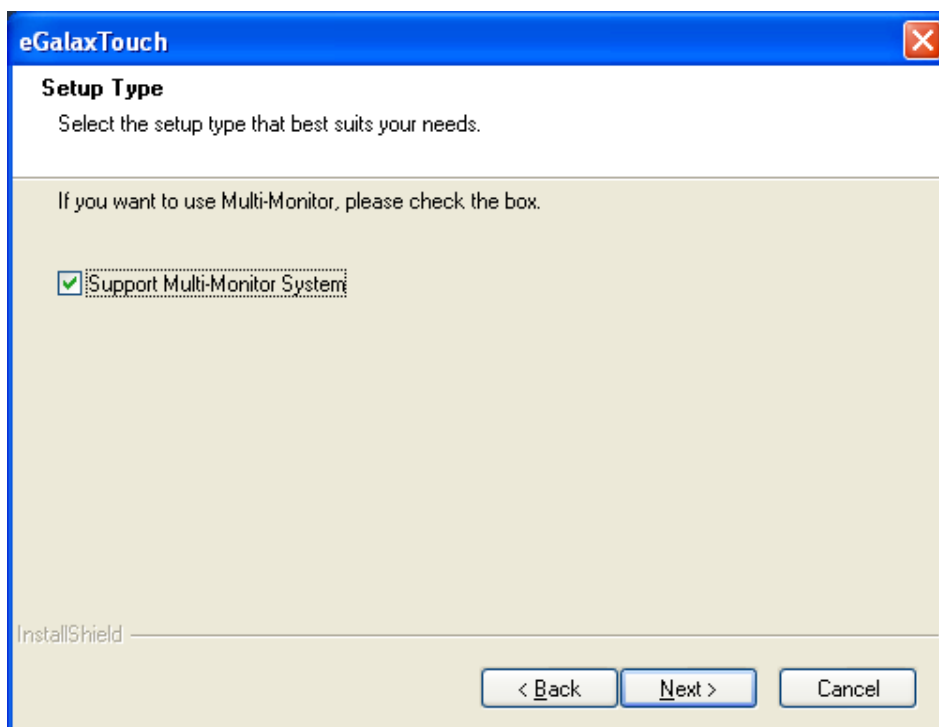


Step 9. Go to **C:\Program Files\eGalaxTouch**. Click **Next**.

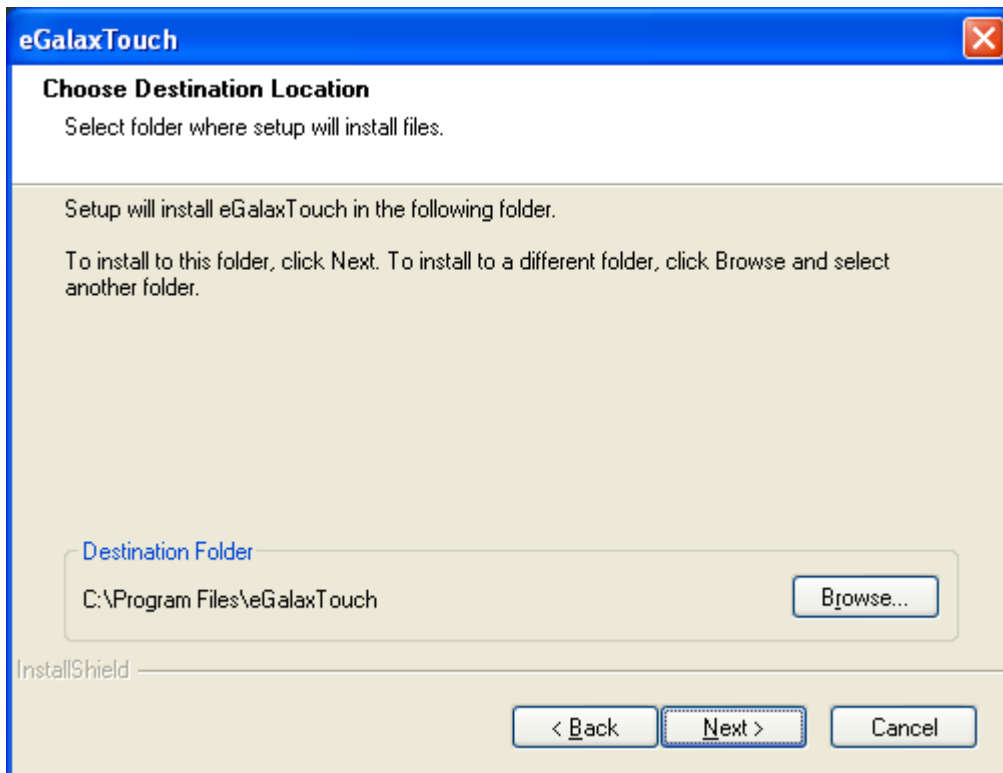


Step 10. Click **Next**.

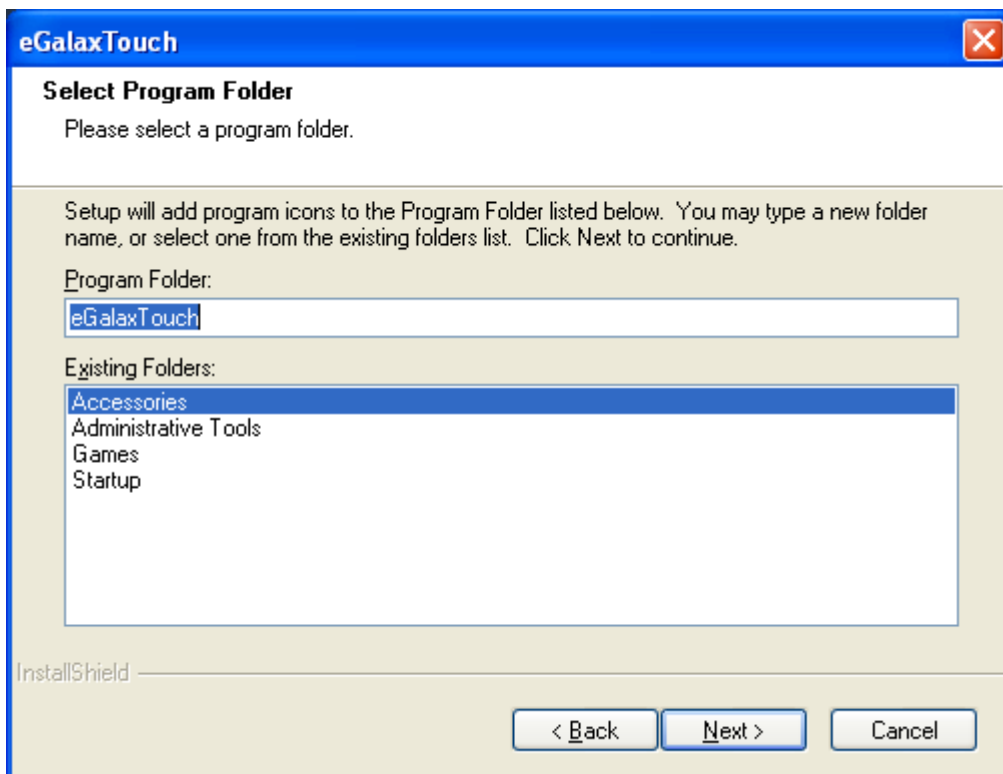


Step 11. Click Create a eGalaxTouch Utility shortcut on desktop. Click Next.

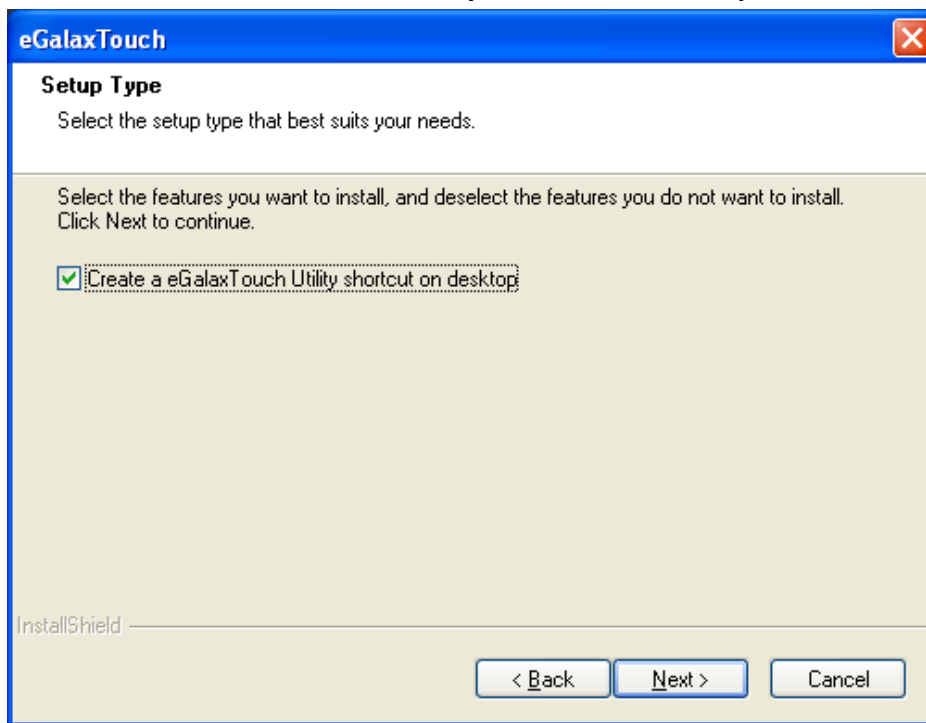

Step 12. Wait for installation.

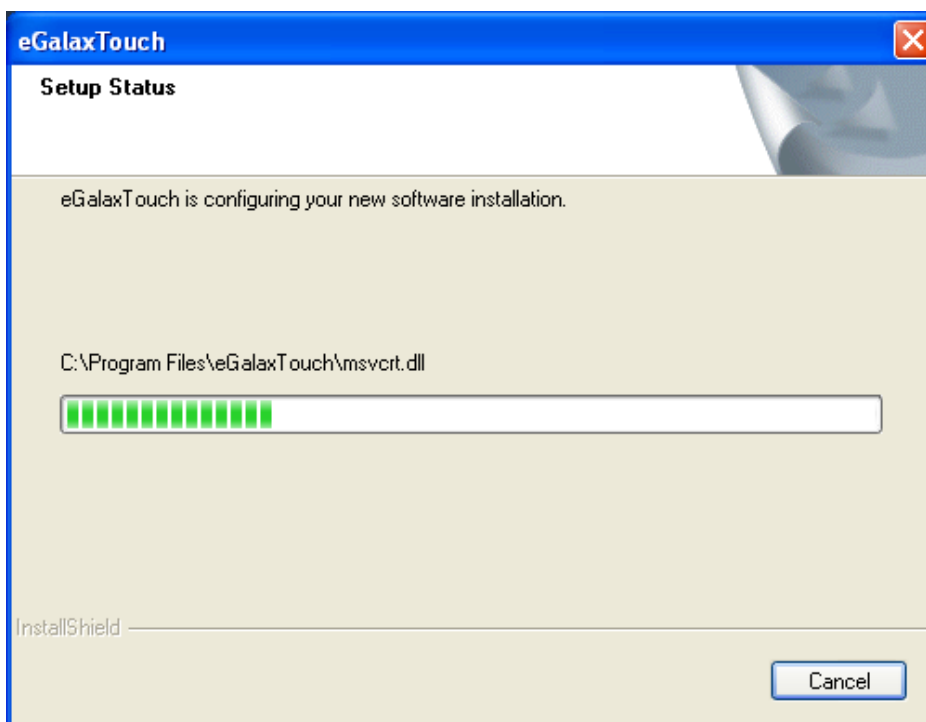

Step 13. Click Yes to do 4 point calibration.

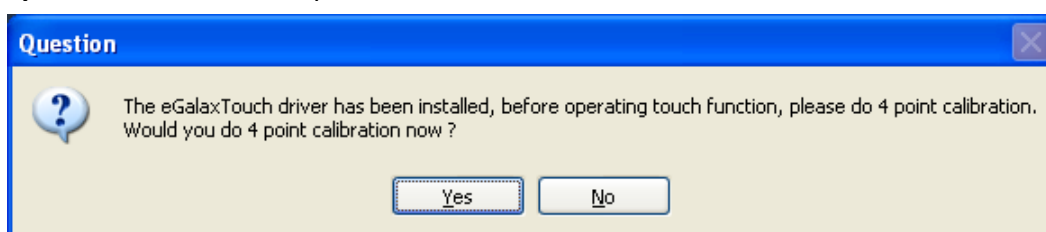

5.2 Software Functions

5.2.1 Software Functions(Resistive Touch)

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

PenMount Control Panel(Resistive Touch)

The functions of the PenMount Control Panel are **Device**, **Multiple Monitors**, **Tools** and **About**, which are explained in the following sections.

Device

In this window, you can find out that how many devices be detected on your system.

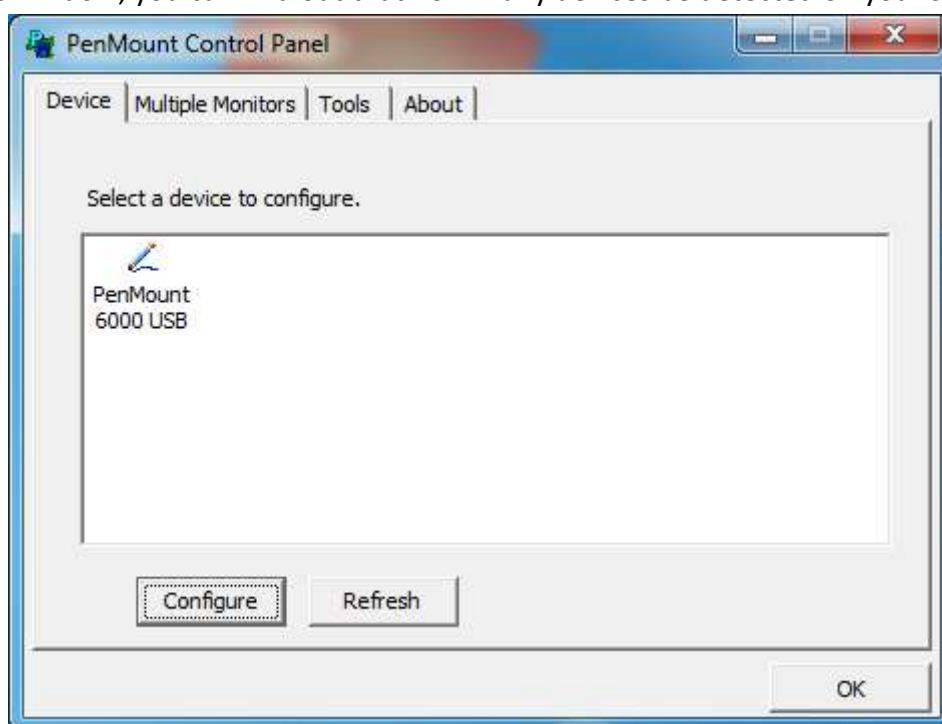


Calibrate



This function offers two ways to calibrate your touch screen. ‘Standard Calibration’ adjusts most touch screens. ‘Advanced Calibration’ adjusts aging touch screens.

| | |
|----------------------|--|
| Standard Calibration | Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press 'ESC'. |
| Advanced Calibration | Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'. |

Step 1. Please select a device then click “Configure”. You can also double click the device too.

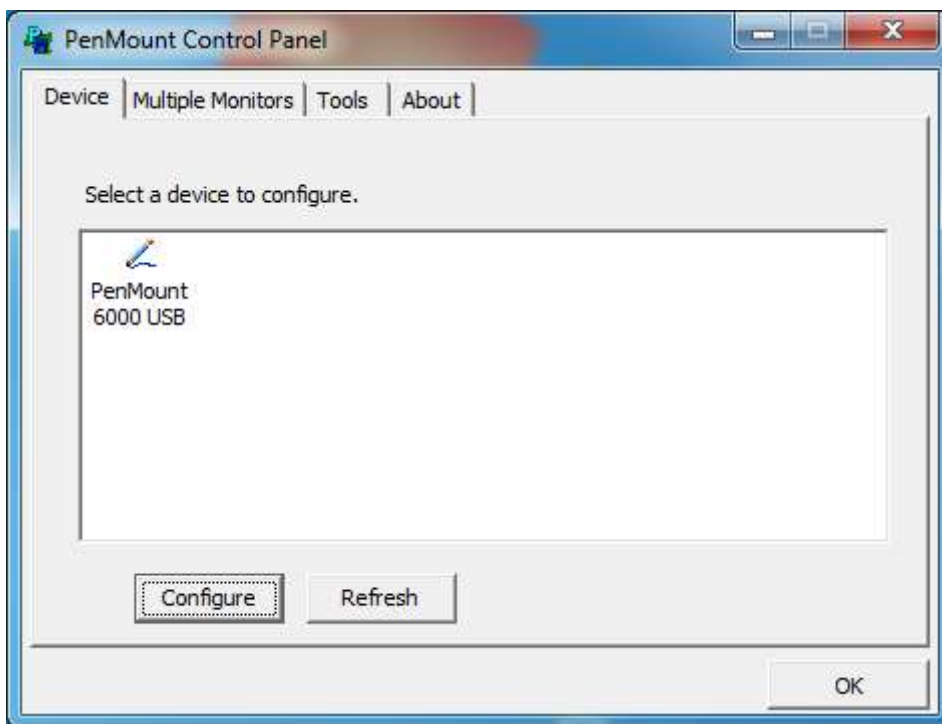


Step 2. Click “Standard Calibration” to start calibration procedure

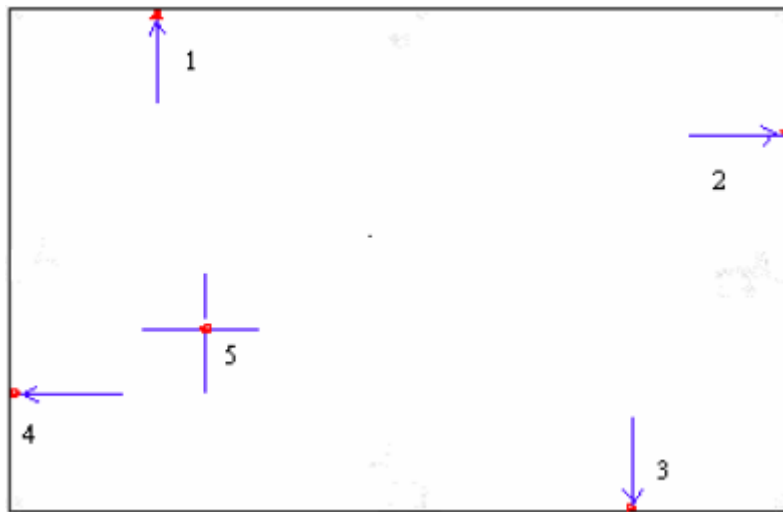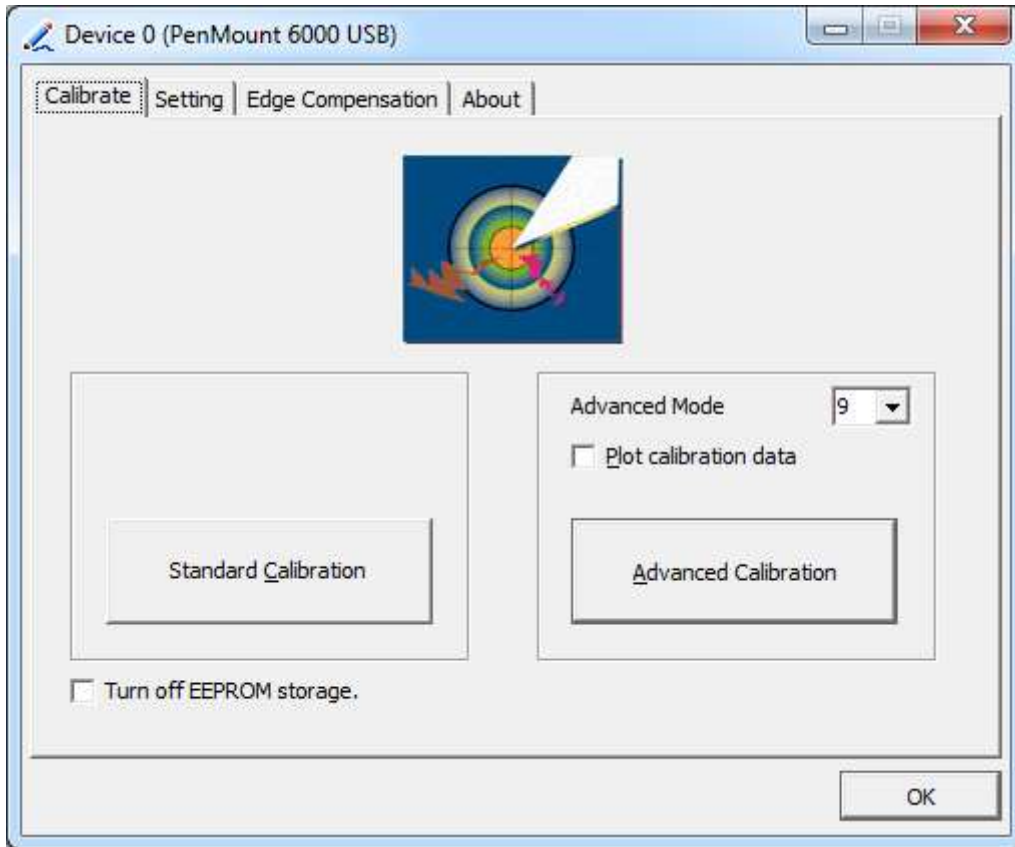

NOTE: The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

Step 3. Select **Device** to calibrate, then you can start to do **Advanced Calibration**.

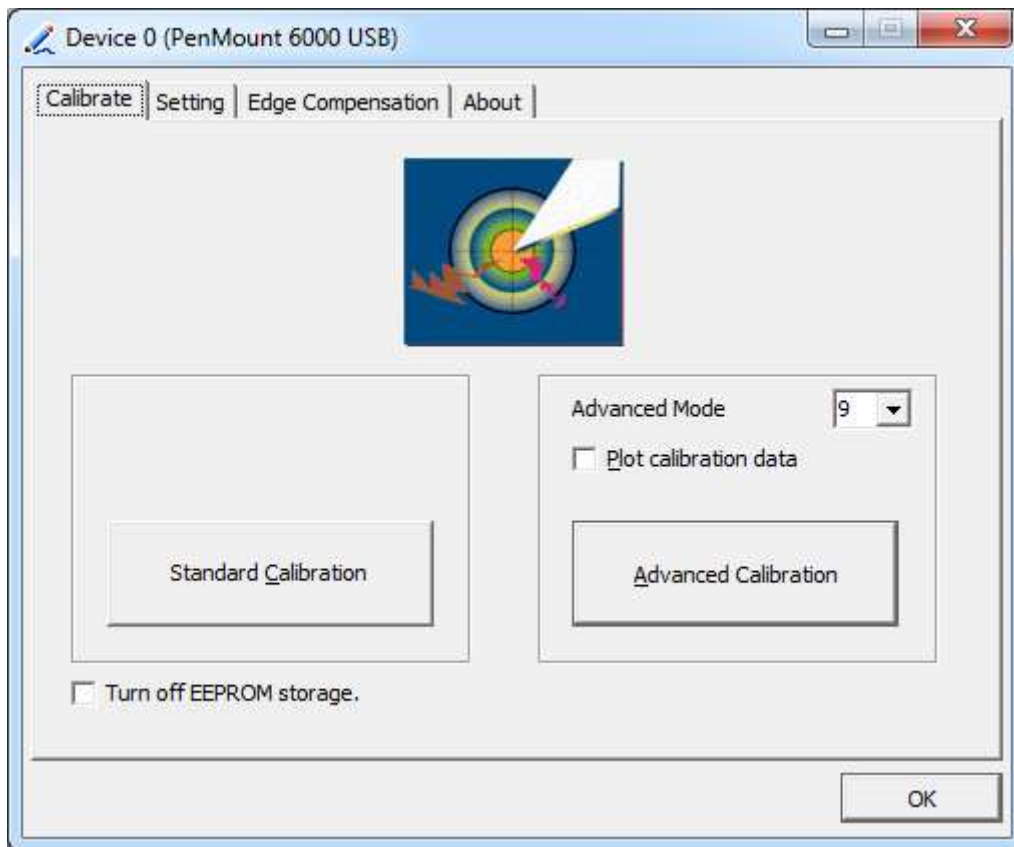


NOTE: Recommend to use a stylus during Advanced Calibration for greater accuracy.



| | |
|-------------------------|---|
| Plot Calibration Data | Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration. |
| Turn off EEPROM storage | The function disable for calibration data to write in Controller. The default setting is Enable. |


Setting

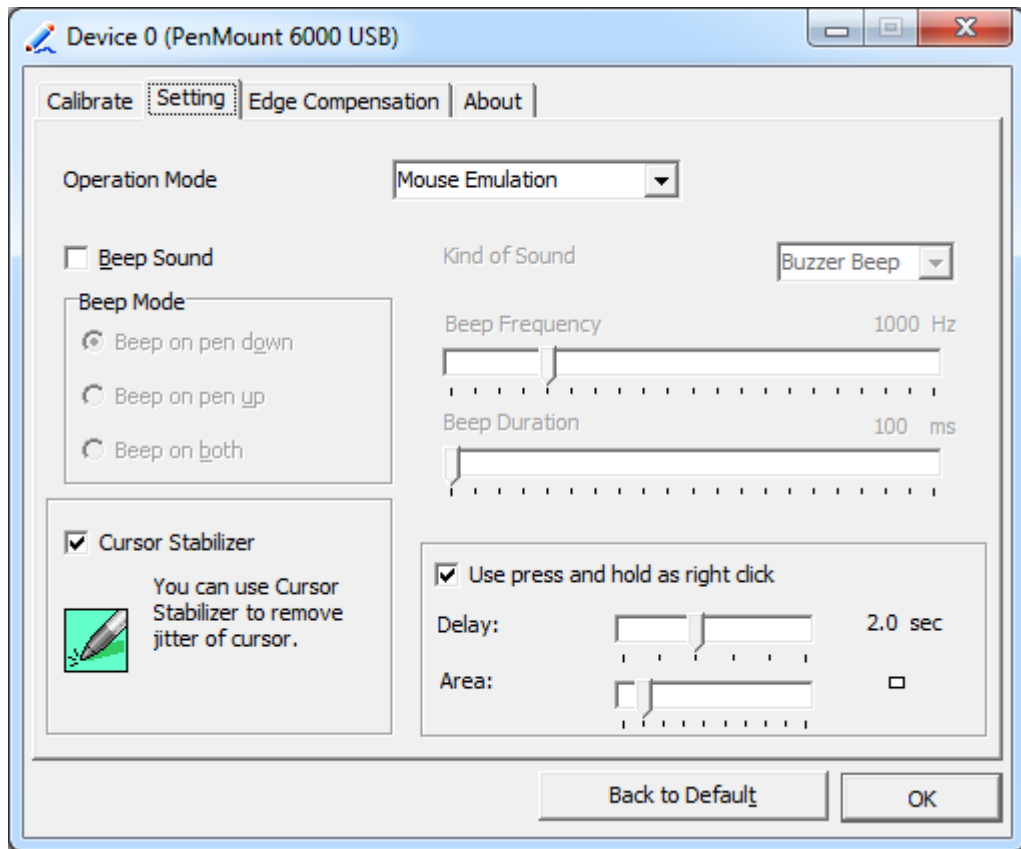

| | |
|-----------------------------------|---|
| Touch Mode | <p>This mode enables and disables the mouse’s ability to drag on-screen icons – useful for configuring POS terminals.</p> <p>Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.</p> <p>Click on Touch – Select this mode and mouse only provides a click function, and dragging is disables.</p> |
| Beep Sound | <p>Enable Beep Sound – turns beep function on and off</p> <p>Beep on Pen Down – beep occurs when pen comes down</p> <p>Beep on Pen Up – beep occurs when pen is lifted up</p> <p>Beep on both – beep occurs when comes down and lifted up</p> <p>Beep Frequency – modifies sound frequency</p> <p>Beep Duration – modifies sound duration</p> |
| Cursor Stabilizer | <p>Enable the function support to prevent cursor shake.</p> |
| Use press and hold as right click | <p>You can set the time out and area for you need.</p> |


Edge Compensation

You can use Edge Compensation to calibrate more subtly.

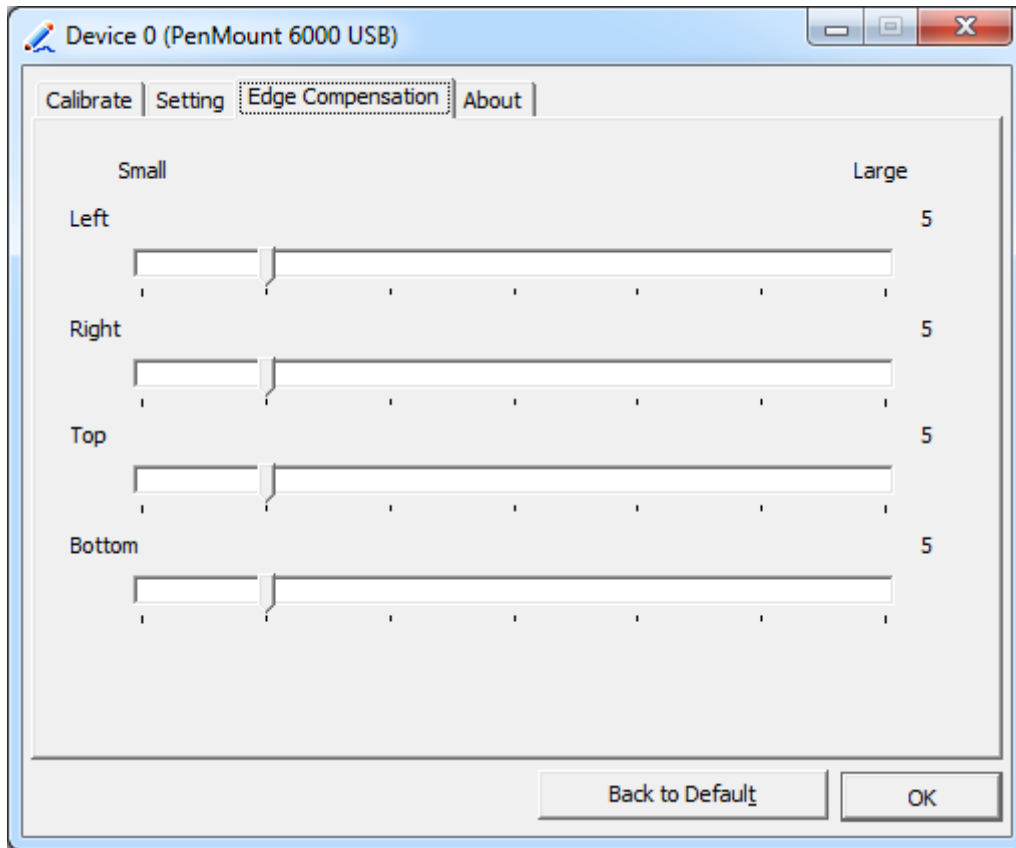

About

This panel displays information about the PenMount controller and driver version.

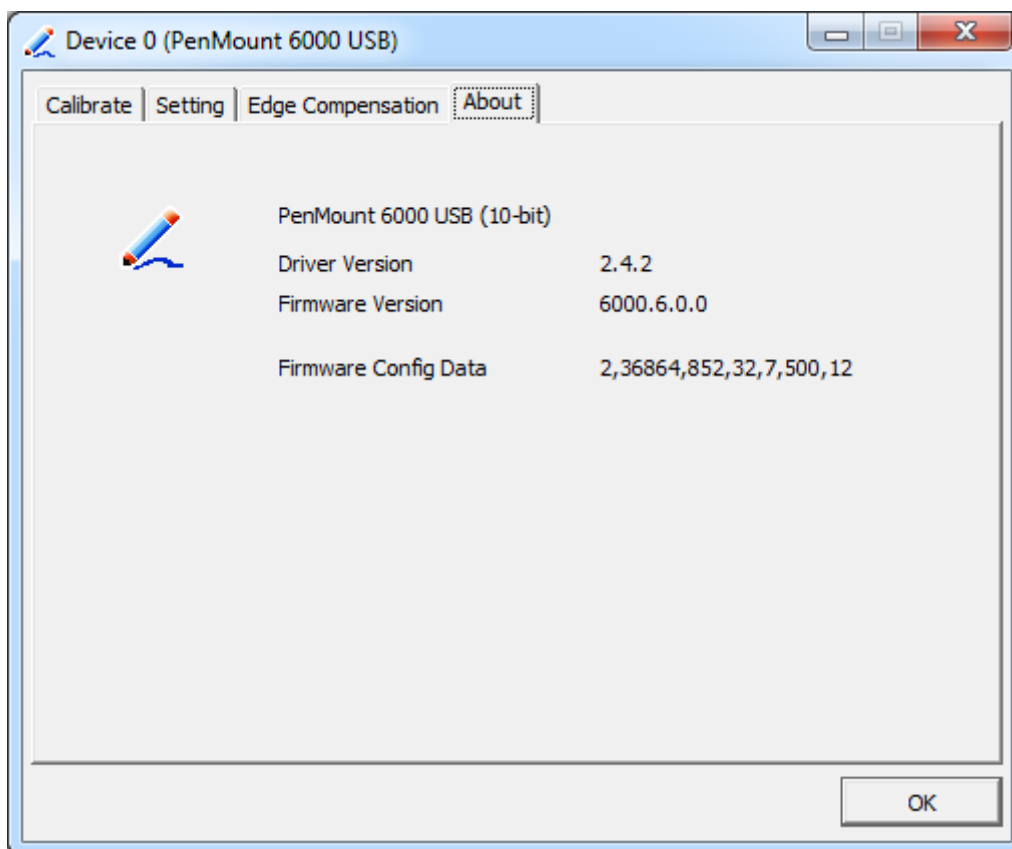

Multiple Monitors

Multiple Monitors support from two to six touch screen displays for one system. The PenMount drivers for Windows 7/8.1/10 support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the USB interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors support the following modes:


- Windows Extends Monitor Function
- Matrox DualHead Multi-Screen Function
- nVidia nView Function

NOTE: The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.

Enable the multiple display function as follows:

1. Check the **Enable Multiple Monitor Support** box; then click **Map Touch Screens**

to assign touch controllers to displays.

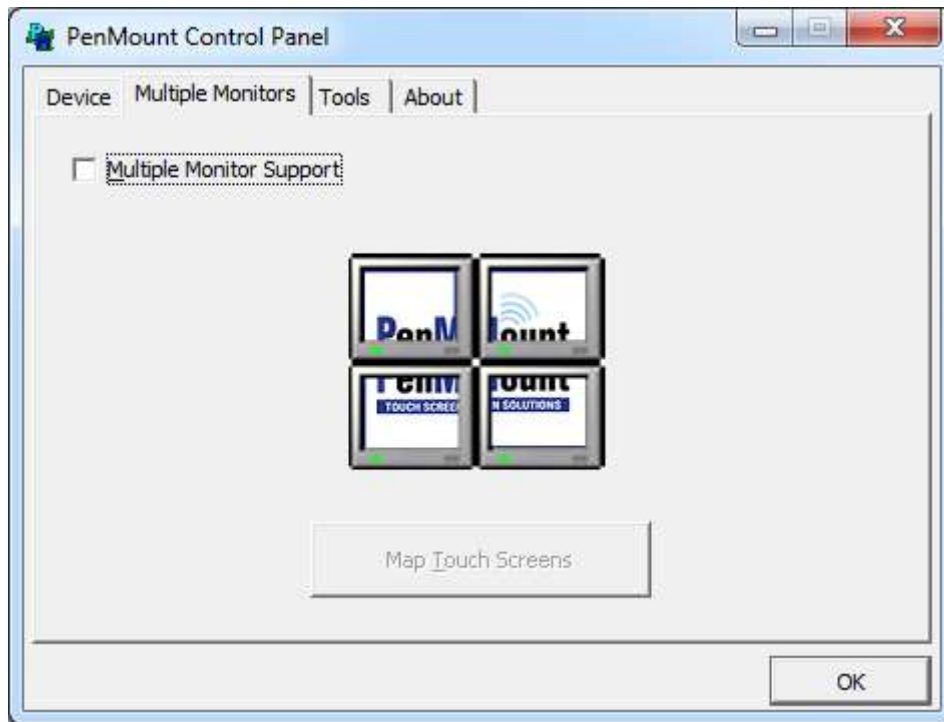

2. When the mapping screen message appears, click **OK**.
3. Touch each screen as it displays “Please touch this monitor”. Following this sequence and touching each screen is called **mapping the touch screens**.



4. Touching all screens completes the mapping and the desktop reappears on the monitors.
5. Select a display and execute the “Calibration” function. A message to start calibration appears. Click **OK**.




6. "Touch this screen to start its calibration" appears on one of the screens. Touch the screen.
7. "Touch the red square" messages appear. Touch the red squares in sequence.
8. Continue calibration for each monitor by clicking **Standard Calibration** and touching the red squares.

NOTES:

1. If you use a single VGA output for multiple monitors, please do not use the **Multiple Monitor** function. Just follow the regular procedure for calibration on each of your desktop monitors.
2. The Rotating function is disabled if you use the Multiple Monitor function.
3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens**, so the system understands where the displays are.

About

This panel displays information about the PenMount controller and this driver version.

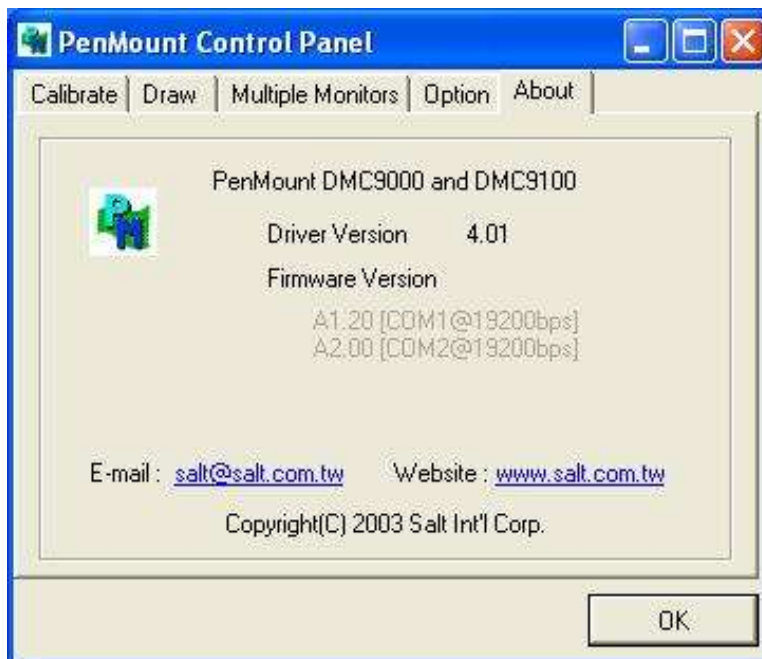


PenMount Monitor Menu Icon

The PenMount monitor icon (PM) appears in the menu bar of Windows 7/8.1/10 system when you turn on PenMount Monitor in PenMount Utilities.




PenMount Monitor has the following function



| | |
|---------------|--|
| Control Panel | Open Control Panel Windows |
| Beep | Setting Beep function for each device |
| Right Button | When you select this function, a mouse icon appears in the right-bottom of the screen. Click this icon to switch between Right and Left Button functions.  |
| Exit | Exits the PenMount Monitor function. |

Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

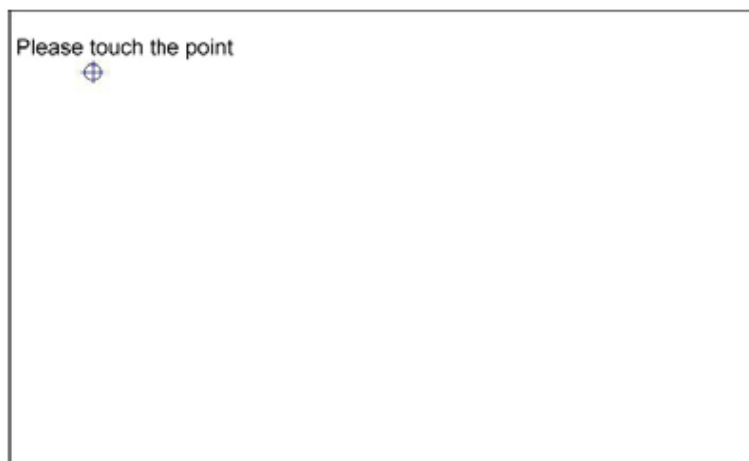


NOTE: The Rotate function is disabled if you use Monitor Mapping

5.2.2 Software Functions(Projected Capacitive)

General

In this window, you can see there is USB Controller. Click **OK** to continue.

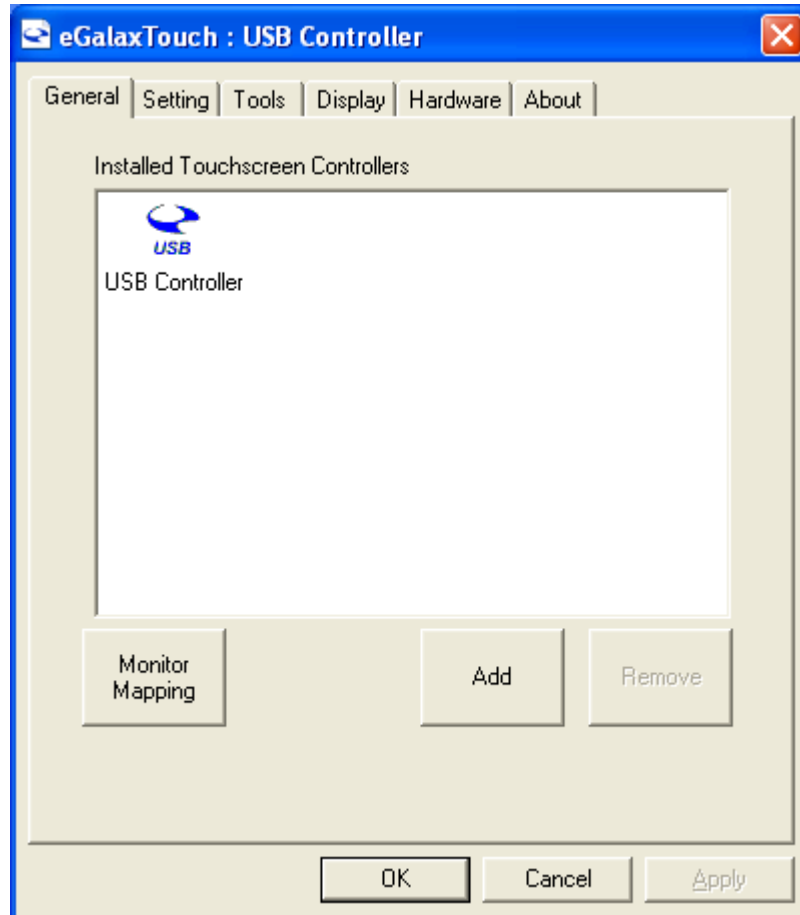


Monitor Mapping

to adjust touch panel

Add

to search for device

Setting

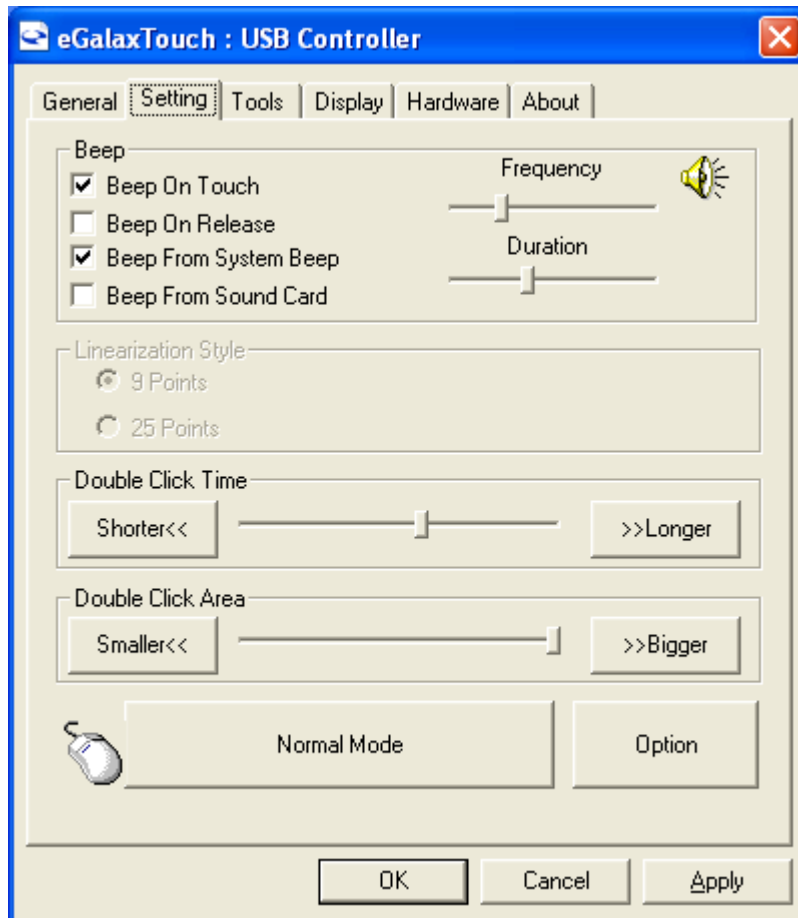

Beep

- Beep On Touch
- Beep On Release
- Beep From System Beep
- Beep From Sound Card

Linearization Style

- 9 points
- 25 points

Double Click Time


- Shorter
- Longer

Double Click Area

- Smaller
- Bigger

Normal mode

- Simulate the mouse mode

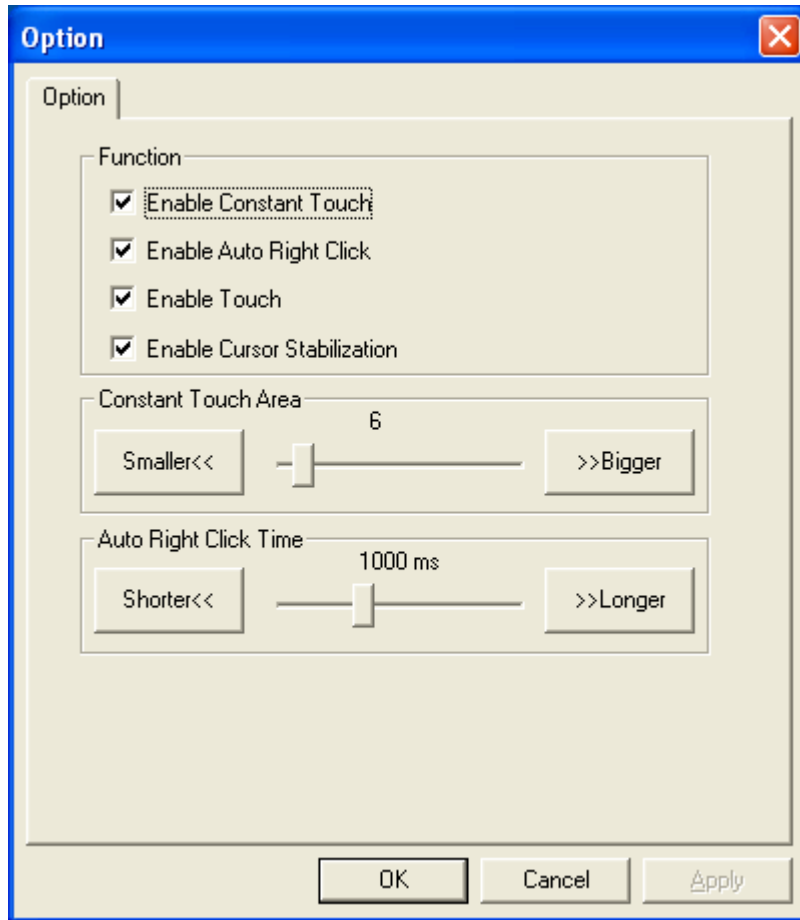

Option

Function

Enable Constant Touch

Enable Auto Right Click

Enable Touch


Enable Cursor Stabilization

Constant Touch Area

Auto Right Click Time

Tools

Click **OK** to continue the settings.

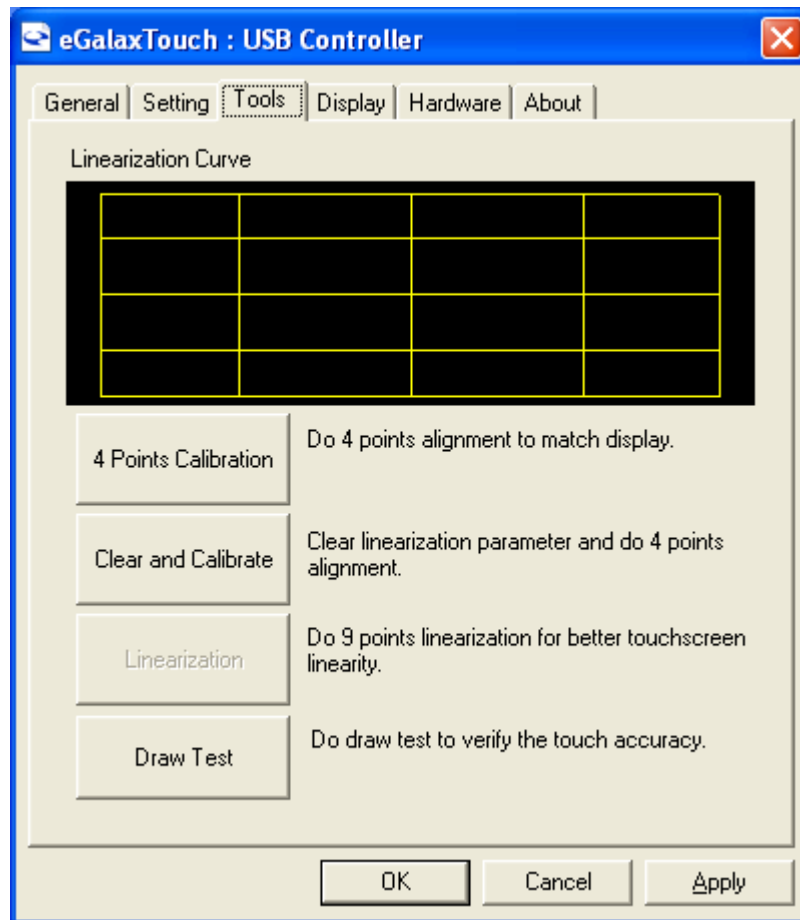

4 Points Calibration

Do 4 points alignment to match display.

Clear and Calibrate

Clear linearization parameter and do 4 points alignment.

Linearization


Do 9 points linearization for better touchscreen linearity.

Draw Test

Do draw test to verify the touch accuracy.

Display

In this window, it shows the mode of display.

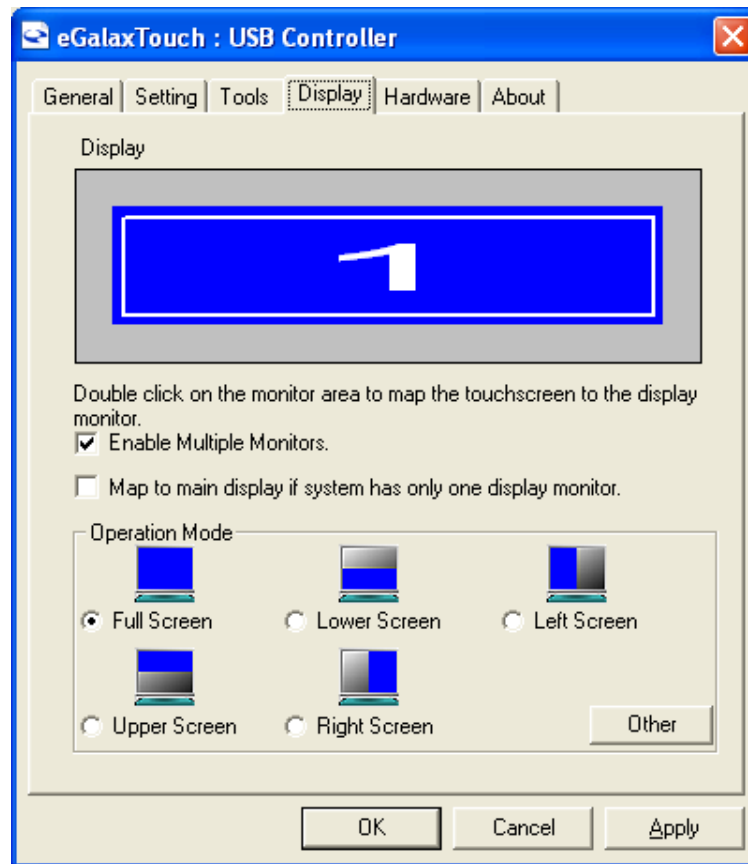

Enable Multiple Monitors.

Map to main display if system has only one display monitor


Full Screen

Lower Screen

Left Screen


Upper Screen

Right Screen

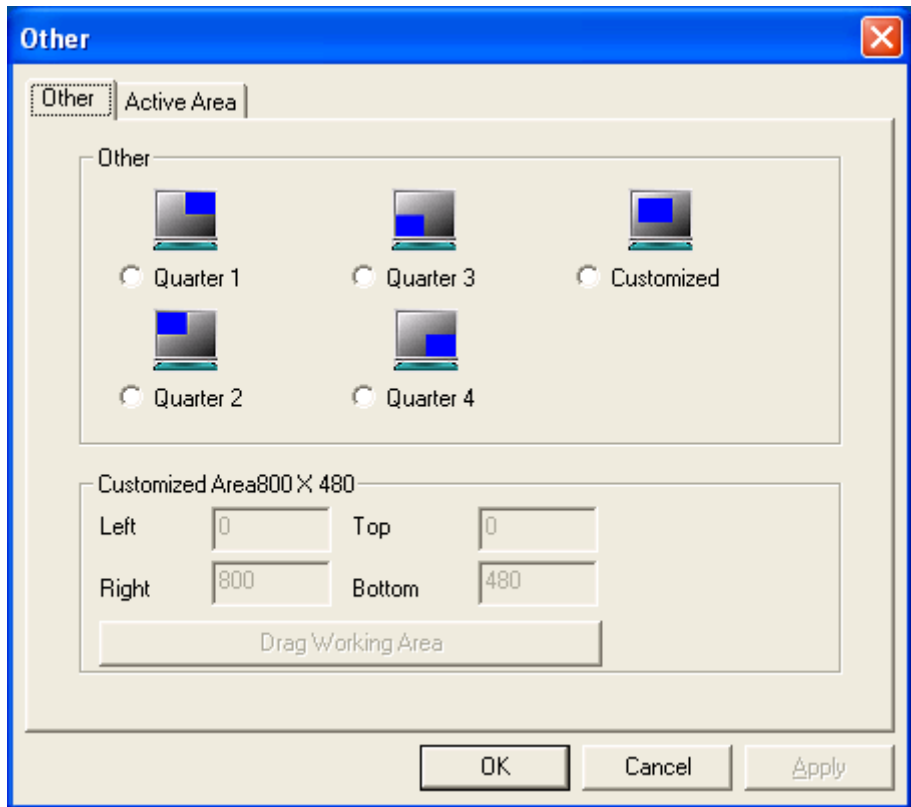

Other


Other mode of display. Quarter1~4 and Customized area.

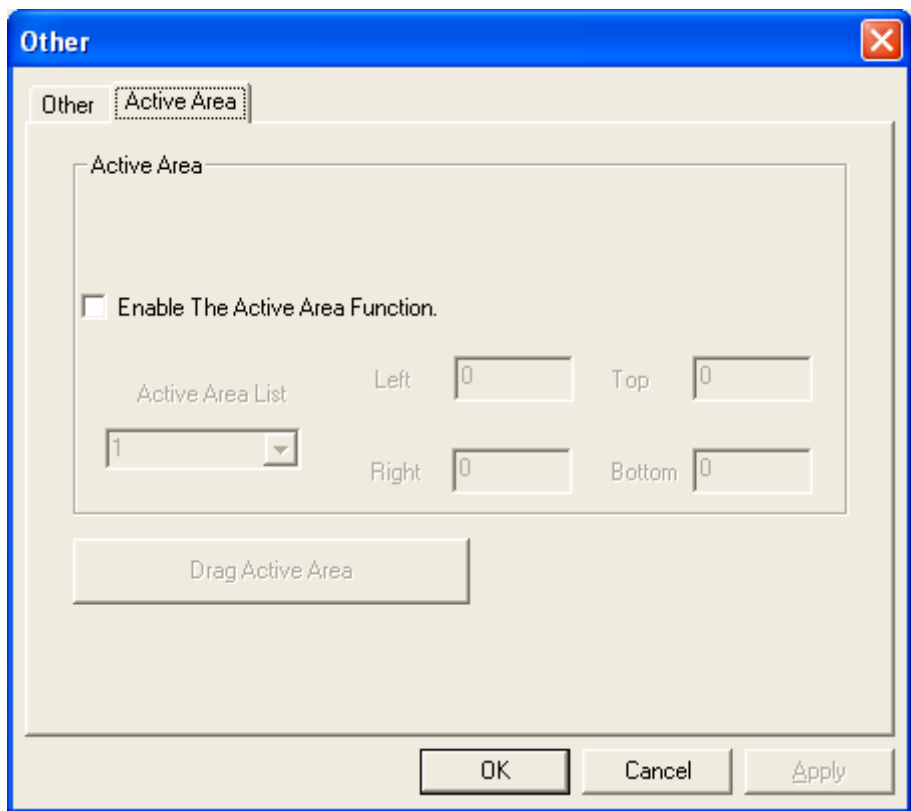


Active Area

Drag active area to enable Active Area Function.

Hardware

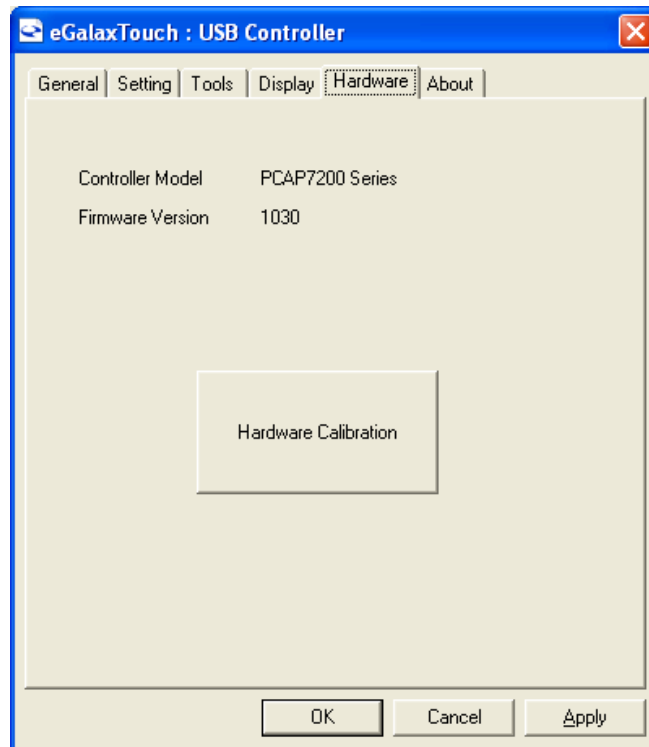

Saturn Hardware Configuration

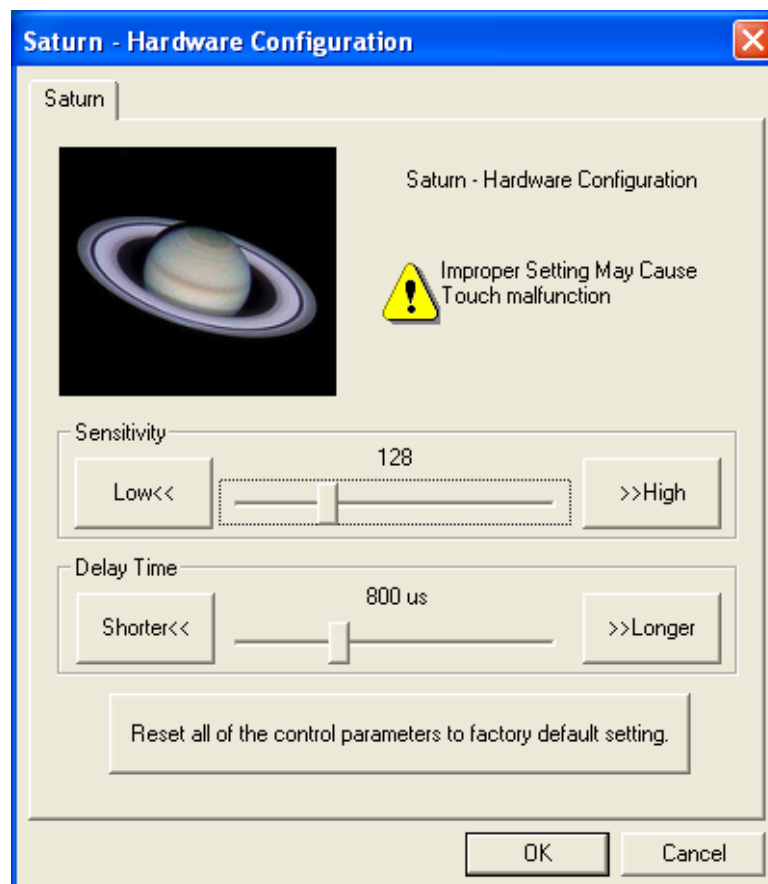

About

To display information about eGalaxTouch and its version.

