

# 4.3"/7"/ 10.1"

## EL-Series HMI

ARM A53 Quad Core 2.0GHz



**Model No.** W04IM3S-ELT1  
W07IM3S-ELT1  
W10IM3S-ELH2

---

# User Guide

# Contents

<b>Preface</b> .....	<b>3</b>
<b>About This User Manual</b> .....	<b>7</b>
<b>Chapter 1: Introduction</b> .....	<b>8</b>
1.1 Product Features.....	8
1.2 Package Contents.....	9
1.3 Description of Parts.....	10
1.3.1 W04IM3S-ELT1 ; EL-Series HMI 4.3” .....	10
1.3.2 W07IM3S-ELT1 ; EL-Series HMI 7” .....	10
1.3.3 W10IM3S-ELH2; EL-Series HMI 10.1” .....	11
<b>Chapter 2: Getting Started</b> .....	<b>12</b>
2.1 Powering On .....	12
2.1.1 AC Adapter Components .....	12
2.1.2 Power Considerations.....	13
2.1.3 Connecting the Power.....	13
2.2 Connector Pinouts.....	14
2.2.1 DC Input Connector .....	14
2.2.2 USB 2.0 Connector.....	14
2.2.3 Serial Port Connector.....	14
2.2.4 Micro USB Connectors .....	14
2.2.5 LAN (RJ45) Connector.....	14
2.3 Turning On and Off the HMI Device .....	15
2.4 Resetting to Factory Defaults .....	17
<b>Chapter 3: Using the HMI Panel PC</b> .....	<b>20</b>
3.1 Using the Touch Screen.....	20
3.2 Using the Home Screen .....	21
3.2.1 Personalizing Home Screen.....	22
3.2.2 Viewing other parts of the Home Screen.....	25
3.3 Status and Notification Icons.....	27
3.3.1 Notification Icons .....	27
3.3.2 Status Icons.....	27
3.4 Using the On-Screen Keyboard.....	28
3.4.1 Entering Text .....	28
3.4.2 Editing Text.....	31
3.5 Display Settings .....	33
3.6 Language and Keyboard Settings .....	34
3.7 About tablet.....	37
<b>Chapter 4: Winmate Kiosk Manager</b> .....	<b>38</b>

4.1 Lock Applications Launcher .....	38
4.2 Change Password.....	44
4.3 Unlock Applications Launcher .....	45
<b>Chapter 5: Networks and Wireless Devices.....</b>	<b>48</b>
5.1 Connecting to Wi-Fi Networks (Optional) .....	48
5.1.1 Turning on Wi-Fi and Connecting to Wi-Fi Networks.....	48
5.1.2 Adding Wi-Fi Network .....	50
5.2 Connecting to BT Devices (Optional) .....	52
5.2.1 Turning BT On or Off .....	52
5.2.2 Connecting the BT Device .....	53
5.2.3 Disconnecting BT Device .....	55
5.3 Connecting to Computer via USB.....	56
5.3.1 USB Computer Connection.....	56
5.3.2 USB Debugging Settings .....	57
<b>Chapter 6: Mounting .....</b>	<b>61</b>
6.1 Cable Mounting Considerations .....	61
6.2 Safety Precautions .....	61
6.3 Mounting Guide.....	62
6.3.1 VESA Mount .....	62
6.3.2 Panel Mount .....	63
<b>Appendix A: Product Specifications .....</b>	<b>64</b>
<b>Appendix B: OTA Update Guide .....</b>	<b>66</b>
<b>Appendix C: OS Image Update Guide .....</b>	<b>68</b>

# Preface

## Copyright Notice

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

## Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

## Disclaimer

We reserve the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. We assume no responsibility or liability for the use of the described product(s) conveys no license or title under any patent, copyright, or masks work rights to these products, and make no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. We make no representation or guarantee that such application will be suitable for the specified use without further testing or modification.

## Warranty

Our warranty guarantees that each of its products will be free from material and workmanship defects for a period of one year from the invoice date. If the customer discovers a defect, we will, at his/her option, repair or replace the defective product at no charge to the customer, provide it is returned during the warranty period of one year, with transportation charges prepaid. The returned product must be properly packaged in its original packaging to obtain warranty service. If the serial number and the product shipping data differ by over 30 days, the in-warranty service will be made according to the shipping date. In the serial numbers the third and fourth two digits give the year of manufacture, and the fifth digit means the month (e. g., with A for October, B for November and C for December).

For example, the serial number 1W20Axxxxxxx means October of year 2020.

## Customer Service

We provide a service guide for any problem by the following steps: First, visit the website of our distributor to find the update information about the product. Second, contact with your distributor, sales representative, or our customer service center for technical support if you need additional assistance.

You may need the following information ready before you call:

- Product serial number
- Software (OS, version, application software, etc.)
- Description of complete problem
- The exact wording of any error messages

In addition, free technical support is available from our engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products.

## Advisory Conventions

Four types of advisories are used throughout the user manual to provide helpful information or to alert you to the potential for hardware damage or personal injury. These are Notes, Important, Cautions, and Warnings. The following is an example of each type of advisory.

**NOTE:**

A note is used to emphasize helpful information

**IMPORTANT:**

An important note indicates information that is important for you to know.

**CAUTION/ ATTENTION**

A Caution alert indicates potential damage to hardware and explains how to avoid the potential problem.

Une alerte d'attention indique un dommage possible à l'équipement et explique comment éviter le problème potentiel.

**WARNING!/ AVERTISSEMENT!**

An Electrical Shock Warning indicates the potential harm from electrical hazards and how to avoid the potential problem.

Un Avertissement de Choc Électrique indique le potentiel de chocs sur des emplacements électriques et comment éviter ces problèmes.

**ALTERNATING CURRENT / MISE À LE TERRE!**

The Protective Conductor Terminal (Earth Ground) symbol indicates the potential risk of serious electrical shock due to improper grounding.

Le symbole de Mise à Terre indique le risqué potentiel de choc électrique grave à la terre incorrecte.

## Safety Information

### WARNING! / AVERTISSEMENT!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Toujours débrancher le cordon d'alimentation du chassis lorsque vous travaillez sur celui-ci. Ne pas brancher de connexions lorsque l'alimentation est présente. Des composantes électroniques sensibles peuvent être endommagées par des sauts d'alimentation. Seulement du personnel expérimenté devrait ouvrir ces chassis.

### CAUTION/ATTENTION



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

Toujours vérifier votre mise à la terre afin d'éliminer toute charge statique avant de toucher la carte CPU. Les équipements électroniques modernes sont très sensibles aux décharges d'électricité statique. Toujours utiliser un bracelet de mise à la terre comme précaution. Placer toutes les composantes électroniques sur une surface conçue pour dissiper les charge, ou dans un sac anti-statique lorsqu'elles ne sont pas dans le chassis.

## Safety Precautions

For your safety carefully read all the safety instructions before using the device. Keep this user manual for future reference.

- Always disconnect this equipment from any AC outlet before cleaning. Do not use liquid or spray detergents for cleaning. Use a damp cloth.
- For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
- Keep this equipment away from humidity.
- Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
- The openings on the enclosure are for air convection and to protect the equipment from overheating.



### CAUTION/ATTENTION

Do not cover the openings!  
Ne pas couvrir les ouvertures!

- Before connecting the equipment to the power outlet make sure the voltage of the power source is correct.
- Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
- Never pour any liquid into an opening. This could cause fire or electrical shock.

- Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.
- All cautions and warnings on the equipment should be noted.

**\*Let service personnel to check the equipment in case any of the following problems appear:**

- The power cord or plug is damaged.
- Liquid has penetrated into the equipment.
- The equipment has been exposed to moisture.
- The equipment does not work well or you cannot get it to work according to the user manual.
- The equipment has been dropped and damaged.
- The equipment has obvious signs of breakage.
- Do not leave this equipment in an uncontrolled environment where the storage temperature is below -20°C (-4°F) or above 60°C (140°F). It may damage the equipment.



### **CAUTION/ATTENTION**

Use the recommended mounting apparatus to avoid risk of injury.  
Utiliser l'appareil de fixation recommandé pour éliminer le risque de blessure.



### **WARNING! / AVERTISSEMENT!**

Only use the connection cords that come with the product. When in doubt, please contact the manufacturer.

Utiliser seulement les cordons d'alimentation fournis avec le produit. Si vous doutez de leur provenance, contactez le fabricant.



### **WARNING! / AVERTISSEMENT!**

Always ground yourself against electrostatic damage to the device.

Toujours vérifier votre mise à la terre afin que l'équipement ne se décharge pas sur vous.

- Cover workstations with approved anti-static material. Use a wrist strap connected to a work surface and properly grounded tools and equipment.
- Use anti-static mats, heel straps, or air ionizer for added protection.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting and removing connectors or test equipment.
- Keep the work area free of non-conductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Use filed service tools, such as cutters, screwdrivers, and vacuum cleaners that are conductive.
- Always put drivers and PCB's component side on anti-static foam.

## Important Information

### Federal Communications Commission Radio Frequency Interface Statement

This device complies with part 15 FCC rules.

Operation is subject to the following two conditions:



- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class "B" digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### EC Declaration of Conformity



This equipment is in conformity with the requirement of the following EU legislations and harmonized standards. Product also complies with the Council directions.

Electromagnetic Compatibility Directive (2014/30/EU)

- EN55024: 2010 EN 55022: 2010 Class B
  - IEC61000-4-2: 2009
  - IEC61000-4-3: 2006+A1: 2007+A2: 2010
  - IEC61000-4-4: 2012
  - IEC61000-4-5: 2014
  - IEC61000-4-6: 2013
  - IEC61000-4-8: 2010
  - IEC61000-4-11: 2004
- EN55022: 2010/AC:2011
- EN61000-3-2:2014
- EN61000-3-3:2013

Low Voltage Directive (2014/35/EU)

- EN 60950-1:2006/A11:2009/A1:2010/A12:2011/ A2:2013

## About This User Manual

This User Manual provides information about using the Winmate® EL-Series HMI. This User Manual applies to the EL-Series HMI –W04IM3S-ELT1, W07IM3S-ELT1, W10IM3S-ELH2. It includes:

- **EL-Series HMI User Manual** – contains detailed description on how to use the HMI device, its components and features.
- **EL-Series HMI Quick Start Guide** - describes how to get the HMI up and running.



#### NOTE:

Some pictures in this guide are samples and can differ from actual product.



# Chapter 1: Introduction

Congratulations on purchasing Winmate® EL-Series HMI. Winmate® continues developing new generation of Human Machine Interfaces for Industry 4.0 and Internet of Things (IoT). Our EL-Series HMI runs on Android 11 operating system that allows installing the latest applications (APPs). Thereby wide customization possibilities are available to satisfy the needs of industrial automation.

There are two USB 2.0 onboard to connect mouse or keyboard, USB OTG for system updates and microSD card for data logging, backup or data storage. System memory of 4 GB ensures stable operation of applications.

With mounting clips for panel mounting there is no need to drill holes in a fixture. This saves you the time for mounting and guarantee aesthetic look of the wall after the unit gets removed.

## 1.1 Product Features

 
Winmate® EL-Series HMI features:

- Projected Capacitive Multi-Touch (PCAP)
- ARM A53 Quad Core 2.0GHz CPU
- Fanless cooling system and ultra-low power consumption
- Front IP65 Water and Dust Proof
- Support Android or Linux operating system

## 1.2 Package Contents

Carefully remove the box and unpack your device. Please check if all the items listed below are inside your package. If any of these items are missing or damaged contact us immediately.

Standard factory shipment list:

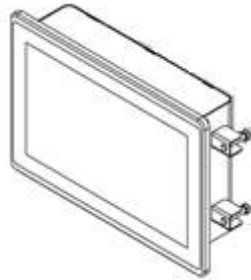


**HMI Device**

Varies by product specifications



 **Quick Start Guide (Hardcopy)**

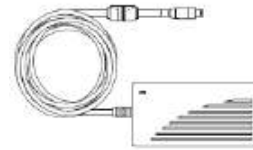

**AC Adapter (12V/ 36W) (Optional)**

922D050W12VA



**Power Cord (Optional)**

Varies by country



**3 pin Terminal Block (Optional)**

94J602G030K0



**Mounting Clips and Screws**  
 7" HMI – 4 pcs  
 10.1" HMI – 8 pcs  
 15" HMI – 14 pcs  
 15.6" HMI – 10 pcs

82111E240400

 
*\*Package content may vary based on your order.*

## 1.3 Description of Parts

This section describes appearance, connectors' layout and mechanical dimensions of EL-Series HMI.


### 1.3.1 W04IM3S-ELT1 ; EL-Series HMI 4.3"

Unit: mm

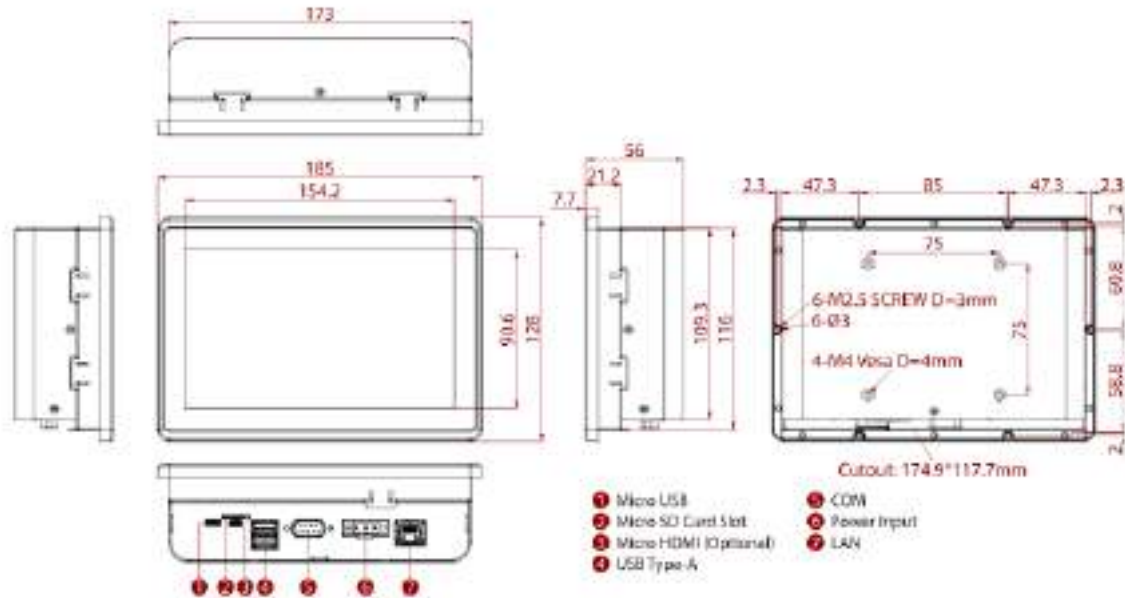


### 1.3.2 W07IM3S-ELT1 ; EL-Series HMI 7"

 Unit: mm

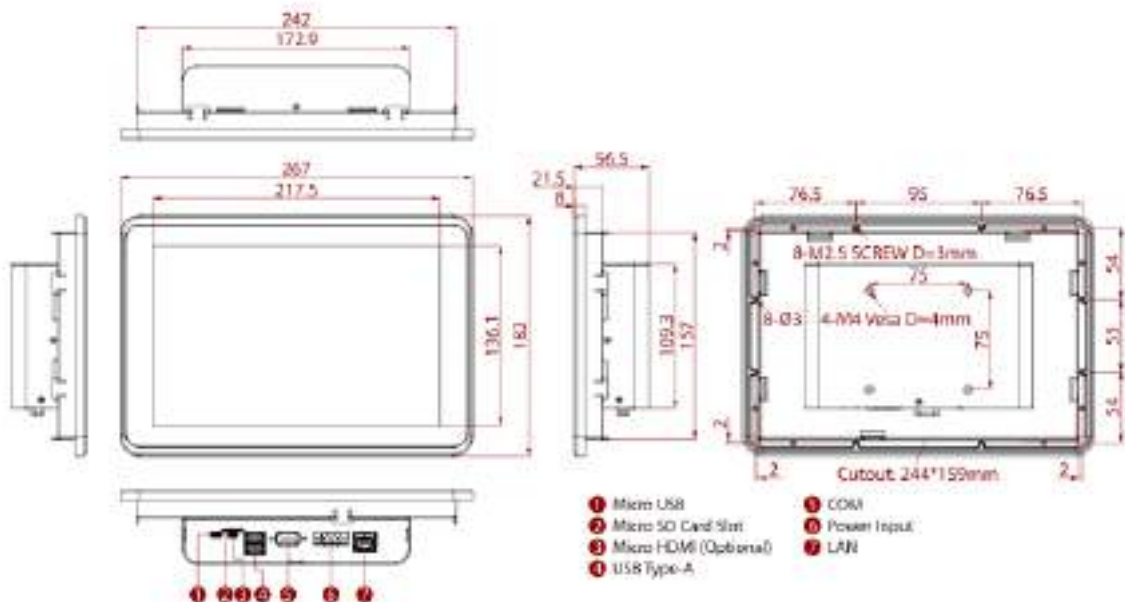

### 1.3.3 W10IM3S-ELH2; EL-Series HMI 10.1”

 Unit: mm

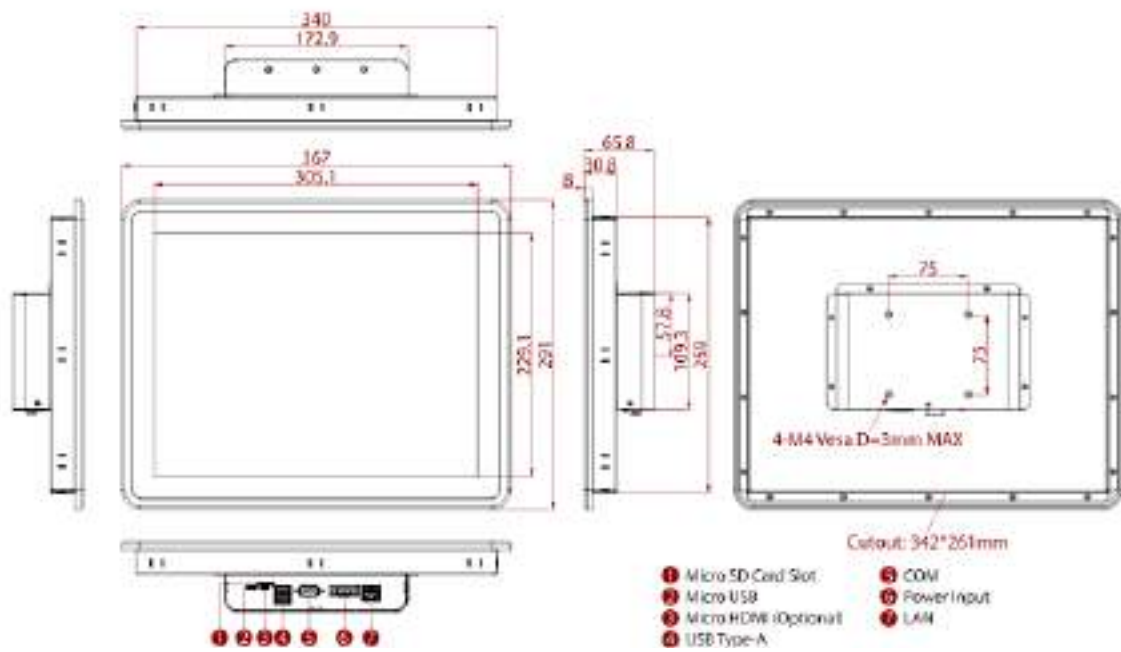


## Chapter 2: Getting Started

This chapter provides information on how to connect the HMI device to the source of power, connector pinouts and the guideline to turn on/off the HMI device.

### 2.1 Powering On
 
#### 2.1.1 AC Adapter Components

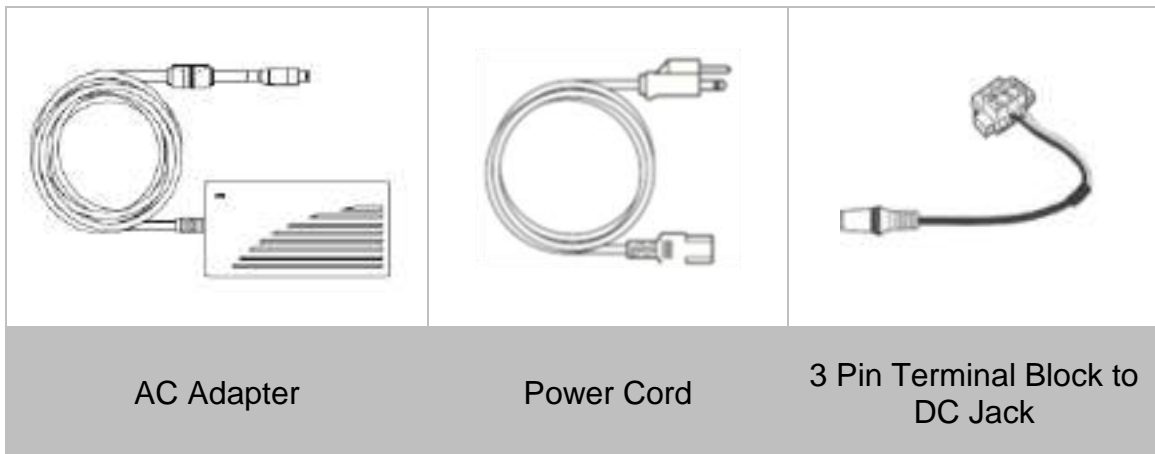

#### Safety Precautions:

- Do not use the adapter in a high moisture environment
- Never touch the adapter with wet hands or foot
- Allow adequate ventilation around adapter while using
- Do not cover the adapter with paper or other objects that will reduce cooling
- Do not use the adapter while it is inside a carrying case
- Do not use the adapter if the cord is damaged
- There are NO serviceable parts inside
- Replace the unit if it is damaged or exposed to excess moisture

#### While using the AC Adapter always:

- Plug-in the power cord to easy accessible AC outlet
- Plug-in the AC adapter to a grounded outlet



#### **ALTERNATING CURRENT / MISE À LE TERRE!**

This product must be grounded. Use only a grounded AC outlet. Install the additional PE ground wire if the local installation regulations require it.

\*If you do not use a grounded outlet while using the device, you may notice an electrical tingling sensation when the palms of your hands touch the device.

Ce produit doit être mis à la terre. Utiliser seulement un cordon d'alimentation avec mise à la terre. Si les règlements locaux le requiert, installer des câbles de mise à la terre supplémentaires.

\*Si vous n'utilisez pas une prise d'alimentation avec mise à la terre, vous pourriez remarquer une sensation de picotement électrique quand la paume de vos mains touche à l'appareil.

## 2.1.2 Power Considerations

The HMI device operates on external DC power. Use the AC adapter included in the package.



### CAUTION/ATTENTION

 
Use only the AC adapter included in your package (Rating: Output 12~24V). Using other AC adapters may damage the device.

Utiliser seulement le convertisseur AC inclu avec votre appareil (Puissance: Sortie 12~24V). Utiliser d'autres convertisseurs pourraient endommager l'appareil.

## 2.1.3 Connecting the Power

Installation Instruction:

1. Connect a 3-pin terminal block to the HMI connector.
2. Connect the other side of the terminal block to the AC adapter.
3. Connect the AC adapter to the power cord.
4. Plug in the power cord to a working AC wall outlet. The device will boot automatically.

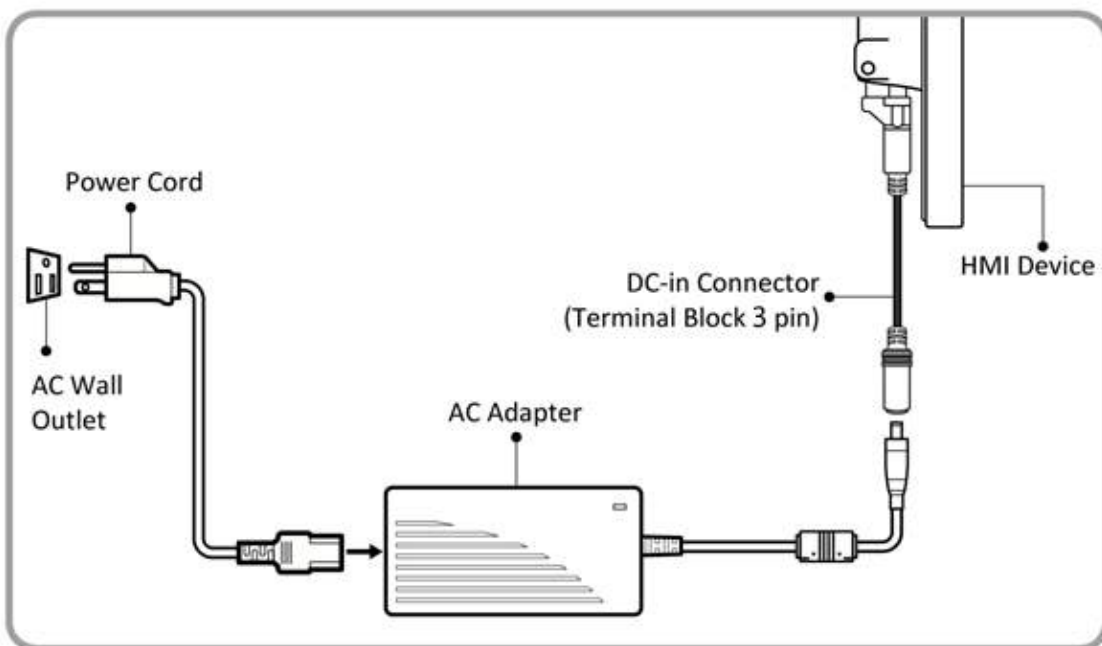

### Note:

 
- Power cords vary in appearance by region and country.
- Based on the model, terminal block connector may be located either on the bottom or on the rear side of the HMI device.

## 2.2 Connector Pinouts

### 2.2.1 DC Input Connector

#### Terminal Block

DC power source input is a 3 pin terminal block connector. Power Input is 12V DC in.

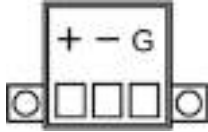

Voltage

Minimum Voltage 12V  
Maximum Voltage 24V



#### IMPORTANT:

Support PoE (optional), requires IEEE 802.3at 25W power input

### 2.2.2 USB 2.0 Connector

Use USB A Type (USB2.0) connector to connect your HMI device to other USB2.0 compatible devices.



Pin №	Signal Name	Pin №	Signal Name
1	+5V	2	Data-
3	Data+	4	GND

### 2.2.3 Serial Port Connector


RS485



Pin №	Signal Name	Pin №	Signal Name
1	D+	2	D-
3	GND		

### 2.2.4 Micro USB Connectors

 Pin assignment and connector description of USB OTG connector.

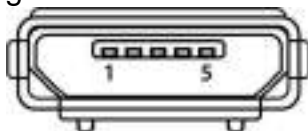


Pin №	Signal Name	Pin №	Signal Name
1	VBUS OTG Power	2	USB 2.0 D-
3	USB 2.0 D+	4	OTG ID
5	GND		

### 2.2.5 LAN (RJ45) Connector

 The EL-Series HMI supports one 10/100/1000 Mbps Ethernet interface for connecting to the internet.

Pin №	Signal Name	Pin №	Signal Name
-------	-------------	-------	-------------

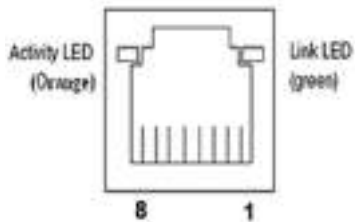

1	TX1+	2	TX1-
3	TX2+	4	TX2-
5	TX3+	6	TX3-
7	TX4+	8	TX4-

## 2.3 Turning On and Off the HMI Device

This section describes how to turn on and off the HMI device.

To **turn on** the HMI device:

1. Connect the HMI device to the source of power.
2. The unit is configured to **Power ON** when is connected to the power source.

Refer to Chapter.2.1 Powering On of this User Manual for more details on how to power on the HMI device.

 
To **turn off the** HMI device:

1. Slide down to show the notification panel. Click **Power Menu**.



2. Choose **Power off** to shut down the HMI device.



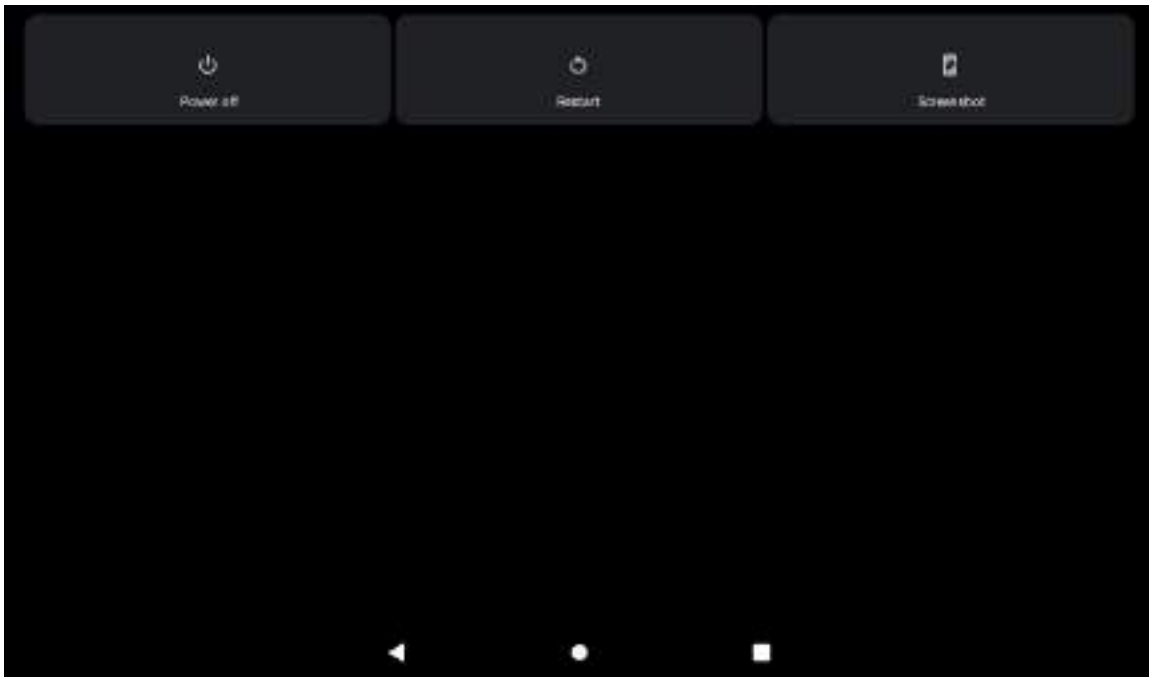


3. Disconnect the HMI device from the power source (if necessary).


## 2.4 Resetting to Factory Defaults

 To reset the device to factory defaults:


1. Slide from the bottom side, then open **Settings**  app.
2. Tap **System** , user can select to back up application data, Wi-Fi passwords and other settings to **Google** servers by tapping **Backup My Data**.

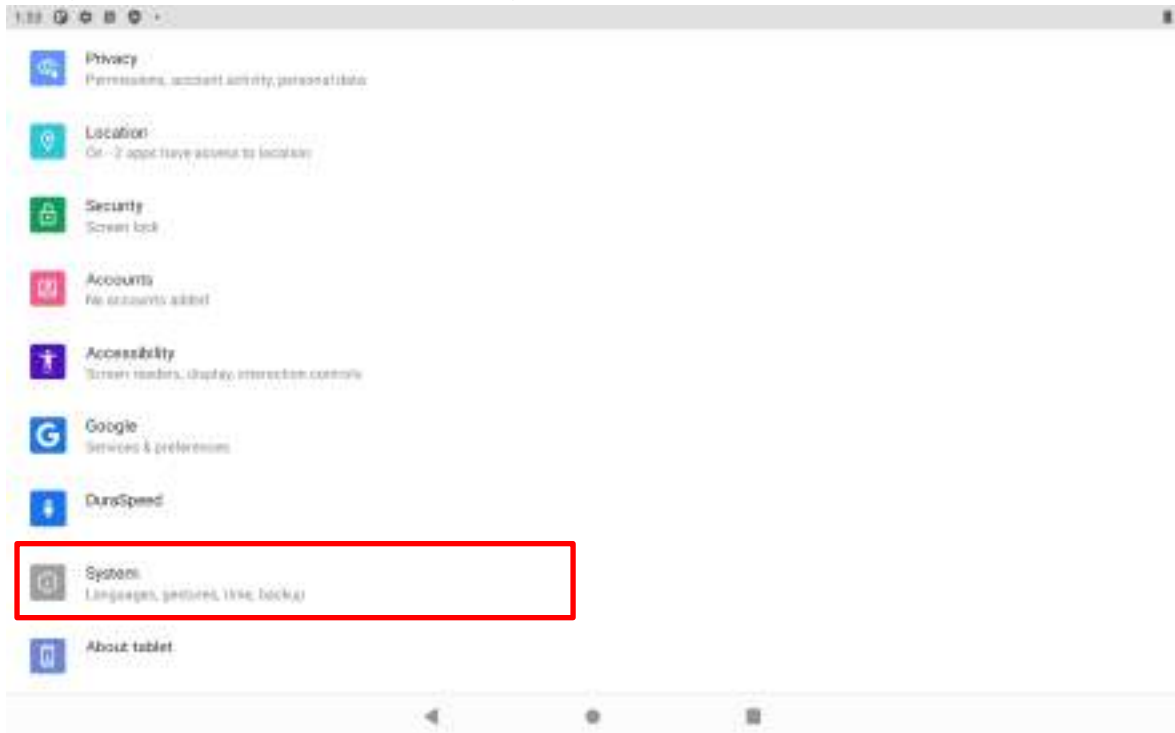

 
3. Tap **Advanced**.

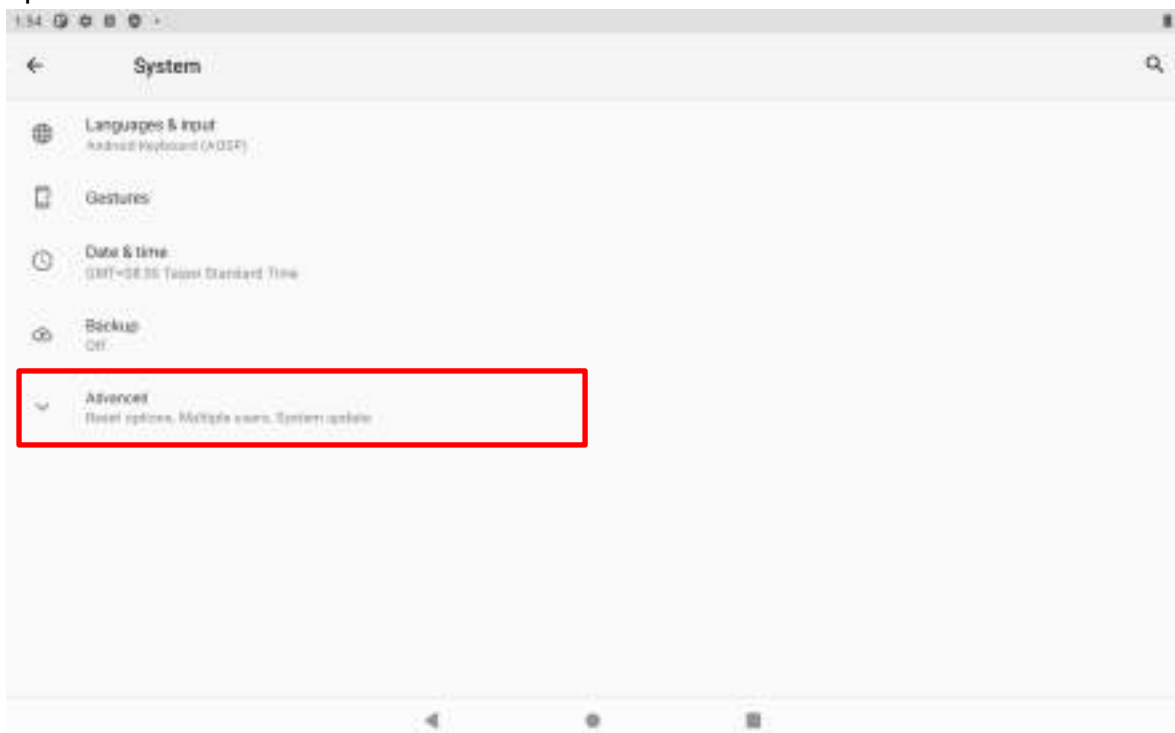

 
4. Tap **Reset options**.

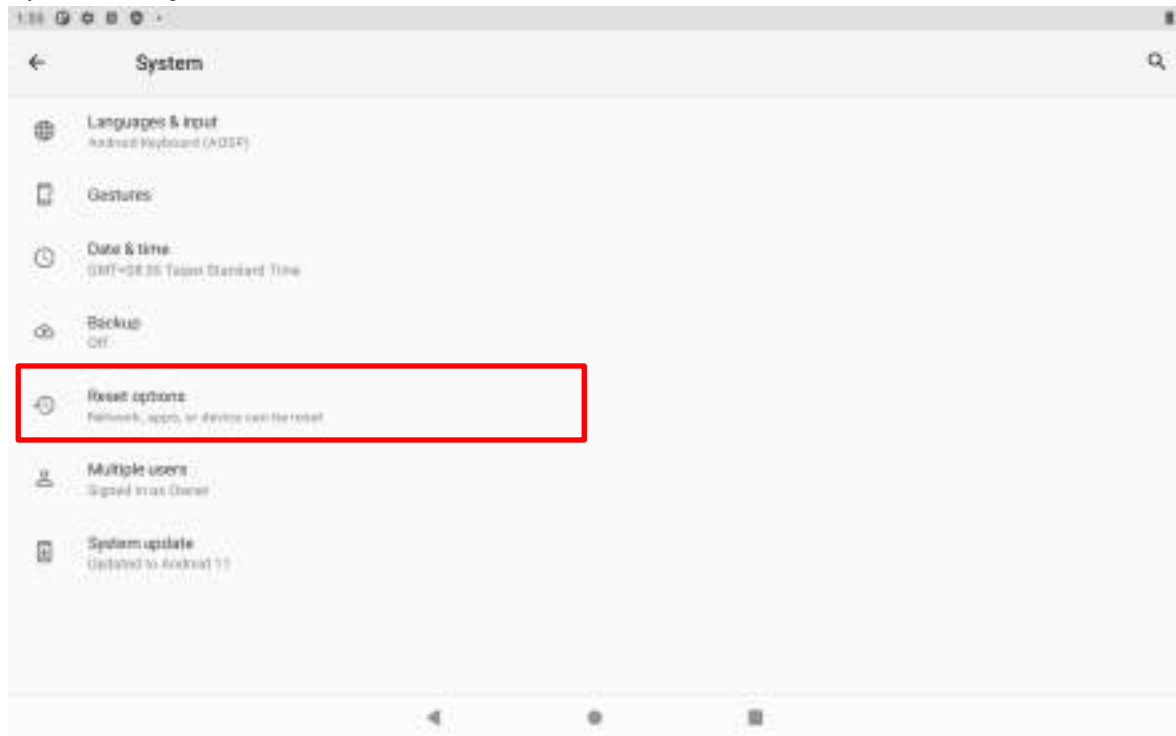

 
5. Tap **Erase all data(factory reset)** to reset the HMI.

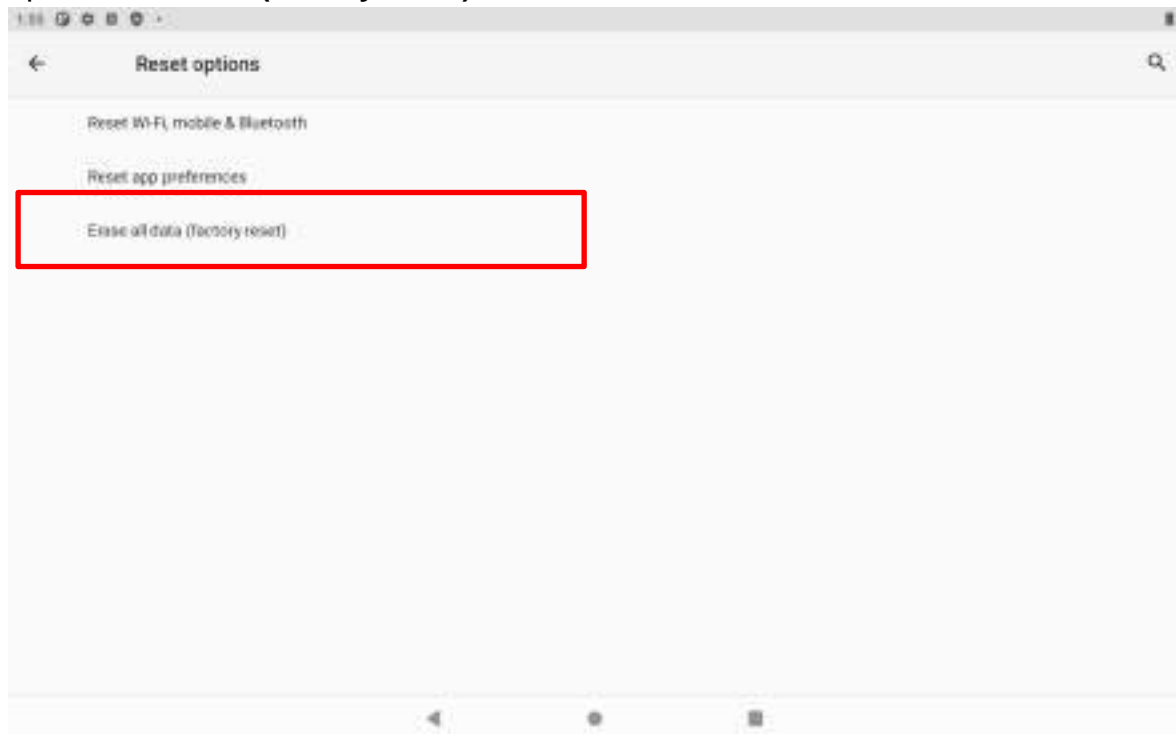

 6. Read all the available information and then press **Erase all data** to erase all the data in storage such as music or photo.

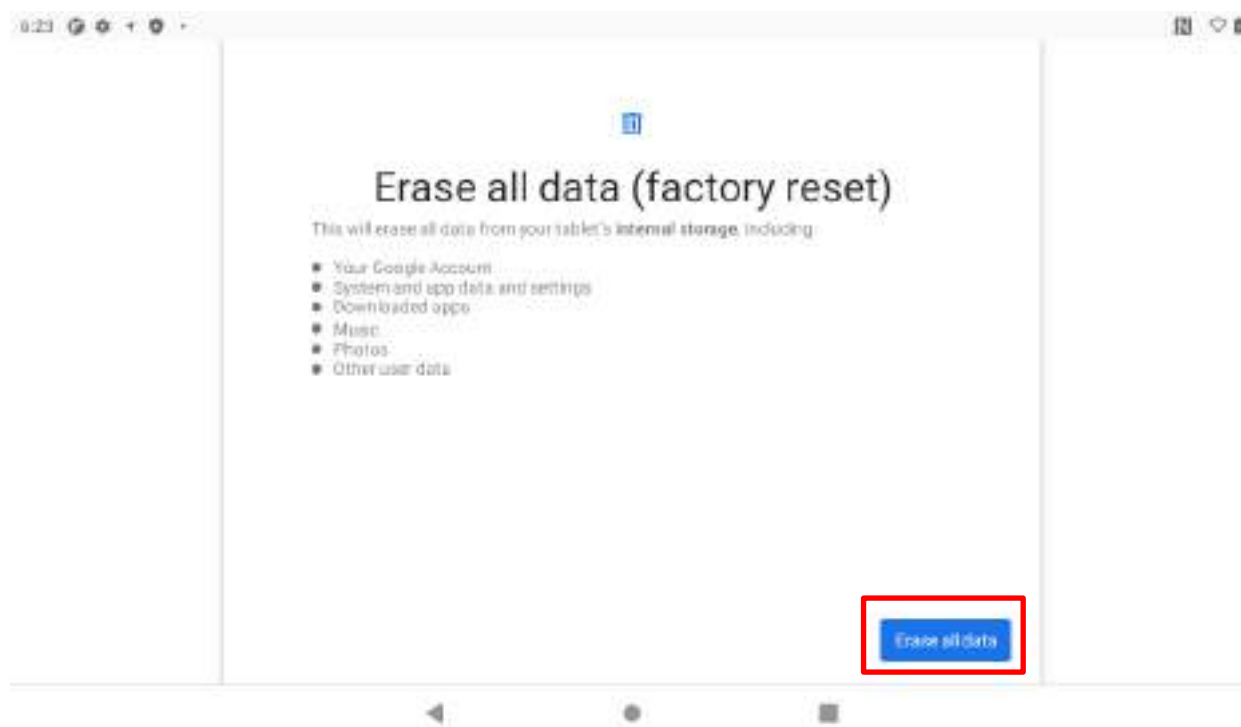

 7. Press **Erase all data** to erase all your personal information and downloaded apps.

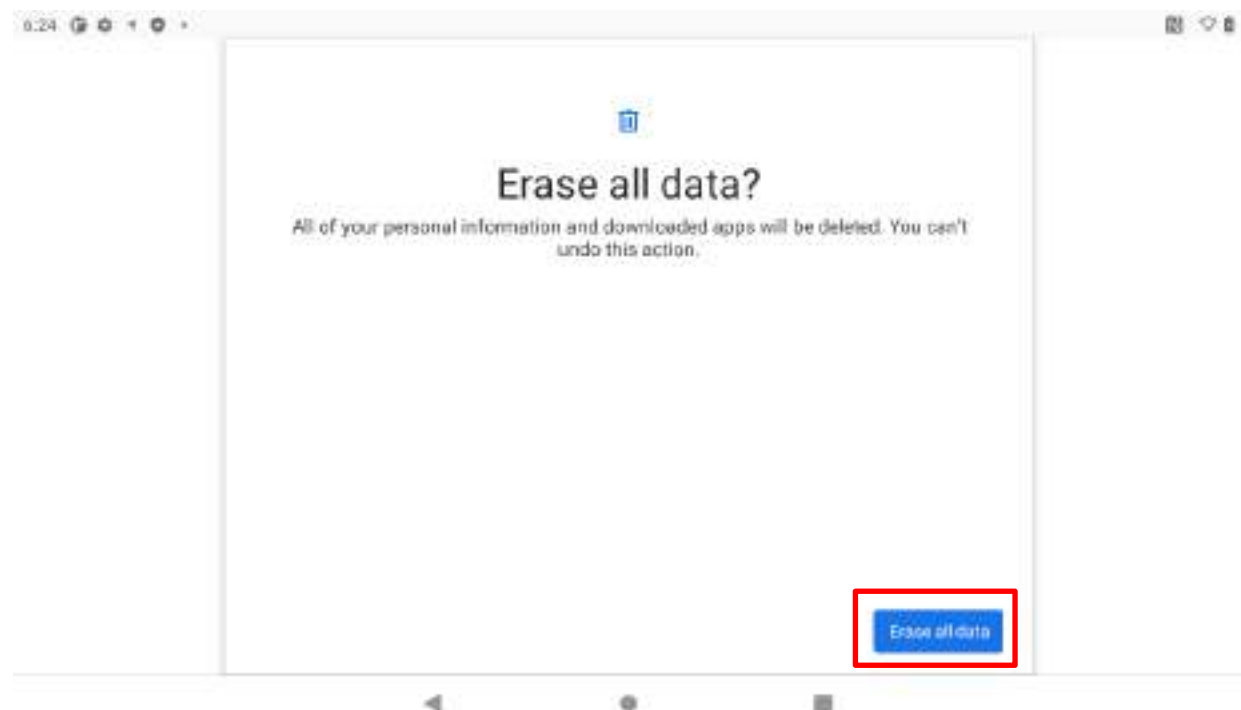







## Chapter 3: Using the HMI Panel PC

This chapter explains how to use the buttons, status icons, and controls of the S-series HMI running on Android 11 operating system and provides instructions on entering and capturing data.

 
### 3.1 Using the Touch Screen




The touchscreen supports the core gestures for Android.

Gesture	Action	Description
Tap		To select or activate something
Tap & Hold		Touch and hold an item on the screen by touching it and not lifting your finger until it respond
Touch, Hold & Drag		Touch and hold an item for a moment and then without lifting your finger, move your finger on the screen until you reach the target position. i.e. moving the apps around the home screen
Swipe or slide		Quickly move the finger across the surface of the screen. i.e. slide a lock screen to open the lock
Double-tap		Tap quickly twice on a webpage, screen, or App to zoom
Scale		Place two finger on the screen and pinching them together

## 3.2 Using the Home Screen

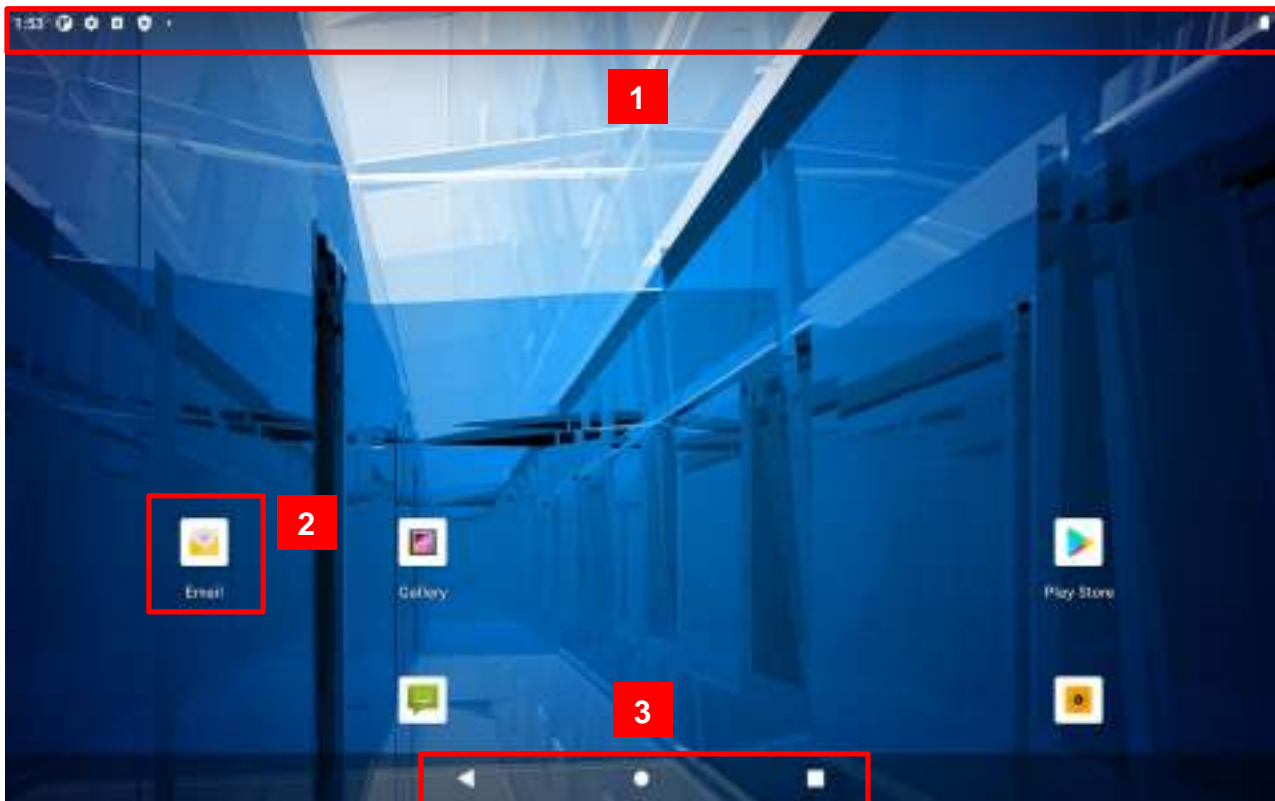Home screen is the starting point to access all the features on your HMI Device. It displays application icons, widgets, shortcuts, and other features. User can personalize the home screen. See “*Personalizing home screen*”.




No.	Description
1	<b>Status Bar</b> – Shows the time, signal strength, battery status, and other notifications. It also displays notification icons.
2	<b>Application</b> – Shows applications that user can open directly on the home screen.
3	 <b>Back</b> Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further.
	 <b>Home</b> Returns to the main Home screen. To get suggestions based on the screen you're currently viewing, touch & hold this button.
	 <b>Overview</b> Show apps you've used lately and let you switch between them. Double-tap to jump between the current app and the previously used one, and back again.

### 3.2.1 Personalizing Home Screen


User can add application icons, shortcuts, widgets, and other items to any part of any home screen where there is free space. User can also switch the wallpaper.

#### To change wallpaper on the HOME SCREEN:

 1. Swipe from the bottom of the main desktop, tap **Settings** , and then tap **Display** .

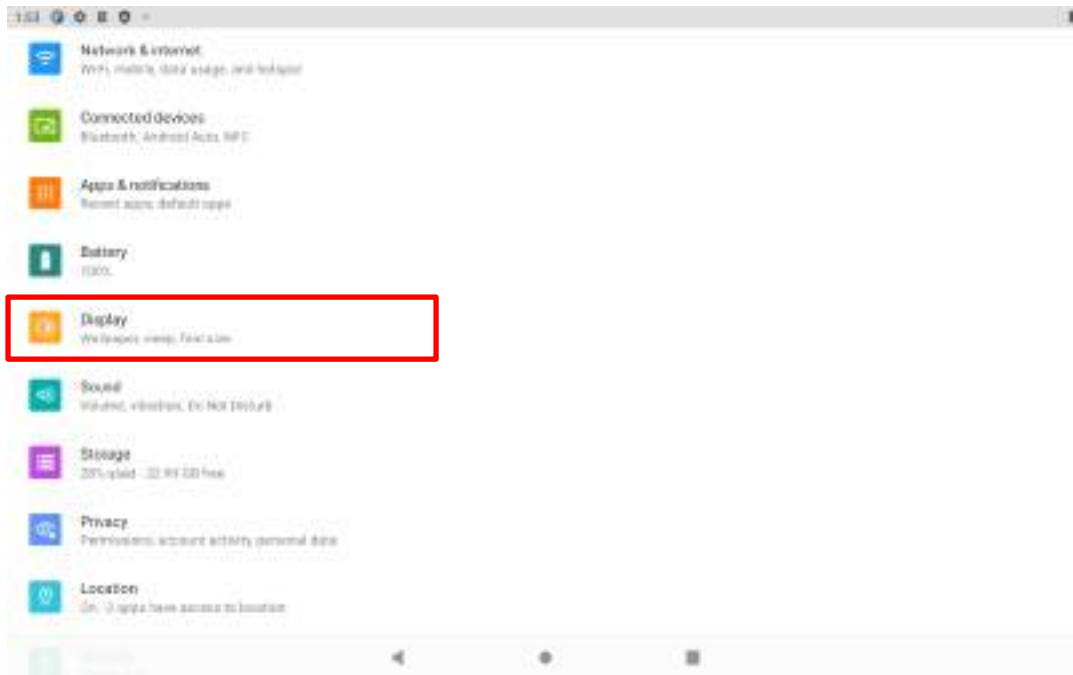

 2. Tap **Wallpaper**.

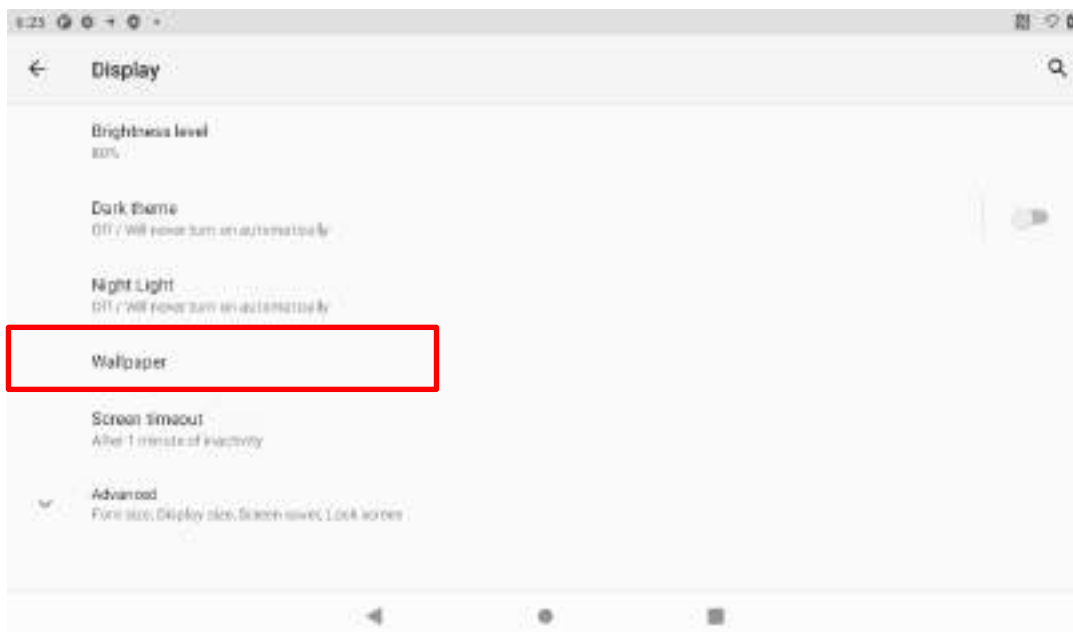

3. In the Wallpaper menu select the location of wallpaper, and then tap the type of item you want to add.



**To move an item on the HOME SCREEN:**

1. Tap and hold the item you want to move, until it can be moved. Drag it to a new location on the screen.



 


2. Place the item where you want to put it and lift your finger.




#### To remove items from the HOME SCREEN:

1. Tap and hold the item you want to remove. The launcher icon will show **Remove** on the top of the screen.
2. Drag the item you want to remove to the Remove icon.
3. When the icon turns red, release your finger.

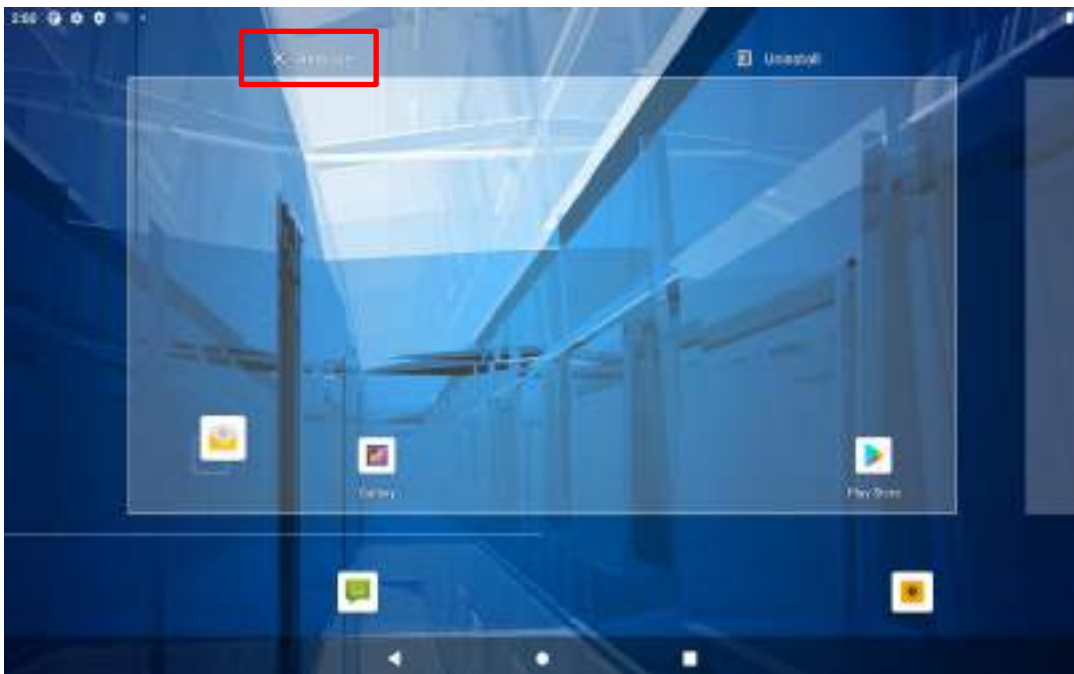


### **3.2.2 Viewing other parts of the Home Screen**

 1. Slide your finger left or right across the Home screen. Extensions to the Home screen provide extra space for APPS, shortcuts, and other items.

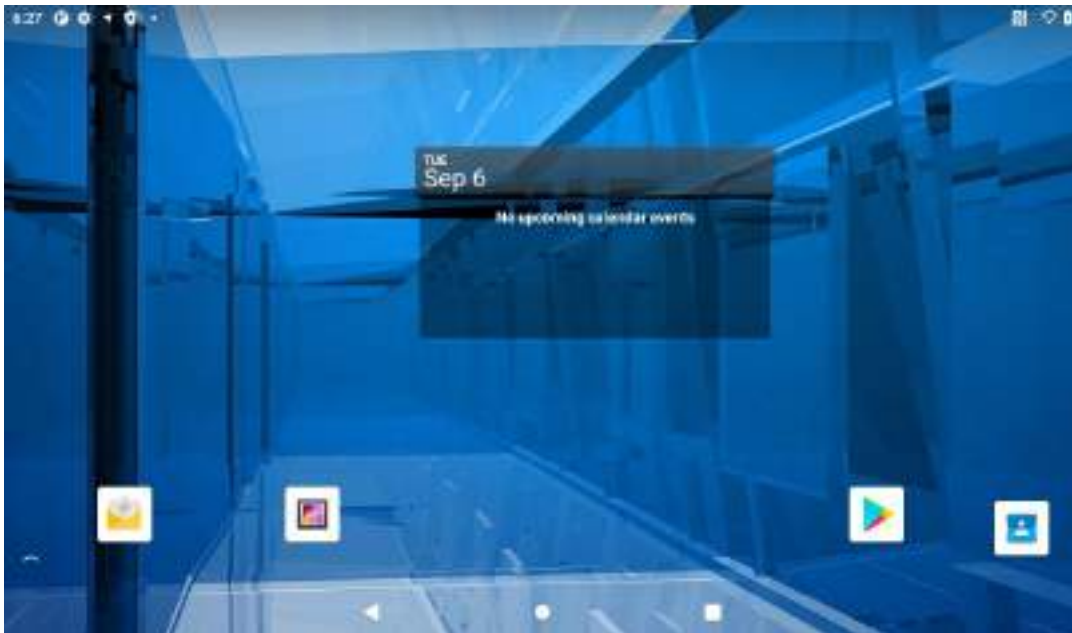

 2. Swipe from the bottom of the main desktop, to view the entire APPS on the device.

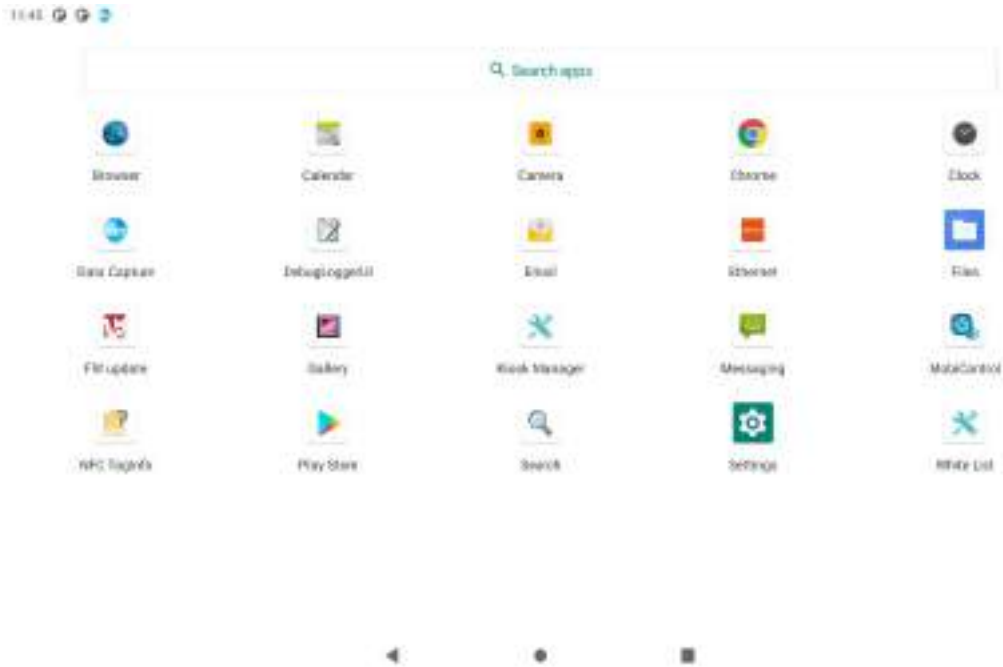

### 3.3 Status and Notification Icons

The status bar appears at the top of every screen. On the left are notification icons and on the right are status icons, along with the current time.



#### 3.3.1 Notification Icons

Pull down from the left top of the screen to get the notifications area. The following icons indicate that you have received notification.

	New email message		Incoming call
	New text or multimedia message		Missed call
	Alarm is set		Speakerphone is activated
	Upcoming event		Phone microphone is muted
	Data is syncing		Downloading data
	Problem with sign-in or sync		Phone is connected via USB cable
	A screenshot is captured		

#### 3.3.2 Status Icons

Pull down from the right top of the screen to get the notifications area. The following icons indicate the status of your device, for example if users are connected to a Wi-Fi network that is not connected to the internet, the network icons are appears in white color.


Status icons that appear in the status bar are as follows:

 
	Connected to GPRS mobile network		Bluetooth is on
	Connected to 1xRTT mobile network		Connected to a Bluetooth device
	Connected to EDGE mobile network		No SIM card installed
	Connected to 3G mobile network		Vibrate mode
	Connected to 4G mobile network		Ringer is silenced
	Mobile network signal strength		Battery is very low
	Searching for a network signal		Battery is low
	No signal		Battery is partially drained
	Connected to a Wi-Fi network		Battery is full
	Roaming		Battery is charging
	Airplane mode		Receiving location data from GPS

## 3.4 Using the On-Screen Keyboard

User will be able to enter text using the On-Screen Keyboard. Some applications will launch the keyboard automatically. In others, user needs to touch a text field where user wants to enter text to launch the keyboard. User will be able to enter text using the On-Screen Keyboard. Some applications will launch the keyboard automatically. In others, user needs to touch a text field where user wants to enter text to launch the keyboard.




### 3.4.1 Entering Text

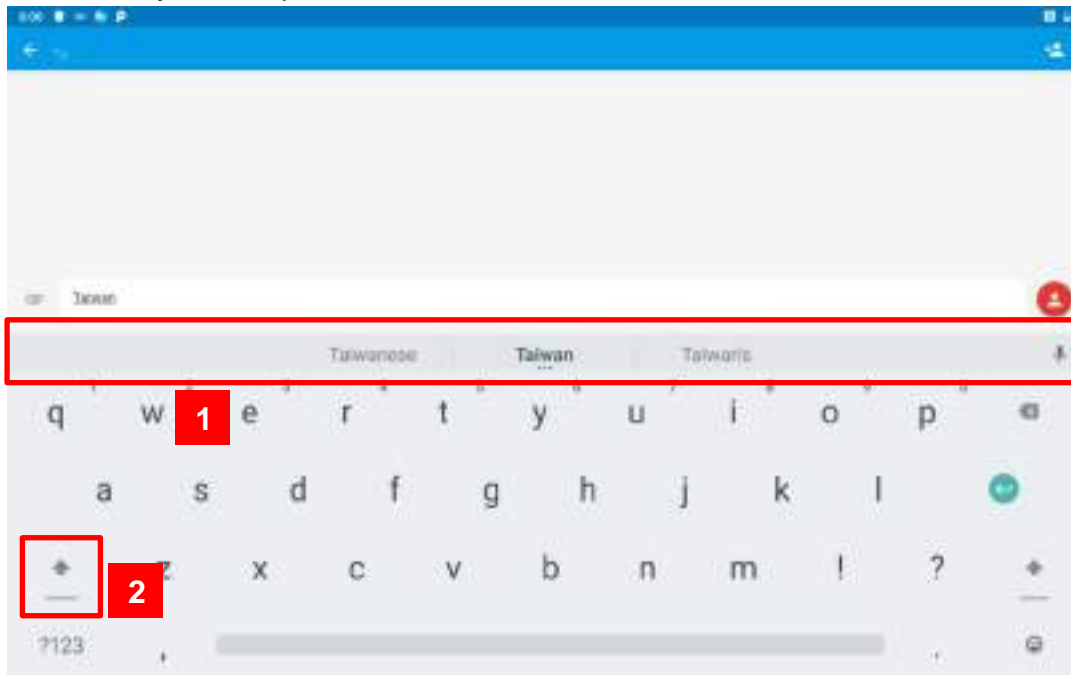
1. Open a text field, in this example we used Messaging  to compose a message. The On-Screen Keyboard opens.



No.	Description
1	<b>Suggestions</b> – Tap a suggestion to enter it in the place of the underlined.
2	<b>Capitalize</b> – Tap once to capitalize the alphabet..

*\*If user taps in a text field which already contains text, the insertion point is set where user tap and the cursor appears. User can drag the cursor to pick exactly where you want to add more text. User can also select a word to copy, cut and paste it. See [“Editing Text”](#).*

 
2. Tap the delete key  to erase characters to the left of the cursor.
3. Tap  to enter numbers. Tap  to return to letters.

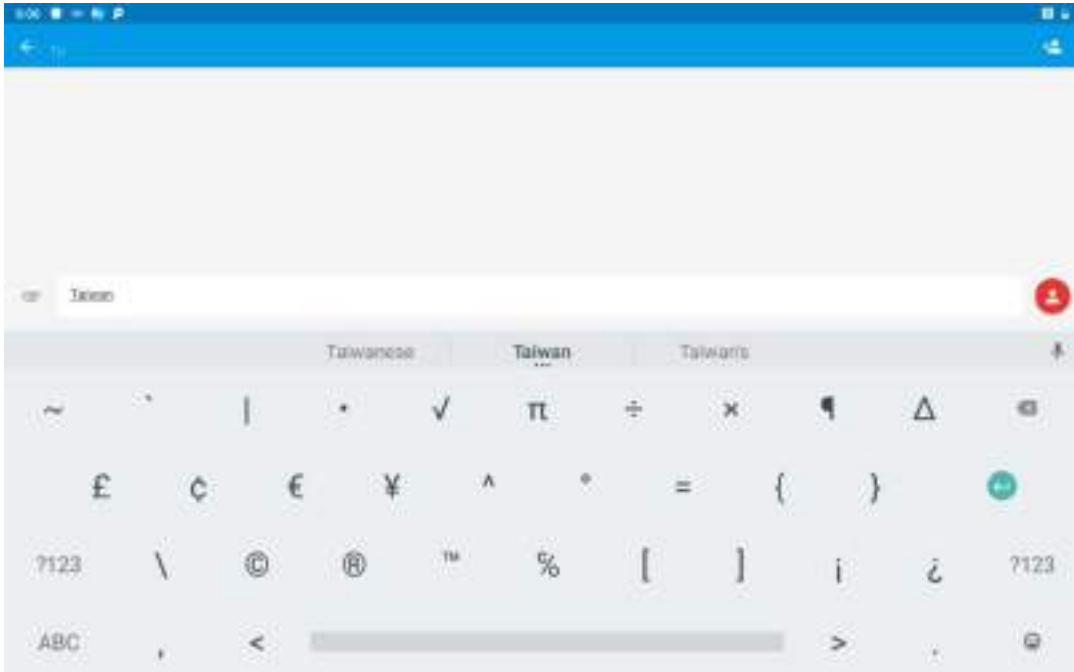


4. To enter symbols and other characters, tap and hold one of the top-row keys and slide your finger up to the list of the options. Lift your finger when you find your selection.



 
5. To view additional symbols, tap  on the numeric keyboard.


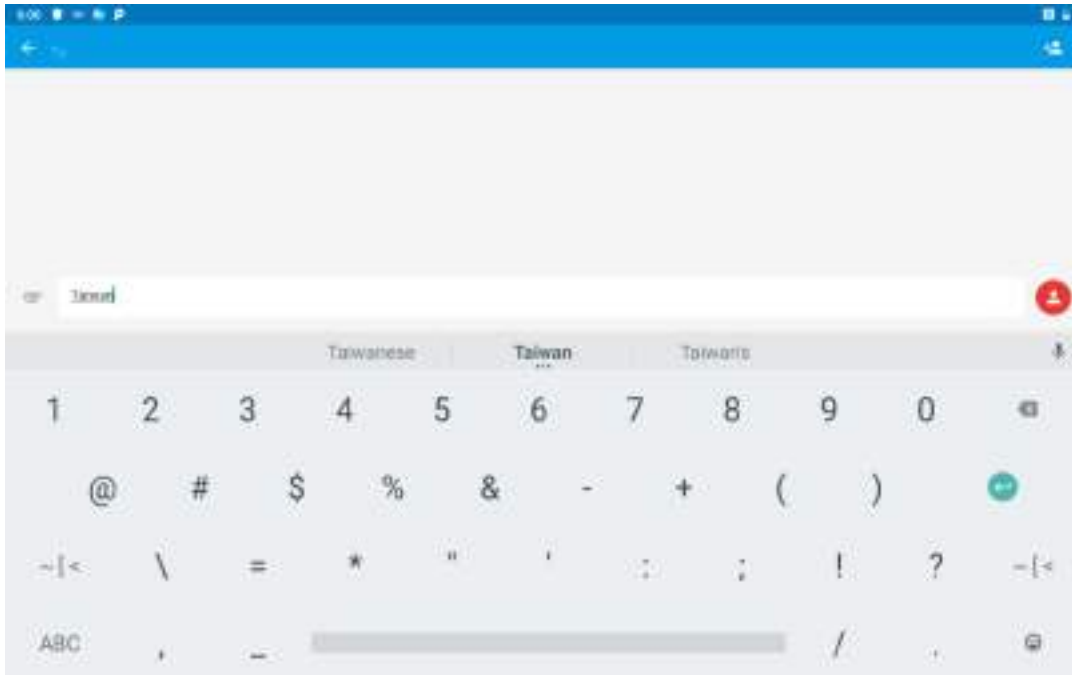


6. To close the On-Screen keyboard, press the back button  on the top.

## 3.4.2 Editing Text
  
### To select text:

1. Double-tap the text you want to select.
2. Tap  to select all the sentences in the menu that appears, the selected text is highlighted in green, with a tab at each end of the selected word.
3. Drag selection tab to expand or reduce the range of the selected text.

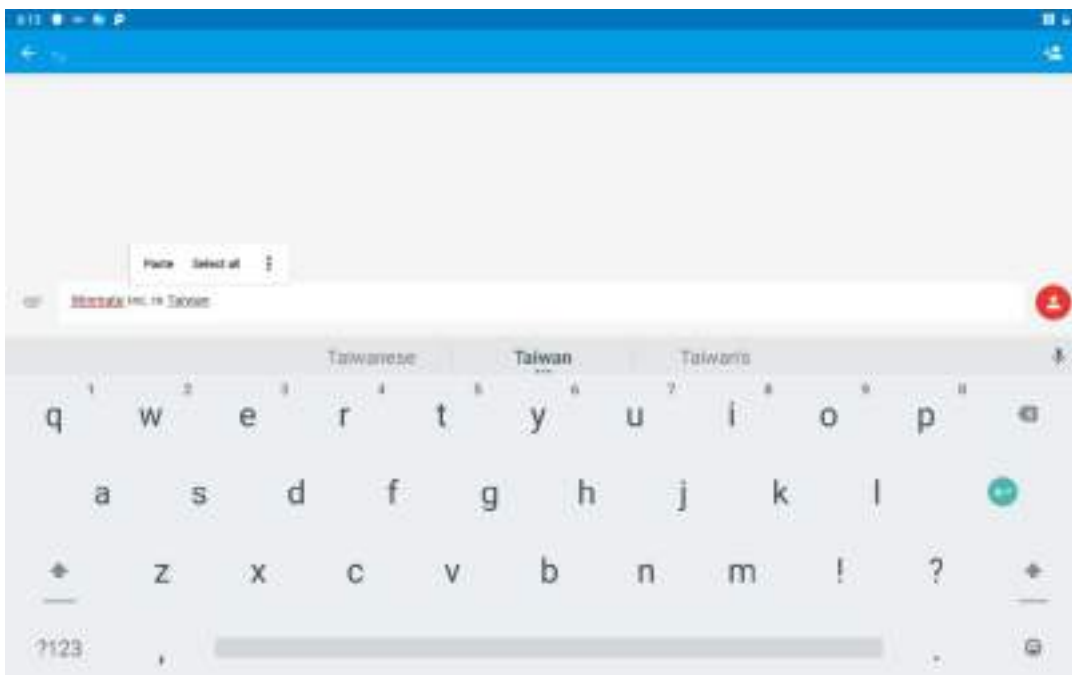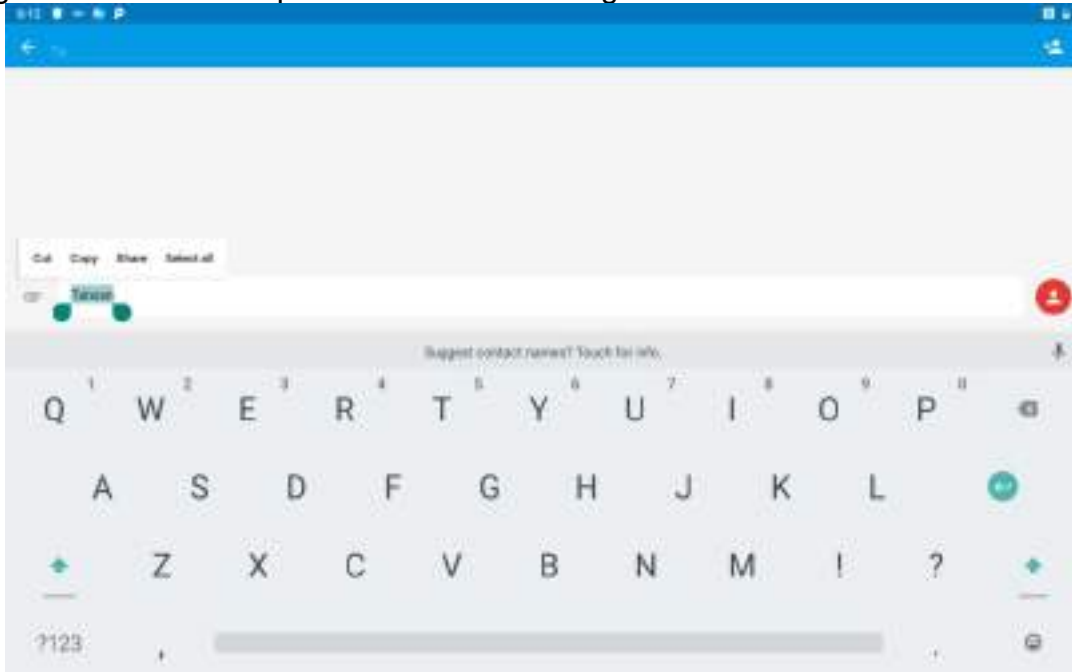



### To Cut or Copy Text:

1. Select the text to cut or copy, see the section above "[To select text](#)".
2. Tap **Cut** or **Copy** in the Edit text menu.
3. If you select **Cut**, the selected text is removed from the text field; it is stored in temporary area so that you can paste it into different text field.



**To Paste Text:**

  
1. After Cut or Copy the text, see the section above “To Cut or Copy Text”.
2. Place the cursor in the text field where you want to paste the text, user can paste text that you copied from one application into a text field in any application.
3. Tap and hold into the location that you want to paste. Tap **Paste** in the menu that opens to replace the existing text with copied text.

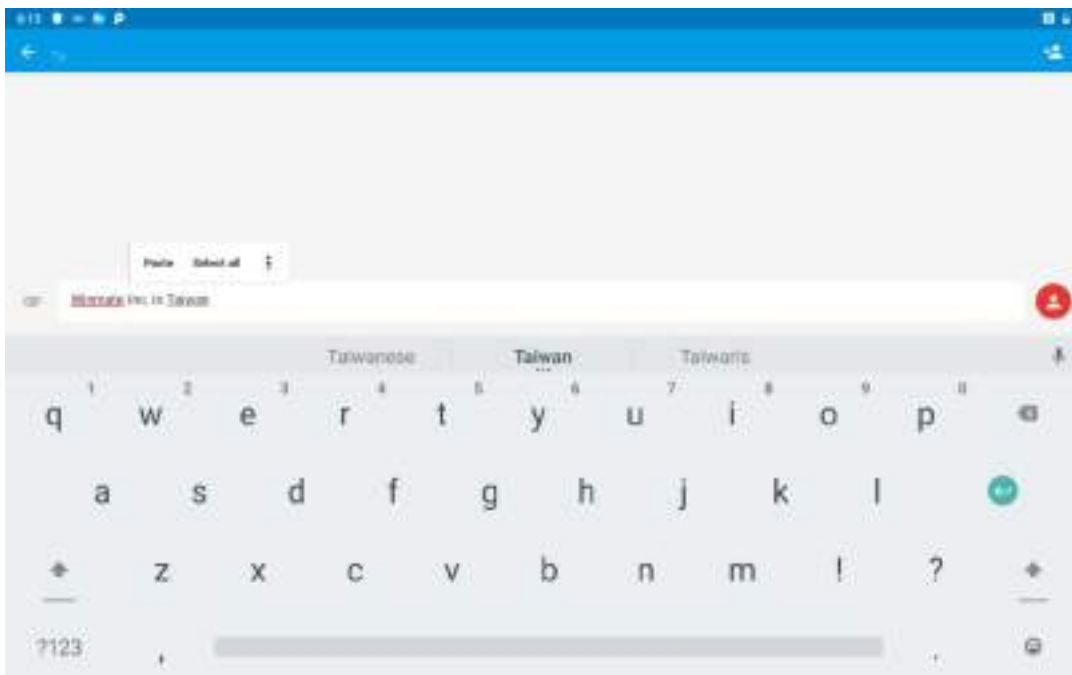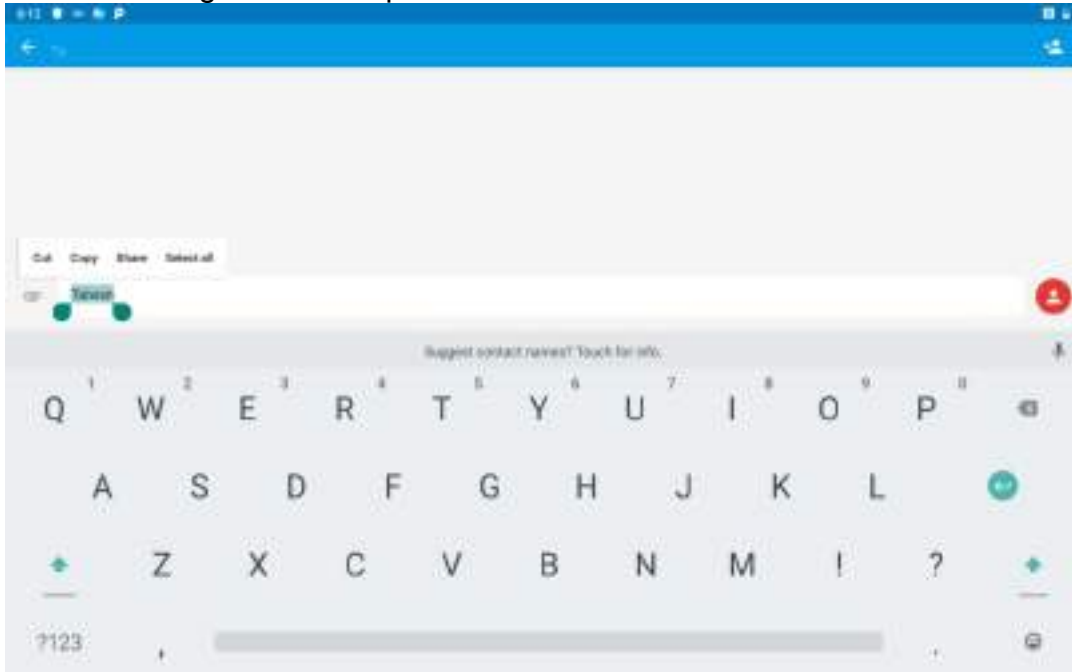

## 3.5 Display Settings

Use the display settings to configure brightness and other screen settings.

 1. Swipe from the bottom of the main desktop, tap **Settings** , and then tap **Display** .

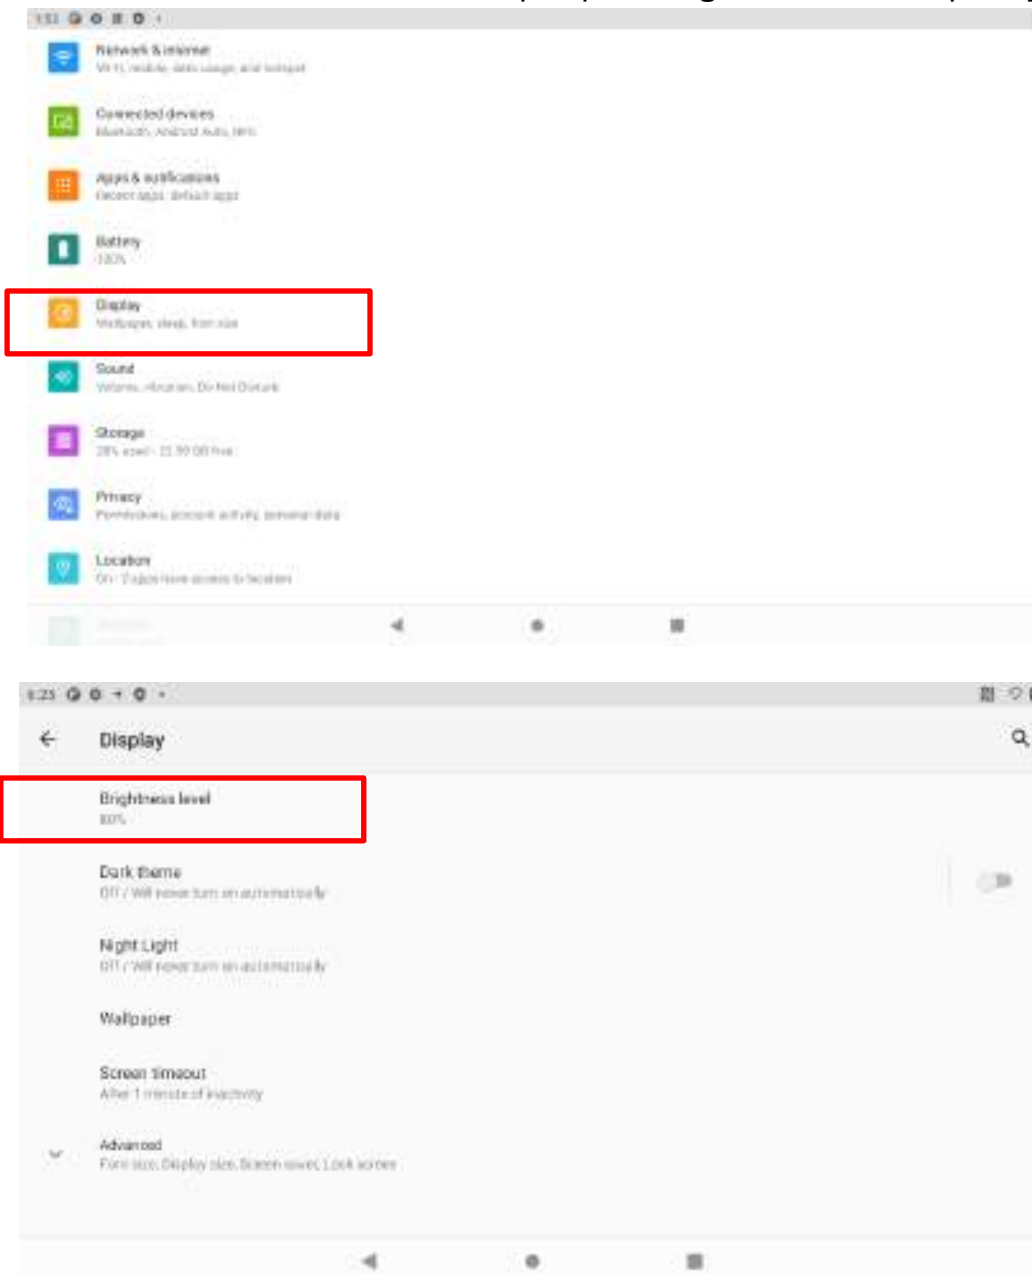




### Display

- **Brightness level** – for adjusting the brightness of the screen.
- **Dark theme** – uses black background to help keep battery alive longer on some screens.
- **Night light** – tints your screen amber. This makes it easier to look at your screen or read in dim light.
- **Wallpaper** – to select wallpaper
- **Screen timeout** – to set up the device's sleep mode after the specified period of inactivity
- **Font size** – Make the text on screen smaller or larger
- **Display size** – Make the items on your screen smaller or larger. Some apps on your screen may change position.
- **Screen saver** – to control what happens when the HMI is docked and/or sleeping, turn screen saver on
- **Lock screen** – to control all notification content


## 3.6 Language and Keyboard Settings

Use the Language & keyboard settings to select the language for the text on your HMI and for configuring On-Screen Keyboard, including words that you have added to its dictionary.

 1. Swipe from the bottom of the main desktop, tap **Settings** , and then tap **System** .


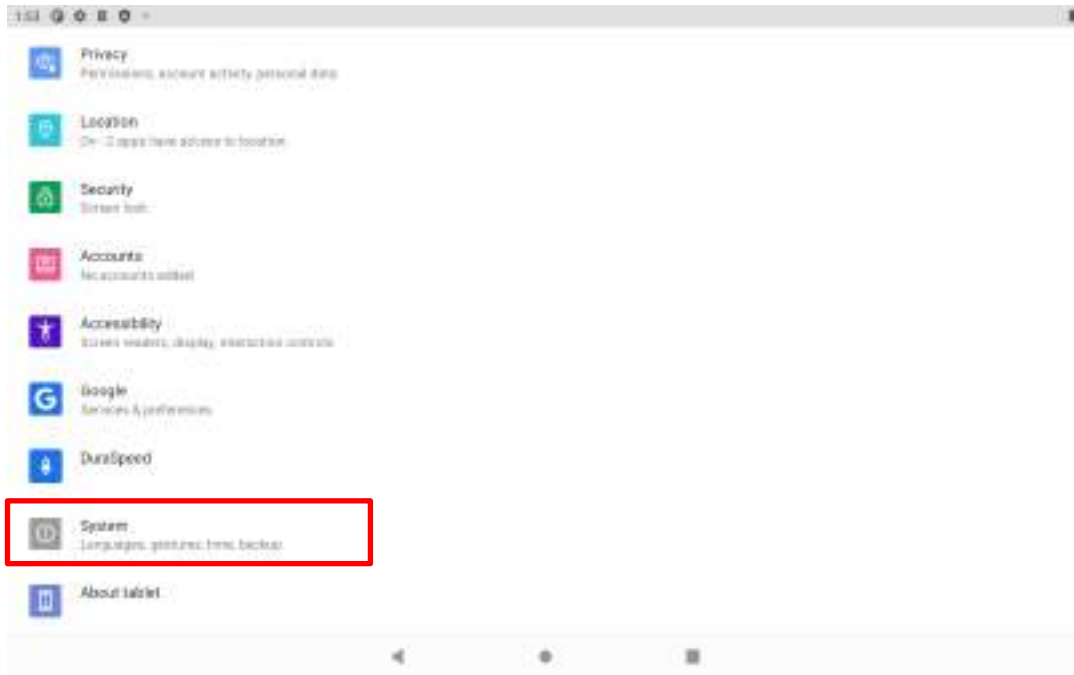


 2. In the **Personal** tab, select **Language & Input** .

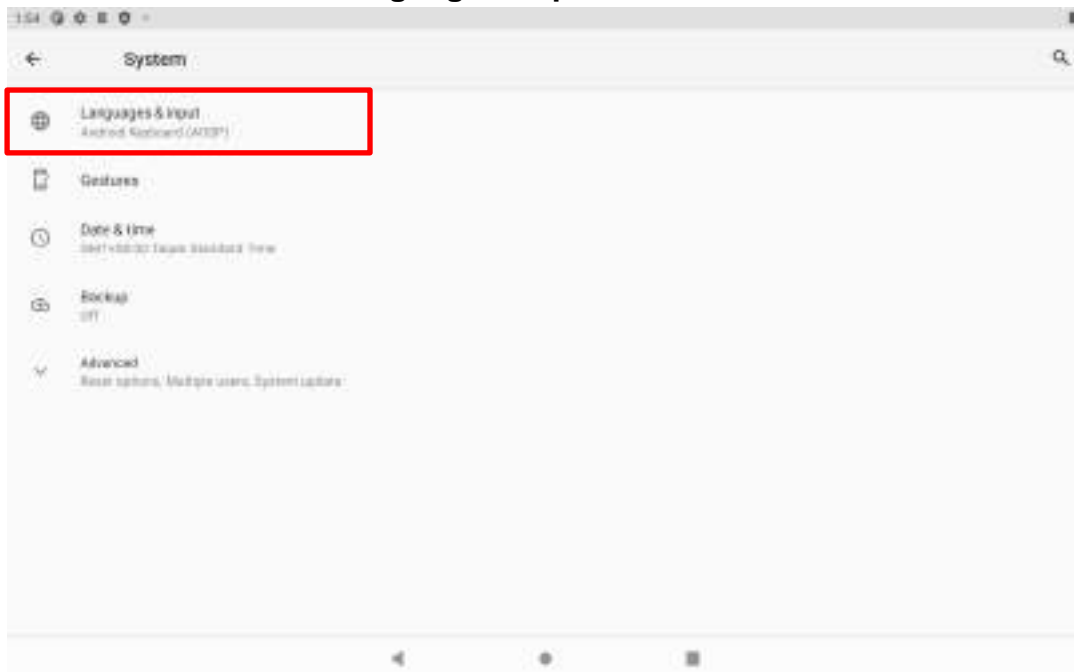

- **Keyboard & input methods**

  - **On-screen Keyboard** – shows default Android Keyboard (AOSP).
- **Physical Keyboard** – allows the user to apply physical keyboard settings if connected.

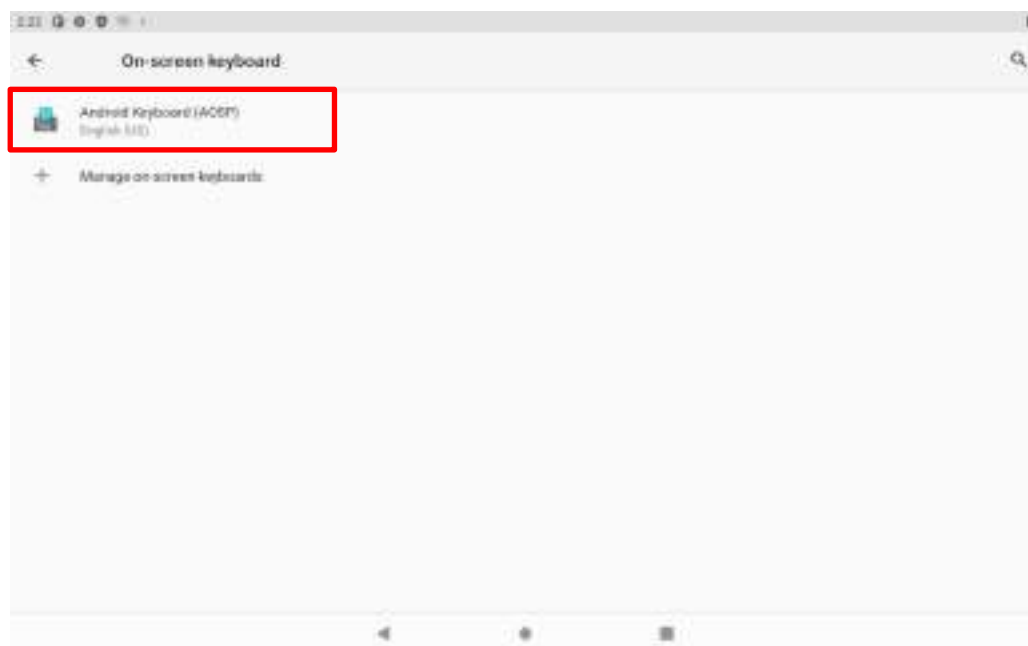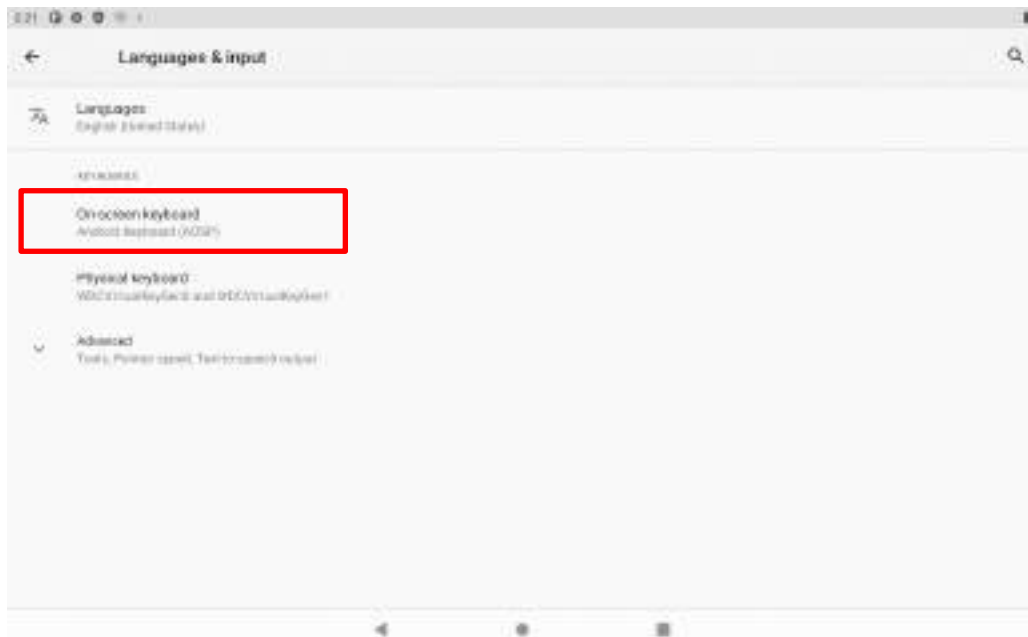


- **Appearance & layouts**

- **Theme** – to select the theme of layout.
- **Custom input styles** – user can select custom input style, such as QWERTY keyboard.
- **Enable split keyboard** – toggle to activate split keyboard layout.

- **Text Correction**

- **Personal dictionaries**
- **Add-on dictionaries**
- **Block offensive words** – disable suggesting potentially offensive words
- **Auto-correction** – spacebar and punctuation automatically correct mistyped words.
- **Show correction suggestions** – display suggested words while typing.

 - **Personalized suggestions** – learn from your communications and typed data to improve suggestions.
  - **Suggest contact names** – use names from Contacts for suggestions and corrections.
  - **Next-word suggestion** – use previous word in making suggestion.
- **Advanced**

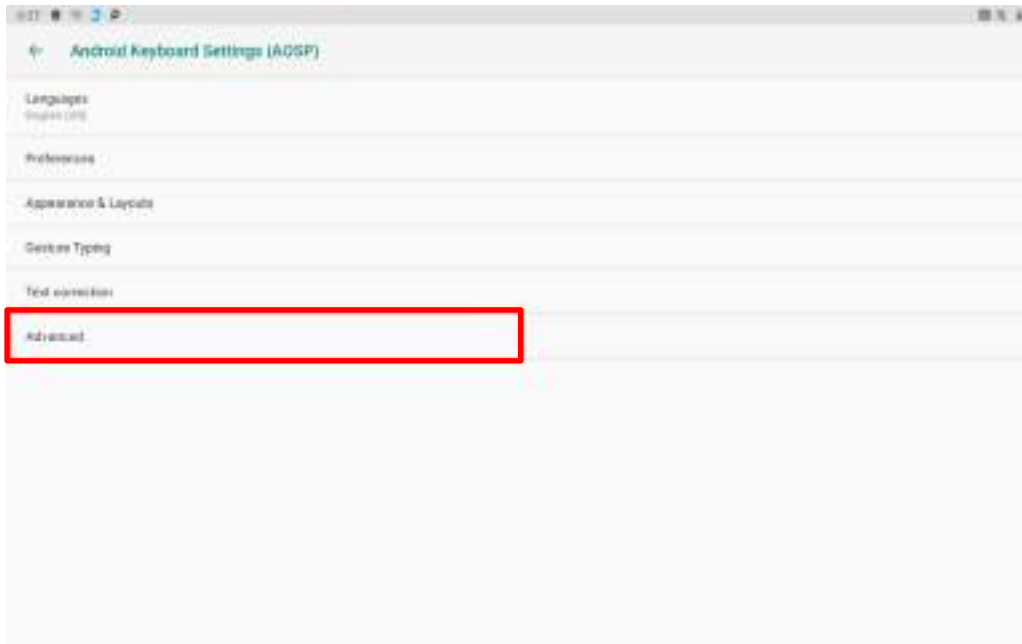

- **Keypress vibration duration**
- **Keypress sound volume**
- **Key long press delay**
- **Emoji for physical keyboard**
- **Show app icon**

### Changing the Keyboard Language

The current keyboard language is displayed on the Space key and user can switch languages.

1. Tap and hold the space key.
2. Without lifting the finger, slide it to the left or right until the language you want to use appears in the center of the small window above the Space Key.
3. Lift the finger to change the keyboard language.

 
## 3.7 About tablet

About tablet includes information about user's device.

- **System Update** — provides information regarding the local or online update of your devices.
- **Status** — opens the status screen with a list of information about battery, network, signal strength and other details.
- **Legal Information** — lists details about the model number, Android Version, Baseband version etc. this information is useful if user need to work with support team.
- **Device number** – displays the model name of the current device.
- **Android version** – displays the current Android operating system version the device running

To access the information about the phone:


1. Swipe from the bottom of the main desktop, tap **Settings** , then tap **About tablet** .

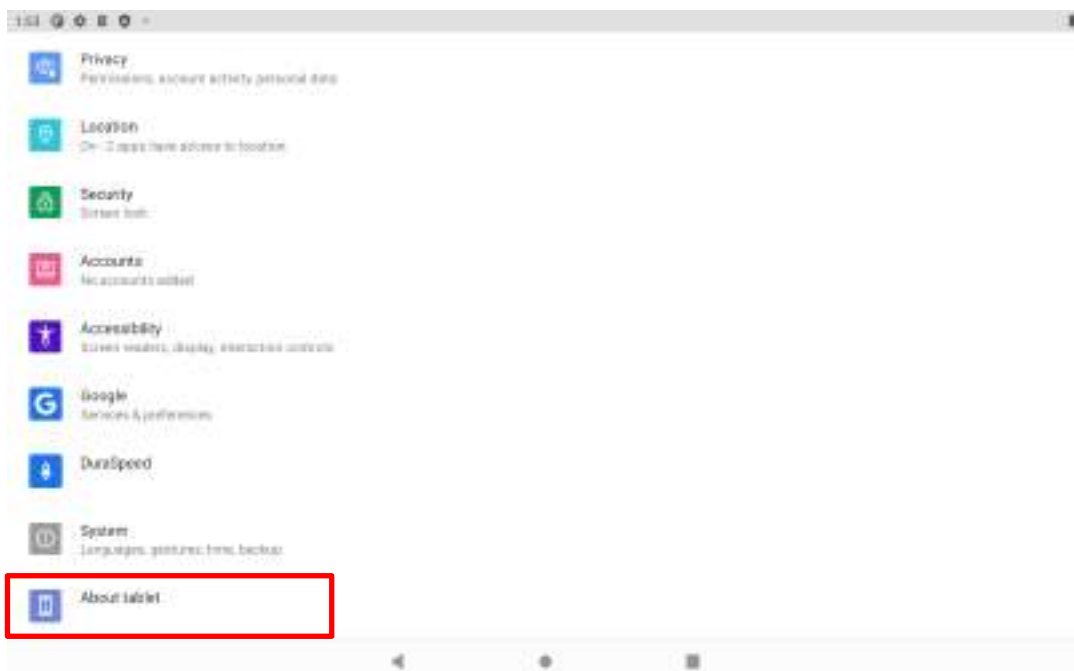



## Chapter 4: Winmate Kiosk Manager

The S-Series HMI comes with preinstalled APP named Winmate® Kiosk Manager (WKM). This application lets the device manager to lock the launcher. When the launcher is locked the user can only use one application assigned by the device manager.


### 4.1 Lock Applications Launcher

  1. In the main APPS window, select the **Kiosk Manager** . Select **Kiosk Manager** to start your settings. Go to **Password Manager** and set your own password for this APP. The default password is “password”.

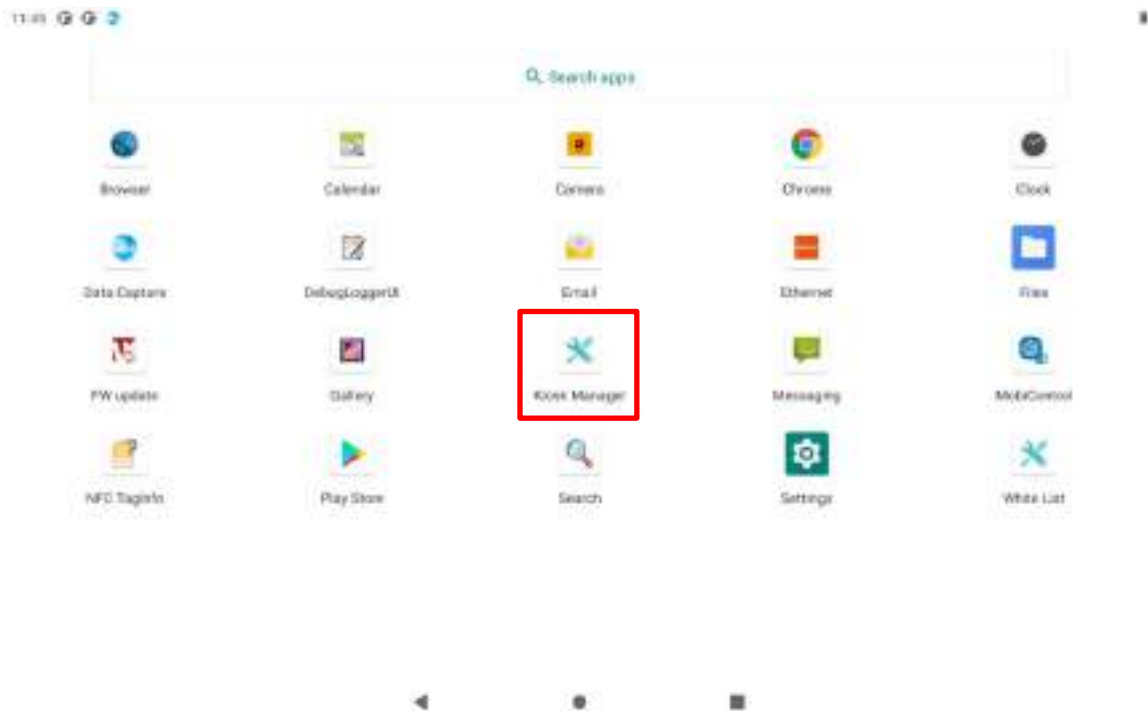

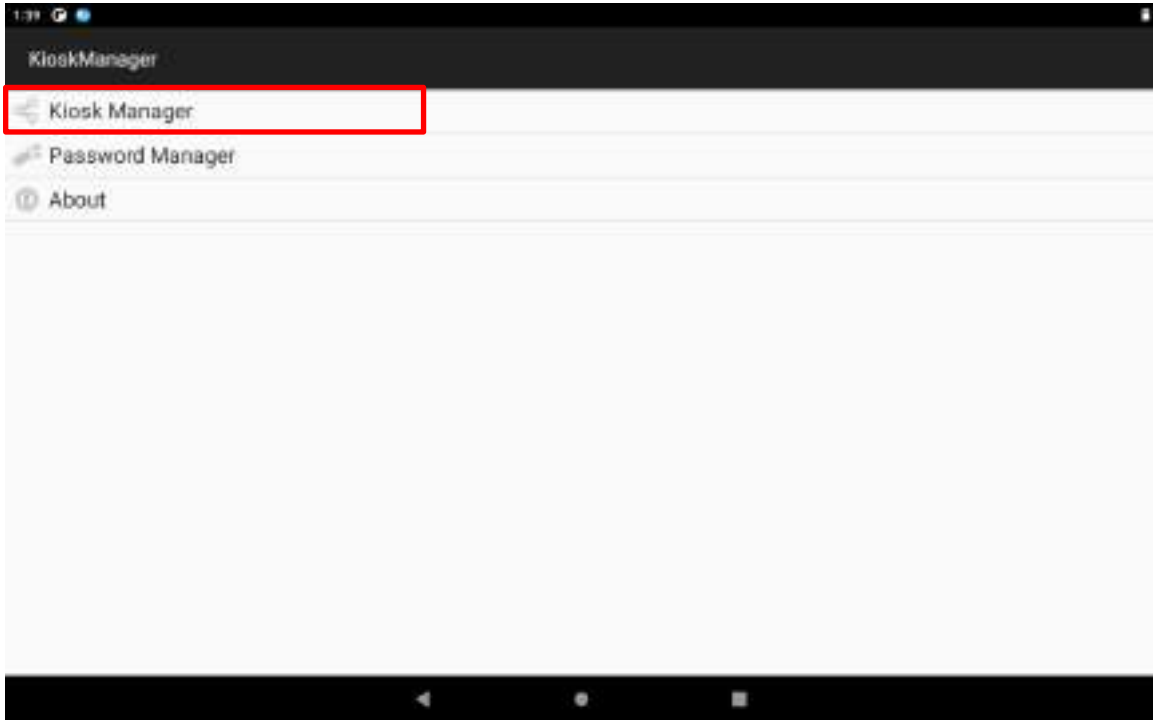


 2. Press **Clear and Reset Default Home**.

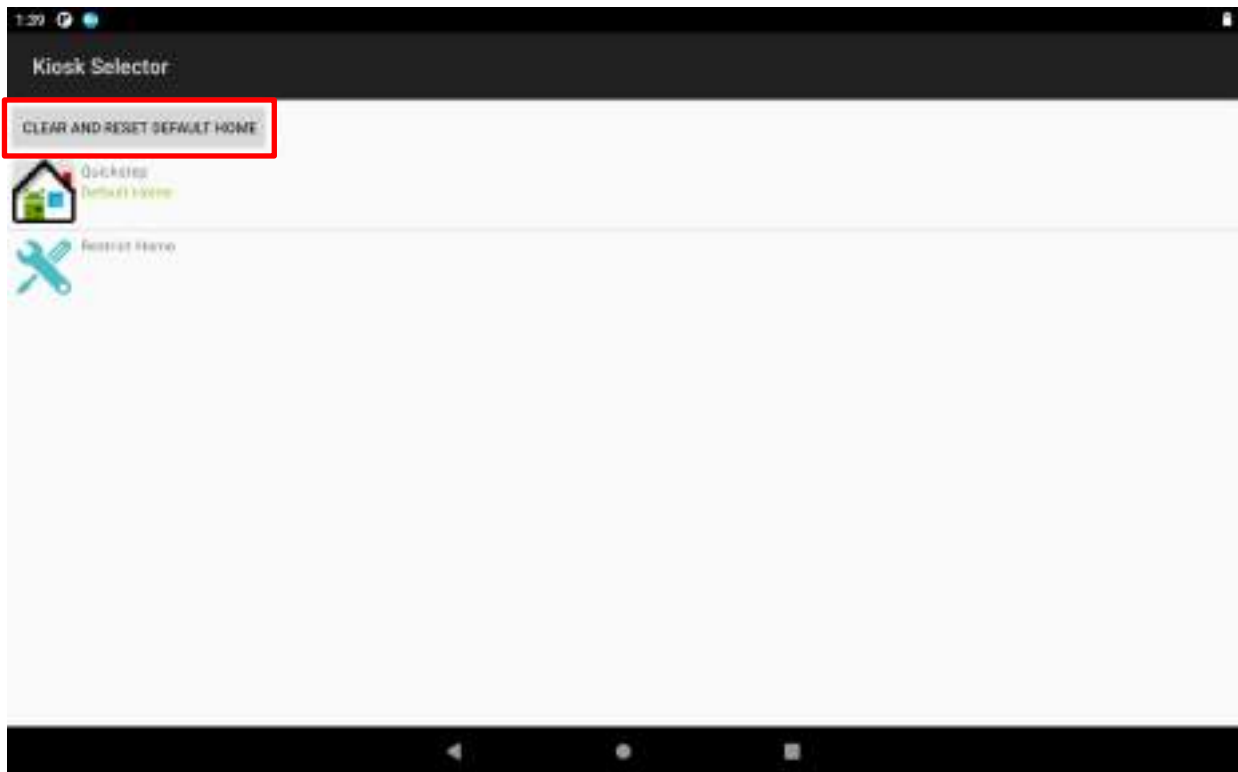




 
3. Select **Restrict Home** then **Always**. The system will automatically be locked on selected Apps.

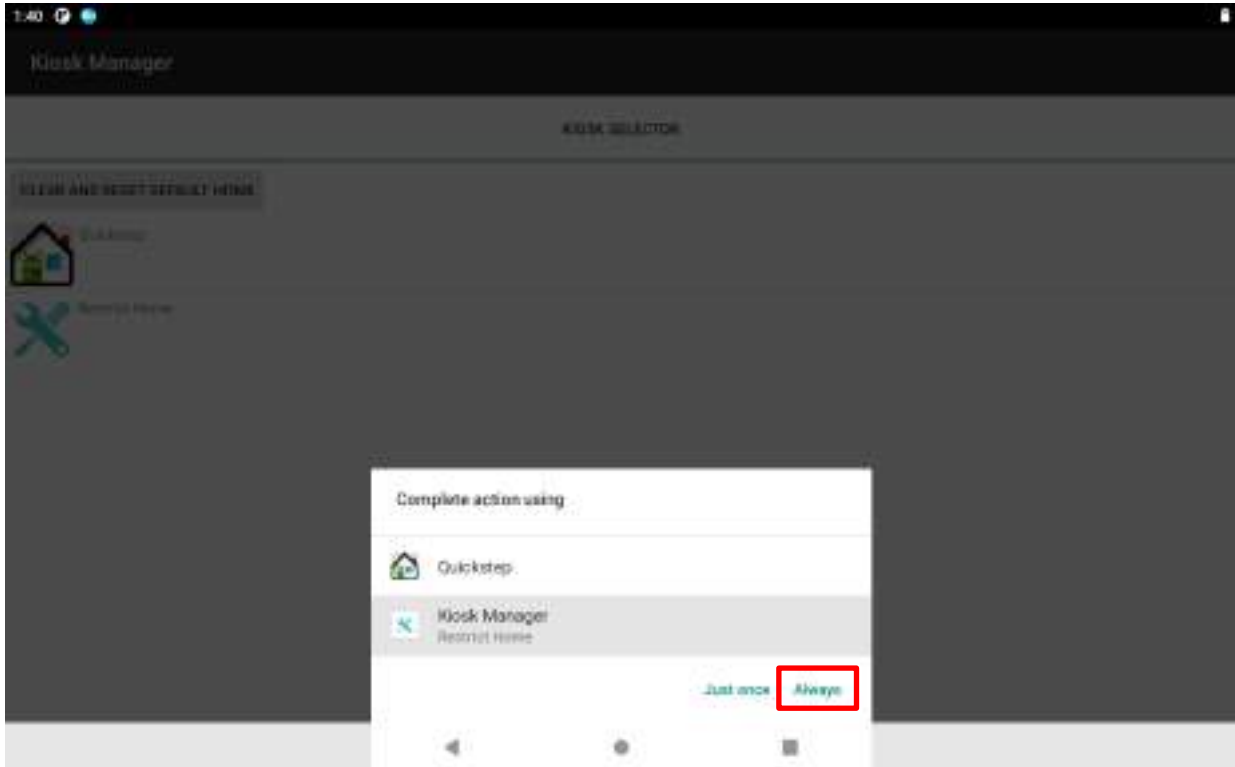

 
4. Click the gear icon on the upper right corner. Then choose **Change UI**.


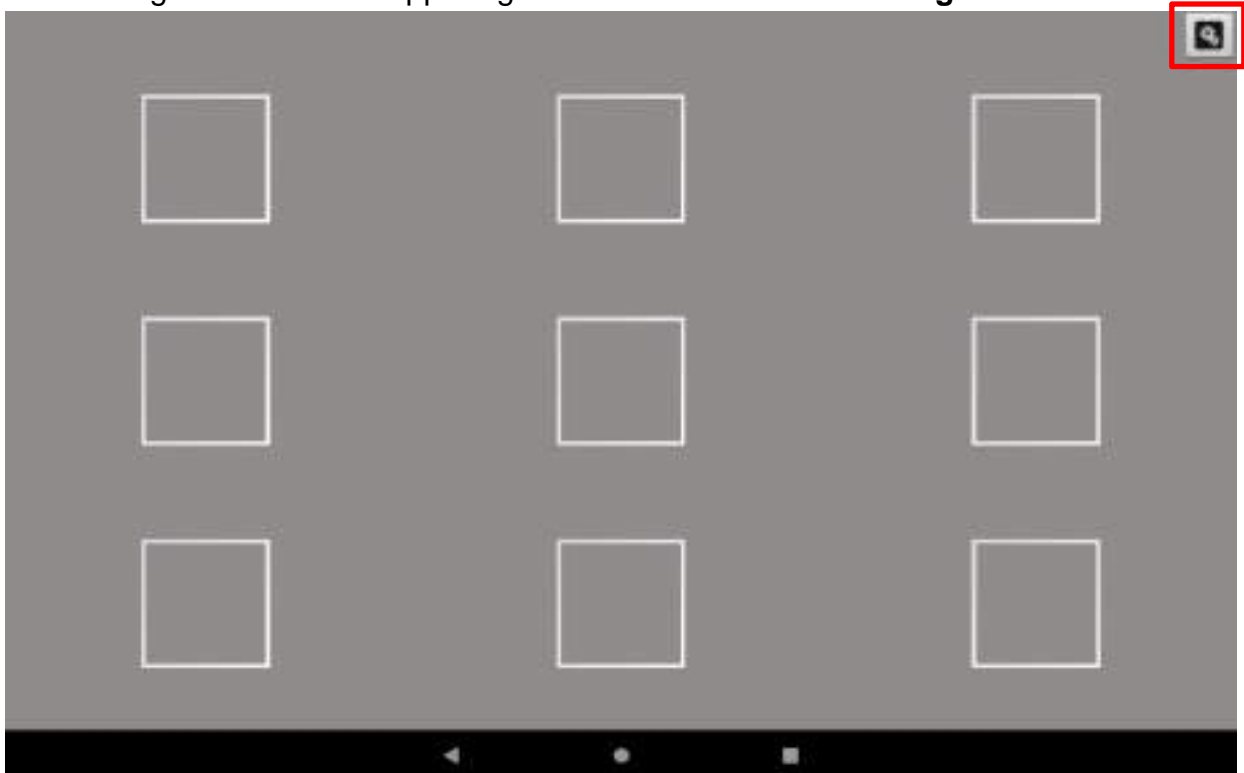


 - 5. Input the default password: **password**

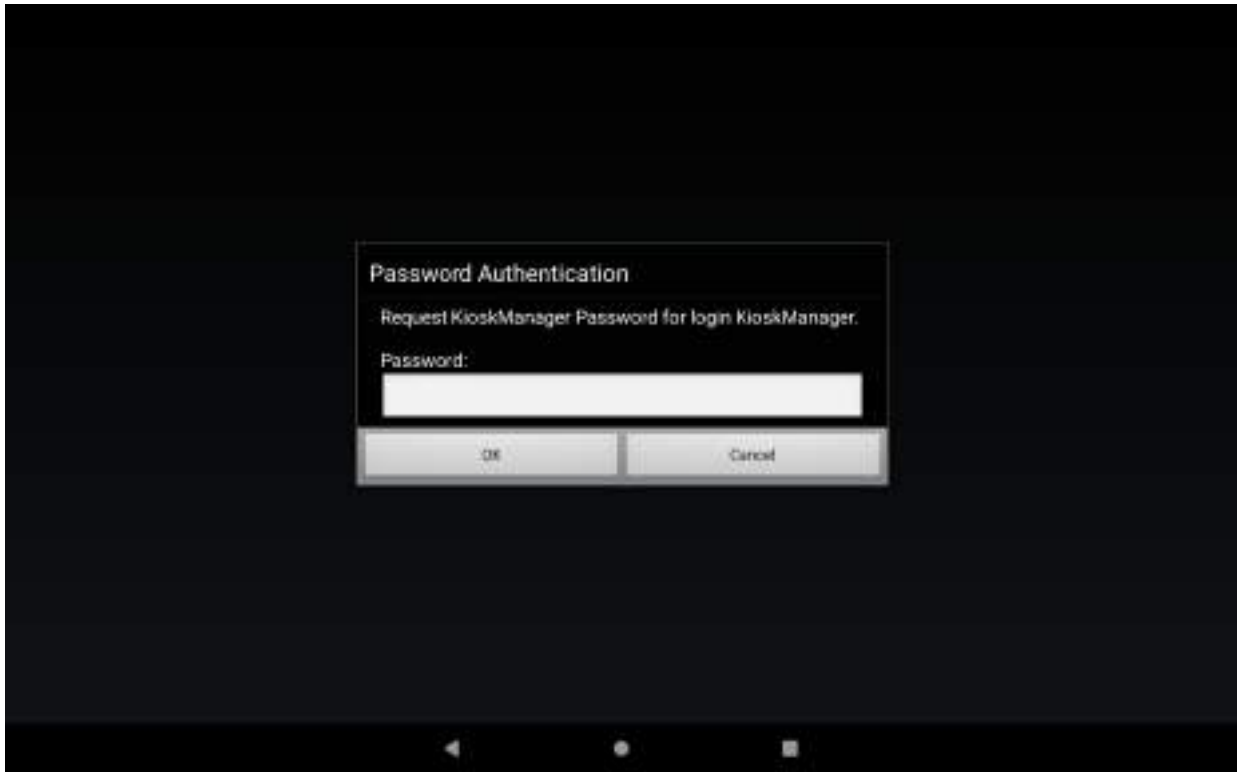


   - 6. Choose the layout UI, then press the empty slot to add/remove apps.

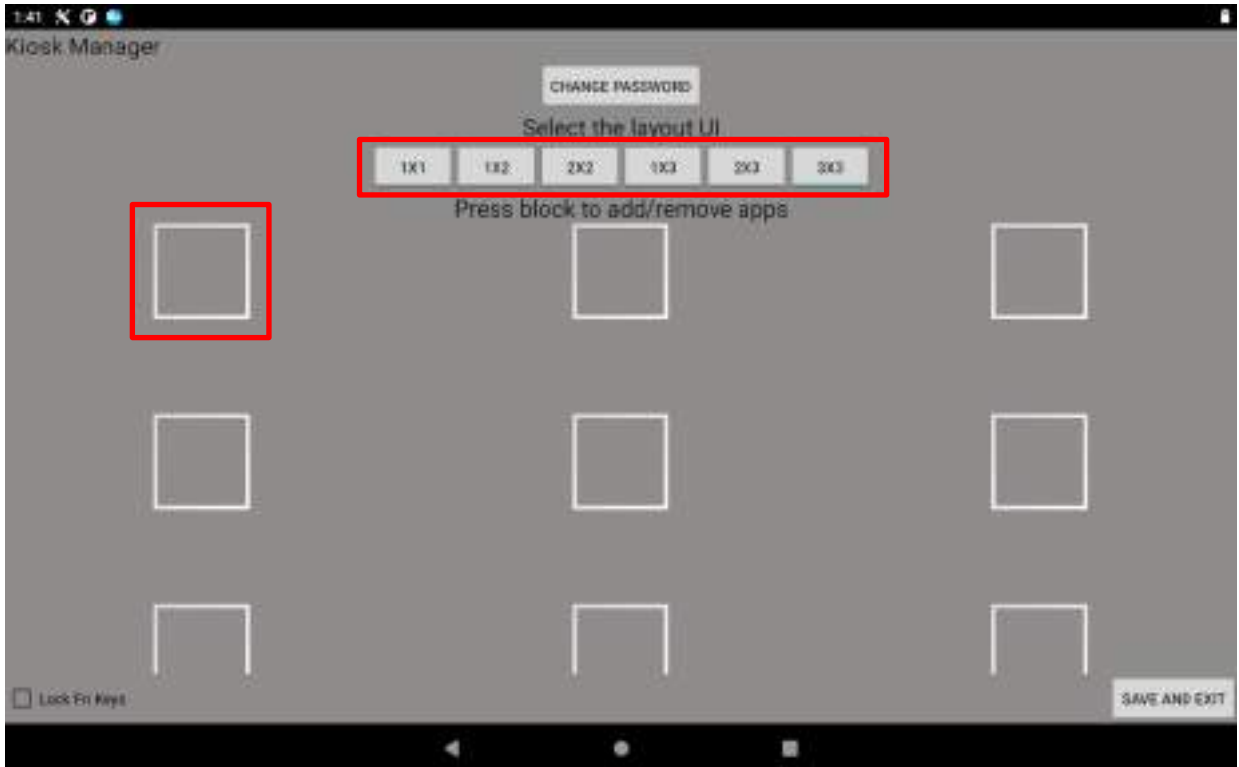

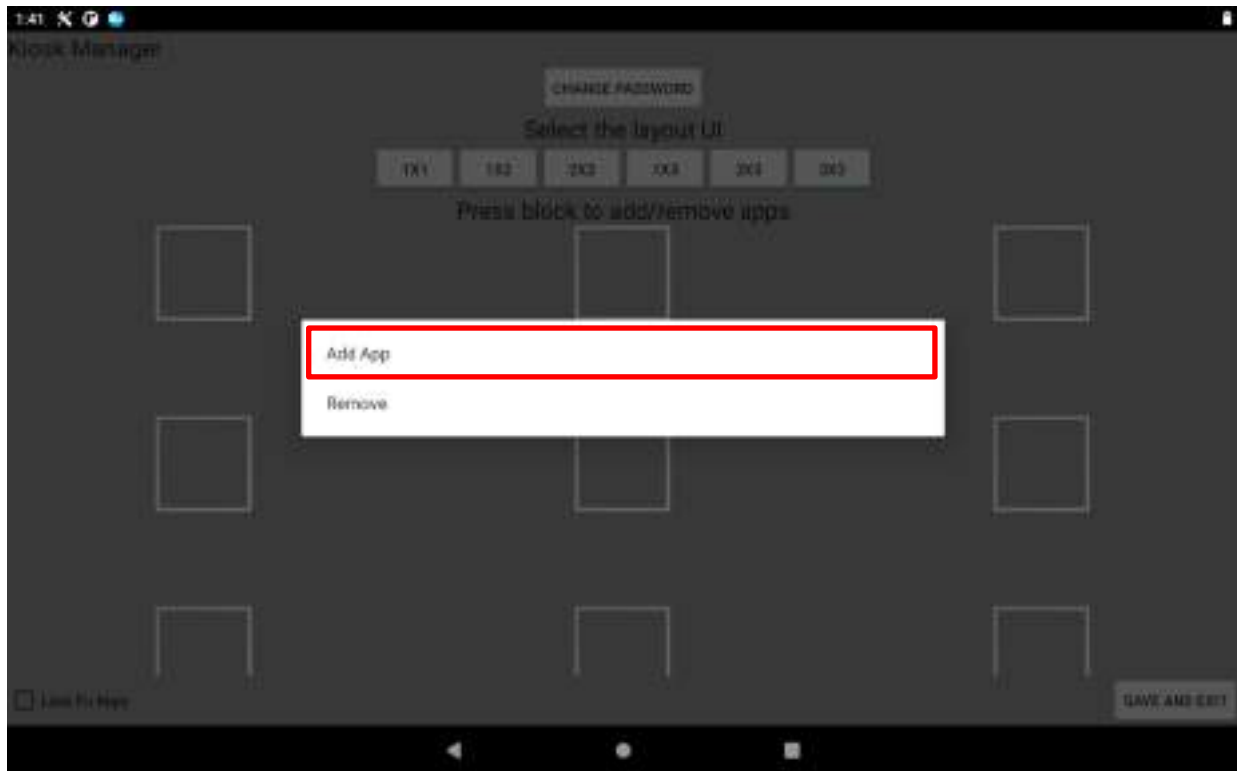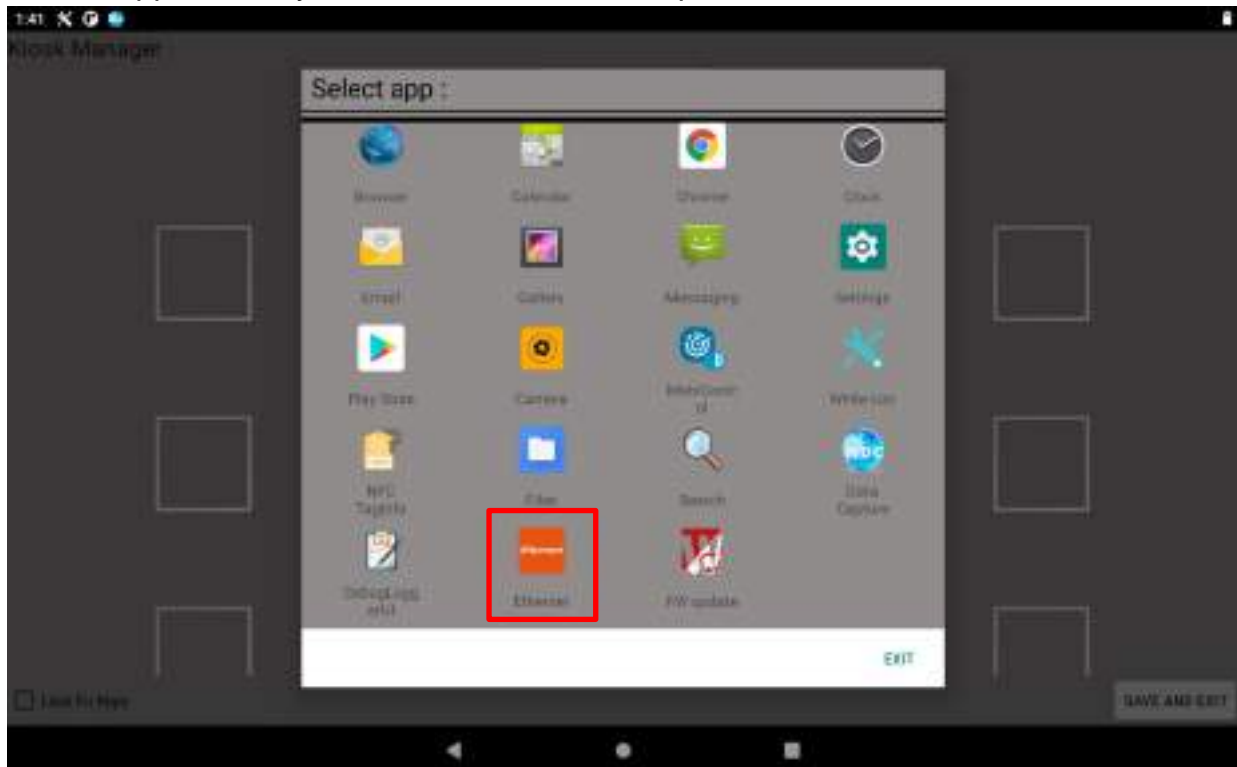
7. Click **Add App**.8. Select applications you want to lock. For example, **Ethernet**.

 9. Click **SAVE AND EXIT**.

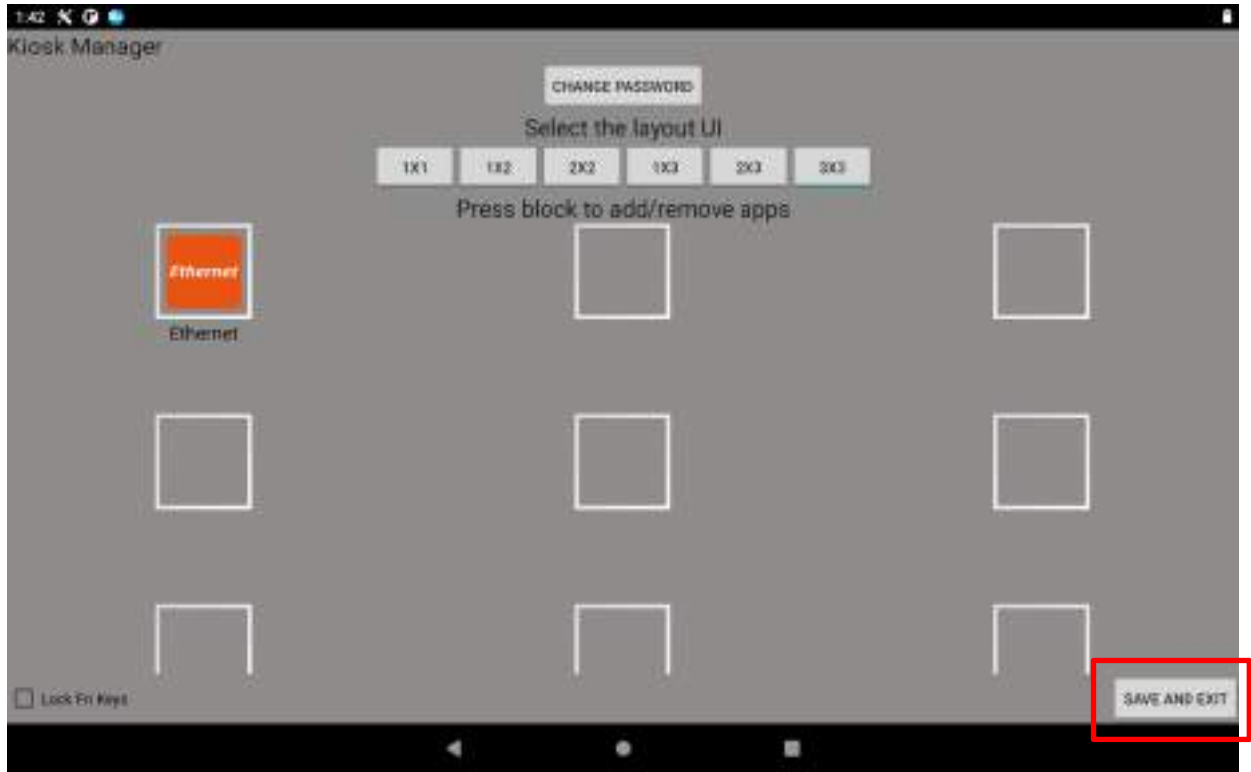


## 4.2 Change Password

 
1. In the UI edit page, select the **CHANGE PASSWORD**.

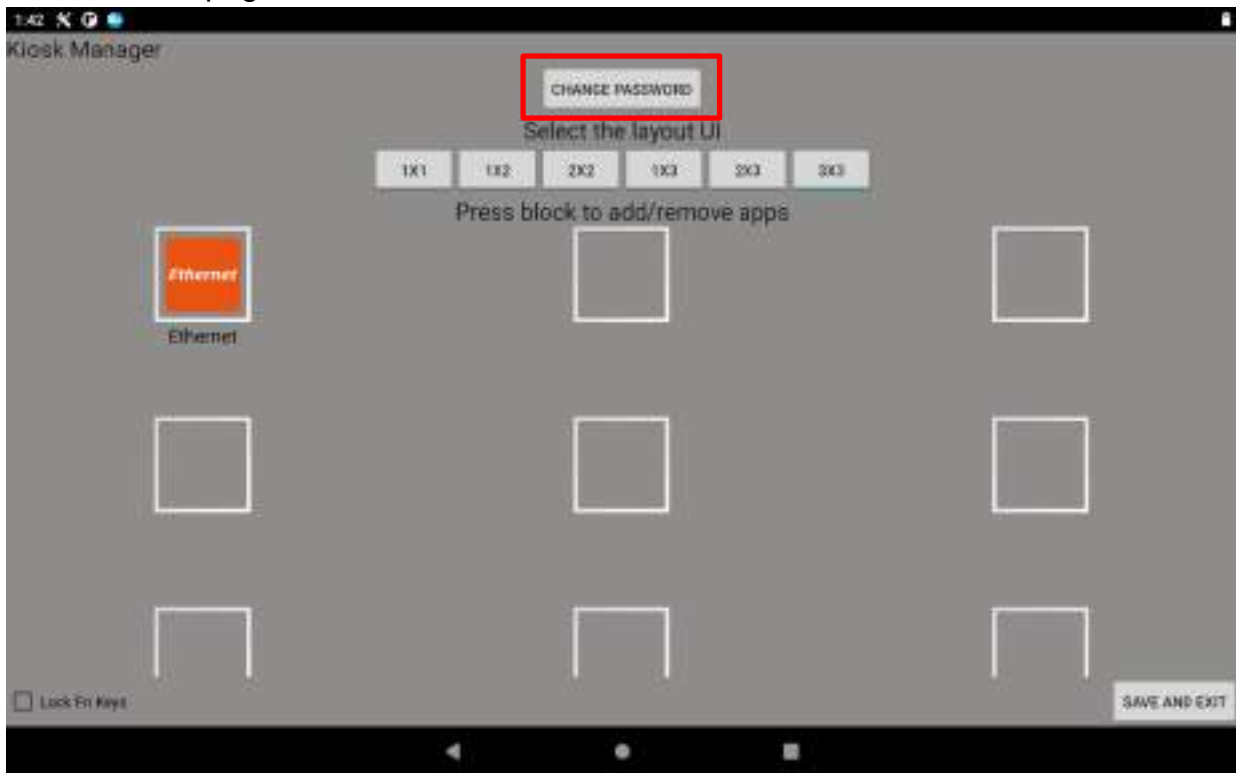

 Or, in the main Apps window, select the **Kiosk Manager** . Select **Password Manager** to start your settings.

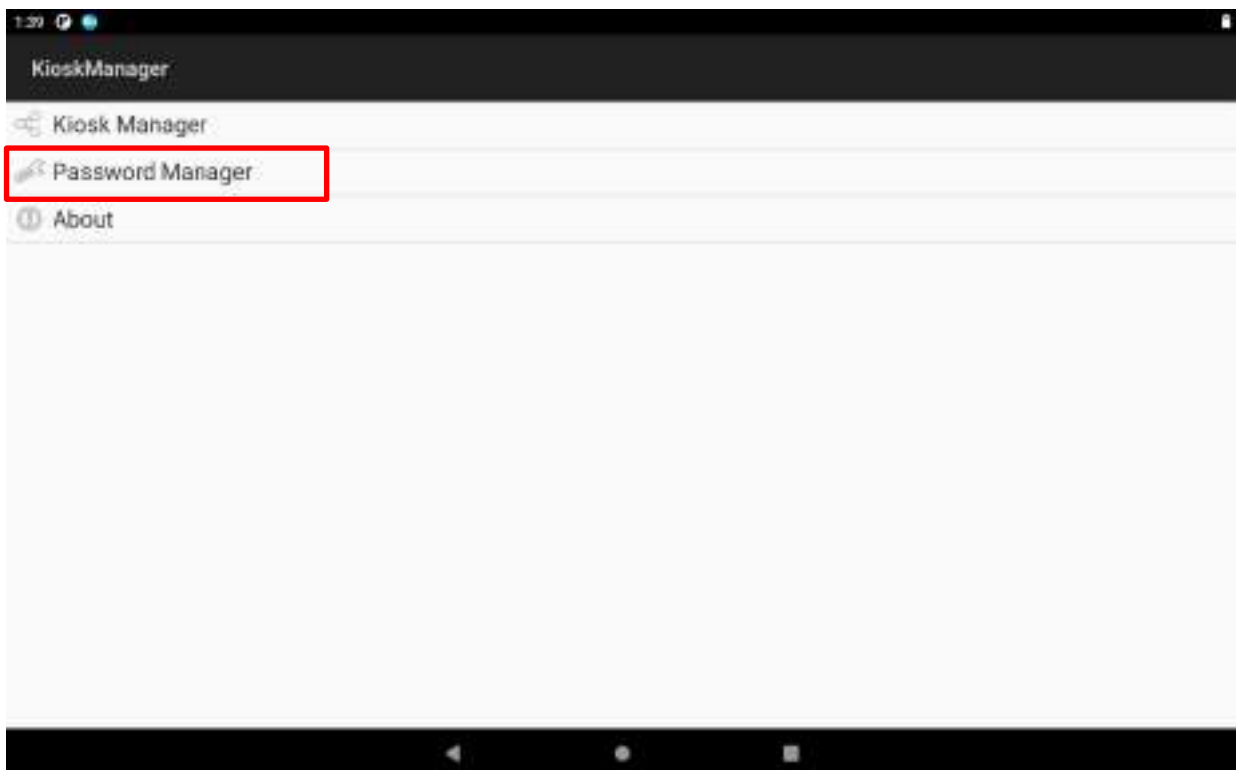


 
- The default password is “**password**”. Enter a new password in **New Password** field, and then tap **Change Password**.

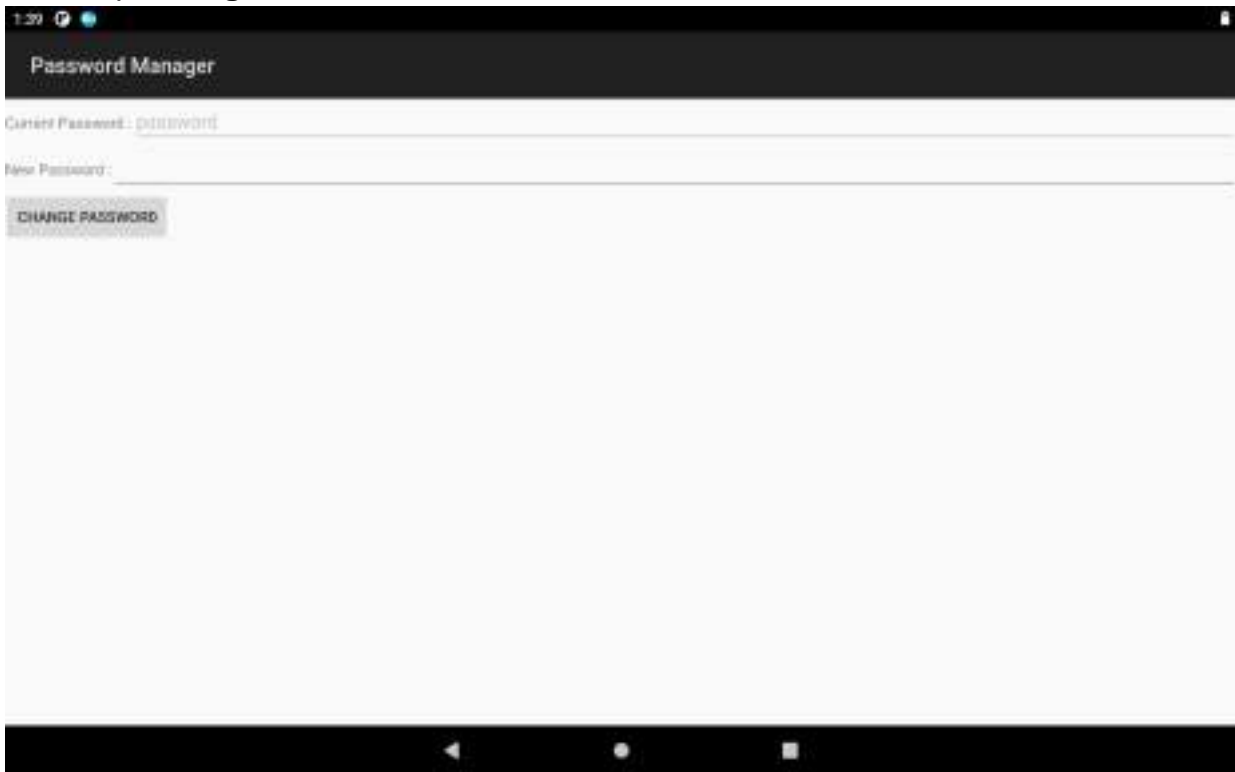


## 4.3 Unlock Applications Launcher

  - Slide down the top bar and press **Kiosk Manager** icon, click **Exit** and please enter the password to login (the default password is **password**). Press **Ok**.

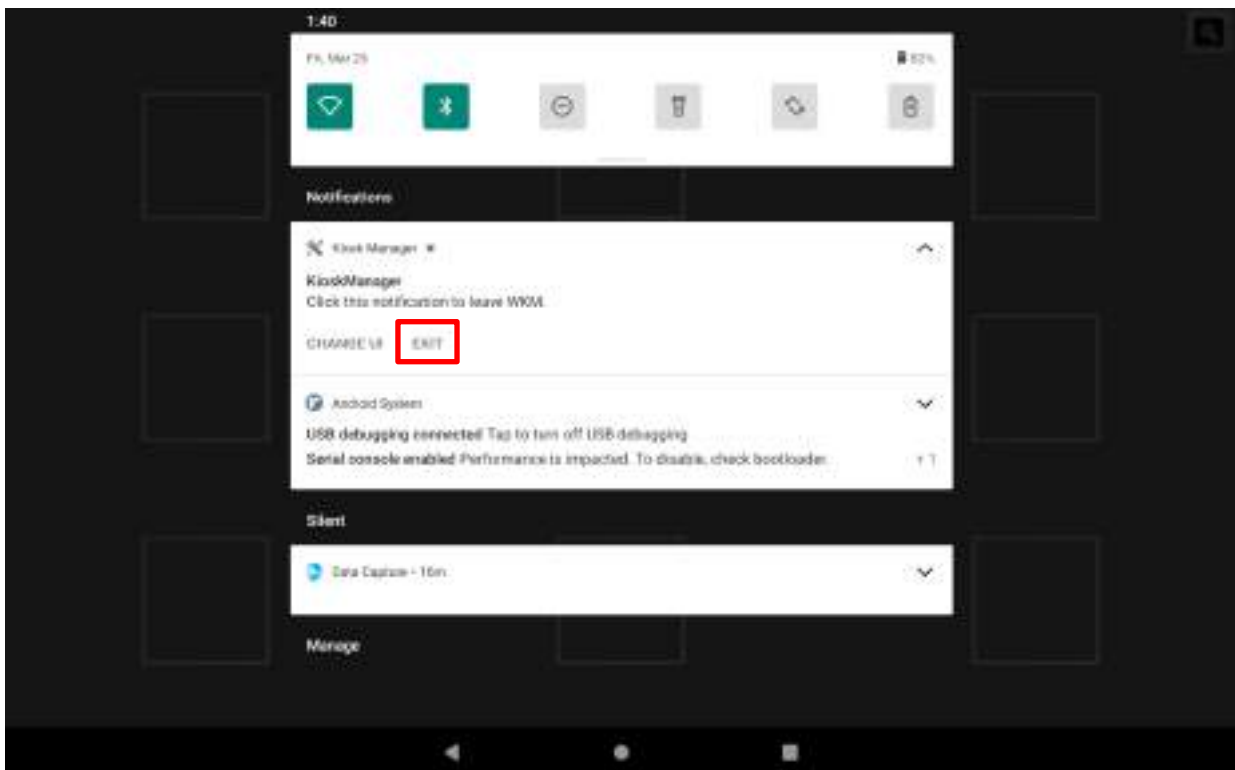


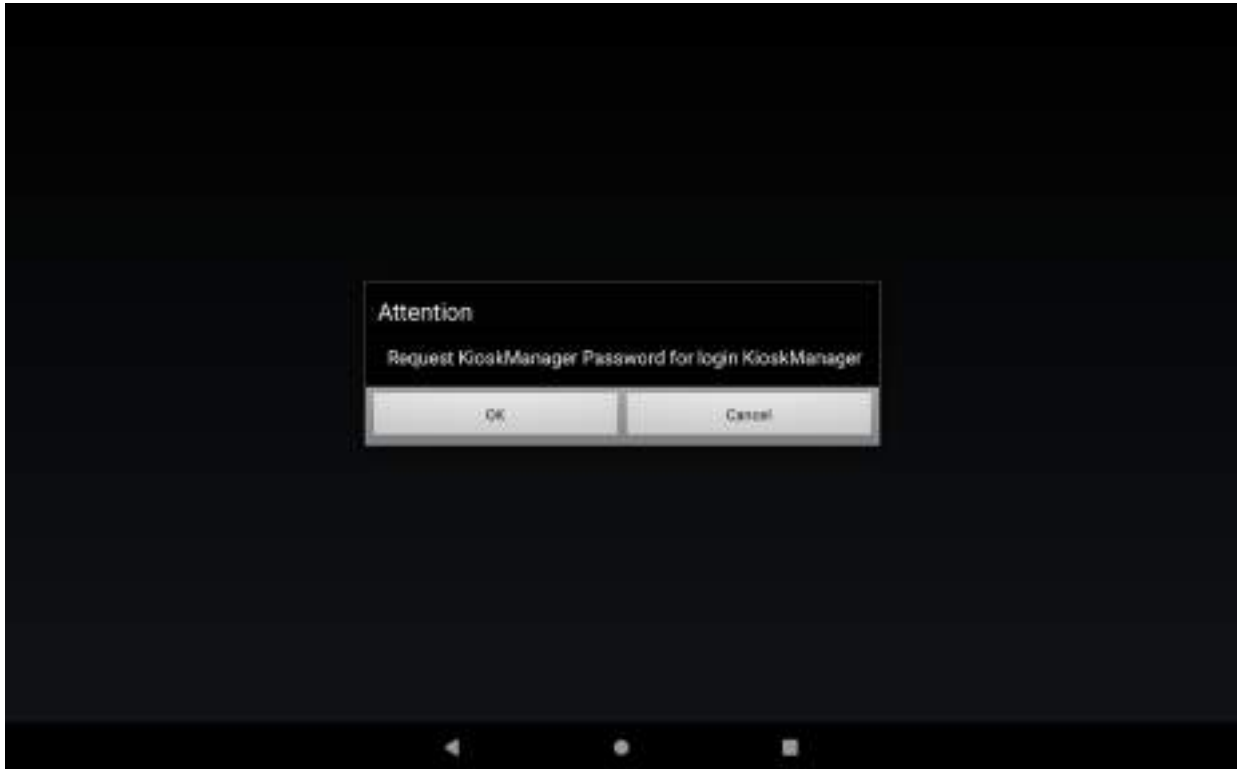

 
2. Click **Clear and Reset Default Home**.

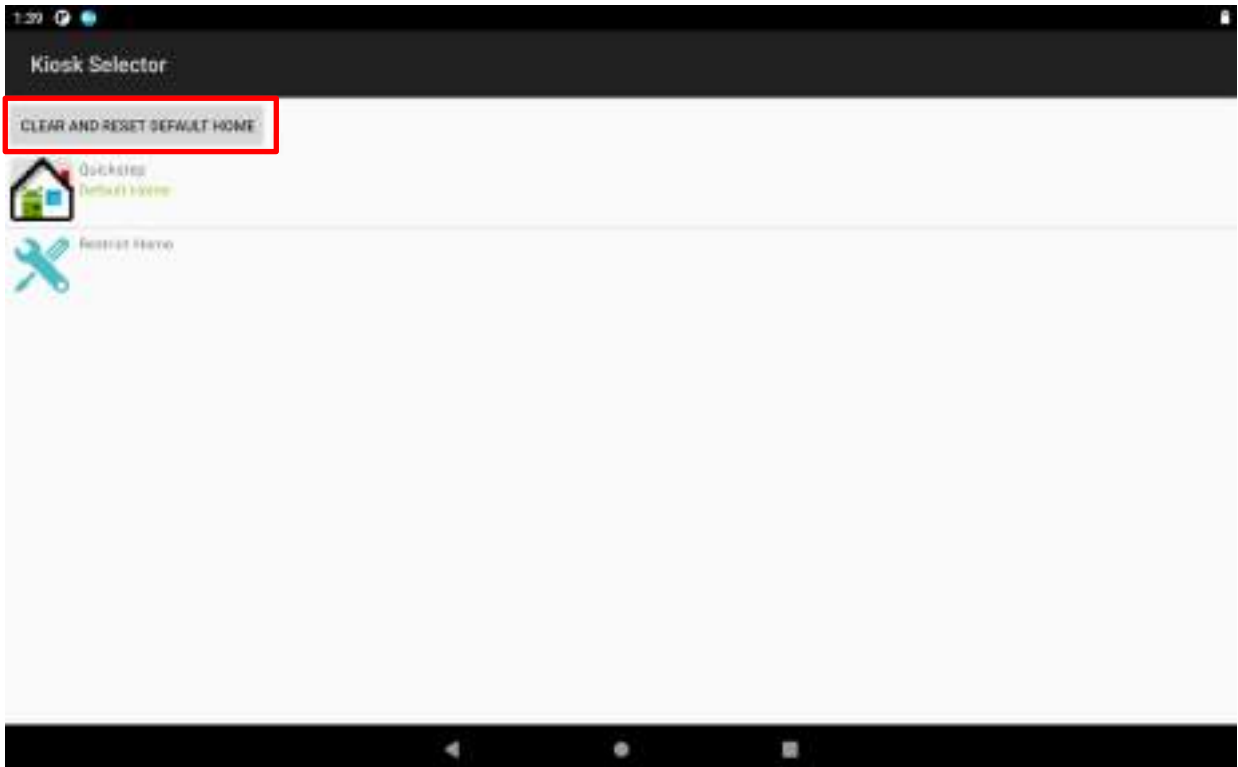

 3. Select **Quickstep**, and press **ALWAYS**.

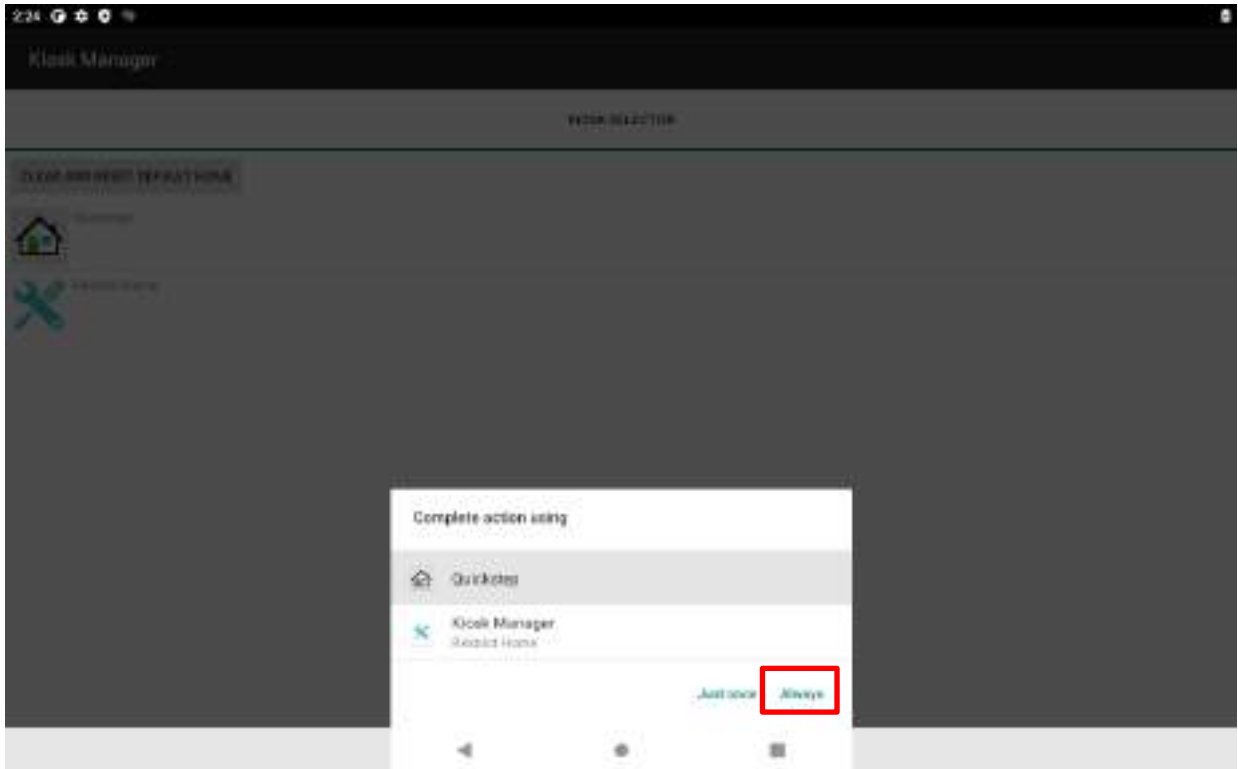

 4. Restart the system and you will go back to the normal Launcher.

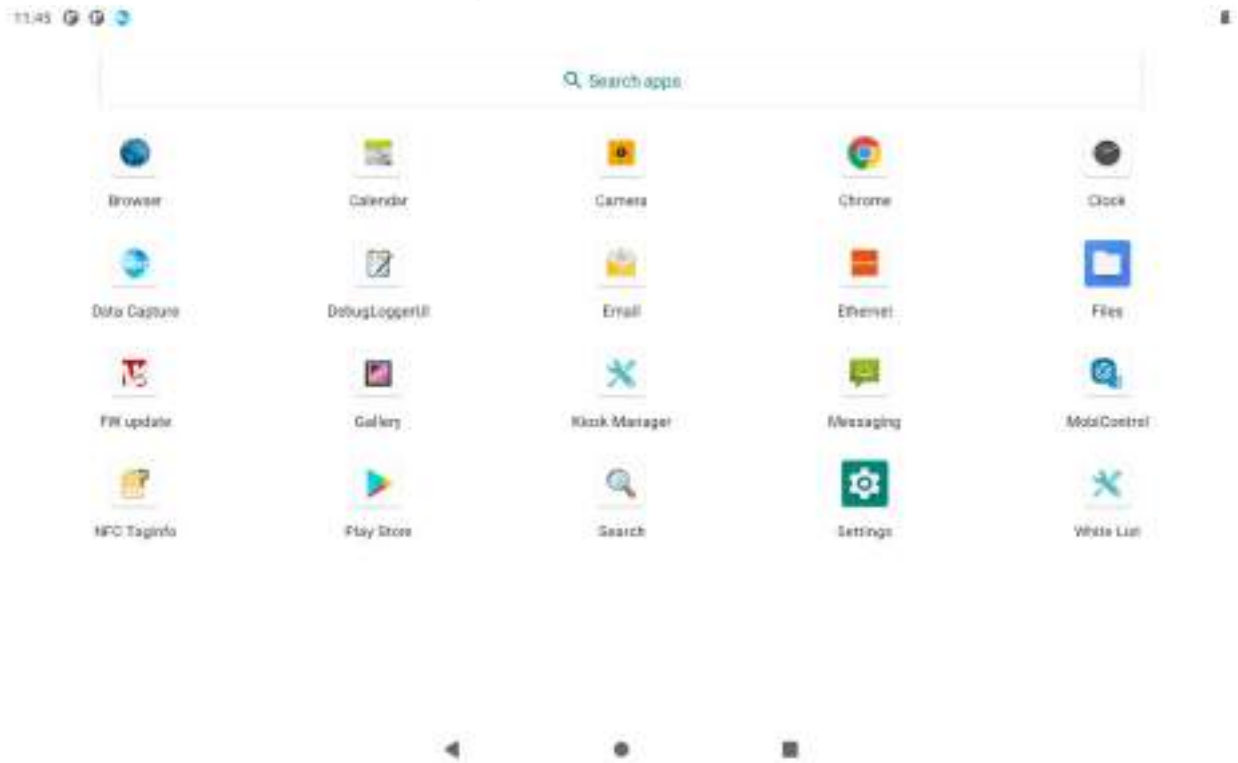






# Chapter 5: Networks and Wireless Devices

This chapter explains how to connect the S-Series HMI to network and peripheral devices.


## 5.1 Connecting to Wi-Fi Networks (Optional)

### 5.1.1 Turning on Wi-Fi and Connecting to Wi-Fi Networks

 
1. Swipe from the bottom of the main desktop, tap **Settings** .
2. Tap **Network & Internet**  and then toggle the on/off switch on the top-right hand side to turn on the **Wi-Fi**.

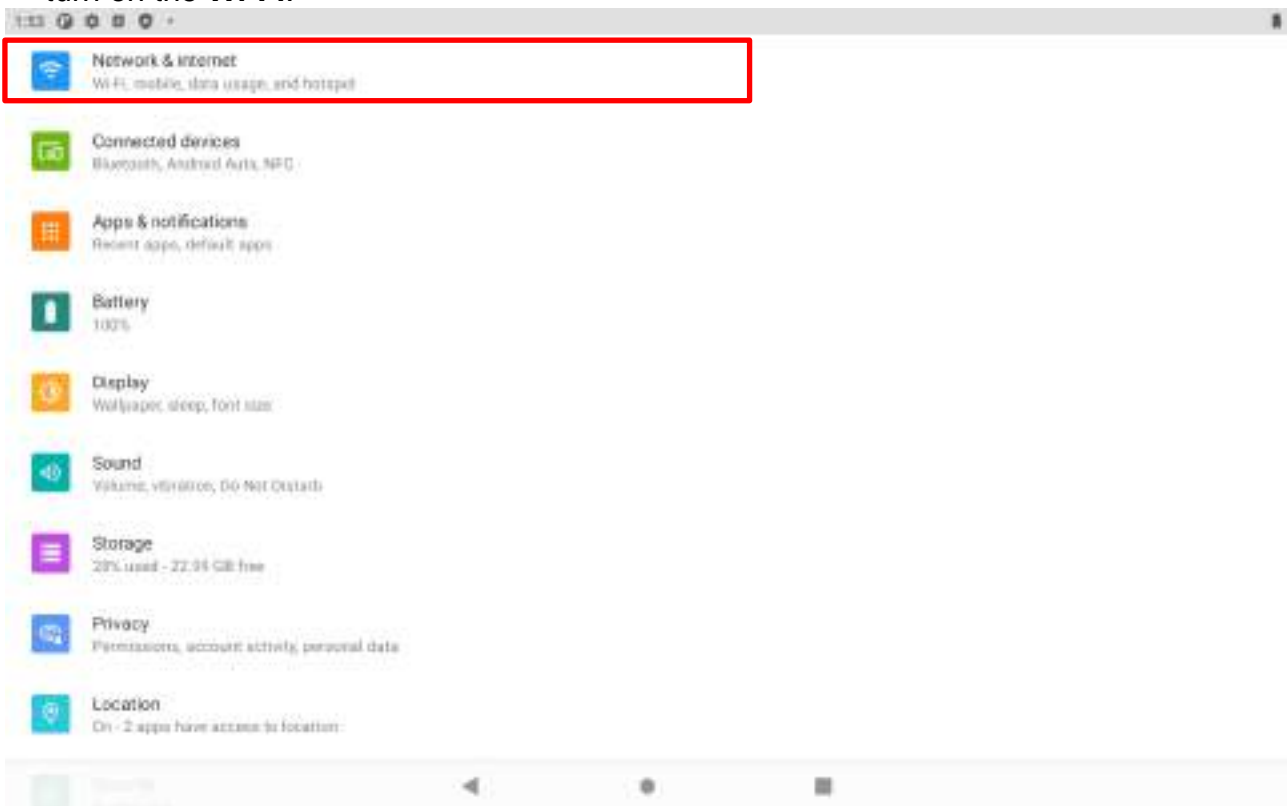

 
3. Tap **Wi-Fi** ▾. The device scans for available Wi-Fi networks and displays the list of it. Secured networks are indicated with a lock icon. If the HMI finds a network that you have connected previously, it connects to it automatically.

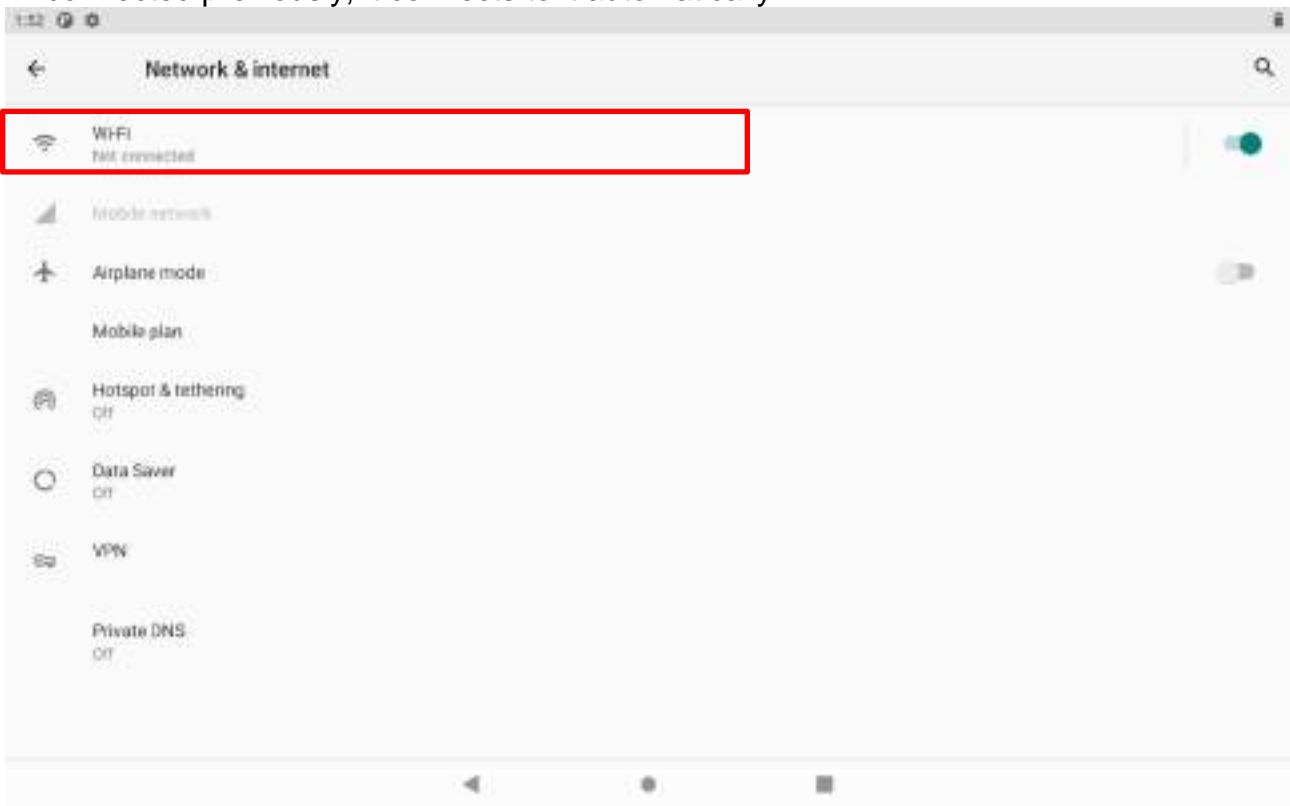

 4. Tap a network to connect to it:
  - If the network is open, you are prompted to confirm that you want to connect it by tapping **Connect**.
  - If the network is secured, users are prompted to enter a password or other credentials.

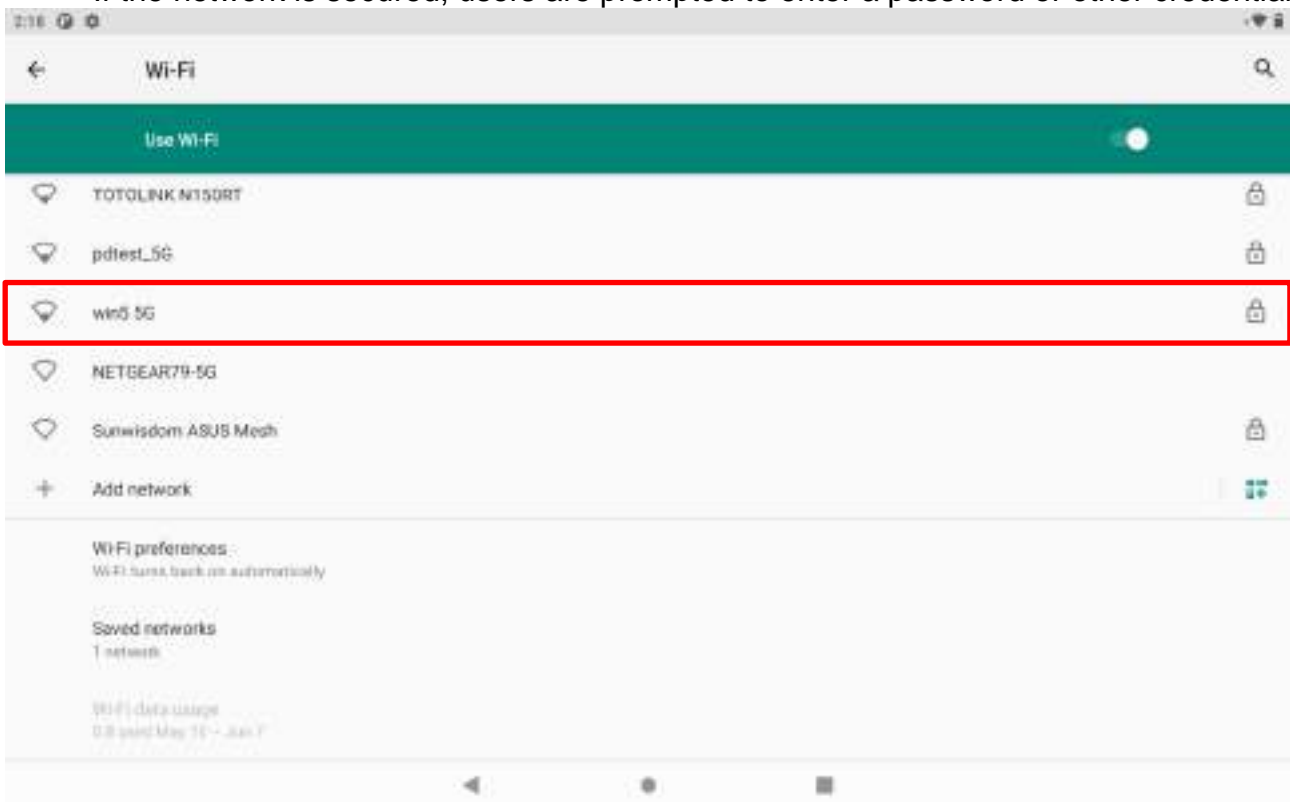



 
- To check the details about the speed, security, address and related settings, tap its name in the Wi-Fi settings screen.

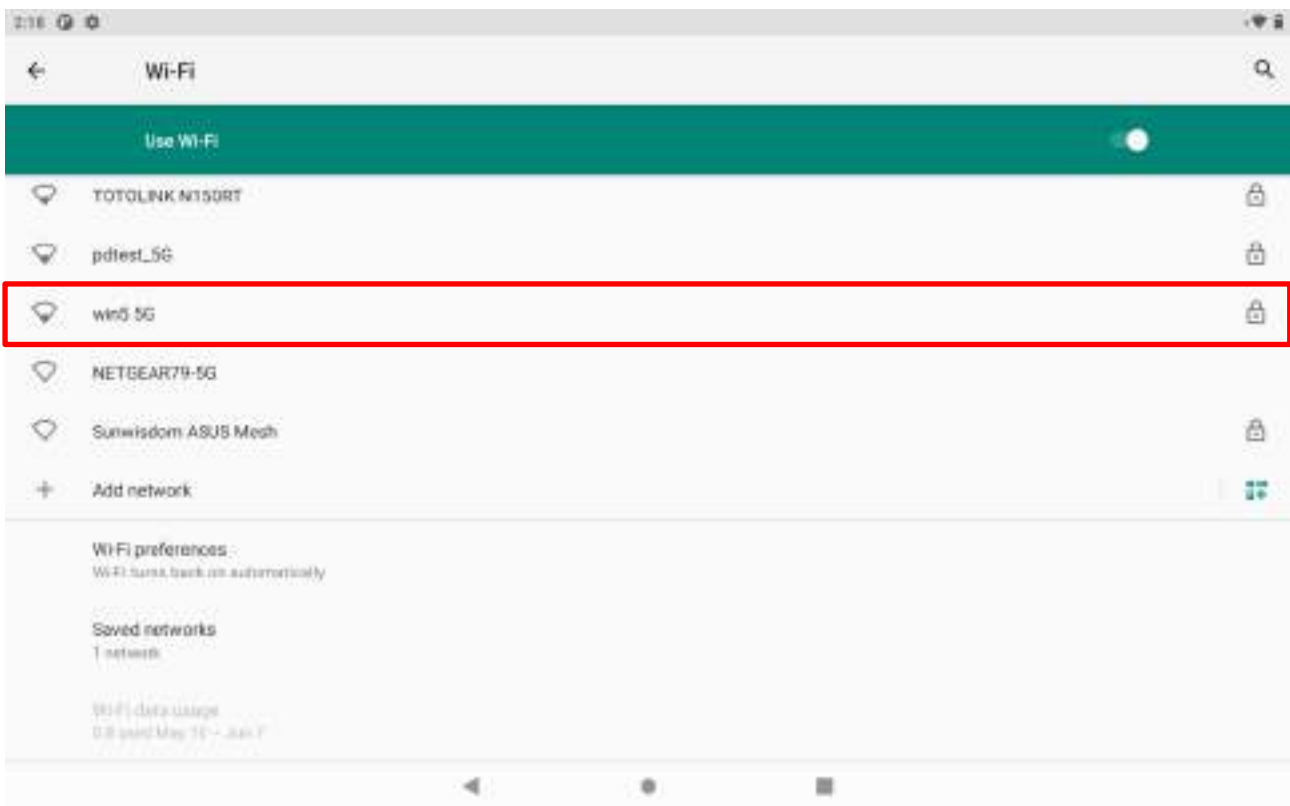

### 5.1.2 Adding Wi-Fi Network

   - Turn on Wi-Fi, in the Wi-Fi settings screen, tap **+ Add network** (at the bottom of the list of discovered networks).

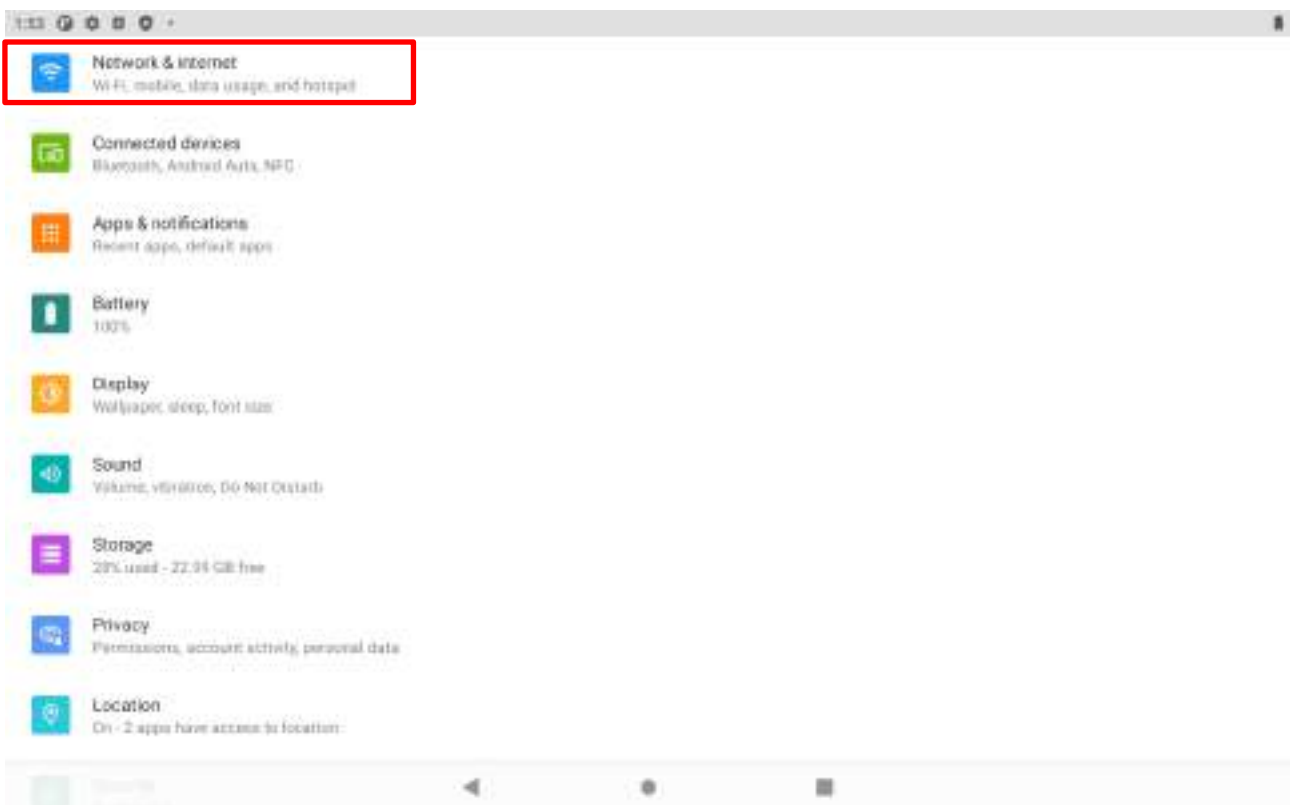

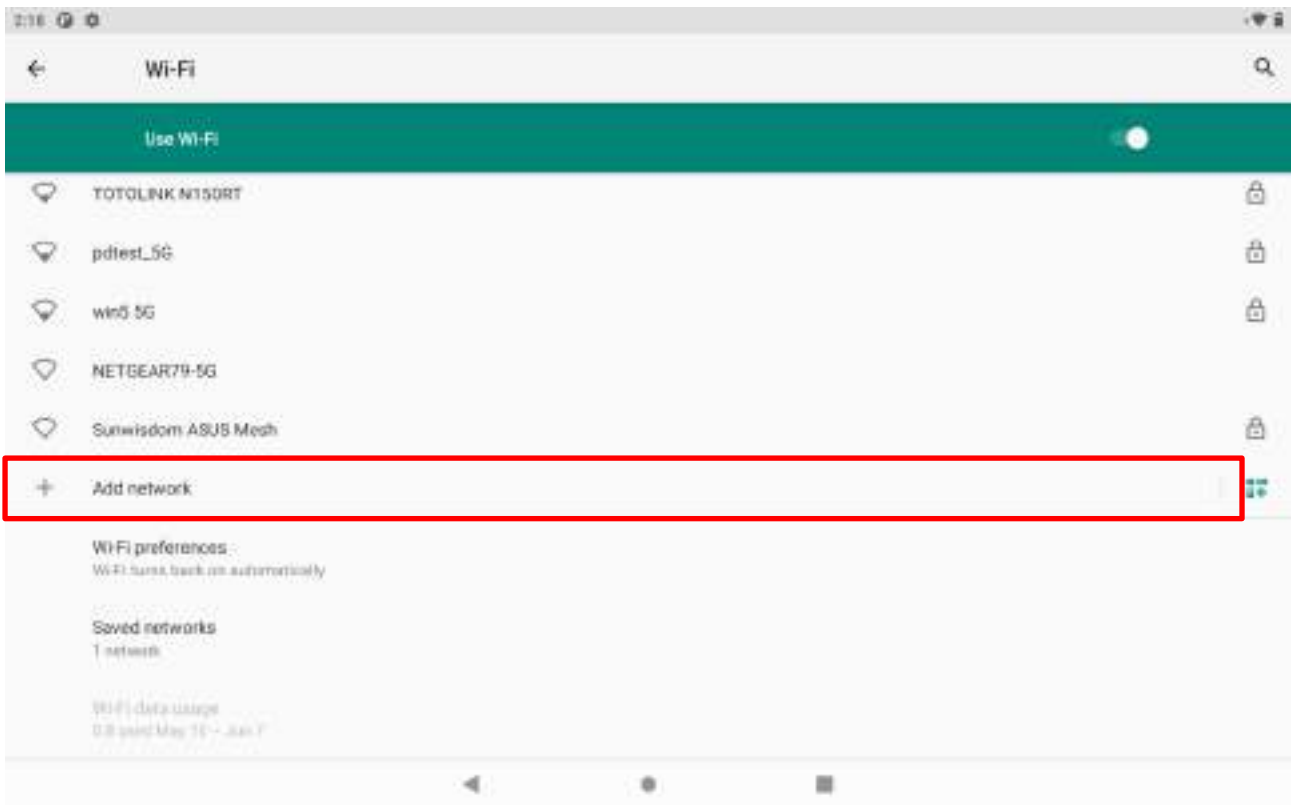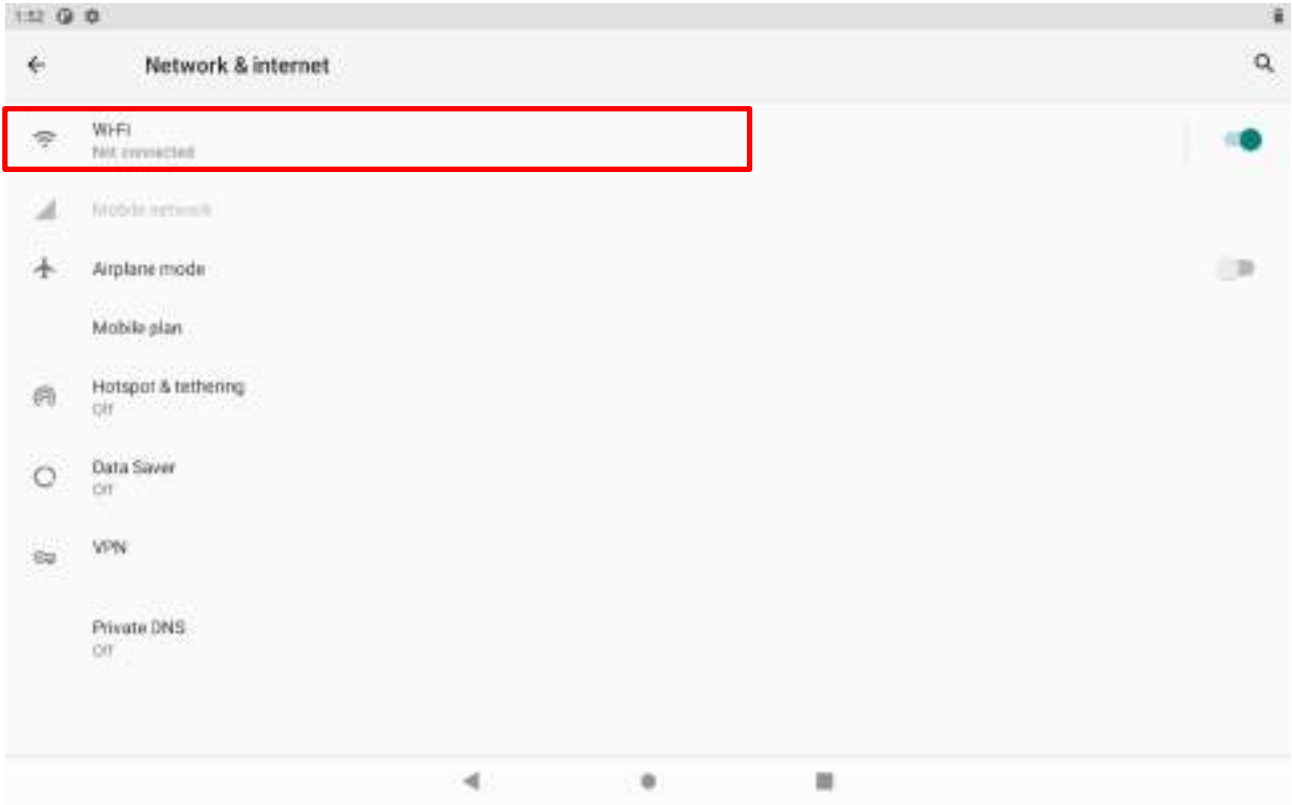



- Input the SSID (name) of the network, if the network is secured, tap the security menu and then tap the type of security deployed on the network.




- Enter any required security credentials.
- Tap **Save**.

## 5.2 Connecting to BT Devices (Optional)


 
### 5.2.1 Turning BT On or Off

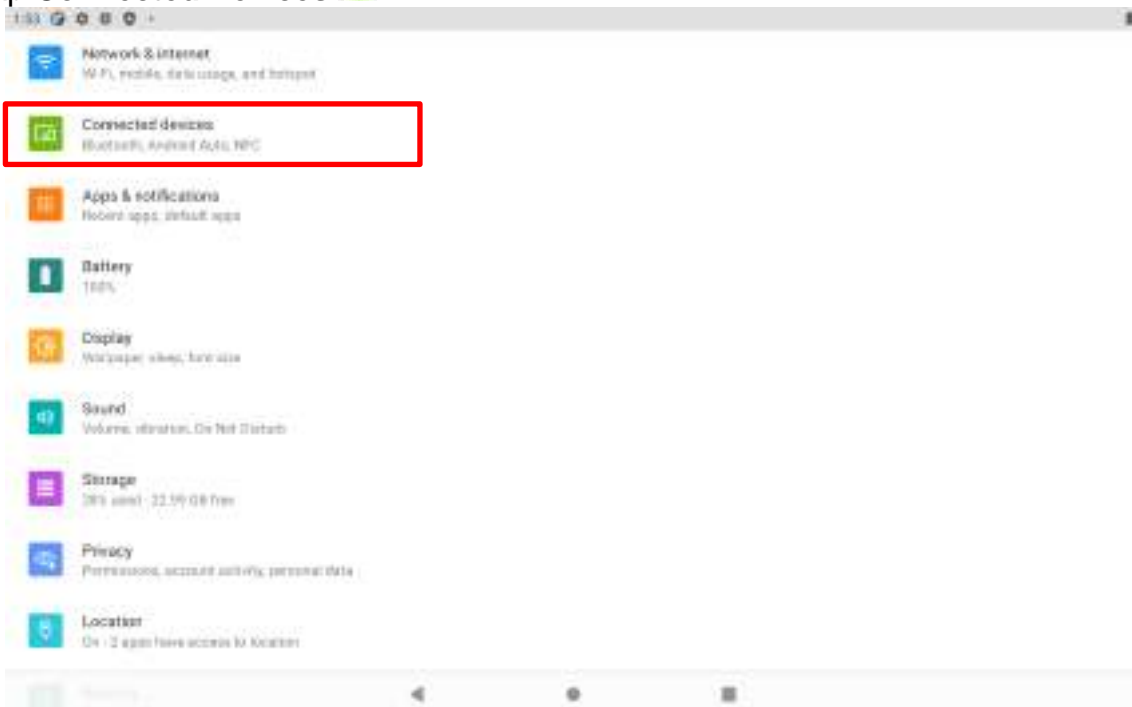
- Swipe from the bottom of the main desktop, tap **Settings** .
- Tap **Connected Devices** .




3. Tap **Connected Devices** preferences, and toggle the on/off switch on the top-right hand side to turn on the BT.

## **5.2.2 Connecting the BT Device**

 1. Swipe from the bottom of the main desktop, tap **Settings** .
2. Tap **Connected Devices** .
3. Tap **Pair new device**. The system will automatically scan and display the IDs of all available BT device in range

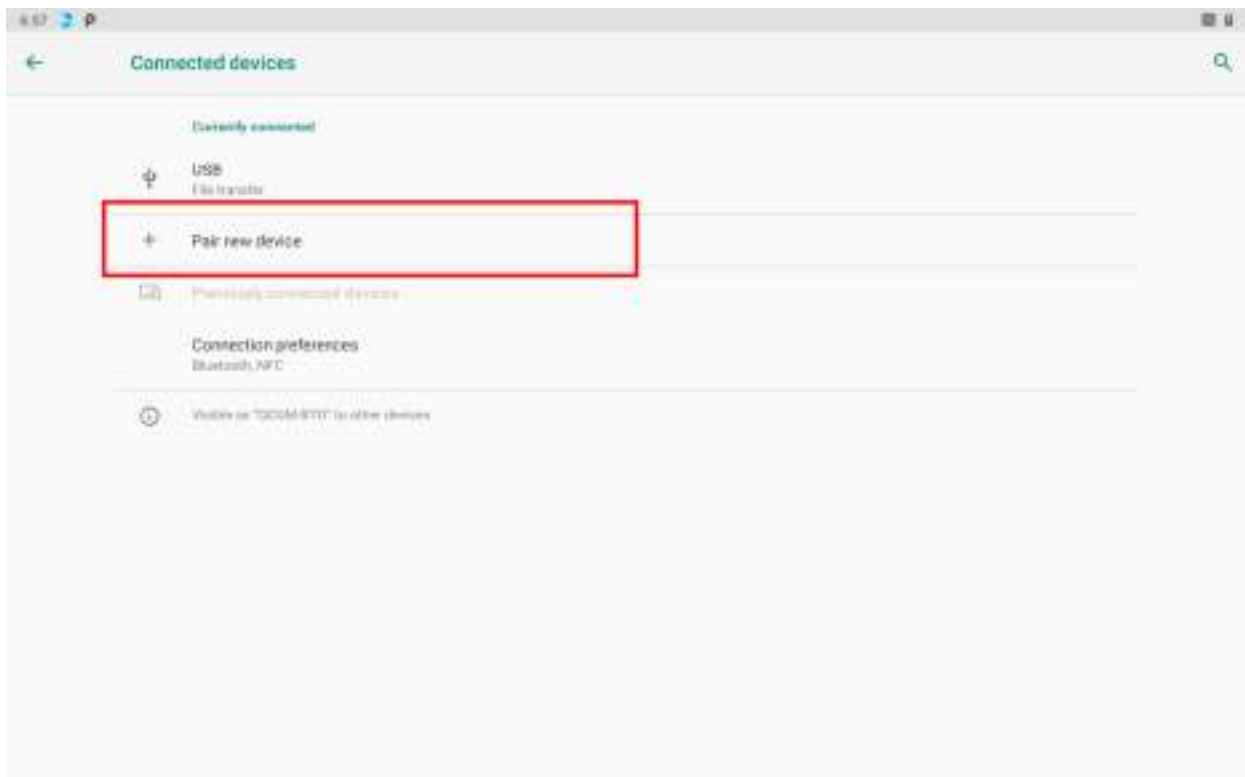


 4. Select the device to be paired.

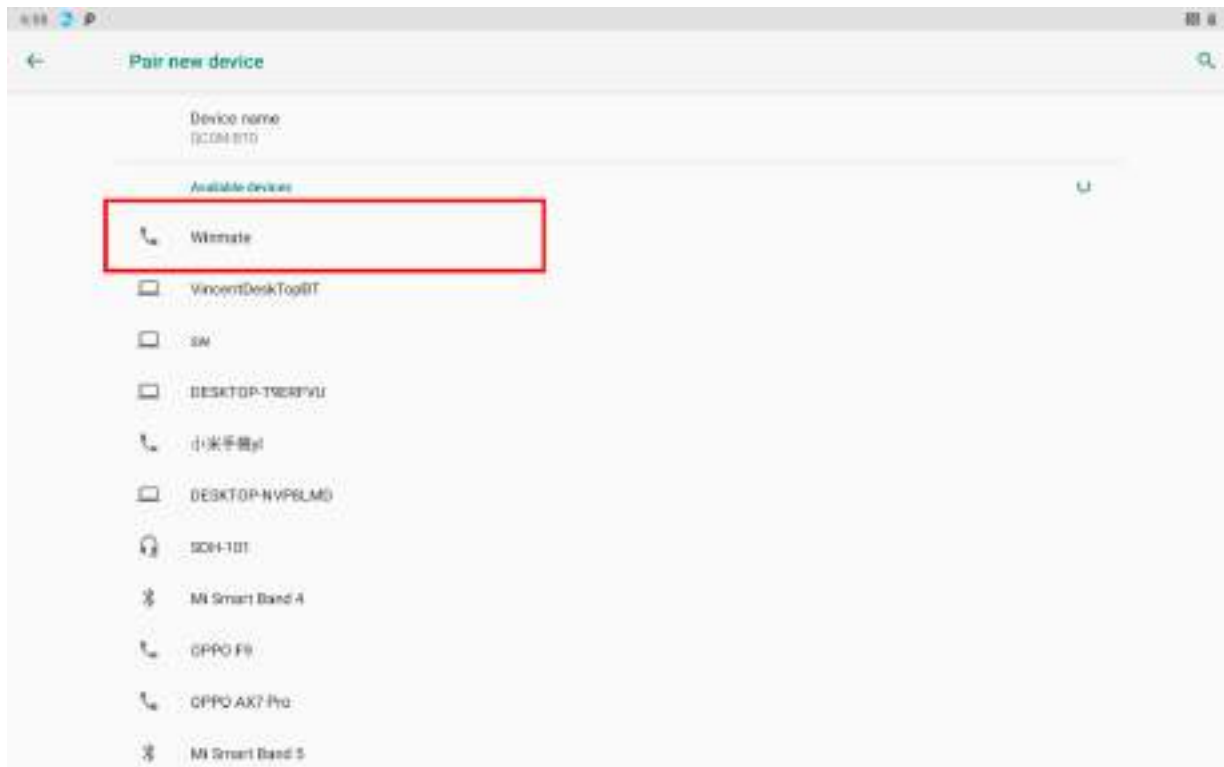


## 5.2.3 Disconnecting BT Device

 1. Tap the device in the **BT** settings screen.

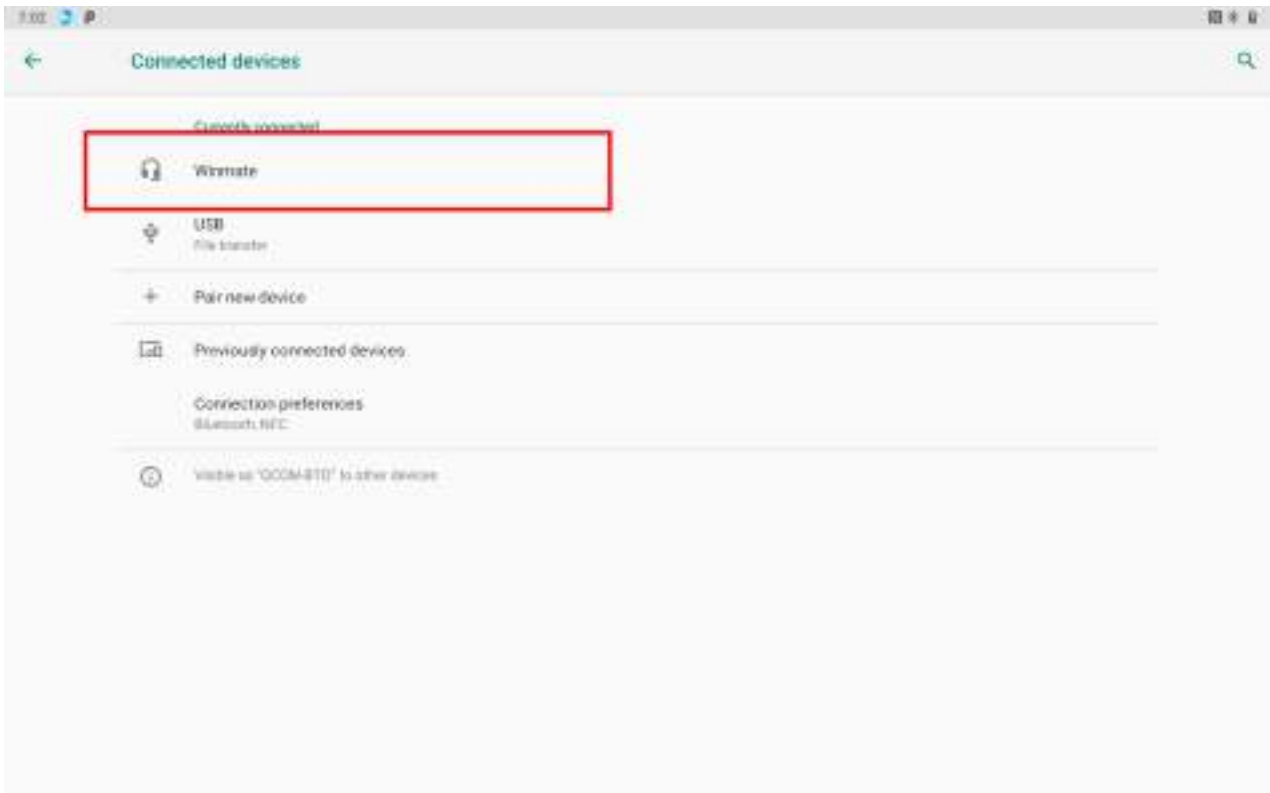

 2. Tap **FORGET** to disconnect.

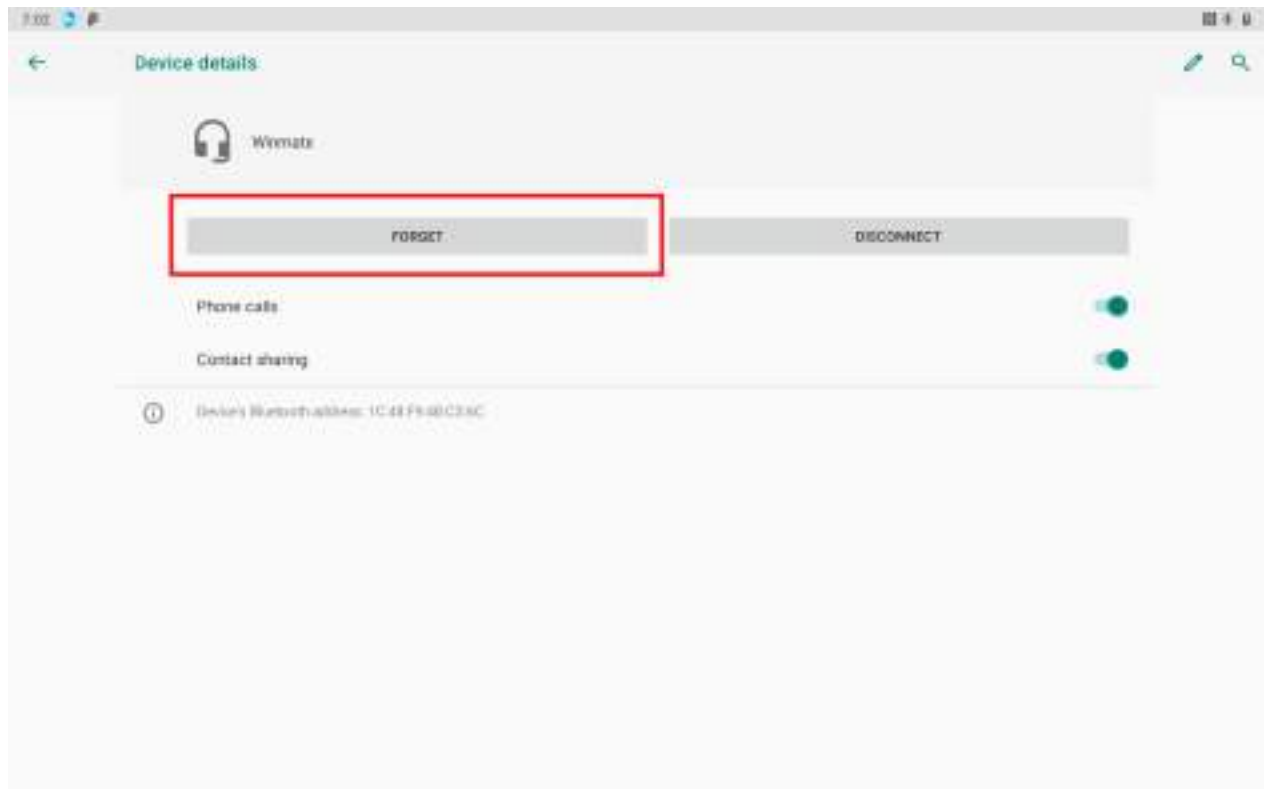



## 5.3 Connecting to Computer via USB

 
User can connect their HMI to a computer with USB cable to transfer files between HMI and computer.



 
**Important:** When connecting your HMI to a computer and inserting its USB storage or SD card, user must follow the computer's instructions for connecting and disconnecting USB device, to avoid damaging or corrupting files. Notice that the E Series HMI cannot be charged via USB.

### 5.3.1 USB Computer Connection

1. Connect HMI to the computer via USB connector.
2. Pull down the notification area to open notification panel, tap **Android System P**.

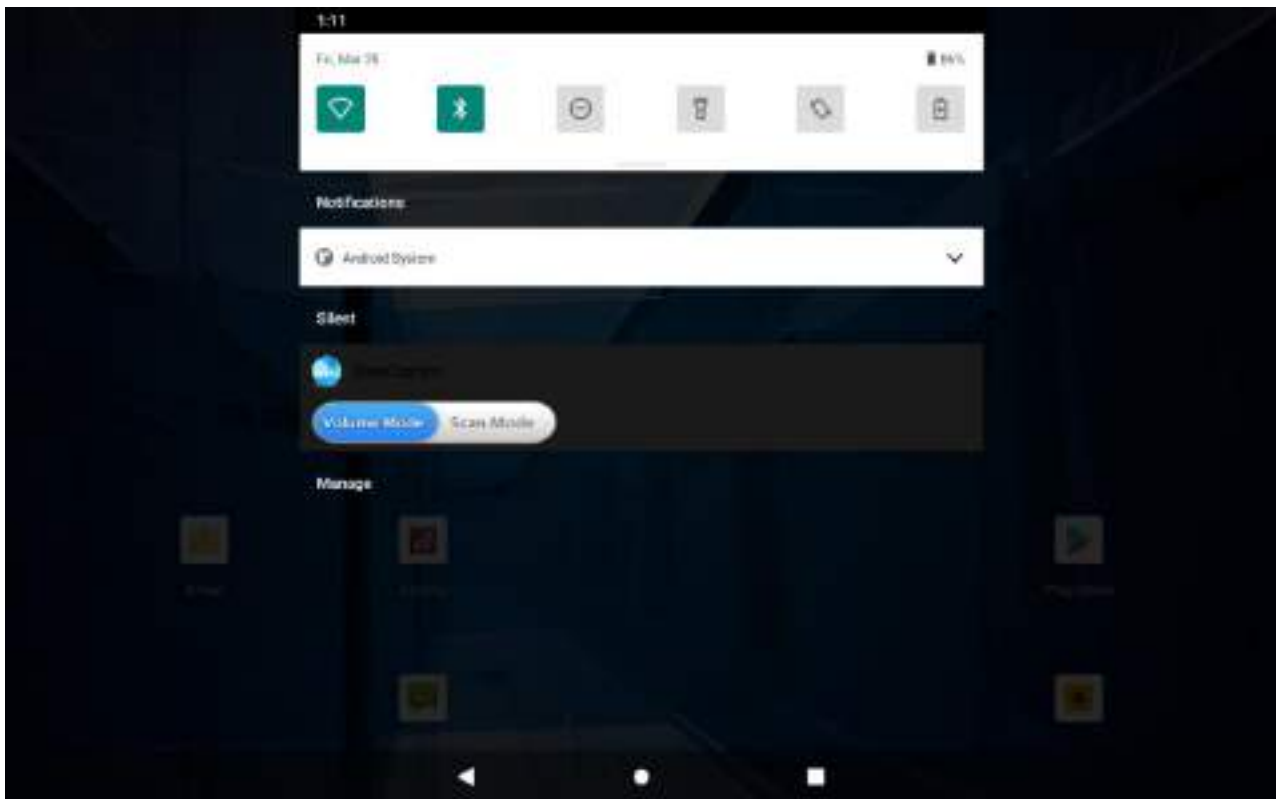

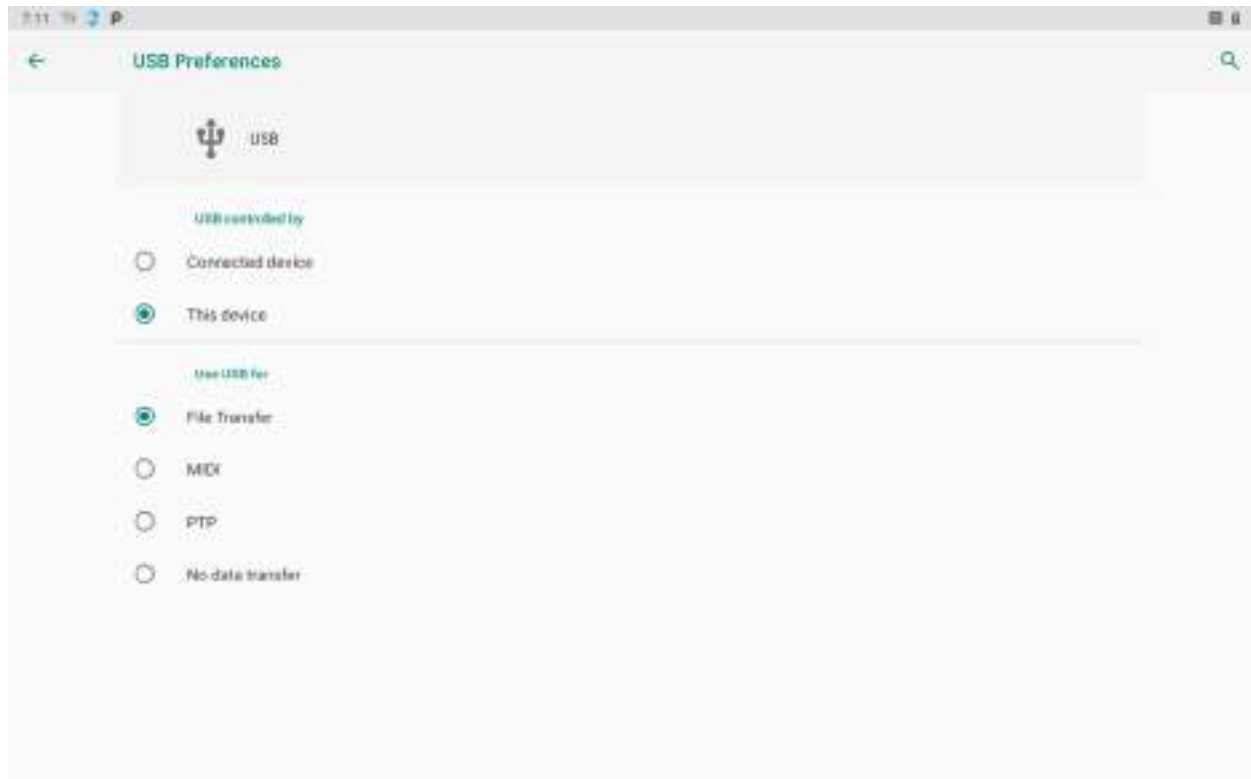


3. In the **USB Preferences** choose the type of USB connection.
  - **File Transfer** – let user transfers files between computer and HMI.
  - **PTP** – let users transfer photos or media files if MTP is not supported.
  - **MIDI** – let users use device as MIDI.
  - **No data transfer**– disable data transfer.




### 5.3.2 USB Debugging Settings

 
To permit debugging tools on a computer to communicate with User's HMI via USB Connection.

1. Connect HMI to the computer via USB cable.
2. Swipe from the bottom of the main desktop, tap **Settings** , tap **About tablet** .

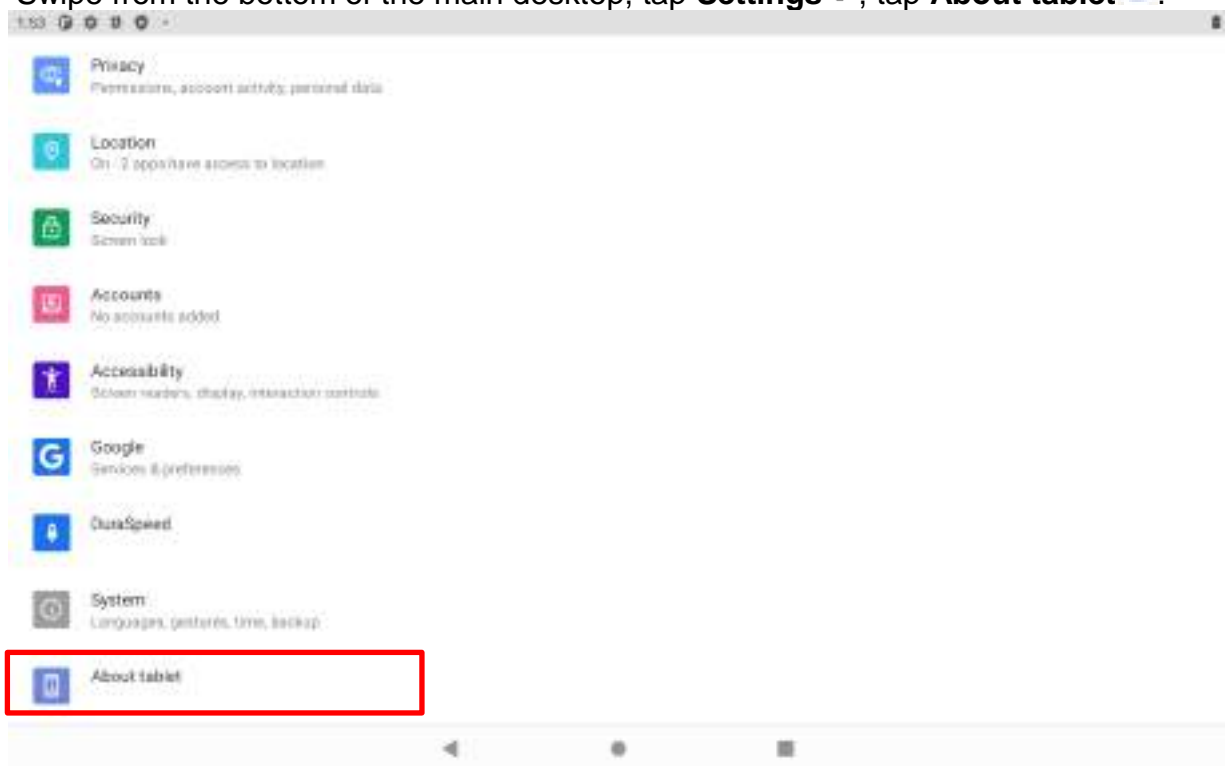


  3. Tap **Build number** 7 times to access the developer mode.

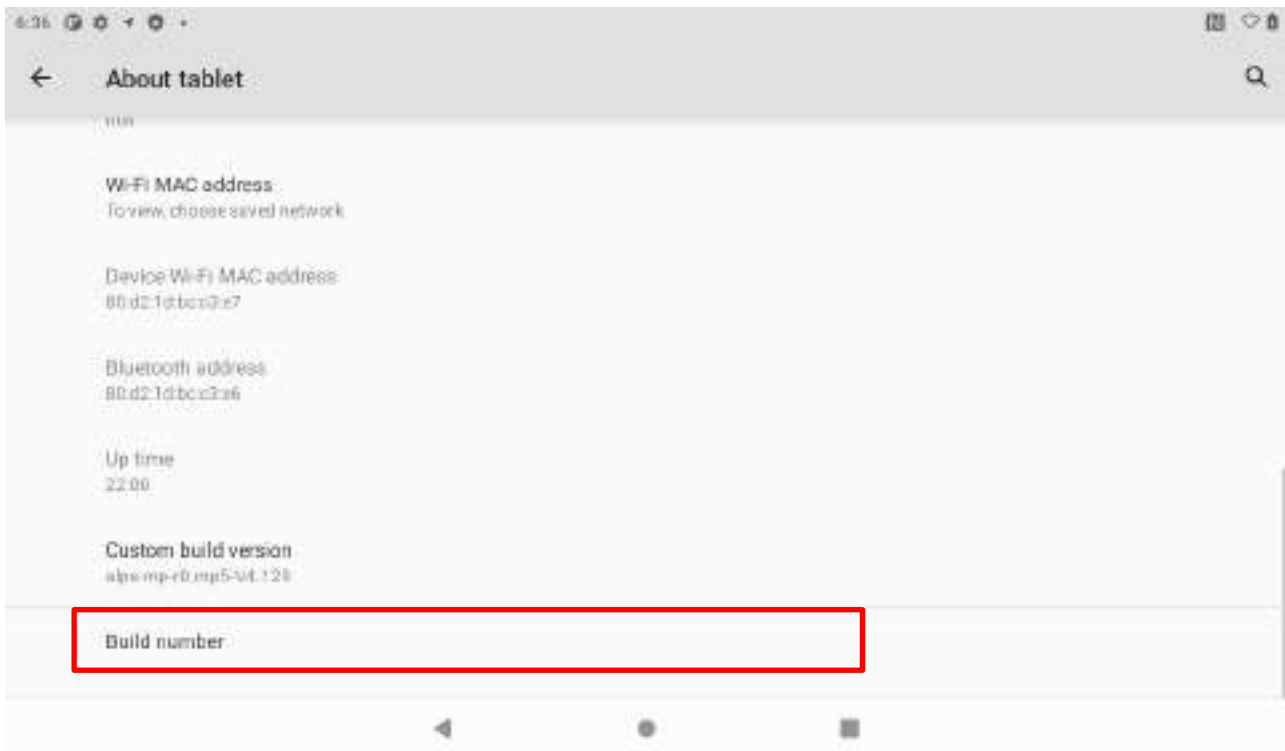


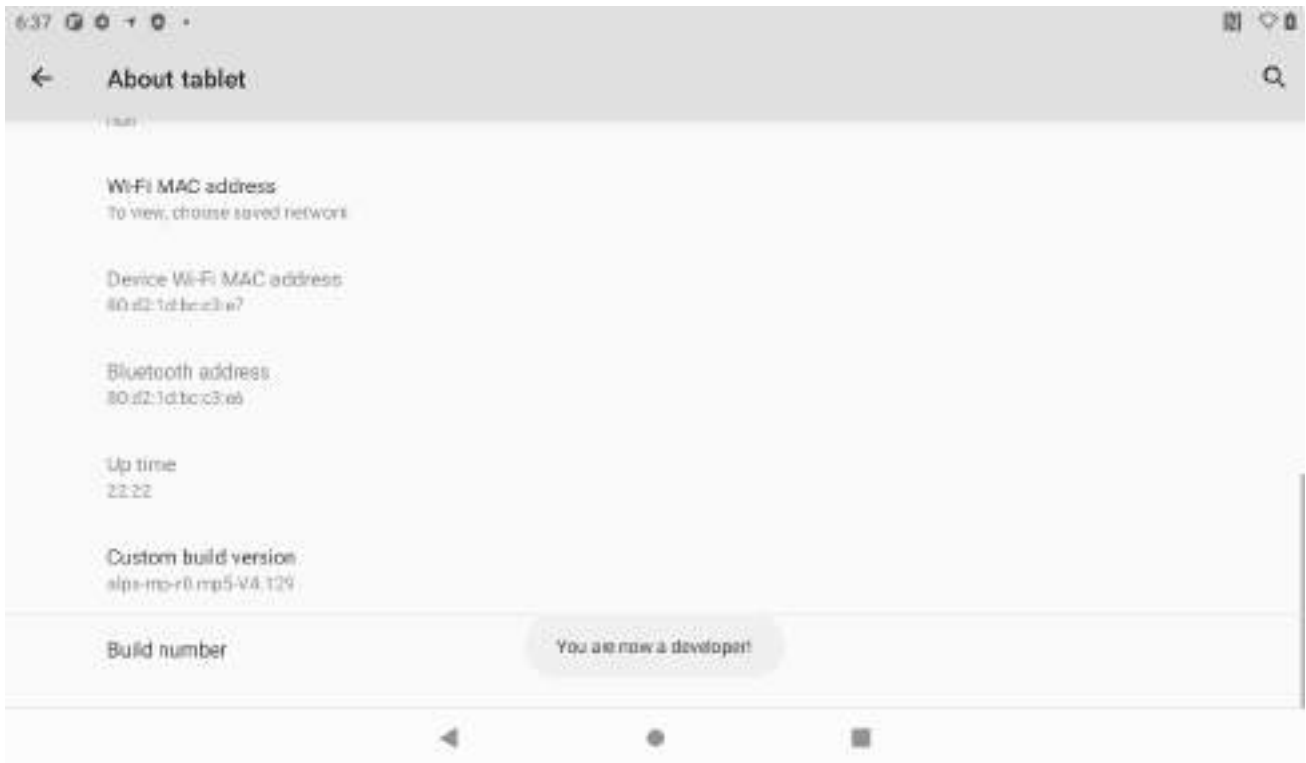

 4. Pull down the screen to open notification panel. Tap **USB debugging connected**.

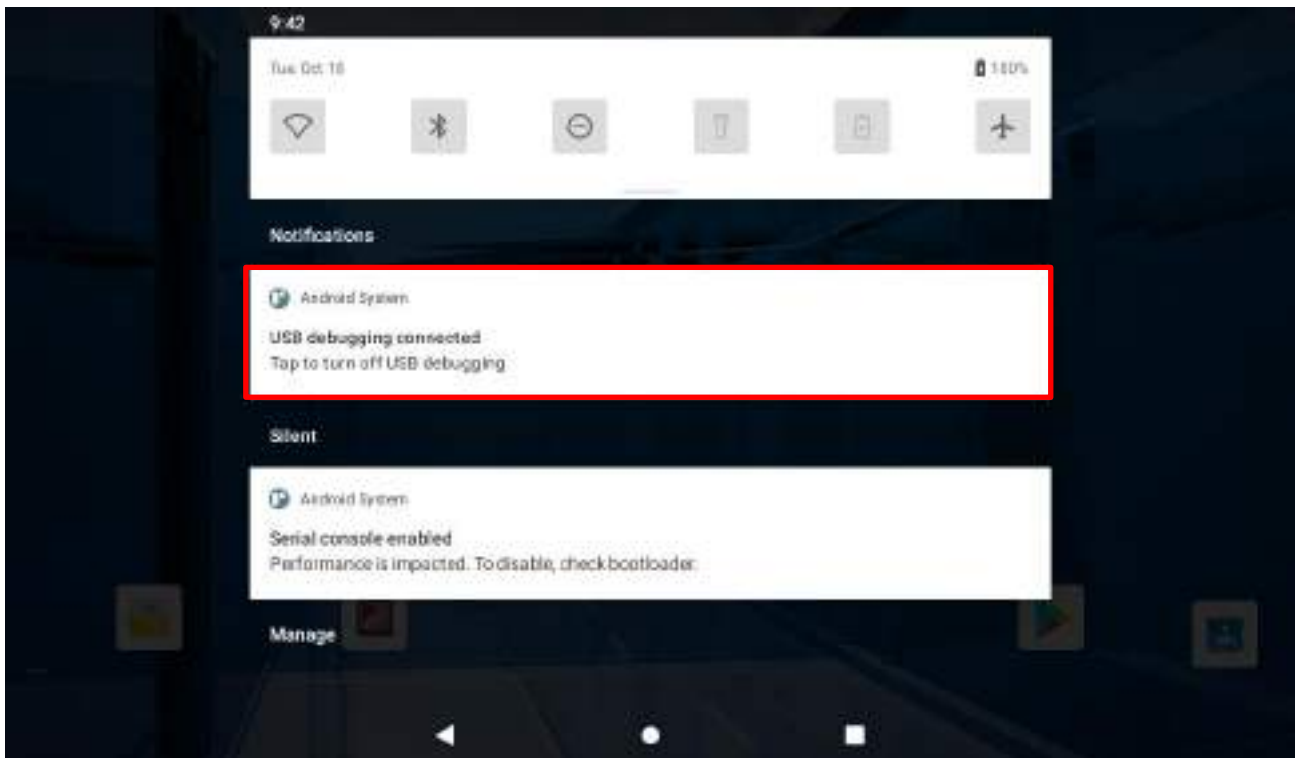

 5. In the **Developer options** user can choose the action to perform.

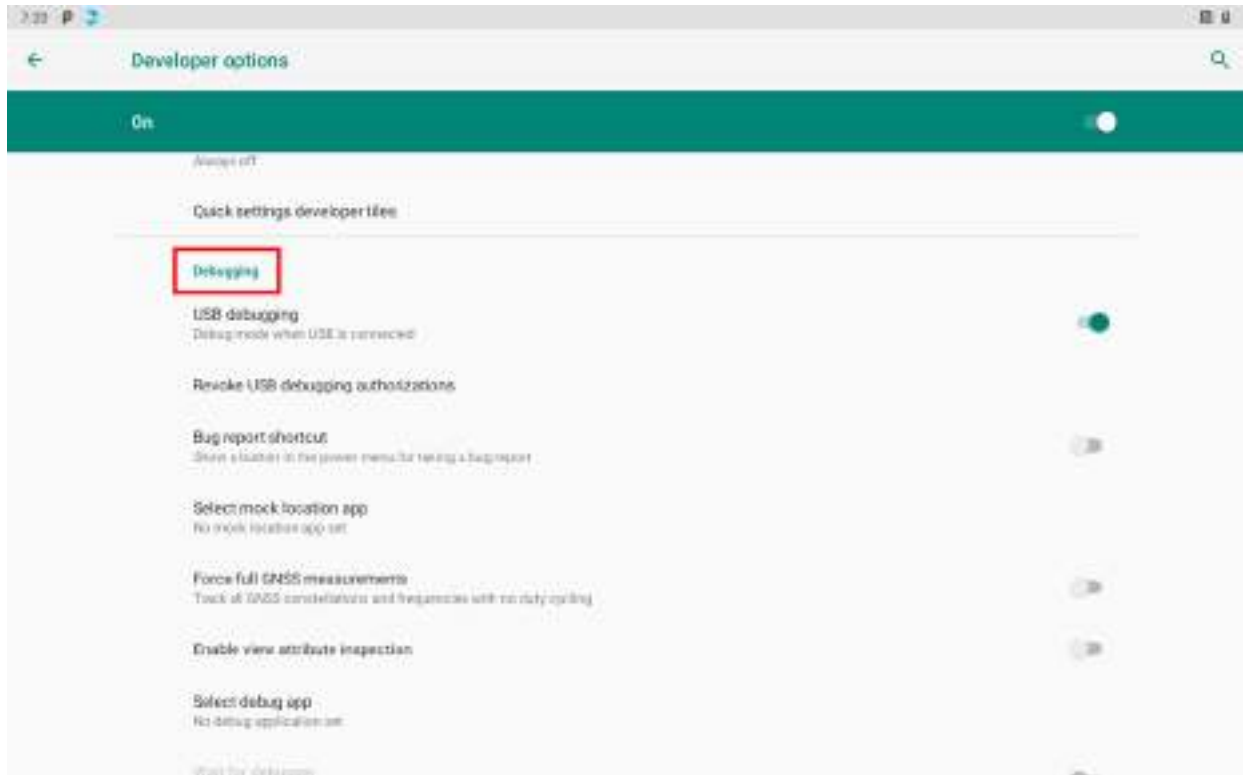

**Important:** Carefully follow your computer's instructions to un-mount the USB storage or SD card. Disconnect USB device not properly can cause a loss of important data or information.

## Chapter 6: Mounting

This chapter provides mounting guide for all available mounting options. Pay attention to cautions and warning to avoid any damages.

### 6.1 Cable Mounting Considerations

For a nice look and safe installation, make sure cables are neatly hidden behind the HMI device. Refer to [Chapter 2.1](#) for the cable installation instruction.



#### CAUTION/ ATTENTION

Observe all local installation requirements for connection cable type and protection level.

Suivre tous les règlements locaux d'installations, de câblage et niveaux de protection.



#### CAUTION/ ATTENTION

Turn off the device and disconnect other peripherals before installation.

Éteindre l'appareil et débrancher tous les périphériques avant l'installation.



#### ALTERNATING CURRENT / MISE À LE TERRE!

To prevent electrical shock, the Safety Ground location on the rear must be bonded to the local earth ground through a minimum 12 AWG wire as short as possible

Pour éviter les chocs électriques, l'emplacement de la prise terre à l'arrière doit être lié à terre bcale, à travers un 12 AWG minimum et aussi court que possible.

### 6.2 Safety Precautions

Observe the following common safety precautions before installing any electronic device:

- Use separate, non-intersecting paths to route power and networking wires. If power wiring and device wiring paths must be crossed make sure the wires are perpendicular at the intersection point.
- Keep the wires separated according to the interface. Wires that share similar electrical characteristics must be bundled together.
- Do not bundle input wiring with output wiring. Keep them separate.

When necessary, it is strongly advised that you label wiring to all devices in the system.

## 6.3 Mounting Guide

EL-series HMI devices come with different mounting options suitable for most of the industrial and commercial applications. The main mounting approach is rear mount - very user-friendly in terms of installation. Refer to sub-sections below for more details.



### CAUTION/ ATTENTION

 
Follow mounting instructions and use recommended mounting hardware to avoid the risk of injury.

Suivez les instructions de montage et d'utilisation recommandé le matériel de montage pour éviter le risque de blessure.

### 6.3.1 VESA Mount

VESA Mount is a widely used mounting solution suitable for all kinds of industrial applications.

Model Name	Dimensions	Screw Hole Diameter
W04IM3S-ELT1	30 x 38 mm	VESA M4 x 6 mm
W07IM3S-ELT1	75 x 75 mm	VESA M4 x 6 mm
W10IM3S-ELH2	75 x 75 mm	VESA M4 x 6 mm

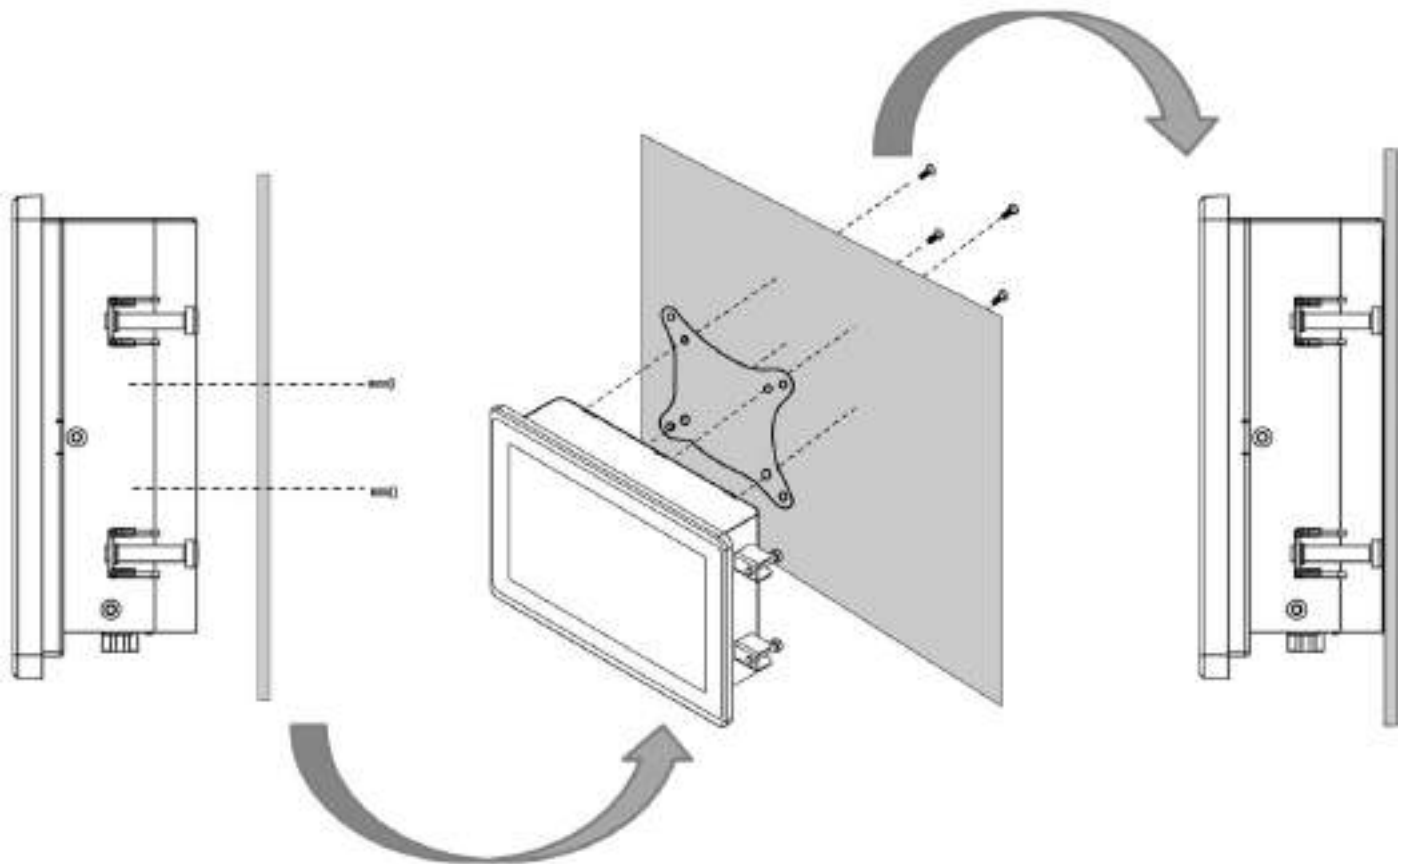

*\*with customer's bracket*

#### Mounting Steps:

 
1. Screw VESA bracket to the fixture (ex. wall) with four M4 x 15 mm VESA screws.
2. Place the device on VESA bracket.

## 6.3.2 Panel Mount

Panel Mount solution is suitable for many applications where HMI should be embedded in the machine. With this mounting solution flat surface leave no bezel in the front. In addition to elegant design, rear mount solution is making the HMI unit easy to clean and maintain. The HMI device is secured to the fixture from the rear by using the mounting brackets included in the package.

Model Name	W04IM3S-ELT1	W07IM3S-ELT1	W10IM3S-ELH2
Cutout dimension (W x D in mm)	110.5x74.5mm	174.9x117.7mm	244x159mm
Mounting Clips and Screws	4 pcs	7 pcs	7 pcs

### Mounting Steps:

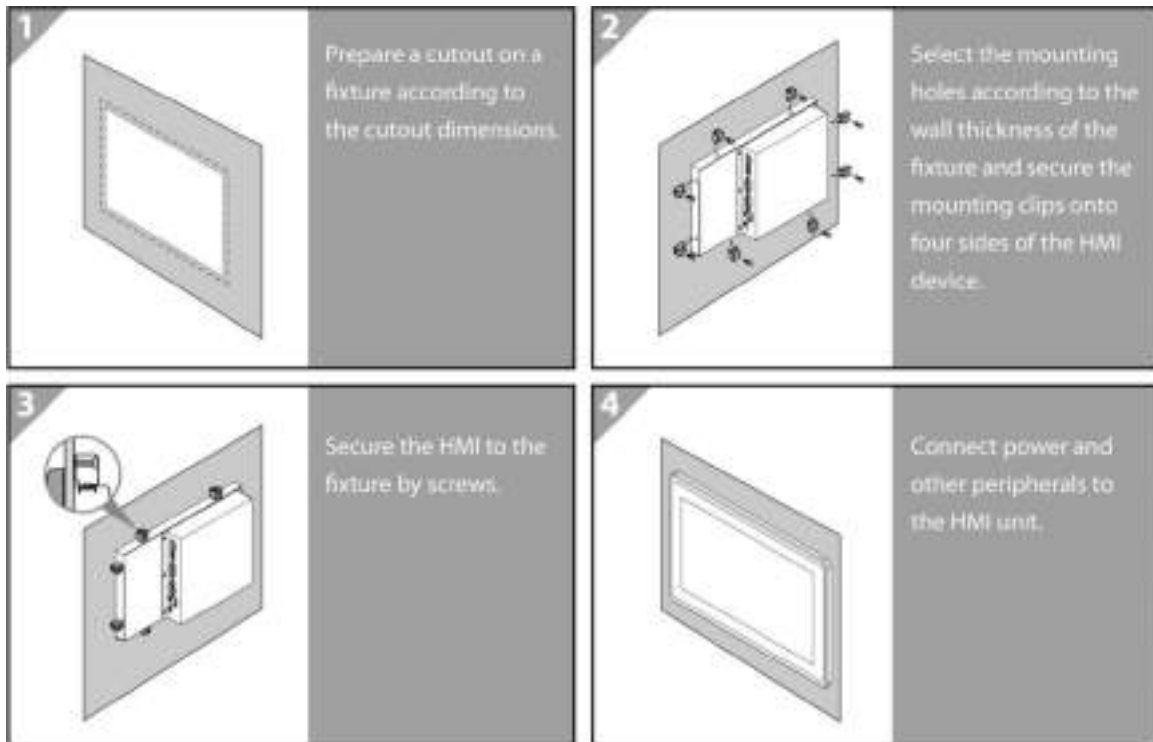



## Appendix A: Product Specifications

	Model Name		
	W04IM3S-ELT1	W07IM3S-ELT1	W10IM3S-ELH2
<b>Display</b>			
Size/ Type	4.3"	7"	10.1"
Resolution	480x272	1024x600	1280x800
Brightness	400 nits	320 nits	350 nits
Contrast Ratio	900:1	1000:1	800:1
Viewing Angle	80, 60, 80, 80	75, 75, 75, 70	85, 85, 85, 85
Touch	Projected Capacitive Multi-Touch	Projected Capacitive Multi-Touch	Projected Capacitive Multi-Touch
<b>Mechanical Specifications</b>			
Dimensions, mm	121 x 82 x 49	185 x 128 x 46	267 x 182 x 47
Mounting	Panel mount	Panel mount VESA Mount	Panel mount VESA Mount
Cooling	Fanless design	Fanless design	Fanless design
Enclosure	Plastic housing	Plastic housing	Front Aluminum Bezel & Rear Plastic Cover
<b>System Specifications</b>			
Processor	ARM A53 Quad Core 2.0GHz	ARM A53 Quad Core 2.0GHz	ARM A53 Quad Core 2.0GHz
System Memory	4GB LPDDR4	4GB LPDDR4	4GB LPDDR4
Operating System	Android 11	Android 11	Android 11
Storage	32GB eMMC	32GB eMMC	32GB eMMC
WLAN	Optional	Optional	Optional
Bluetooth	Optional	Optional	Optional
<b>Input / Output</b>			
USB Ports	1 x USB2.0 Type-A 1 x Micro USB 2.0 OTG	1 x USB2.0 Type-A 1 x Micro USB 2.0 OTG	1 x USB2.0 Type-A 1 x Micro USB 2.0 OTG
COM Port	1 x RS-485	1 x RS-485	1 x RS-485
LAN	1 x LAN 10/100/1000 Mbps	1 x LAN 10/100/1000 Mbps	1 x LAN 10/100/1000 Mbps
<b>Power Specifications</b>			
Power Input	12V~24V with 3Pin Terminal Block	12V~24V with 3Pin Terminal Block	12V~24V with 3Pin Terminal Block
Adapter	12V 36W (Optional)	12V 36W (Optional)	12V 36W (Optional)
<b>Environment Considerations</b>			
Operating Temp.	-20°C to 50°C	-20°C to 50°C	-20°C to 50°C
Operating Humidity	10% to 90% RH, Non- Condensing	10% to 90% RH, Non- Condensing	10% to 90% RH, Non- Condensing
Storage Temperature	-25°C to 70°C	-25°C to 70°C	-25°C to 70°C
<b>Certification</b>			
Certification	CE, FCC	CE, FCC	CE, FCC

 
**Note:**

1. The product shown in this datasheet is a standard model. For diagrams that contain customized or optional I/O, please contact the Winmate Sales Team for more information.
2. All specifications are subject to change without prior notice.


## Appendix B: OTA Update Guide

OTA is a tool which can help you to update OS image. To receive Android OS image file, contact our sales representatives. Once you get the image file follow the guideline below.


1. Copy image files **ota\_IM30\_X\_X\_X\_X.zip** and **IM30\_X\_X\_X\_X.md5** to microSD card.
2. Insert micro SD card to the slot in the device. In the **APPS** menu tap **OTA-firmware update**.

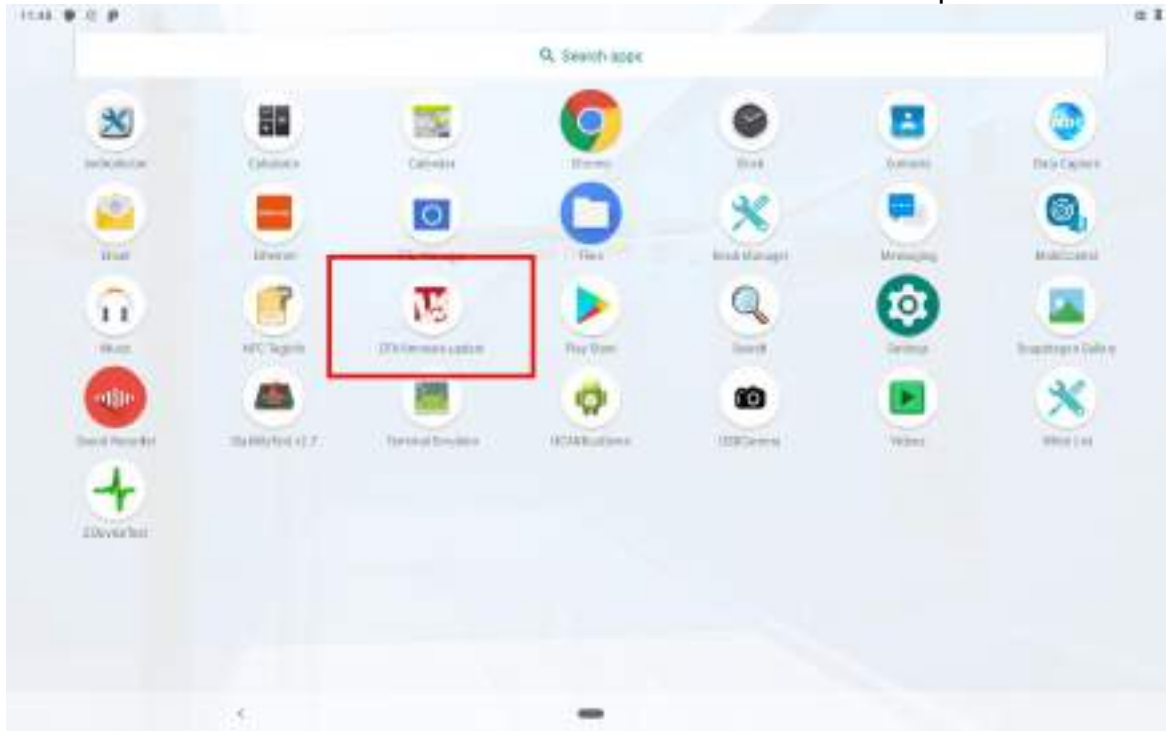

 
3. Click **Manual update**.

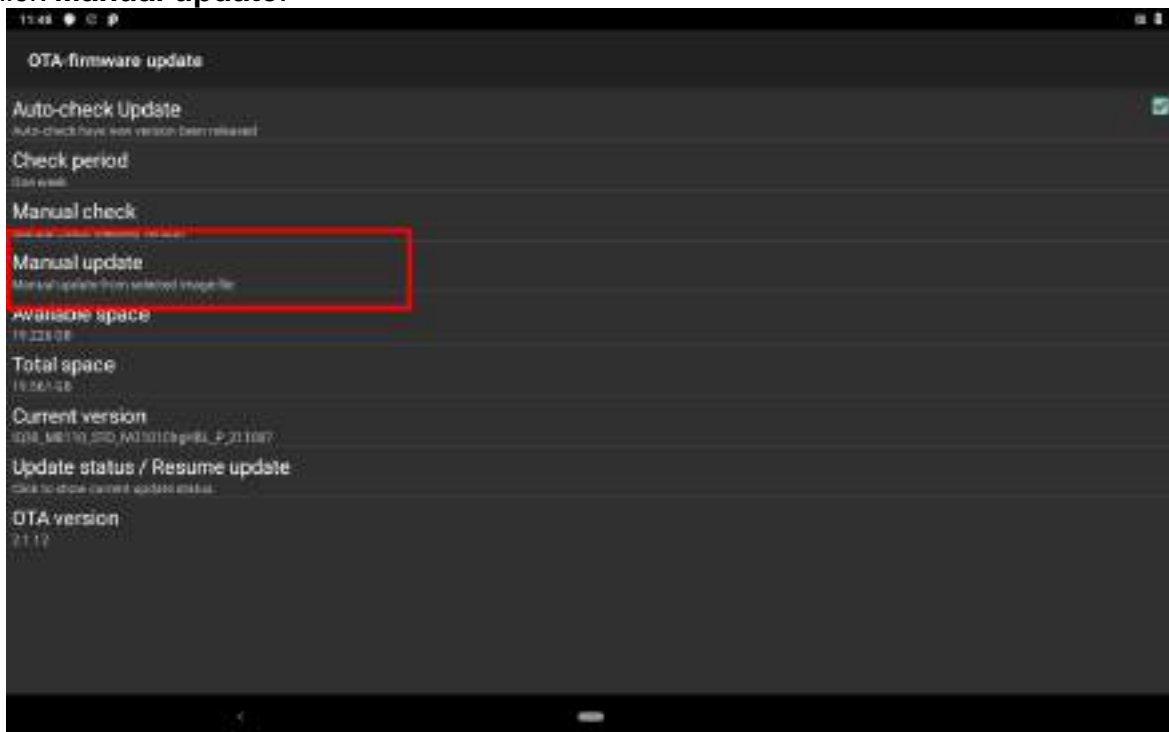

 
4. After the system shows **Found OTA File !!!**, tap **Update Image**.

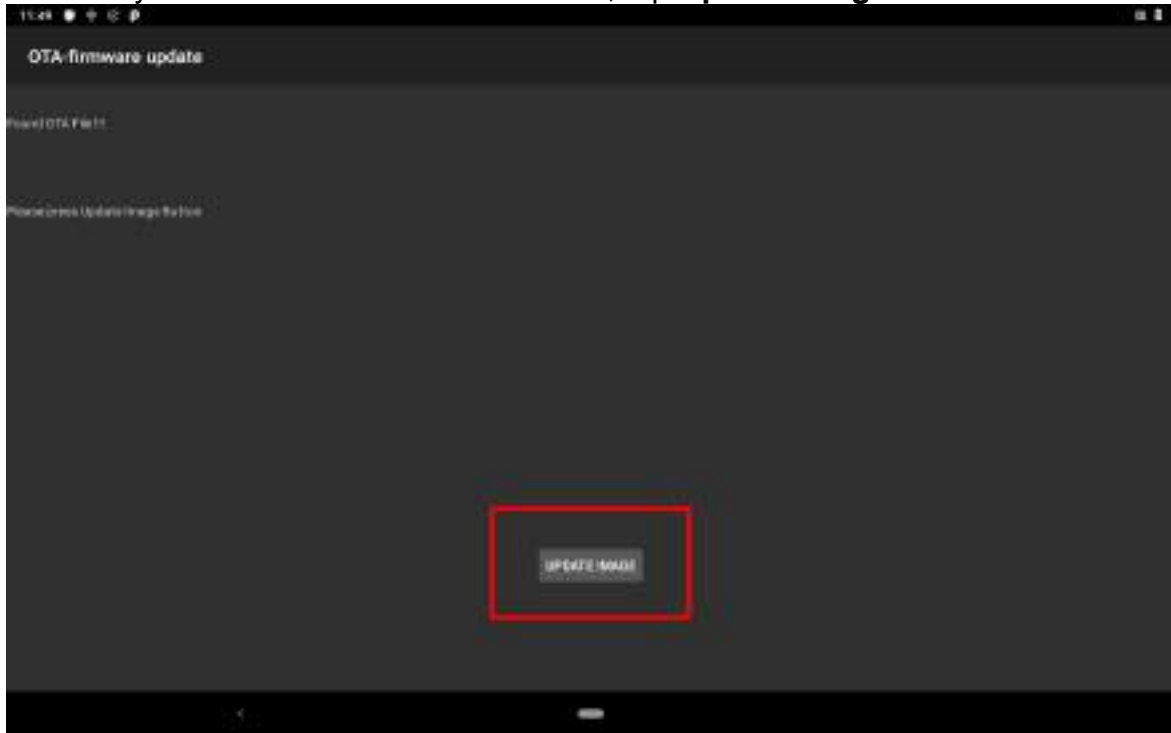

 
5. Click on the image update file. Tap **OK**.

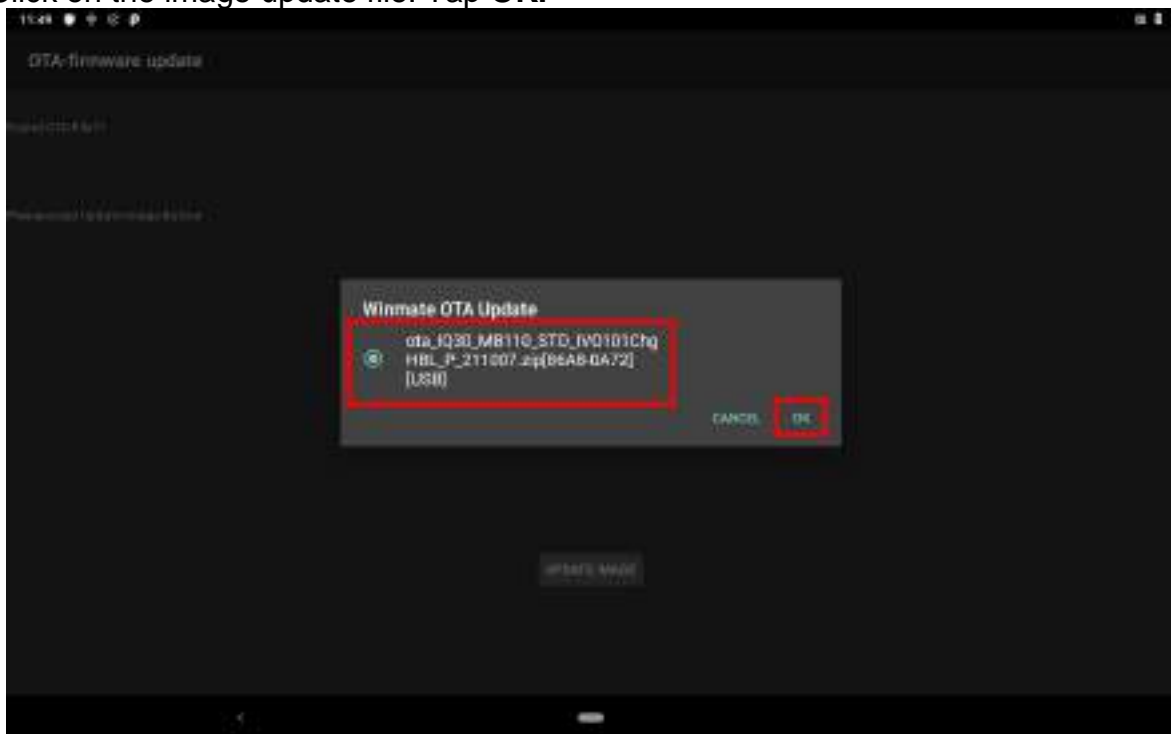

 6. Wait for the update.

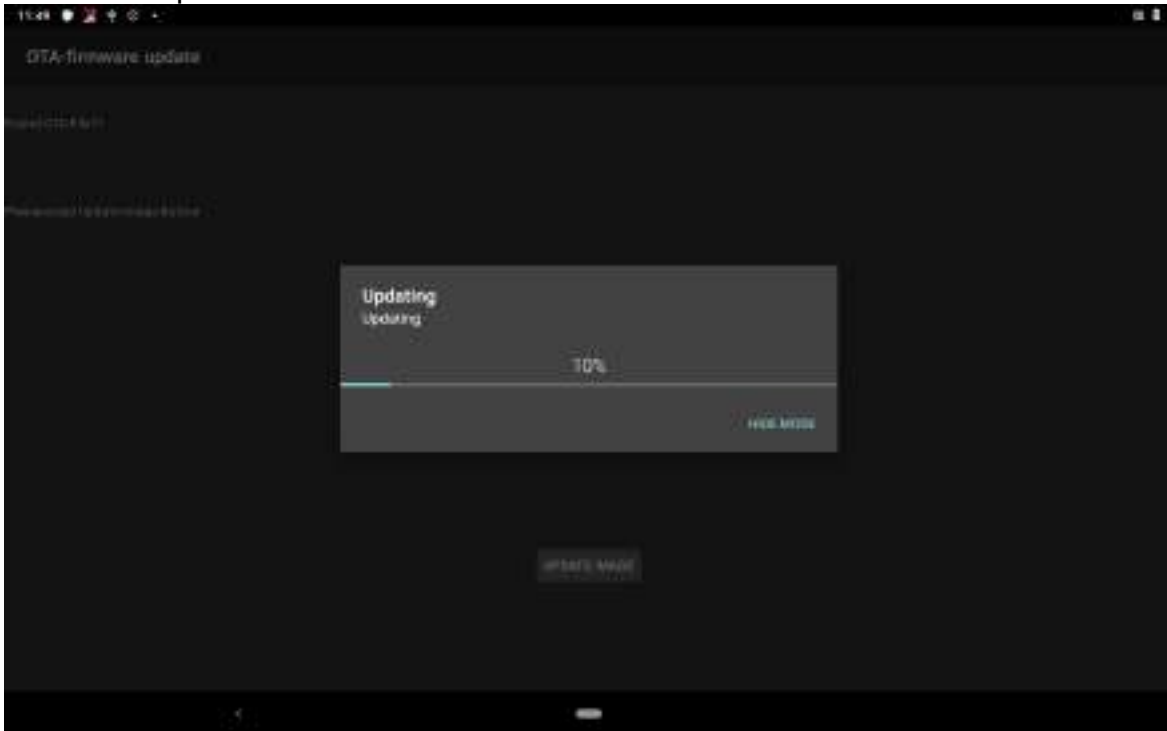

 7. Tap **Reboot Now**.

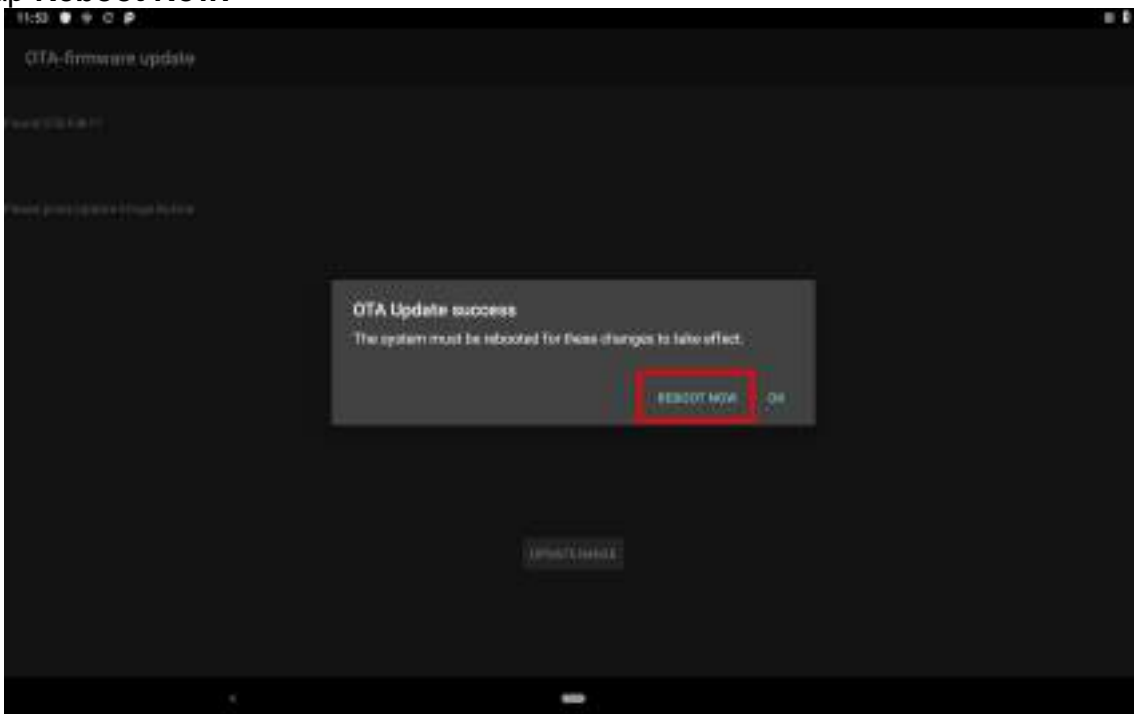

**Important:**

Do not disconnect the power source!

## Appendix C: OS Image Update Guide

To receive OS image update guide please contact Winmate at <https://www.winmate.com/>







---

Winmate Inc.  
9F, No.111-6, Shing-De Rd., San-Chung District,  
New Taipei City 24158, Taiwan, R.O.C  
[www.winmate.com](http://www.winmate.com)

Copyright © 2024 Winmate Inc. All rights reserved.

