


Please Refer To The Following Steps:

Step 1: Insert LAN cable to Network Socket


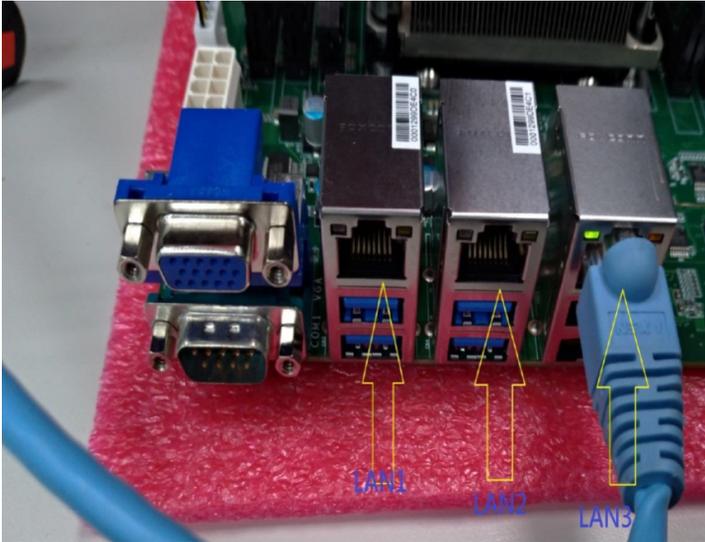


Step 2: Enter to BIOS to check BMC IP

=> Advanced

=> H20 IPMI Configuration

=> BMC Configuration

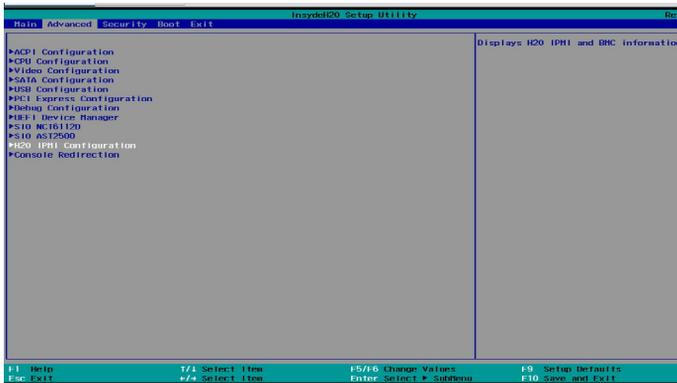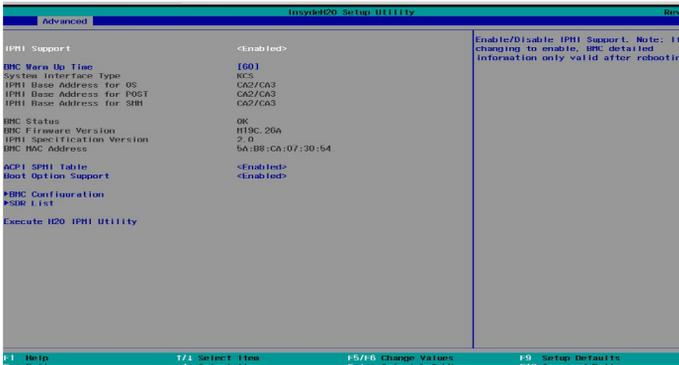

Step 3: Choose BMC LAN Channel to check BMC LAN IP


There are three BMC LAN Channels :

BMC Lan Channel	NIC Description	BMC Default IP
LAN 1	BMC Shared LAN	192.168.0.100
LAN 2	BMC Shared LAN	192.168.0.102
LAN 3	BMC Dedicated LAN	192.168.0.104


Choose BMC LAN Channel




- BMC LAN Channel 1

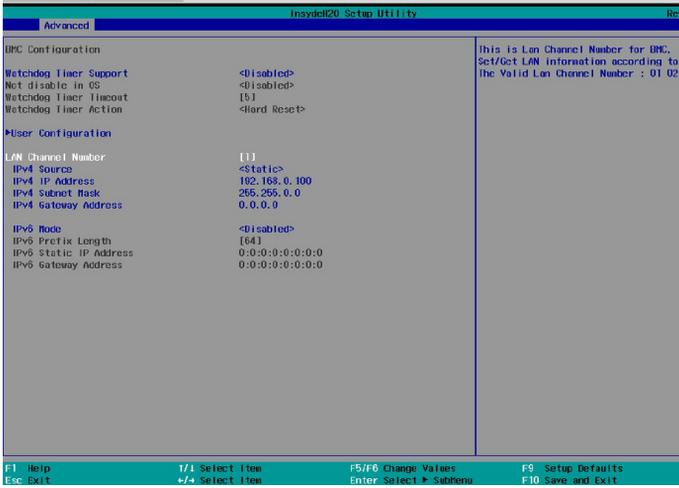

- BMC LAN Channel 2

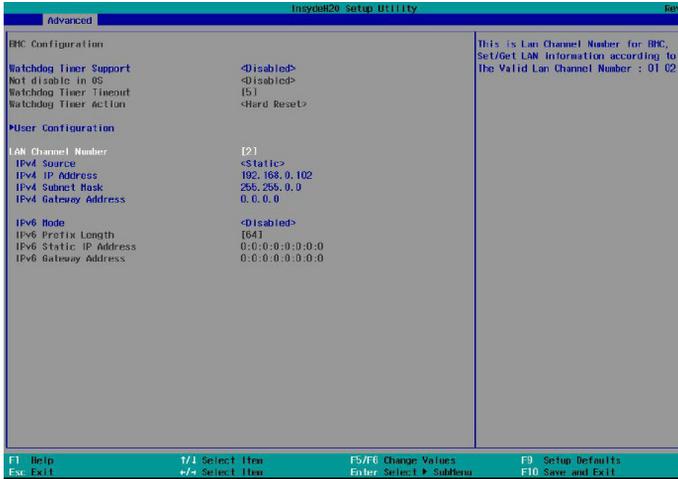

- BMC LAN Channel 3

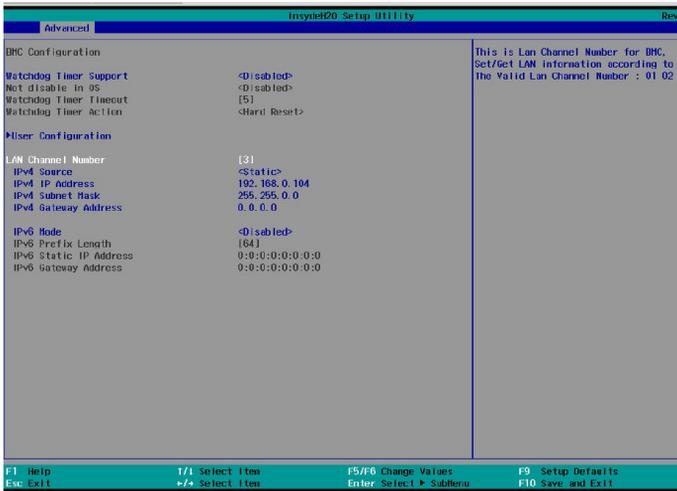


3.1 You can change your BMC LAN Setting


BMC LAN Source: DHCP, Static



- BMC IP address

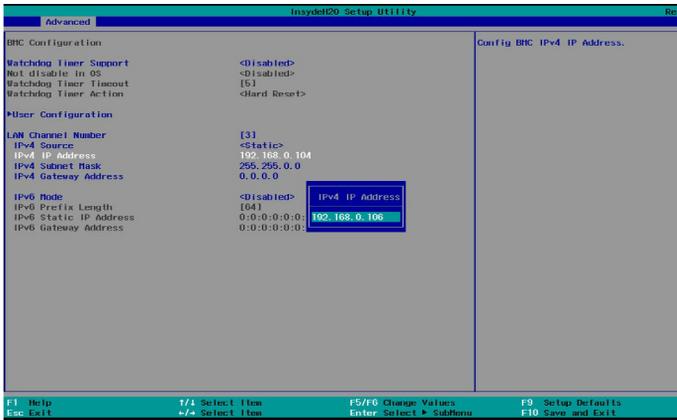


- BMC Subnet mask

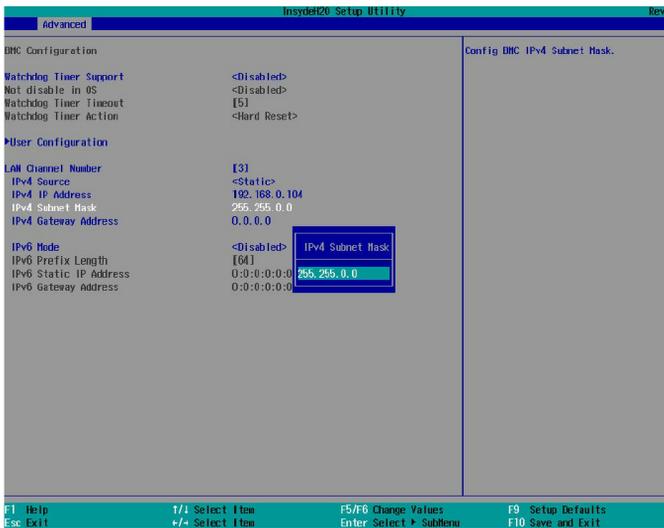

Step 4: Setup Client Network Configuration

Configure Client IP to be in the same Network area

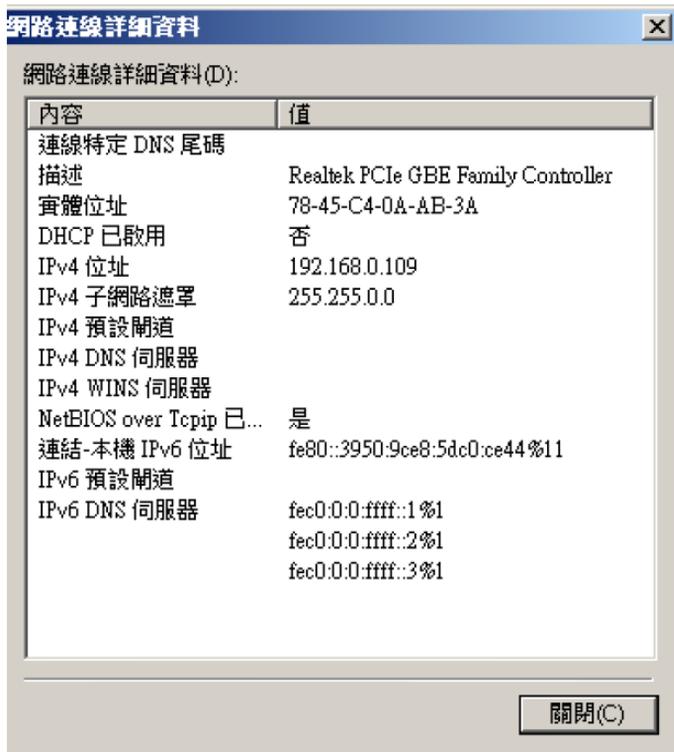

Client IP and BMC IP need to be in same Network area

Example:

BMC LAN Channel 3 IP: 192.168.0.104 submask:255.255.0.0

Client IP : 192.168.0.109 submask:255.255.0.0

Step 5: Enter BMC IP to Browser to access BMC Web

BMC default USERID: dfi

BMC default Password: dfi

Web Browser List

Google Chrome 63.0.3239 (latest stable version)

Mozilla Firefox Quantum 57.0.4 (latest stable version)

Microsoft edge 41.16299.15.0 (latest stable version)

Safari(on macOS Sierra) 11.0.2 (latest stable version)



The screenshot displays the BMC Web Setup Dashboard. At the top left is the DFI logo. The navigation menu includes System, Health, Configuration, Remote Control, Diagnostics, and Miscellaneous. On the right, there are Logout and Refresh icons. The main content area is titled 'Dashboard' and is divided into several sections:

- LED Section:** Contains three status indicators: Power (green, lit), Status (grey, unlit), and Chassis (grey, unlit).
- Date/Time Section:** Shows '2020 / 2 / 20' and '10 : 27 Thu'.
- Screen Preview Section:** Displays a screenshot of the BMC interface with the message 'Host is currently ON' and buttons for 'Refresh' and 'Power Off'.
- System Information Section:** Lists:
 - BMC Firmware Build: Thu Dec 26 09:15:40 2019
 - BMC FW Rev: M19C26A
 - Backup BMC FW Rev: M19C26A
- Network Section (Net):** Shows 'Channel: 1' and fields for IP Address, IPv6 Address, Gateway, Subnet Mask, and MAC Address.
- Temperature, Voltage, and FAN Sections:** Each has a 'Healthy' status and a 'Name' dropdown menu.
- Device List (Vii):** Lists 'Device 1' and 'Device 2'.



DFI reserves the right to change the specifications at any time prior to the product's release. This user guide may be based on the product's revision. For more documentation and drivers, please visit the download page at www.dfi.com/downloadcenter, or via the QR codes to the right.

