

MS-CF23

Industrial Computer Board

User Guide

Contents

Regulatory Notices	4
Safety Information	7
Specifications	9
Motherboard Overview	12
Rear I/O Panel	13
Line-Out Jack	13
Mic-In Jack	13
1 GbE RJ-45 LAN Jacks	13
2.5 GbE RJ-45 LAN Jacks	13
USB 10Gbps Ports	14
USB 5Gbps Ports	14
HDMI™ Connector	14
DisplayPort	14
RS232/422/485 Serial Port	15
CPU Socket	18
CPU & Heatsink Installation	20
Memory Slots	21
Storage Connectors	22
Expansion Slots	24
Power Connectors	26
Cooling Connectors	27
Audio Connectors	28
USB Connectors	29
Graphics Connectors	30
Other Connectors and Components	32
lumners	36

Revision

V1.0, 2025/07

BIOS Setup	37
Entering Setup	37
The Menu Bar	39
Main	40
Advanced	41
Boot	48
Security	49
Chipset	58
Power	59
Save & Exit	60
GPIO WDT Programming	61
Abstract	61
General Purpose IO	62
Watchdog Timer	64

Regulatory Notices

CE Conformity

This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.



FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

https://csr.msi.com/global/index

Battery Information

Please take special precautions if this product comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

European Union:



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

BSMI:



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit:

http://www.dtsc.ca.gov/hazardouswaste/perchlorate/

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.
- Please visit < https://us.msi.com/page/recycling for information regarding the recycling of your product in the US.

Copyright and Trademarks Notice







Copyright © Micro-Star Int' I Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int' I Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™. HDMI™ High-Definition Multimedia Interface. HDMI™ Trade dress and the HDMI[™] Logos are trademarks or registered trademarks of HDMI[™] Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

Safety Information

Please read and follow these safety instructions carefully before installing, operating or performing maintenance on the equipment.

General Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment in a dry, humidity-free environment.
- Ensure that all components are securely connected to prevent issues during operation.
- Do not cover the air openings to prevent overheating.
- Avoid spilling liquids into the equipment to prevent damage or electrical shock.
- Do not leave the equipment in an unconditioned environment. Storage temperatures above 60°C (140°F) may cause damage.

Electrostatic Discharge (ESD) Precautions

The components included in this package are sensitive to electrostatic discharge. Follow these guidelines to prevent ESD-related damage:

- Hold the motherboard by the edges to avoid touching sensitive components.
- Wear an ESD wrist strap. If not available, discharge static electricity by touching a metal object before handling.
- When not installed, store the motherboard in an electrostatic shielding container or place it on an anti-static pad.

Power Safety

- Always turn off the power supply and unplug the power cord from the outlet before installing or removing any component.
- Ensure the electrical outlet provides the same voltage as indicated on the PSU before connecting.
- Arrange the power cord to avoid tripping hazards or damage. Do not place objects over the power cord.

Installation Instructions

- Lay the equipment on a stable, flat surface before setting it up.
- Before turning on the system, ensure there are no loose screws or metal components on the motherboard or within the system case.
- Do not boot the computer before completing all installations. Premature booting can cause permanent damage to components and pose safety risks.

When to Contact Service Personnel

Immediately consult service personnel if any of the following situations arise:

- The power cord or plug is damaged.
- Liquid has entered the equipment.
- The equipment has been exposed to moisture.
- The equipment does not function as described in the User Guide.
- The equipment has been dropped or physically damaged.
- The equipment shows visible signs of breakage.

Specifications

Model	MS-CF23			
Dimensions	305 (L) mm x 244 (W) mm x 1.6(H)mm, ATX-Size			
Processor	Intel® Arrow Lake-S Core™ Ultra 9/7/5, up to 65W TDP			
Socket	LGA1851			
Chipset	Intel® H810 Express Chipset			
Memory	 2 x DDR5 SO-DIMM slots (262-pin, vertical mount) Dual-Channel, Non-ECC Up to 6400 MT/s (CSODIMM supported) Max 96GB 			
Network	 1 x Intel® I219-LM PCIe 1GbE LAN controller 10/100/1000Mbps, Wake-on-LAN 1 x Intel® I226V PCIe 2.5GbE LAN controller 			
	- 10/100/1000/2500 Mbps, Wake-on-LAN (S3/S4/S5), PXE support			
Storage	3 x SATA 3.0 6Gb/s connectors Support AHCI mode			
otorage .	1 x M.2 M Key slot (2280/2242) Supports PCIe 4.0 x4 NVMe, signal from PCH			
Audio	 Realtek® ALC897 Audio Codec (co-lay with ALC888S-VD2) High-Definition Audio Codec 1 x 1*2-port audio jack connector for Line-out/Mic-in 1 x 2*5-pin 2.54 mm pitch box header for front panel audio (Line-out & Mic-in) 			
	• 1 x DisplayPort 1.4a, up to 4096×2304 @ 60Hz			
	2 x HDMI™ 2.0b, up to 4096x2160 @ 60Hz			
	1 x LVDS 18/24-bit Dual-Channel, BOM optional) Supports resolution up to 1920x1200 @60Hz; backlight control via PCH			
Graphics	2 independent display modes supported DP + HDMI™1, DP + HDMI™2, DP + LVDS, HDMI™1 + HDMI™2, HDMI™1 + LVDS, HDMI™2 + LVDS			
	3 independent display modes supported DP + HDMI™1 + LVDS, DP + HDMI™2 + LVDS, DP + LVDS, HDMI™1 + HDMI™2 + LVDS)			
Expansion	 1 x PCIe 5.0 x16 slot Supports up to 75W, signal from CPU 1 x M.2 E Key slot (2230) 			
Slots	1 x M.2 E Rey Stot (2230) Supports PCle x1 and USB 2.0 signal Supports Intel® Wi-Fi 6E AX210, AX211(CNVi) and Intel® Wi-Fi 7 BE200			


Continued on next column

Model	MS-CF23
	• 1 x DisplayPort (1.4a)
	• 2 x HDMI™ connector (2.0b)
Rear I/O	 2 x COM ports COM1: RS-232/422/485 with auto flow control; supports 0V/5V/12V, TR up to 1000+ meters @ 115200 bps COM2: RS-232; supports 0V/5V/12V Supports True RS-232 and TTL RS-232
	• 1 x Line-out jack
	• 1 x Mic-in jack
	 4 x USB Type-A ports 2 x 10Gbps, 2 x USB 5Gbps, each supports 5V/0.9A (4.5W)
	• 1 x 4-pin PWM CPU fan connector
	• 1 x 4-pin PWM system fan connector
	• 3 x SATA 3.0 6Gb/s port connectors
	• 1 x LVDS Inverter box header
	• 1 x LVDS connector
	• 1 x GPIO header
Onboard Connector	• 2 x USB 2.0 headers
	• 1 x vertical USB 2.0 Type-A port
	• 1 x SMBus header
	• 1 x Front Audio header (line-out & mic-in)
	• 1 x Front Panel header
	• 1 x Chassis Intrusion header
	• 2 x Serial port headers
	• 1 x AT/ ATX mode select jumper
	• 1 x Clear CMOS jumper
Jumpers	• 1 x COM voltage select jumpers
	• 1 x Inverter power jumper
	• 2 x ME jumpers
Power	• 1 x 24-pin ATX power connector
- OWCI	• 1 x 4-pin 12V ATX power connector
Accessories	• 1 x I/O shield
	Windows 10 IoT Enterprise 2021 LTSC (64-bit)
OS Support	• Windows 11 IoT Enterprise 24H2 LTSC (64-Bit)
оо заррогс	 Linux Kernel 6.8, Ubuntu 24.04 LTS or later (pre-scan) Note: All drivers are based on Intel and chipset vendor support.


Continued on next column

Model	MS-CF23
Software Request	HIDAC utility supported (built on MP candidate BIOS)
Certification	CE, FCC Class B, BSMI, RCM, VCCI
	Operating Temperature: 0 ~ 60°C
Environment	• Storage Temperature: -20 ~ 80°C
	• Relative Humidity: 10 ~ 90%, non-condensing

Motherboard Overview

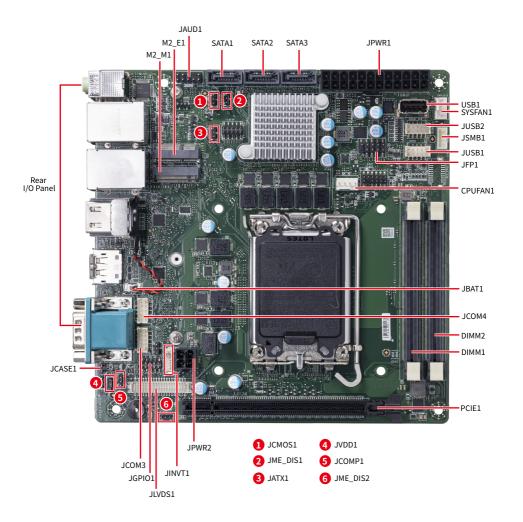

Rear I/O Panel

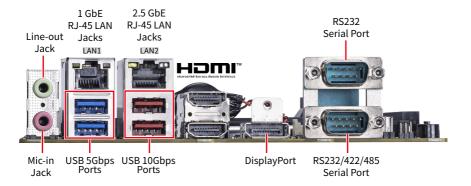

Line-Out Jack

 
This connector is provided for headphones or speakers.

Mic-In Jack

This connector is provided for microphones.


1 GbE RJ-45 LAN Jacks

The standard single RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it.



2.5 GbE RJ-45 LAN Jacks

 The standard single RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it.



USB 10Gbps Ports

USB 10Gbps ports delivers high-speed data transfer for various devices, such as storage devices, hard drives, video cameras, etc.

USB 5Gbps Ports

USB 5Gbps ports delivers high-speed data transfer for various devices, such as storage devices, hard drives, video cameras, etc.

HDMI™ Connector H⊃mI™

HDMI™ is a digital interface for uncompressed audio/video streams, accommodating all TV formats and multi-channel audio on a single cable.

DisplayPort

DisplayPort is a digital display interface standard. This connector is used to connect a monitor with DisplayPort inputs.

RS232/422/485 Serial Port

The serial port is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. It supports barcode scanners, barcode printers, bill printers, credit card machine, etc.



RS232				
PIN SIGNAL DESCRIPTION				
1	DCD	Data Carrier Detect		
2	RXD	Receive Data		
3	TXD	Transmit Data		
4	DTR	Data Terminal Ready		
5	GND	Ground		
6	DSR	Data Set Ready		
7	RTS	Request To Send		
8	CTS	Clear To Send		
9	RI/POWER	RI/0V/5V/12V selected by Jumper		

	RS422				
PIN	SIGNAL	DESCRIPTION			
1	422 TXD-	Transmit Data, Negative			
2	422 TXD+	Transmit Data, Positive			
3	422 RXD+	Receive Data, Positive			
4	422 RXD-	Receive Data, Negative			
5	GND	Signal Ground			
6	NC	No Connection			
7	NC	No Connection			
8	NC	No Connection			
9	NC	No Connection			

R\$485					
	R5485				
PIN	SIGNAL	DESCRIPTION			
1	D-	Data, Negative			
2	D+	Data, Positive			
3	NC	No Connection			
4	NC	No Connection			
5	GND	Ground			
6	NC	No Connection			
7	NC	No Connection			
8	NC	No Connection			
9	NC	No Connection			


Component Contents

Component	Page
CPU Socket	18
Installing the CPU to the LGA1851 socket	18
CPU & Heatsink Installation	20
Memory Slots	21
DIMM1, DIMM2: DDR5 DIMM Slots	21
Installing Memory Modules	21
Storage Connectors	22
SATA1~3: SATA 3.0 6Gb/s Ports	22
M2_M1: M.2 Slot (M Key, PCIe 4.0 x4/x2/x1, 2280/2242)	23
Expansion Slots	24
PCIE1: PCIe Expansion Slot	24
M2_E1: M.2 Slot (E Key, 2230)	25
Power Connectors	26
JPWR1: 24-Pin ATX Power Connector	26
JPWR2: 4-Pin ATX 12V Power Connector	26
Cooling Connectors	27
CPUFAN1, SYSFAN1: CPU, System Fan Connectors	27
Audio Connectors	28
JAUD1: Front Audio Header (Line-out/ Mic-in)	28
USB Connectors	29
USB1: USB 2.0 Type-A Port	29
JUSB1, JUSB2: USB 2.0 Header	29
Graphics Connectors	30
JINVT1: LVDS Inverter Box Header	30
JLVDS1: LVDS Wafer Connector	31

Other Connectors and Components	32
JFP1: Front Panel Header	32
JSMB1: SMBus Header	32
JGPIO1: GPI Header	32
JCOM3, JCOM4: Serial Port Headers	33
JCASE1: Chassis Intrusion Header	34
JBAT1: CMOS Battery	35
Replacing CMOS battery	35
Jumpers	36

CPU Socket


The LGA1851 socket is the CPU socket that is designed for Intel® desktop processors. It is a land grid array (LGA) socket with 1851 pins. The socket is not compatible with previous generations of Intel® processors.

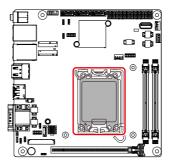

Installing the CPU to the LGA1851 socket

The surface of the LGA1851 CPU has **two notches** to assist in correctly lining up the CPU for motherboard placement. The golden triangle is the Pin 1 indicator.

To install the CPU, align the two notches on the LGA1851 socket with the two corresponding notches on the CPU.

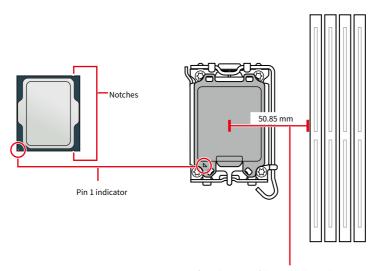

Distance from the center of the CPU socket to the nearest DIMM slot.

Important

- Please note that LGA1851 and LGA1700 sockets have different physical configurations and pin layouts. Before installation, ensure your CPU is compatible with the LGA1851 socket. Incorrect installation may damage the CPU, socket, and motherboard. DO NOT install a CPU designed for LGA1155, LGA1156, LGA1151, LGA1200, and LGA1700 sockets on the LGA1851 socket.
- Please ensure that the motherboard and power supply are turned off and always disconnect the power cord from the power outlet before installing or removing the CPU.
- Please retain the CPU protective cap after installing the processor. MSI will deal with Return Merchandise Authorization (RMA) requests if only the motherboard comes with the protective cap on the CPU socket.
- Whenever the CPU is not installed, always protect the CPU socket pins by covering the socket with the protective cap.
- The CPU should only fit in one orientation, so do not force it. Gently place the CPU into the socket without applying excessive pressure.
- Please handle the CPU by the edges only; avoid touching the pins or the surface of the CPU. Any damage to the pins can result in a malfunctioning CPU.
- When installing a CPU, always remember to install a CPU heatsink. A CPU heatsink is necessary to prevent overheating and maintain system stability.
- Please install the CPU cooler according to the manufacturer's instructions. Make sure it is securely a tight seal with the CPU and attached to the motherboard to ensure proper heat dissipation.
- Overheating can seriously damage the CPU and motherboard. Always make sure the cooling fans work properly to protect the CPU from overheating. Be sure to apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.


CPU & Heatsink Installation

Use appropriate ground straps, gloves and ESD mats to protect yourself from electrostatic discharge (ESD) while installing the processor.



/ Important


Images are for illustration purposes only; actual parts may vary.

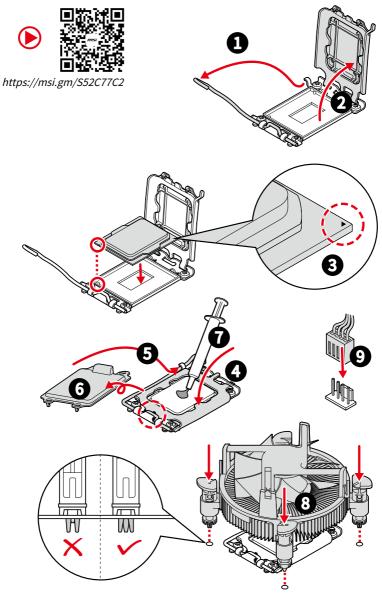


Memory Slots

DIMM1, DIMM2: DDR5 DIMM Slots

 
The DIMM slots are intended for memory modules.

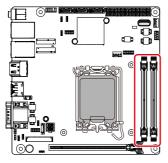



Installing Memory Modules

- 1. Open the side clips to unlock the DIMM slot.
- 2. Insert the DIMM vertically into the slot, ensuring that the off-center notch at the bottom aligns with the slot.
- 3. Push the DIMM firmly into the slot until it clicks and the side clips automatically close.
- 4. Verify that the side clips have securely locked the DIMM in place.

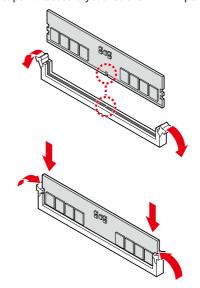




Important


• You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.

Storage Connectors

SATA1~3: SATA 3.0 6Gb/s Ports

These ports are SATA 6Gb/s interface port, it can connect to one SATA device.

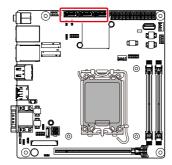

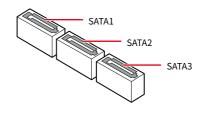




Important


- These SATA connectors support hot plug.
- Please do not fold the SATA cable at a 90-degree angle. Data loss may result during transmission otherwise.
- SATA cables have identical plugs on either sides of the cable. However, it is recommended that the flat connector be connected to the motherboard for space saving purposes.

M2_M1: M.2 Slot (M Key, PCIe 4.0 x4/x2/x1, 2280/2242)


Please install the M.2 solid-state drive (SSD) into the M.2 slot as shown below.

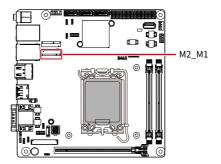

1. Insert your M.2 SSD into the M.2 slot at a 30-degree angle.

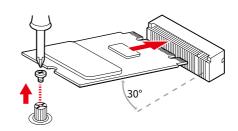


2. Secure the M.2 SSD in place with the supplied M.2 screw.

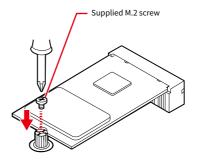

Feature

• Supports PCIe 4.0 x4 NVMe, signal from PCH

Expansion Slots

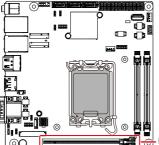

PCIE1: PCIe 5.0 x16 (signal from CPU)

PCIE1: PCIe Expansion Slot


The PCI Express (Peripheral Component Interconnect Express) slots support PCIe interface expansion cards.




Important

When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

M2_E1: M.2 Slot (E Key, 2230)

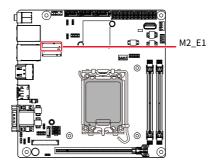


Please install the Wi-Fi/ Bluetooth card into the M.2 slot as shown below.

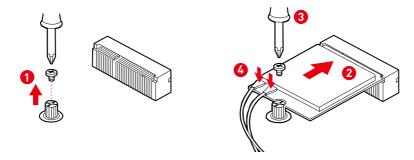

Feature


- Supports PCIe x1 and USB 2.0 signal
- Supports Intel® Wi-Fi 6E AX210, Intel® Wi-Fi 6E AX211(CNVi), and Intel® Wi-Fi 7 BE200

Power Connectors

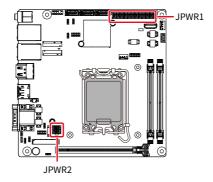


JPWR1: 24-Pin ATX Power Connector

This connector allows you to connect an ATX power supply.

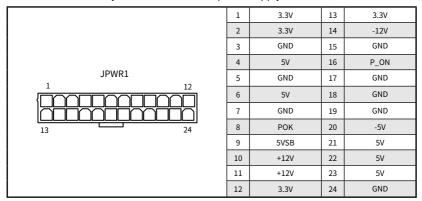

JPWR2: 4-Pin ATX 12V Power Connector

 This connector allows you to connect an ATX power supply.






1 Important


Make sure that all the power cables are securely connected to a proper power supply to ensure stable operation of the system.

Cooling Connectors

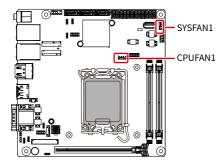

CPUFAN1, SYSFAN1: CPU, System Fan Connectors

The fan connector supports CPU/ system cooling fans with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND.

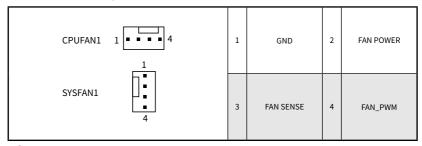




Important

Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.

Audio Connectors

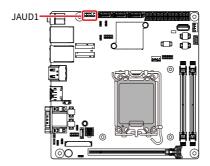


JAUD1: Front Audio Header (Line-out/Mic-in)

This header allows you to connect front panel audio.


	1	F_MIC2_L	2	AGND
2 10	3	F_MIC2_R	4	FP_AUD_DET
JAUD1	5	F_LINE2_R	6	MIC2_JD
1 9	7	HP_ON	8	No pin
	9	F_LINE2_L	10	LINE2_JD

USB Connectors

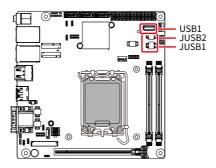


USB1: USB 2.0 Type-A Port

 The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices. It supports data transfer rate up to 480 Mbps.




JUSB1, JUSB2: USB 2.0 Header

 This header is ideal for connecting USB devices such as keyboard, mouse, or other USB-compatible devices. It supports data transfer rate up to 480 Mbps.



Graphics Connectors

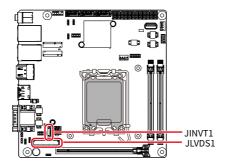

JINVT1: LVDS Inverter Box Header

The connector is provided for LCD backlight options.

F3 .	1	5V/12V	2	5V/12V
JINVT1 5	3	BKLT_EN	4	BKLT_CTRL
<u></u>	5	GND	6	GND

JLVDS1: LVDS Wafer Connector

This connector is designed for use with LVDS interface flat panels. When connecting your flat panel to this connector, be sure to check the panel datasheet to ensure that you set the LVDS power select jumper (JVDD1) to the appropriate power voltage.


JLVDS1					
40 2					
7[
39 1					
1	12V	2	12V		
3	LCD_VDD	4	12V		
5	LCD_VDD	6	LCD_VDD		
7	DDC_CLK	8	DDC_DATA		
9	L_BKLT_CTRL#	10	LCDEN		
11	INV_ON	12	LVDS_DETECT#_C		
13	LVDSA_DATA1	14	LVDSA_DATA0		
15	LVDSA_DATA#1	16	LVDSA_DATA#0		
17	GND	18	GND		
19	LVDSA_DATA3	20	LVDSA_DATA2		
21	LVDSA_DATA#3	22	LVDSA_DATA#2		
23	GND	24	GND		
25	LVDSB_DATA1	26	LVDSB_DATA0		
27	LVDSB_DATA#1	28	LVDSB_DATA#0		
29	GND	30	GND		
31	LVDSB_DATA3	32	LVDSB_DATA2		
33	LVDSB_DATA#3	34	LVDSB_DATA#2		
35	GND	36	GND		
37	LVDSB_CLK	38	LVDSA_CLK		
39	LVDSB_CLK#	40	LVDSA_CLK#		



/ Important

Pin 12 is a detect pin. When using a customized LVDS cable, pin 12 should be a signal ground with a low impedance. Otherwise, LVDS will not function.

Other Connectors and Components

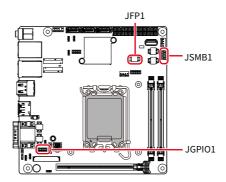

JFP1: Front Panel Header

This front-panel header is provided for electrical connection to the front panel switches & LEDs and is compliant with Intel Front Panel I/O Connectivity Design Guide.

	1	HDD LED+	2	POWER LED
9 1	3	HDD LED-	4	POWER LED
JFP1	5	RESET SWITCH-	6	POWER SWITCH+
2	7	RESET SWITCH+	8	POWER SWITCH-
	9	NC	10	No pin

JSMB1: SMBus Header

This header is provided for users to connect to System Management Bus (SMBus) interface.

1	1	+5VDUAL
JSMB1	2	SMBCLK
J3MB1 •	3	SMBDATA
4	4	GND


JGPIO1: GPI Header


This header is provided for the General-Purpose Input (GPI) peripheral module.


2 10 JGPIO1	1	GND	2	3VSB
	3	N_GPI0	4	N_GPO0
	5	N_GPI1	6	N_GPO1
1 9	7	N_GPI2	8	N_GPO2
	9	N_GPI3	10	N_GPO3

JCOM3, JCOM4: Serial Port Headers

This header is 16550A high speed communications port that sends/receives 16 bytes FIFOs. You can attach a serial device to it.

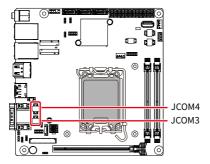

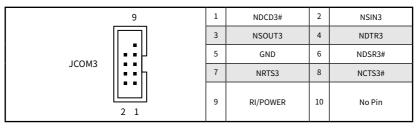

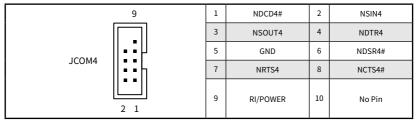



⚠ Important

After connect the Serial port connector to printer, garbage can't be printed when power on/off.

Feature


• Supports True RS-232, TTL RS-232

RS232				
PIN	SIGNAL	DESCRIPTION		
1	DCD	Data Carrier Detect		
2	RXD	Receive Data		
3	TXD	Transmit Data		
4	DTR	Data Terminal Ready		
5	GND	Ground		
6	DSR	Data Set Ready		
7	RTS	Request To Send		
8	CTS	Clear To Send		
9		No Pin		

JCASE1: Chassis Intrusion Header

 
This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.






JBAT1: CMOS Battery

If the CMOS battery is out of charge, the time in the BIOS will be reset and the data of system configuration will be lost. In this case, you need to replace the CMOS battery.

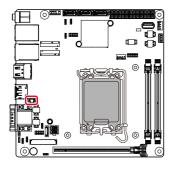

Replacing CMOS battery

- 1. Unplug the battery wire from the BAT1 connector and remove the battery.
- 2. Connect the new CR2032 battery with wire to the BAT1 connector.

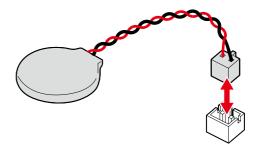



WARNING

KEEP OUT OF REACH OF CHILDREN




- Swallowing can lead to chemical burns, perforation of soft tissue, can death.
- Severe burns can occur within 2 hours of ingestion.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Jumpers



Avoid adjusting jumpers when the system is on; it will damage the motherboard.

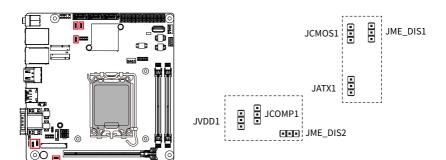

Jumper Name	Default Setting	Description		
	1	Panel Power Select Jumper		
JVDD1	†	1-2: 3.3V (Default)		
		2-3: 5V		
	1	COM Voltage Select Jumper		
JCOMP1		1-2: 5V Power (Default)		
		2-3: 12V Power		
	1	Clear CMOS Jumper		
JCMOS1		1-2: Normal (Default)		
		2-3: Clear CMOS		
	1	AT/ ATX Mode Select Jumper		
JATX1		1-2: ATX (Default)		
		2-3: AT		
	■	ME Jumper (PCH)		
JME_DIS1	1	1-2: ME enabled (Default)		
		2-3: ME disabled		
		ME Jumper (CPU)		
JME_DIS2	1	1-2: ME enabled (Default)		
		2-3: ME disabled		

BIOS Setup

This chapter provides information on the BIOS Setup program and allows users to configure the system for optimal use.

Users may need to run the Setup program when:

- An error message appears on the screen at system startup and requests users to run SETUP.
- Users want to change the default settings for customized features.



// Important

- Please note that BIOS update assumes technician-level experience.
- As the system BIOS is under continuous update for better system performance, the illustrations in this chapter should be held for reference only.

Entering Setup

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press or <F2> key to enter Setup, <F11> key to Boot Menu, <F12> key to PXE Boot.

Press < DEL > or < F2 > to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it **OFF** and **On** or pressing the **RESET** button. You may also restart the system by simultaneously pressing **<Ctrl>**, **<Alt>**, **and <Delete>** keys.



Important

The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.

Control Keys

←→	Select Screen		
↑ ↓	Select Item		
Enter	Select		
+-	Change Value		
Esc	Exit		
F1	General Help		
F7	Previous Values		
F9	Optimized Defaults		
F10	Save & Reset*		
F12	Screenshot capture		
<k></k>	Scroll help area upwards		
<m></m>	Scroll help area downwards		

^{*} When you press <F10>, a confirmation window appears and it provides the modification information. Select between Yes or No to confirm your choice.

Getting Help

Upon entering setup, you will see the Main Menu.

Main Menu

The main menu lists the setup functions you can make changes to. You can use the arrow keys (↑↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Sub-Menu

If you find a right pointer symbol appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use **arrow keys** ($\uparrow \downarrow$) to highlight the field and press <Enter> to call up the sub-menu. Then you can use the control kevs to enter values and move from field to field within a sub-menu. If you want to return to the main menu, just press the **<Esc>**.

General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press **<Esc>** to exit the Help screen.

The Menu Bar



► Main

Use this menu for basic system configurations, such as time, date, etc.

Advanced

Use this menu to set up the items of special enhanced features.

► Boot

Use this menu to specify the priority of boot devices.

Security

Use this menu to set supervisor and user passwords.

Chipset

This menu controls the advanced features of the on-board chipsets.


➤ Power

Use this menu to specify your settings for power management.

► Save & Exit

This menu allows you to load the BIOS default values or factory default settings into the BIOS and exit the BIOS setup utility with or without changes.

Main

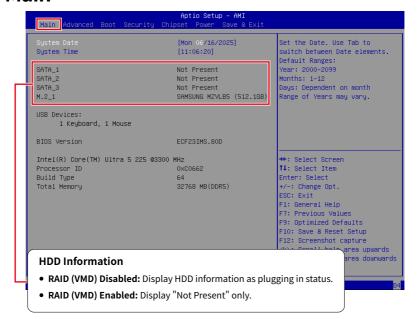

System Date

This setting allows you to set the system date.

Format: <Day> <Month> <Date> <Year>.

System Time

This setting allows you to set the system time.

Format: <Hour> <Minute> <Second>.

Enable VMD controler

Enables or disables VMD (RAID) controler.

Advanced



► Full Screen Logo Display

This BIOS feature determines if the BIOS should hide the normal POST messages with the motherboard or system manufacturer's full-screen logo.

[Enabled] BIOS will display the full-screen logo during the boot-up

sequence, hiding normal POST messages.

[Disabled] BIOS will display the normal POST messages, instead of the

full-screen logo.

Please note that enabling this BIOS feature often adds 2-3 seconds to the booting sequence. This delay ensures that the logo is displayed for a sufficient amount of time. Therefore, it is recommended to disable this BIOS feature for faster boot-up.


Bootup NumLock State

This setting is to set the state of the Num Lock key on the keyboard when the system is powered on.

Turn on the Num Lock key when the system is powered on. [On]

[Off] Allow users to use the arrow keys on the numeric keypad.

CPU Configuration

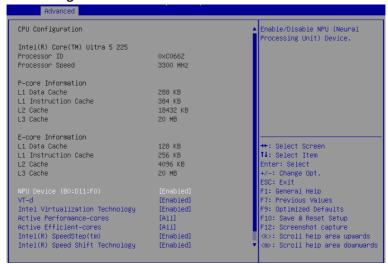

▶ NPU Device

Enables or disables the Neural Processing Unit (NPU) for AI workload acceleration.

▶ VT-d

Enables or disables Intel VT-D (Intel Virtualization for Directed I/O) technology.

Intel Virtualization Technology

Enables or disables Intel Virtualization technology.

[Enabled] Enables Intel Virtualization technology and allows a platform

to run multiple operating systems in independent partitions. The system can function as multiple systems virtually.

[Disabled] Disables this function.

▶ Active Performance-cores

Select the number of active Performance-cores (P-cores).

▶ Active Efficient-cores

Select the number of active Efficient-cores (E-cores).

Intel(R) SpeedStep(TM)

Enhanced Intel SpeedStep® Technology enables the OS to control and activate performance states (P-States) of the processor.

[Enabled] When enabled, Intel SpeedStep® technology is activated.

> This technology allows the processor to manage its power consumption via performance state (P-State) transitions.

[Disabled] Disables this function.

► Intel(R) Speed Shift Technology

Intel® Speed Shift Technology is an energy-efficient method that allows frequency control by hardware rather than the OS.

[Enabled] When enabled, Intel® Speed Shift Technology is activated.

The technology enables the management of processor power

consumption via hardware performance state (P-State)

transitions.

[Disabled] Disable this function.

► C states

This setting controls the C-States (CPU Power states).

[Enabled] Detects the idle state of system and reduce CPU power

consumption accordingly.

[Disabled] Disable this function.

Super IO Configuration



▶ Serial Port 1/2/3/4, Parallel Port

This setting enables or disables the specified serial port.

» Change Settings

This setting is used to change the address & IRQ settings of the specified serial port.

» Mode Select

Select an operation mode for Serial Port 1/2/3/4, Parallel Port.

► FIFO Mode

This setting controls the FIFO (First In First Out) data transfer mode.

▶ Watch Dog Timer

You can enable the system watchdog timer, a hardware timer that generates a reset when the software that it monitors does not respond as expected each time the watchdog polls it.

H/W Monitor (PC Health Status)

These items display the current status of all monitored hardware devices/ components such as voltages, temperatures and all fans' speeds.



Smart Fan Configuration



► CPUFAN/ SYSFAN1

This setting enables or disables the Smart Fan function. Smart Fan is an excellent feature which will adjust the CPU/system fan speed automatically depending on the current CPU/system temperature, avoiding the overheating to damage your system. The following item will display when CPUFAN/ SYSFAN1 is enabled.

» Min. Speed (%)

The beginning speed of the System fan.

PCI/PCIE Device Configuration



► Audio Controller

This setting enables or disables the detection of the onboard audio controller.

Network Stack Configuration

This menu provides Network Stack settings for users to enable network boot (PXE) from BIOS.



Network Stack

This menu provides Network Stack settings for users to enable network boot (PXE) from BIOS. The following items will display when **Network Stak** is enabled.

» IPv4 PXE Support

Enables or disables IPv4 PXE boot support.

» IPv4 HTTP/S Support

Enables or disables IPv4 HTTP Support.

» IPv6 PXE Support

Enables or disables IPv6 PXE Support.

» IPv6 HTTP/S Support

Enables or disables IPv6 HTTP Support.


» PXE boot wait time

Use this option to specify the wait time to press the ESC key to abort the PXE boot. Press "+" or "-" on your keyboard to change the value. The default setting is 0.

» Media detect count

Use this option to specify the number of times media will be checked. Press "+" or "-" on your keyboard to change the value. The default setting is 1.

GPIO Group Configuration

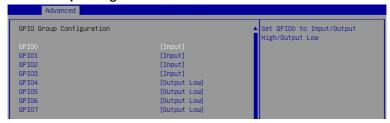

► GPI00 ~ GP007

These settings control the operation mode of the specified GPIO.

► PCIE ASPM settings

This menu provide settings for PCIe ASPM (Active State Power Management) level for different installed devices.



► M2_E1, M2_M1, PCIE1

Sets PCI Express ASPM (Active State Power Management) state for power saving.


Boot



► Boot Option #1-2

This setting allows users to set the sequence of boot devices where BIOS attempts to load the disk operating system.

Security

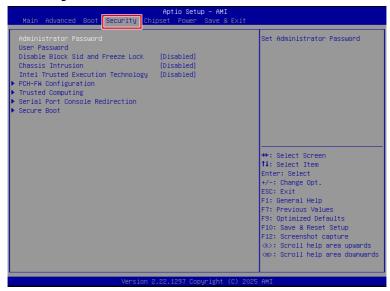

Administrator Password

Administrator Password controls access to the BIOS Setup utility.

User Password

User Password controls access to the system at boot and to the BIOS Setup utility.

Disable Block Sid and Freeze Lock

Enables access to the System ID (SID) and disables BIOS flash region protection after boot. This setting allows system maintenance, diagnostics, and firmware updates but may lower system security.

► Chassis Intrusion

Enables or disables recording messages while the chassis is opened. This function is ready for the chassis equips a chassis intrusion jumper(switch).

[Enabled]	Once the chassis is opened , the system will record and issue a warning message. A beep sound will be emitted before this function is reset.
[Disabled]	Once the chassis is closed , the system will record and issue a warning message.
[Reset]	Clear the warning message. After clearing the message, please return to Enabled or Disabled.

► Intel Trusted Execution Technology

Enables or disables the Intel Trusted Execution Technology. Intel® Trusted Execution Technology (Intel® TXT) is a security feature that provides hardwarebased security to protect the system and maintain the confidentiality and integrity of data stored or created on the system.




/ Important

- The following items must be enabled before "Intel Trusted Execution Technology" can be enabled:
 - All Intel processor cores
 - Hyper-threading
 - Intel Virtualization Technology
 - Trusted Platform Module (TPM)
 - Secure Boot

PCH-FW Configuration

This menu allows you to configure settings related to the PCH firmware.

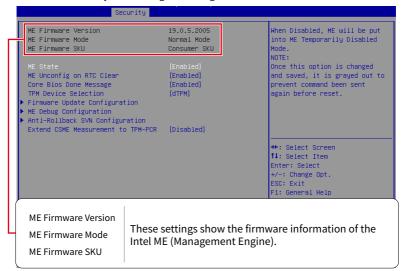

► ME State

This menu controls the Intel® Management Engine State (ME state) parameters, which provides various management and security capabilities. The following items will display when ME State is enabled.

► ME Unconfig on RTC Clear

Enables or disables ME Unconfig on RTC Clear. Enabling this item resets the ME configuration to its default state, removing any customizations or settings applied.

► Core Bios Done Message

Enables or disables Core BIOS Done Message sent to ME.

► TPM Device Selection

Select TPM (Trusted Platform Module) devices from PTT or dTPM (Discrete TPM).

[PTT] Enables PTT in SkuMgr.

[dTPM] Disables PTT in SkuMgr. Warning! PTT/ dTPM will be disabled

and all data saved on it will be lost.

► Firmware Update Configuration



» ME FW Image Re-Flash


Enables or disables the ME Firmware Image Re-flashing.

» FW Update

Enables or disables the capability to perform a firmware update of the ME locally.

ME Debug Configuration

This menu allows you to configure debug-related options for the Intel® Management Engine (ME).

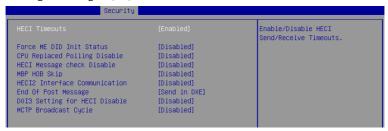

» HECI Timeouts

This setting enables/ disables the HECI (Host Embedded Controller Interface) send/ receive timeouts.

» Force ME DID Init Status

Forces the ME Device ID (DID) initialization status value.

» CPU Replaced Polling Disable

Setting this option disables the CPU replacement polling loop.

» HECI Message check Disable

This setting disables message check for BIOS boot path when sending messages.

» MBP HOB Skip

Setting this option will skip ME's Memory-Based Protection (MBP) H0B region.

» HECI2 Interface Communication

This setting Adds/ Removes HECI2 device from PCI space.

» End of Post Message

Enables or disables End of Post Message sent to ME.

» DOI3 Setting for HECI Disable

Setting this option disables setting DOI3 bit for all HECI devices.

» MCTP Broadcast Cycle

Enables or disables Management Component Transport Protocol (MCTP) Broadcast Cycle.

► Anti-Rollback SVN Configuration



» Automatic HW-Enforced Anti-Rollback SVN

Setting this item enables will automatically activate the hardware-enforced anti-rollback protection based on the Secure Version Number (SVN). Once enabled, the hardware will enforce that only firmware updates with an SVN equal to or higher than the current SVN can be installed.

» Set HW-Enforced Anti-Rollback for Current SVN

Enable HW ERB mechanism for current ARB SVN value. FW with lower ARB-SVN will be blocked from execution. The value will be restored to disable after the command is sent. This item will display when Automatic HW-Enforced Anti-Rollback SVN is enabled.

Trusted Computing



Security Device Support

This item enables or disables BIOS support for security device. When set to [Disable], the OS will not show security device.

► SHA256, 384 PCR Bank

These settings enables or disables the SHA-1 PCR Bank and SHA256, 384 PCR Bank.

► Pending operation

When **Security Device Support** is set to [Enable], **Pending operation** will appear. It is advised that users should routinely back up their TPM secured data.

Clear all data secured by TPM. [TPM Clear]

Discard the se lection. [None]

► Platform Hierarchy, Storage Hierarchy, Endorsement Hierarchy

These settings enables or disables the Platform Hierarchy, Storage Hierarchy and Endorsement Hierarchy.

Physical Presence Spec Version

This settings show the Physical Presence Spec Version.

► TPM 2.0 InterfaceType

This setting shows the TPM 2.0 Interface Type.

► PH Randomization

Enables or disables Platform Hierarchy (PH) Randomization.

▶ Device Select

Select your TPM device through this setting.

Serial Port Console Redirection



► Console Redirection

Console Redirection operates in host systems that do not have a monitor and keyboard attached. This setting enables or disables the operation of console redirection. When set to [Enabled], BIOS redirects and sends all contents that should be displayed on the screen to the serial COM port for display on the terminal screen. Besides, all data received from the serial port is interpreted as keystrokes from a local keyboard.

► Console Redirection Settings (COM1)

This option appears when Console Redirection is **enabled**.

» Terminal Type

To operate the system's console redirection, you need a terminal supporting ANSI terminal protocol and a RS-232 null modem cable connected between the host system and terminal(s). You can select emulation for the terminal from this setting.

Extended ASCII character set. [ANSI]

[VT100] ASCII character set.

[VT100Plus] Extends VT100 to support color, function keys, etc.

[VT-UTF8] Uses UTF8 encoding to map Unicode characters onto one or more bytes.

» Bits per second, Data Bits, Parity, Stop Bits

These setting specifies the transfer rate (bits per second, data bits, parity, stop bits) of Console Redirection.

» Flow Control

Flow control is the process of managing the rate of data transmission between two nodes. It's the process of adjusting the flow of data from one device to another to ensure that the receiving device can handle all of the incoming data. This is particularly important where the sending device is capable of sending data much faster than the receiving device can receive it.

» VT-UTF8 Combo Key Support

This setting enables or disables the VT-UTF8 combination key support for ANSI/VT100 terminals.


» Recorder Mode, Resolution 100x31

These settings enables or disables the recorder mode and the resolution 100x31.

» Putty KeyPad

PuTTY is a terminal emulator for Windows. This setting controls the numeric keypad for use in PuTTY.

Secure Boot

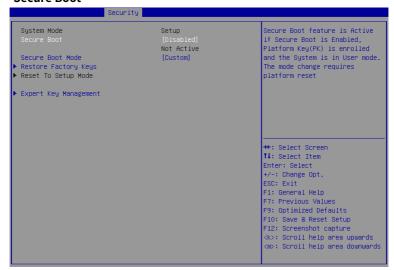

► Secure Boot

Secure Boot function can be enabled only when the Platform Key (PK) is enrolled and running accordingly.

► Secure Boot Mode

Selects the secure boot mode. This item appears when **Secure Boot** is enabled.

[Standard] The system will automatically load the secure keys from BIOS.

[Custom] Allows user to configure the secure boot settings and manually load the secure keys.

► Restore Factory Keys

Allows you to restore all factory default keys. The settings will be applied after reboot or at the next reboot. This item appears when "Secure Boot Mode" sets to [Custom].

► Reset to Setup Mode

Allows you to delete all the Secure Boot keys (PK,KEK,db,dbt,dbx). The settings will be applied after reboot or at the next reboot. This item appears when "Secure Boot Mode" sets to [Custom].

► Expert Key Management

Allows advanced users to manually manage Secure Boot keys. This item appears when "Secure Boot Mode" sets to [Custom].

Chipset



Primary Display

Use the field to select the primary display of the system.

► Internal Graphics

This setting specifies the total graphics memory size for Dynamic Video Memory Technology (DVMT).

DVMT Pre-Allovated

This setting defines the DVMT pre-allocated memory. Pre-allocated memory is the small amount of system memory made available at boot time by the system BIOS for video. Pre-allocated memory is also known as locked memory. This is because it is "locked" for video use only and as such, is invisible and unable to be used by the operating system.

LVDS Panel Type

This setting specifies the LCD Panel resolution and output format.

Power



► Restore AC power Loss

This setting specifies whether your system will reboot after a power failure or interrupt occurs. Available settings are:

[Power Off] Leaves the computer in the power off state.

[Power On] Leaves the computer in the power on state.

Restores the system to the previous status before power failure [Last State]

or interrupt occurred.

Deep Sleep Mode

The setting enables or disables the Deep S5 power saving mode. S5 is almost the same as G3 Mechanical Off, except that the PSU still supplies power, at a minimum, to the power button to allow return to S0. A full reboot is required. No previous content is retained. Other components may remain powered so the computer can "wake" on input from the keyboard, clock, modem, LAN, or USB device.


► USB, LAN, PCIE PME

The item allows the activity of the specified device to wake up the system from power saving modes.

► RTC

When [Enabled], your can set the date and time at which the RTC (real-time clock) alarm awakens the system from suspend mode.

Save & Exit

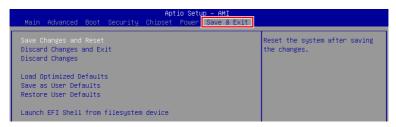

► Save Changes and Reset

Save changes to CMOS and reset the system.

Discard Changes and Exit

Abandon all changes and exit the Setup Utility.

Discard Changes

Abandon all changes.

► Load Optimized Defaults

Use this menu to load the default values set by the motherboard manufacturer specifically for optimal performance of the motherboard.

Save as User Defaults

Save changes as the user's default profile.

Restore User Defaults

Restore the user's default profile.

Launch EFI Shell from filesystem device

This setting helps to launch the EFI Shell application from one of the available file system devices.

GPIO WDT Programming

This chapter provides WDT (Watch Dog Timer) and GPIO (General Purpose Input/ Output) Access.

Abstract

In this section, code examples based on C programming language provided for customer interest. Inportb, Outportb, Inportl and Outportl are basic functions used for access IO ports and defined as following.

Inportb: Read a single 8-bit I/O port.

Outportb: Write a single byte to an 8-bit port.

Inportl: Reads a single 32-bit I/O port.

Outportl: Write a single long to a 32-bit port.

General Purpose IO

General Purposed IO – GPIO/DIO

The GPIO port configuration addresses are listed in the following table:

Name	Output Enable	Output Value	Input Value	Bit
GPIO0	0xF0	0xF1	0xF2	7
GPIO1	0x90	0x91	0x92	4
GPIO2	0xF0	0xF1	0xF2	5
GPIO3	0xF0	0xF1	0xF2	6
GPIO4	0x90	0x91	0x92	0
GPIO5	0x90	0x91	0x92	1
GPIO6	0x90	0x91	0x92	2
GPIO7	0x90	0x91	0x92	3

Note: GPIO control is done via port 0xA00 (index) and 0xA01 (data) for register access. Changes to output value registers are only applied when the GPIO is in output mode.

1.1 Set GPIO Mode (Input or Output):

- 1. Read the current value from the Output Enable register.
- 2. Modify the corresponding bit:
 - Set the bit to 1 for Output mode.
 - Clear the bit to 0 for Input mode.
- 3. Write the updated value back to the Output Enable register.

Example: Set GPIO3 to Input mode

```
Outportb (0xA00, 0xF0); // Select GPIO3 Output Enable Register (0xF0)
val = Inportb (0xA01); // Read current value from the register
val = val & (^{\sim}(1 << 6)); // Clear bit 6 (GPIO3) to 0 to 0 (Input mode)
Outportb (0xA01, val); // Write the updated value back to the register.
```

Example: Set GPIO7 to Output mode

```
Outportb (0xA00, 0x90); // Select GPIO7 Output Enable Register (0x90)
val = Inportb (0xA01); // Read current value from the register
val = val | (1<<3); // Set bit 3 (GPIO7) to 1 (Output mode)
Outportb (0xA01, val); // Write the updated value back to the register
```

1.2 Set output value of GPIO:

- 1. Read the current value from the Output value register.
- 2. Modify the corresponding bit.
 - Write 1 for logic High.
 - Write 0 for logic Low.
- 3. Write the updated value back to the Output value register.

```
Example: Set GPIO2 output "high"
```

```
Outportb (0xA00, 0xF1); // Select GPIO2 Output value Register (0xF1)
val = Inportb (0xA01);
                       // Read current value from the register
val = val | (1<<5);
                    // Set bit 5 (GPIO2) to 1 (output "high")
Outportb (0xA01, val); // Write the updated value back to the register
```

Example: Set GPIO6 output "low"

```
Outportb (0xA00, 0x91); // Select GPIO6 Output value Register (0x91)
val = Inportb (0xA01);
                        // Read current value from the register
val = val & (~(1<<2));
                       // Clear bit 2 (GPIO6) to 0 (output "low")
Outportb (0xA01, val); // Write the updated value back to the register
```

1.3 Read input value from GPIO:

- 1. Read the register value.
- 2. Mask the corresponding bit to get the pin state:

```
Bit = 1: Input is High
Bit = 0 : Input is Low
```

Example: Get GPIO1 input value.

```
Outportb (0xA00, 0x92); // Select GPIO1 Input value Register (0x92)
val = Inportb (0xA01); // Read current value from the register
val = val & (1<<4);
                       // Read GPIO1 (bit 4).
if (val)
          printf ("Input of GPIO1 is High"):
          printf ("Input of GPIO1 is Low");
else
```

Watchdog Timer

2. Watchdog Timer - WDT

The base address (WDT BASE) of WDT configuration registers is 0xA10.

2.1 **Set WDT Time Unit**

```
val = Inportb (WDT BASE + 0x05);
                                        // Read current WDT setting
val = val | 0x08;
                                        // minute mode. val = val & 0xF7 if second mode
Outportb (WDT BASE + 0x05, val);
                                        // Write back WDT setting
```

2.2 **Set WDT Time**

```
Outportb (WDT_BASE + 0x06, Time);
                                  // Write WDT time, value 1 to 255.
```

2.3 **Enable WDT**

```
val = Inportb (WDT BASE + 0x0A);
                                        // Read current WDT PME setting
val = val | 0x01;
                                        // Enable WDT OUT: WDOUT_EN (bit 0) set to 1.
Outportb (WDT BASE + 0x0A, val);
                                        // Write back WDT setting.
val = Inportb (WDT BASE + 0x05);
                                        // Read current WDT setting
val = val | 0x20;
                                        // Enable WDT by set WD_EN (bit 5) to 1.
Outportb (WDT_BASE + 0x05, val):
                                        // Write back WDT setting.
```

2.4 Disable WDT

```
val = Inportb (WDT_BASE + 0x05);
                                        // Read current WDT setting
val = val & 0xDF;
                                        // Disable WDT by set WD EN (bit 5) to 0.
Outportb (WDT BASE + 0x05, val);
                                        // Write back WDT setting.
```

2.5 **Check WDT Reset Flag**

```
If the system has been reset by WDT function, this flag will set to 1.
 if (val)
           printf ("timeout event occurred");
 else
           printf ("timeout event not occurred");
```

2.6 **Clear WDT Reset Flag**

```
val = Inportb (WDT BASE + 0x05);
                                        // Read current WDT setting
val = val | 0x40;
                                        // Set 1 to WDTMOUT STS (bit 6);
Outportb (WDT BASE + 0x05, val);
                                        // Write back WDT setting
```