





Introduction

Oring's **CPGS-9080-C** is managed Ethernet switch card on a highly integrated 3U Compact PCI card form factor. Featuring eight 10/100/1000Base-T(X) ports, the **CPGS-9080-C** is fully compliant with the EN50155 standard, and are ideal for harsh industrial applications, such as factory automation, vehicle, and railway applications. Since the switch card is hot swappable, you do not need to turn off the system power during installation.

Package Contents

The **CPGS-9080-C** is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

Contents	Pictures	Number
CPGS-9080-C		X 1
Console Cable		X 1
CD		X 1
QIG		X 1


Preparation

Before you begin installing the switch, make sure you have all of the package contents available and a PC with Microsoft Internet Explorer 6.0 or later, for using web-based system management tools.


Safety & Warnings

- Elevated Operating Ambient:** If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
- Reduced Air Flow:** Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- Mechanical Loading:** Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- Circuit Overloading:** Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Dimension

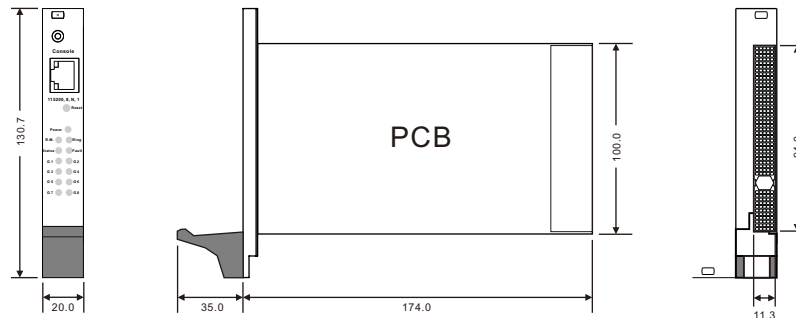

Panel Layouts

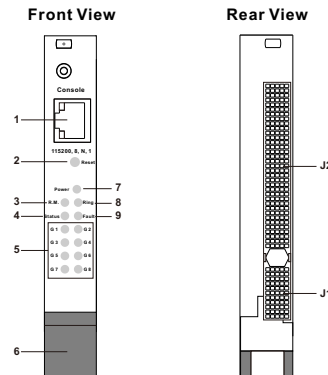

1. Console port
2. Reset button
3. R.M. status LED
4. System status LED
5. G1-G8 port status LEDs
6. Ejection lever
7. Power status LED
8. Ring status LED
9. Fault LED

Network Connection

The switch card uses the CPCI connector for network connection. Please refer to the tablet below for cable types and specifications.

Cable	Type	Max. Length	Connector
10Base-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	8-pin Female CPCI A-coding connector
100Base-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	8-pin Female CPCI A-coding connector
1000Base-T	Cat. 5e,6	UTP 100 m (328 ft)	8-pin Female CPCI A-coding connector

Console Port Pin Definition

To connect the console port to an external management device, you need an RJ-45 to DB-9 cable, which is also supplied in the package. Below is the console port pin assignment information.

PC (male) pin assignment	RS-232 with DB9 (female) pin assignment (RJ45-DB9 cable)	RJ45 pin assignment
PIN#2 Rx/D	PIN#2 Rx/D	PIN#2 Rx/D
PIN#3 Tx/D	PIN#3 Tx/D	PIN#3 Tx/D
PIN#5 GND	PIN#5 GND	PIN#5 GND


Backplane Pin Definition

The tablet below provides information of each pin on the backplane of the card. Please refer to the table for the pin assignment of each serial port.

Pin	Z	A	B	C	D	E	F
25	GND	+5V	NC	NC	+3.3V	+5V	GND
24	GND	NC	+5V	5V (VIO)	NC	NC	GND
23	GND	+3.3V	NC	NC	+5V	NC	GND
22	GND	NC	GND	+3.3V	NC	NC	GND
21	GND	+3.3V	NC	NC	NC	NC	GND
20	GND	NC	GND	5V (VIO)	NC	NC	GND
19	GND	+3.3V	NC	NC	GND	NC	GND
18	GND	NC	GND	+3.3V	NC	NC	GND
17	GND	+3.3V	NC	NC	GND	NC	GND
16	GND	NC	GND	5V (VIO)	NC	NC	GND
15	GND	+3.3V	NC	NC	GND	NC	GND
14	KEY AREA						J1
13							
12							
11	NC	NC	NC	NC	NC	NC	NC
10	NC	NC	NC	NC	NC	NC	NC
9	NC	NC	NC	NC	NC	NC	NC
8	NC	NC	NC	NC	NC	NC	NC
7	NC	NC	NC	NC	NC	NC	NC
6	NC	NC	NC	NC	NC	NC	NC
5	NC	NC	NC	NC	NC	NC	NC
4	NC	NC	NC	NC	NC	NC	NC
3	NC	NC	NC	NC	NC	NC	NC
2	NC	NC	NC	NC	NC	NC	NC
1	NC	NC	NC	NC	NC	NC	NC

Pin	Z	A	B	C	D	E	F
22	GND	NC	STxD	GND	NC	SRxD	GND
21	GND	NC	NC	GND	NC	NC	GND
20	GND	LED5_0	LED5_1	GND	LED7_0	LED7_1	GND
19	GND	LED4_0	LED4_1	GND	LED6_0	LED6_1	GND
18	GND	LED1_0	LED1_1	GND	LED3_0	LED3_1	GND
17	GND	LED0_0	LED0_1	GND	LED2_0	LED2_1	GND
16	GND	P7_A_P	P7_A_N	GND	P7_C_P	P7_C_N	GND
15	GND	P7_B_P	P7_B_N	GND	P7_D_P	P7_D_N	GND
14	GND	P6_A_P	P6_A_N	GND	P6_C_P	P6_C_N	GND
13	GND	P6_B_P	P6_B_N	GND	P6_D_P	P6_D_N	GND
12	GND	P5_A_P	P5_A_N	GND	P5_C_P	P5_C_N	GND
11	GND	P5_B_P	P5_B_N	GND	P5_D_P	P5_D_N	GND
10	GND	P4_A_P	P4_A_N	GND	P4_C_P	P4_C_N	GND
9	GND	P4_B_P	P4_B_N	GND	P4_D_P	P4_D_N	GND
8	GND	P3_A_P	P3_A_N	GND	P3_C_P	P3_C_N	GND
7	GND	P3_B_P	P3_B_N	GND	P3_D_P	P3_D_N	GND
6	GND	P2_A_P	P2_A_N	GND	P2_C_P	P2_C_N	GND
5	GND	P2_B_P	P2_B_N	GND	P2_D_P	P2_D_N	GND
4	GND	P1_A_P	P1_A_N	GND	P1_C_P	P1_C_N	GND
3	GND	P1_B_P	P1_B_N	GND	P1_D_P	P1_D_N	GND
2	GND	P0_A_P	P0_A_N	GND	P0_C_P	P0_C_N	GND
1	GND	P0_B_P	P0_B_N	GND	P0_D_P	P0_D_N	GND


Application

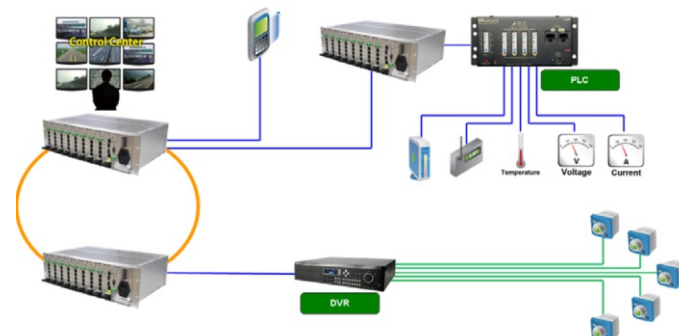

Installation

Follow the steps below to install the card to the CPCI chassis.

1. Remove the metal cover plate on the back of an available CPCI slot.
2. Insert the card into the slot and use the bracket screws to secure it firmly in place.
3. Fasten the card with the chassis.
4. Connect the card to the desired network devices.

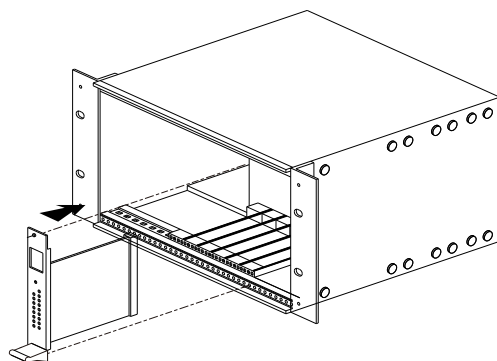


Configurations

After installing the switch card, the green power LED should turn on. Please refer to the following tablet for LED indication.

LED	Color	Status	Description
Power	Green	On	DC power on
G1-G8	Green	On/Blink	Port is linked / act
R.M	Green	On	Operating as Ring Master
Ring	Green	On	Operating in Ring mode
Status	Green	On	Ethernet link on
Fault	Amber	On	Faulty indication (power failure or port malfunctioning)

Follow the steps to set up the card:

 1. Launch the Internet Explorer and type in IP address of the switch. The default static IP address is **192.168.10.1**



2. Log in with default user name and password (both are **admin**). After logging in, you should see the following screen. For more information on configurations, please refer to the user manual. For information on operating the switch using ORing's Open-Vision management utility, please go to ORing website.



Resetting

To reboot the switch, press the **Reset** button for 2-3 seconds.

To restore the switch configurations back to the factory defaults, press the **Reset** button for 5 seconds.

Specifications

ORing Switch Model	CPGS-9080-C
Physical Ports	
10/100/1000Base-T(X) Ports Auto MDI/MDIX	8-port with CompactPCI interface (PICMG 2.0 compatible)
Technology	
Ethernet Standards	IEEE 802.3 for 10Base-T IEEE 802.3u for 100Base-TX IEEE 802.3ab for 1000Base-T IEEE 802.3x for Flow control IEEE 802.3ad for LACP (Link Aggregation Control Protocol) IEEE 802.1D for STP (Spanning Tree Protocol) IEEE 802.1p for COS(Class of Service) IEEE 802.1Q for VLAN Tagging IEEE 802.1w for RSTP (Rapid Spanning Tree Protocol) IEEE 802.1s for MSTP (Multiple Spanning Tree Protocol) IEEE 802.1x for Authentication IEEE 802.1AB for LLDP (Link Layer Discovery Protocol)
MAC Table	8K
Priority Queues	8
Processing	Store-and-Forward
Switch Properties	Switch latency: 7 us Switch bandwidth: 16Gbps Max. Number of Available VLANs: 4096 IGMP multicast groups: 128 for each VLAN Port rate limiting: User Define
Jumbo Frame	Up to 9.6K Bytes
Security Features	Device Binding security feature Enable/disable ports, MAC based port security Port based network access control (802.1x) VLAN (802.1Q) to segregate and secure network traffic Radius centralized password management SNMPv2 encrypted authentication and access security Https / SSH enhance network security

Software Features	STP/RSTP/MSTP(IEEE 802.1D/w/s) Redundant Ring (O-Ring) with recovery time less than 30ms over 250units TOS/Diffserv supported Quality of Service (802.1P) for real-time traffic VLAN (802.1Q) with VLAN tagging IGMP Snooping IP-based bandwidth management Application-based QoS management DOS/DDOS auto prevention Port configuration, status, statistics, monitoring, security DHCP Server/Client/Relay SMTP Client Modbus TCP
Network Redundancy	O-Ring O-Chain MRP MSTP (STP / RSTP compatible)
RS-232 Serial Console Port	RS-232 in RJ45 connector with console cable. Baud rate setting: 115200bps, 8, N, 1
LED Indicators	
Power Indicator	Green: Power LED x1
Status Indicator	Green: System status indicator
R.M. Indicator	Green: Indicate system operated in O-Ring Master mode
Ring Indicator	Green: Indicate system operated in O-Ring mode
Fault Indicator	Amber: Indicate unexpected event occurred
10/100/1000Base-T(X) Port Indicator	Green for port Link/Act.
Power	
Power Input	CompactPCI bus powered (5VDC)
Power Consumption (Typ.)	6.2 Watt
Overload current protection	Present
Physical Characteristic	
Dimension (W x D x H)	20.0(W)x209(D)x130.7(H) mm (0.79x8.23x5.15 inch)
Weight (g)	224g
Environmental	
Storage Temperature	-40 to 85°C (-40 to 185°F)
Operating Temperature	-40 to 70°C (-40 to 158°F)
Operating Humidity	5% to 95% Non-condensing
Regulatory Approvals	
EMC	CE EMC(EN 55024, EN55022), FCC Part 15
EMI	EN 55022, CISPR32, EN 61000-3-2, EN 61000-3-3, FCC Part 15, CISPR Class A
EMS	EN 55024, (IEC61000-4-2 (ESD), IEC61000-4-3 (RS), IEC61000-4-4 (EFT), IEC61000-4-5 (Surge), IEC61000-4-6 (CS), IEC61000-4-8, IEC61000-4-11 (DIP))
Shock	IEC60068-2-27
Free Fall	IEC60068-2-31
Vibration	IEC60068-2-6
Safety	EN60950-1
MTBF (Telcordia SR-332 Issue 2:25°C)	792,718.3187hrs
Warranty	5 years

Contact for maintenance and repair service:

ORing

Copyright© 2022 ORing
All rights reserved.



ORing Industrial Networking Corp.

TEL: +886-2-2218-1066 Website: www.oringnet.com
FAX: +886-2-2218-1014 E-mail: support@oringnet.com
Address: 3F., No.542-2, Zhongzheng Rd., Xindian Dist., New Taipei City 23148, Taiwan