

QBiX-Pro-AMDA2314H-A1

QBiX-Pro Industrial Embedded System
Quick Start Guide

Copyright Notice

This document is copyrighted, 2025. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, GIGAIPC assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

GIGAIPC reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- AMD® is trademark of Advanced Micro Devices
- Microsoft Windows is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
System kit	1
Screw I Head For 2.5" HDD M3x8L (25KSG-130081-K1R)	4
Thermal Pad for Memory (25ST3-200086-T5R)	1
Thermal Pad for Wi-Fi (25ST3-200060-T5R)	1
2-pin Terminal Blocks Male Plug (25IO0-EC3812-D2R)	1
SATA Cable (25CF4-170020-S9R)	1
3-pin Terminal Blocks Male Plug (25IO0-5ESDV0-D2R)	1
Exsiccator (25g)	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the GIGAIPC.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.

13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
- 18. DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

High Temperature Warning

(1) This equipment is intended to be used in Restrict Access Location. The access can only be gained by Skilled person or by Instructed person who have been instructed about the metal chassis of the equipment is so hot that Skilled person have to pay special attention or take special protection. Only authorized by well trained professional person can access the restrict access location.

(2) External metal parts are hot!! Before touching it, special attention or protection is necessary



Table Contents

QBiX-Pro Industrial Embedded System	1
Quick Start Guide	
Copyright Notice	2
Acknowledgement	3
Packing List.....	4
About this Document	5
Safety Precautions	6
FCC Statement.....	8
High Temperature Warning	8
 Chapter 1 - Product Specifications	 13
1.1 Specifications : QBiX-Pro-AMDA2314H-A1.....	15
 Chapter 2 – Industrial Embedded System Kit	 17
2.1 Dimension	18
2.2 Getting Familiar with Your Unit.....	19
2.3 A) Memory Installation: DDR4 SO-DIMM	21
2.4 B) M.2 SSD Installation: How to safely install the M.2 2280 SSD	22
2.5 C) Wireless Module : How to safely install the Module (Wireless Module inclusion may vary based on local distribution)	23
2.6 D) Mini PCIe Card Installation: How to safely install the Mini PCIe Card	24

2.7	E) 2.5" HDD/SSD installation: How to install 2.5" HDD/SSD	25
2.8	Antenna Installation (Antenna inclusion may vary based on local distribution)	26
2.9	Cable Pin-define	27
2.10	Support	28
2.11	Safety and Regulatory Information.....	29

Chapter 3 – Hardware Information 30

3.1	Jumpers and Connectors	31
3.2.1	HDMI2_1, HDMI4_3 (HDMI Connector)	34
3.2.2	LAN1, LAN2 (LAN Connector)	35
3.2.3	USB32_1 (USB 3.2 Gen 2x1 Connector)	36
3.2.4	BKL_CN (Backlight Control header)	37
3.2.5	SPKR (Speaker out connector)	38
3.2.6	F_AUDIO (Front panel audio header)	39
3.2.7	SODIMM1, SODIMM2 (DDR4 SO-DIMM slot)	40
3.2.8	SATAPW (SATA power connector)	41
3.2.9	SATA (SATA 6Gb/s connector)	42
3.2.10	F_USB2_2 (USB 2.0 header)	43
3.2.11	F_USB2_1 (USB 2.0 header)	44
3.2.12	GPIO_CNT (General purpose input/output header)	45
3.2.13	SYS_PANEL (Front panel header)	46
3.2.14	M2M (M.2 Slot, 2280 M-key).....	47
3.2.15	AT_CN (AT/ATX mode select jumper)	48
3.2.16	COM1, COM2, COM3, COM4 (Serial port header)	49

3.2.17	MPCIE (Mini PCIE slot).....	50
3.2.18	DC IN (DC IN 1 x 4pin power connector)	51
3.2.18	M2E (M.2 Slot, 2230 E-key).....	52
3.2.19	JCOM1 (RI pin RI/5V/12V Select jumper for COM1 port) ..	53
3.2.20	Battery (Battery Connector)	54
3.2.21	CPU_FAN (CPU FAN connector)	55
3.2.22	SYS_FAN (System FAN connector)	56
3.2.23	EDP (Embedded Display port connector)	57

Chapter 4 – BIOS 58

4.1	Introduction	59
4.2	The Main Menu.....	60
4.3	Advanced	61
4.3.1	TPM Configuration.....	62
4.3.2	Super IO Configuration	63
4.3.3	Hardware Monitor	64
4.3.4	CPU Configuration	65
4.3.5	Network Stack Configuration.....	66
4.3.6	S5 RTC Wake Settings	67
4.3.7	NVMe Configuration	68
4.3.8	SATA Configuration	69
4.3.9	Offboard SATA Controller Configuration	70
4.3.10	Digital IO Port Configuration	71
4.3.11	Realtek PCIe GBE Family Controller (MAC:10:FF:E0:39:8D:78)(MAC address may varied based on different motherboard)	72

4.3.12 Realtek PCIe GBE Family Controller (MAC:10:FF:E0:39:8D:79) (MAC address may varied based on different motherboard)..... 73

4.4 Chipset74

4.5 Security 75

4.6 Boot..... 78

4.7 Save & Exit 79

Chapter 1

Chapter 1 - Product Specifications

1.1 Specifications : QBIX-Pro-AMDA2314H-A1


System	QBIX-Pro-AMDA2314H-A1
Dimension	178W x 125D x 52.7H (mm)
CPU	AMD Ryzen™ R2314 Embedded Processor 14nm, 4 cores, 4 threads, 2.1 GHz, up to 3.5 GHz
Memory	2 x DDR4 SO-DIMM sockets, Max. Capacity 64 GB Support Dual channel DDR4 2667 MHz memory modules
Ethernet	2 x GbE LAN Ports (Realtek® RTL8111H-CG)
Graphic support	Integrated Graphics Processor - AMD Radeon Graphics: 4 x HDMI 2.0 port, supporting a maximum resolution of 4096x2160 @60Hz (4 independent display outputs)
Audio	Realtek® ALC269
Storage	1 x 2.5" HDD/SSD (SATA 6Gb/s)
Expansion Slots	1 x 2280 M.2 M-Key (PCIe Gen3x4, SATA 6Gb/s) 1 x 2230 M.2 E-Key 1 x Full-size mini PCIe with SIM slot
Front I/O	2 x RJ45 LAN Ports 2 x USB 3.2 Gen 2x1 4 x HDMI 1 x Power button with LED 1 x HDD LED 1 x External Antenna Hole (Optional)
Rear I/O	2 x USB 2.0 1 x GPIO (8 bits) 2 x COM Port (RS-232/422/485) 1 x Remote control 1 x Combo audio jack (Headphone & Headset) 1 x 3-pin Terminal block
Side I/O	2 x External Antenna Holes (Optional)
TPM	Onboard TPM 2.0 security chip INFINEON SLB9665TT2.0
Power	+9V~36VDC (Full range)

System	QBiX-Pro-AMDA2314H-A1
Operation temperature	Operating temperature: 0°C to 50°C Operating humidity: 60°C @ 20-95% (non-condensing) Non-operating temperature: -40°C to 85°C Non-operating humidity: 85°C @ 95% (non-condensing) Use wide temperature range memory and storage
Vibration During Operation	Operation: IEC 60068-2-64, 3 Grms, random, 5 ~ 500 Hz, 1 hr / Per Axis, With SSD/M.2 2280 Non-operation: IEC 60068-2-6, 2 G, Sine, 10 ~ 500 Hz, 1 Oct/ min, 1 hr / Per Axis
Shock During Operation	Operation: IEC 60068-2-27, 50 G, half sine, 11 ms duration, With SSD
Packaging Content	Carton size: 505 x 333 x 231 (mm) Packing Capacity: 5pcs Single Box size: 313 x 191 x 95 (mm) Including: Screw I Head For 2.5" HDD M3x8L x 4 (P/N: 25KSG-130081-K1R) Thermal pad for Memory x 1 (P/N: 25ST3-200086-T5R) Thermal pad for Wi-Fi x 1 (P/N: 25ST3-200060-T5R) 2-pin Terminal Blocks Male Plug x 1 (P/N:25IO0-EC3812-D2R) SATA Cable x 1 (P/N: 25CF4-170020-S9R) 3-pin Terminal Blocks Male Plug x 1 (P/N:25IO0-5ESDVO-D2R)
Mounting	Wall mount P/N: 25HB2-CGAA20-CHR x 1 (Optional) VESA 75/100 P/N: 25HB1-TPL021-S8R x 1 + 12SZ-000001-00R x 1 (Screw) (Optional)
Order Information	System : 6BQP2314AMR-SI (Box packing)

Chapter 2


Chapter 2 – Industrial Embedded System Kit

2.1 Dimension

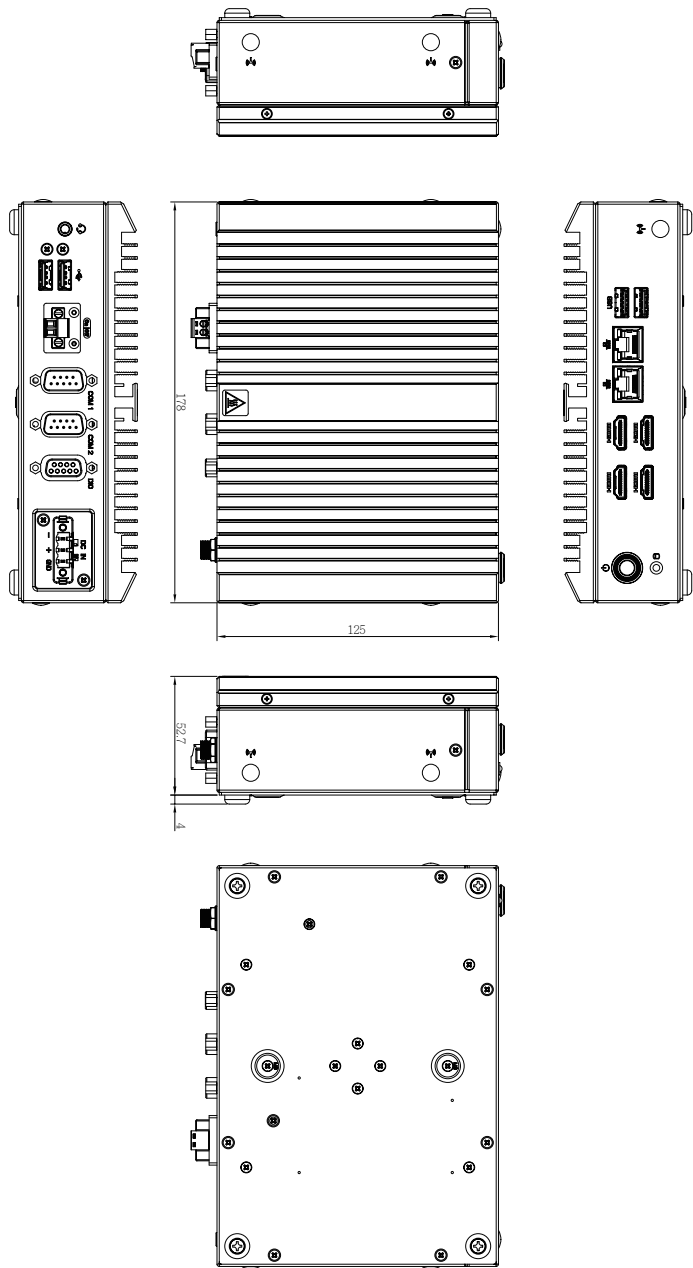


2.2 Getting Familiar with Your Unit


[Front Side]

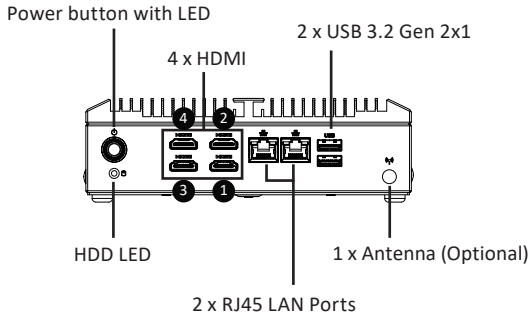


[Left Side]

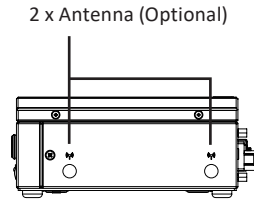

[Rear Side]

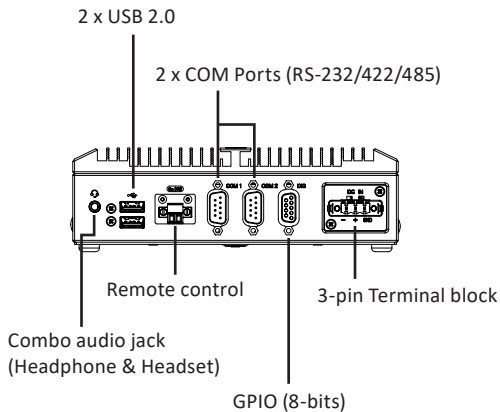


[Right Side]

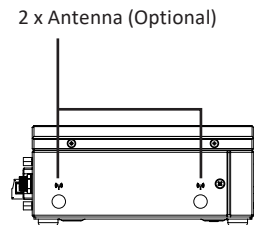

[Install]



- * Before opening the case, make sure to unplug the power cord.
- * Before Connecting the power, make sure to fasten the case securely.

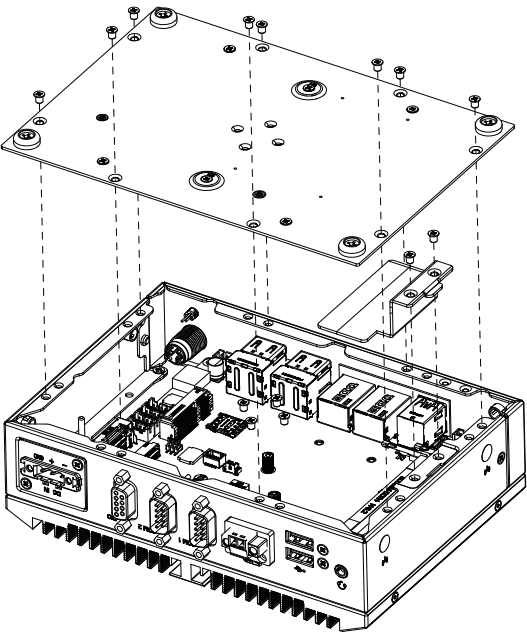

[Bottom PCB Side]

	Information
A	2 x DDR4 SO-DIMM sockets
B	1 x M.2 slot 2280 M-Key
C	1 x M.2 slot 2230 E-Key


	Information
D	1 x Full-size mini PCIe with SIM slot
E	support 2.5" Hard drive/SSD

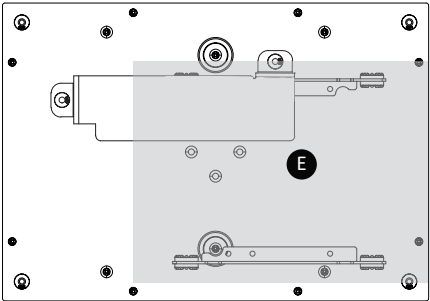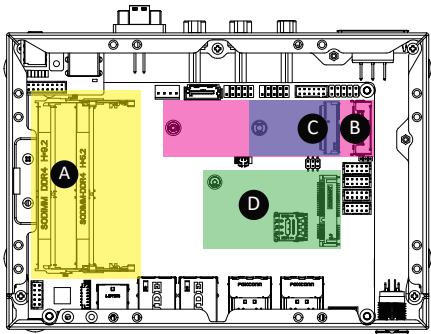


2.3 A) Memory Installation: DDR4 SO-DIMM

1


Carefully insert SO-DIMM memory modules.

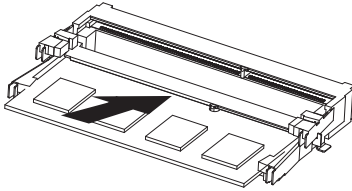**2**


Push down until the modules click into place.

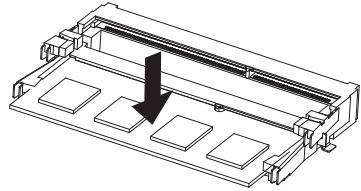**3**

Carefully insert SO-DIMM memory modules.

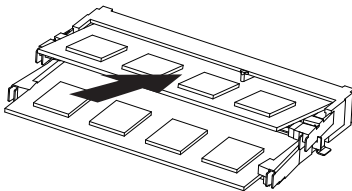**4**


Push down until the modules click into place.

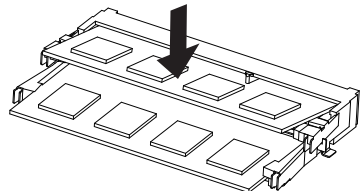

2.4 B) M.2 SSD Installation: How to safely install the M.2 2280 SSD


1

Remove the screw from the screw hole
(Location : MSO1)

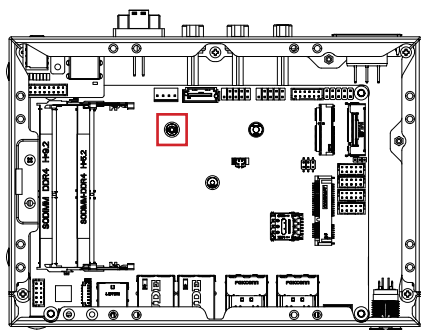

2


Carefully insert the M.2 SSD into the slot, and secure with the screw.

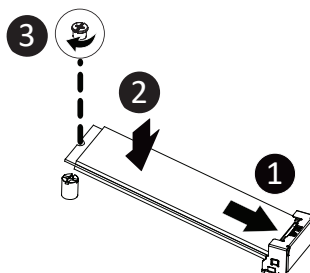

2.5 C) Wireless Module : How to safely install the Module (Wireless Module inclusion may vary based on local distribution)


①

Remove the screw from the screw hole (Location : MSO3)

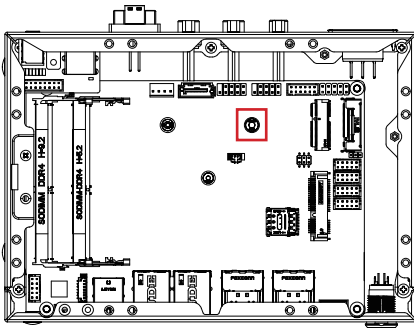


②

Carefully insert the wireless module into the M.2 slot.

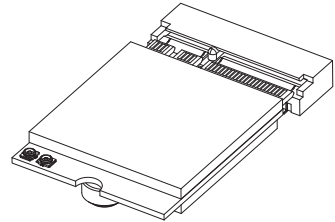


③

Lock the screw in the middle.

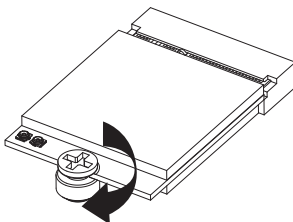

④


Install the antenna on the left side of the connection wireless module down.

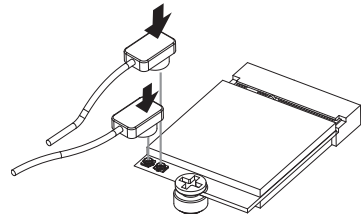

2.6 D) Mini PCIe Card Installation: How to safely install the Mini PCIe Card


1

Remove the screw from the screw hole
(Location : MSO2)

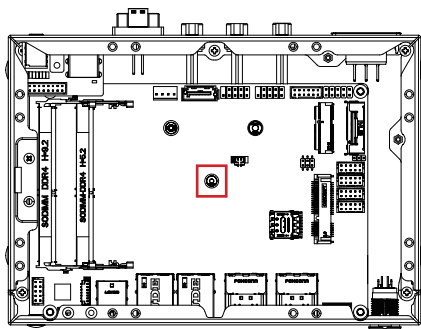


2

Carefully insert the Mini PCIe Card into the slot.

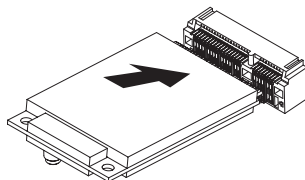



3

Secure the Mini PCIe Card with screw.

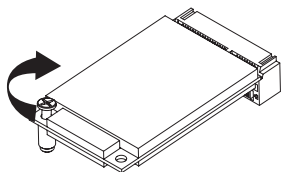

2.7 E) 2.5" HDD/SSD installation: How to install 2.5" HDD/SSD


- ❶ Remove 2 screws to remove the bracket. (Corresponding 2 screw locations can be found in the bottom right drawing.)
- ❷ First : assemble the SATA cable and 2.5" HDD/SSD.
 Second : remove 2 release papers on the thermal pad which located on the bottom cover.
 Third : install 2.5" HDD/SSD (Gold finger of 2.5" HDD/SSD must face down),
 and secure with 4 screws.
 Fourth : install the bracket back with 2 screws.
- ❸ Assemble the SATA cable on the SATA connector, and lock the bottom cover.

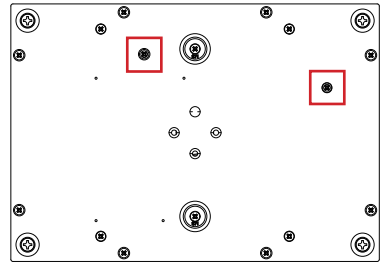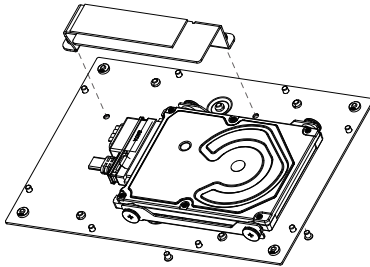

2.8 Antenna Installation (Antenna inclusion may vary based on local distribution)


1

Carefully insert the antennas into the connectors.

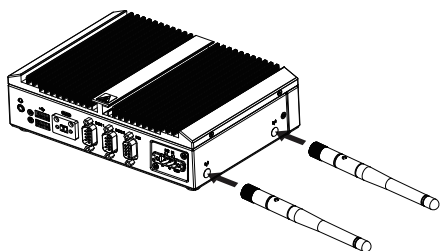


2

Turn the antennas clockwise until they are completely secure on the connectors.

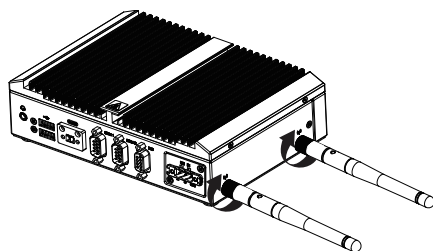


3

Flip up the antenna heads so that they are perpendicular to the machine.

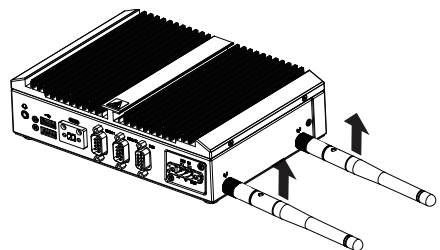

2.9 Cable Pin-define


1. DB9 COM (25CF8-180620-S9R)

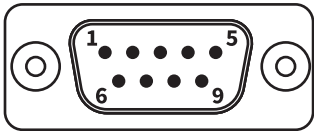

DB9 COM Pin Define

DB9 Pin	RS-232	RS-422 Full Duplex	RS-485 Half Duplex
1	DCD	TXD-	D-
2	RXD	TXD+	D+
3	TXD	RXD+	-
4	DTR	RXD-	-
5	GND		
6	DSR	-	-
7	RTS	-	-
8	CTS	-	-
9	RI	-	-


2. DBP DIO (25CR5-150606-S9R)

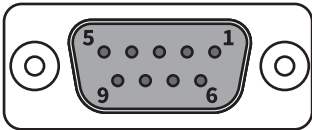

DBP DIO Pin Define

DBP DIO Pin	Pin Name
1	GPIO-output_1
2	GPIO-input_1
3	GPIO-output_2
4	GPIO-input_2
5	GPIO-output_3
6	GPIO-input_3
7	GPIO-output_4
8	GPIO-input_4
9	5V

3. Remote control connector (25CR5-150606-S9R)

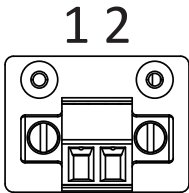

Remote control Pin define

Remote control pin	Pin Name
1	Power button +
2	Power button -

2.10 Support

- For AVL list, go to: <http://www.gigaipc.com>
- To download the latest drivers, go to: <http://www.gigaipc.com>
- For product support, go to: <http://www.gigaipc.com>

2.11 Safety and Regulatory Information

Risk of explosion if the battery is replaced with an incorrect type. Batteries should be recycled where possible.

Disposal of used Batteries must be in accordance with local environmental regulations.

Failure to use the included Power Adapter may violate regulatory compliance and may expose the user to safety hazards.




At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Chapter 3

Chapter 3 – Hardware Information

3.1 Jumpers and Connectors


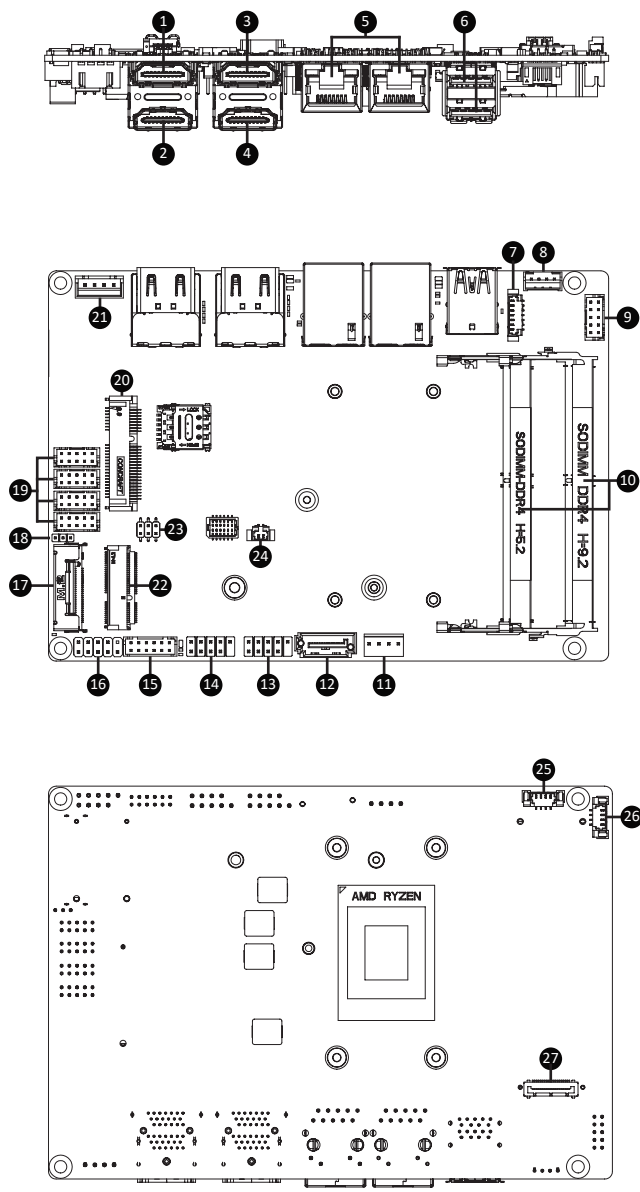


No	Code	Description
1	HDMI2_1	HDMI 2 connector
2		HDMI 1 connector
3	HDMI4_3	HDMI 4 connector
4		HDMI 3 connector
5	LAN1, LAN2	LAN connectors
6	USB32_1	USB 3.2 Gen 2x1 connector
7	BKL_CN	Backlight control header
8	SPKR	Speaker out connector
9	F_AUDIO	Front Audio connector
10	SODIMM1 SODIMM2	DDR4 SO-DIMM Slot
11	SATAPWR	SATA power connector
12	SATA	SATA 6Gb/s connector
13	F_USB2_2	USB 2.0 header
14	F_USB2_1	USB 2.0 header
15	GPIO_CNT	General Purpose input/output header
16	SYS_PANEL	Front panel header
17	M2M	M.2 Slot, 2280 M-key
18	AT_CN	AT/ATX mode select jumper
19	COM1, COM2, COM3, COM4	Serial port header COM1 : RS-232/422/485 & RI/5V/12V COM2 : RS-232/422/485 COM3, COM4 : RS-232
20	MPCIE	Mini PCIE slot

No	Code	Description
21	DC_IN	DC IN 1x4 pin power connector
22	M2E	M.2 Slot, 2230 E-key
23	JCOM1	RI pin RI/5V/12V Select jumper for COM1 port
24	BATTERY	Battery cable connector
25	CPU_FAN	CPU fan connector
26	SYS_FAN	System fan connector
27	EDP	Embedded Display Port Connector

3.2.1 HDMI2_1, HDMI4_3 (HDMI Connector)

1 2 3 4

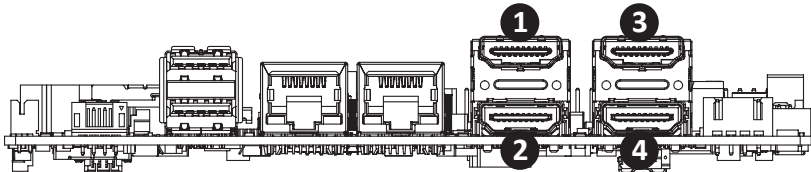
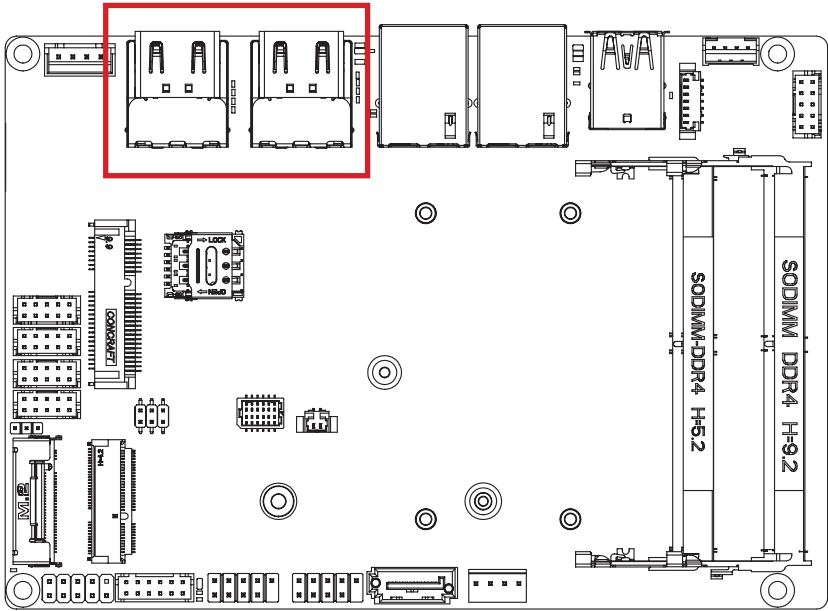


Pin No.	Definition	Pin No.	Definition
1	TX2p	20	TX2p
2	GND	21	GND
3	TX2n	22	TX2n
4	TX1p	23	TX1p
5	GND	24	GND
6	TX1n	25	TX1n
7	TX0p	26	TX0p
8	GND	27	GND
9	TX0n	28	TX0n
10	CLKp	29	CLKp
11	GND	30	GND


Pin No.	Definition	Pin No.	Definition
12	CLKn	31	CLKn
13	NC	32	NC
14	NA	33	NA
15	DDC Clock	34	DDC Clock
16	DDC Data	35	DDC Data
17	GND	36	GND
18	5V	37	5V
19	Hot Plug Detect	38	Hot Plug Detect

3.2.2 LAN1, LAN2 (LAN Connector)

5

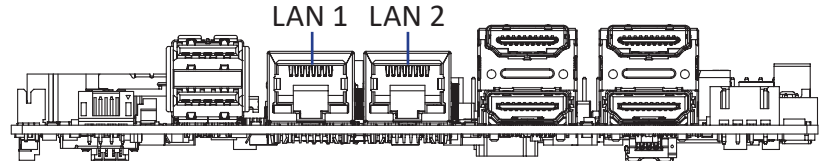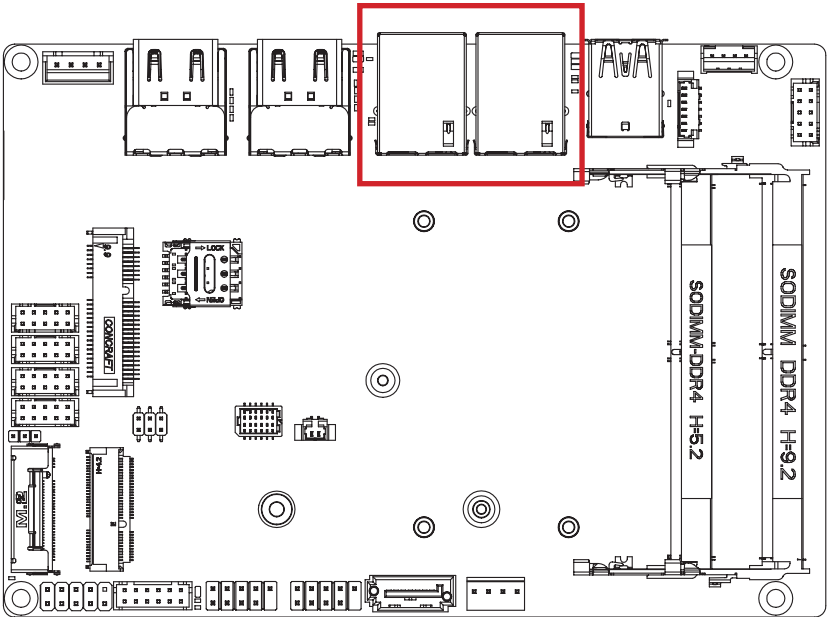

LAN connector

 


State	Description
Orange On	1Gbps data rate
Green On	100Mbps data rate
Off	10Mbps data rate

Pin No.	Definition	Pin No.	Definition
1	TX1+	4	TX3+
2	TX1-	5	TX3-
3	TX2+	7	TX4+
6	TX2-	8	TX4-

3.2.4 BKL_CN (Backlight Control header)

7

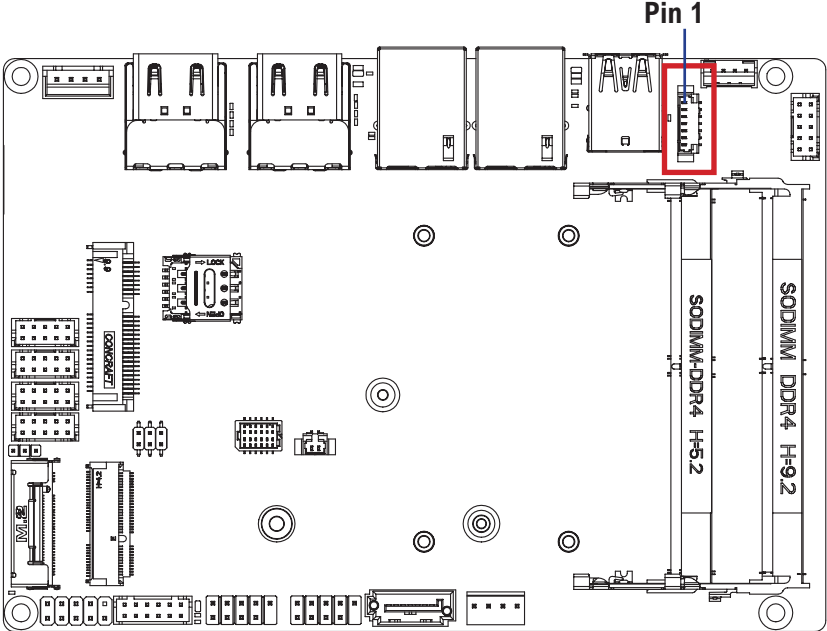



Backlight Control connector

1
7

Connector PN	Vendor
85205-0770N	ACES
A1250WV-S-07PC	JOINT-TECH
Connector type	
1x7pin header, pitch 1.25mm	

Pin No.	Definition
1	NC
2	NC
3	VDD
4	GND
5	GND
6	12V
7	12V

3.2.5 SPKR (Speaker out connector)

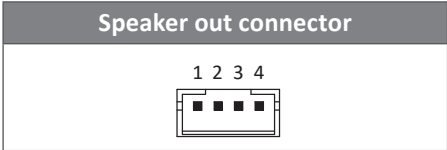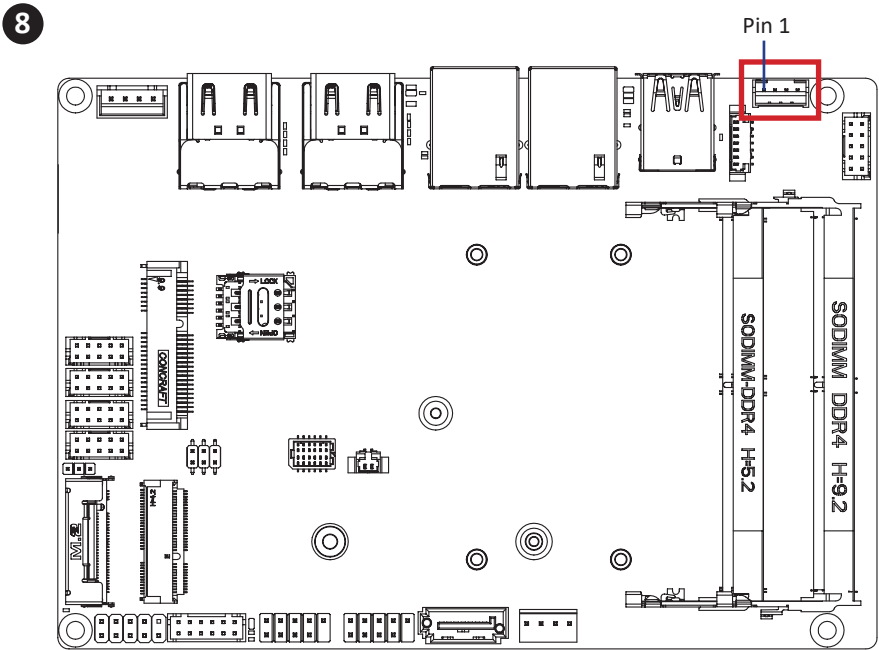


Connector PN	Vendor
A2001WV-04P146	JOINT-TECH
Connector type	
1x4pin header, pitch 2.0mm	

Pin No.	Definition
1	Speaker Out R+
2	Speaker Out R-
3	Speaker Out L-
4	Speaker Out L+

3.2.6 F_AUDIO (Front panel audio header)

9

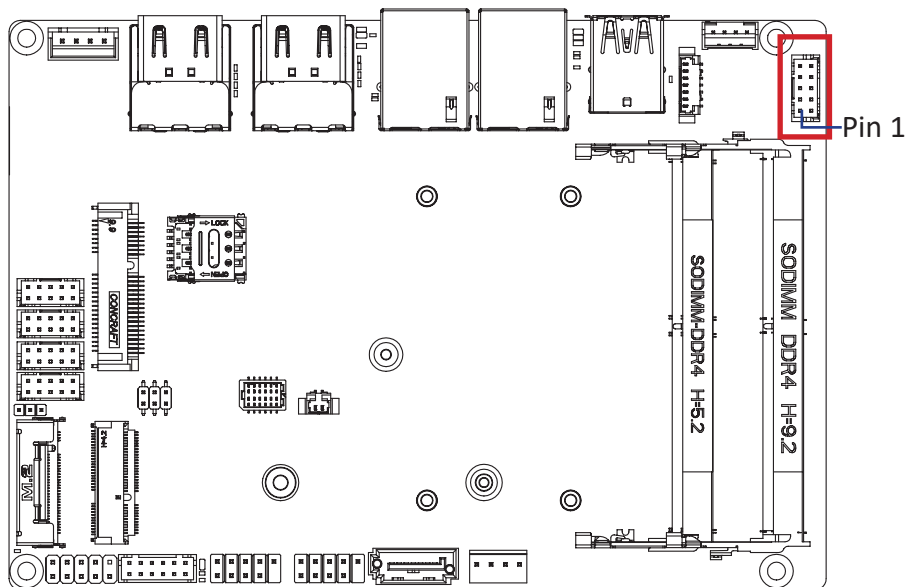


Front panel audio header	
9	10
1	2

Connector PN	Vendor
725-81-10TW00	PINREX
Connector type	
2x5pin header, pitch 2.0mm	

Pin No.	Definition	Pin No.	Definition
1	MIC-Left	2	GND
3	MIC-Right	4	NC
5	HPOUT_ Right	6	MIC_JD
7	FAUDIO_JD	8	NC
9	HPOUT_Left	10	HPOUT_JD


3.2.7 SODIMM1, SODIMM2 (DDR4 SO-DIMM slot)

10

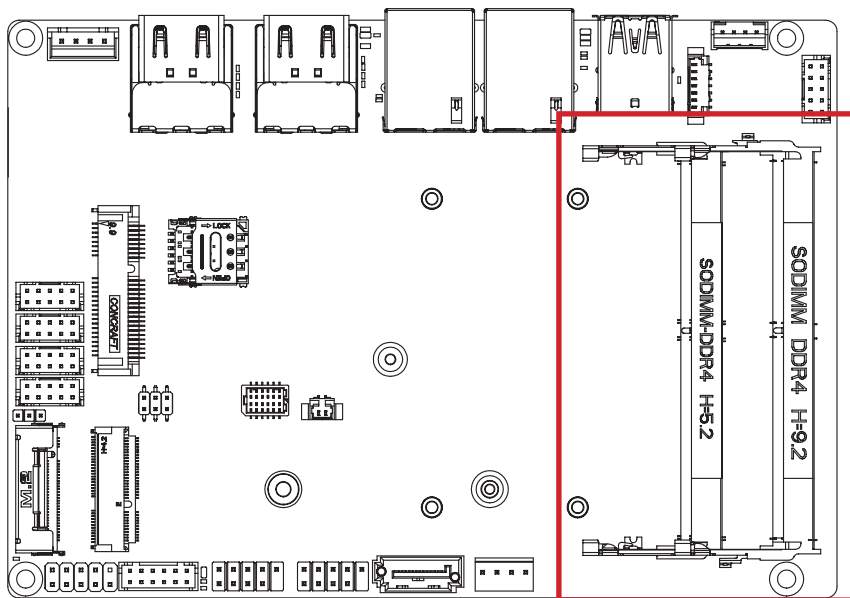

3.2.8 SATAPW (SATA power connector)

11

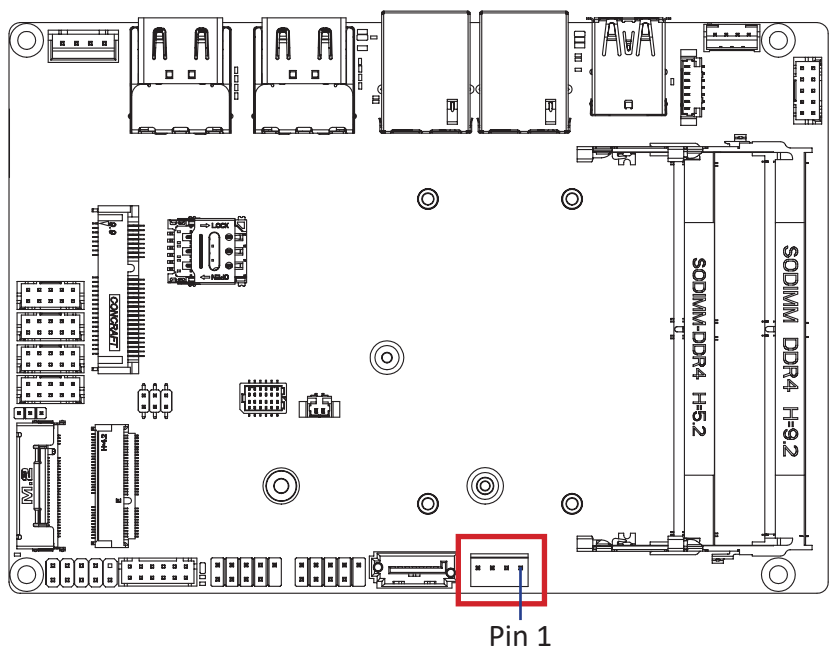

Hard Disk Power Connector

4





1

Connector PN	Vendor
743-91-045W00	PINREX
Connector type	
1x4pin header, pitch 2.54mm	

Pin No.	Definition
1	12V
2	GND
3	GND
4	5V

3.2.9 SATA (SATA 6Gb/s connector)


12

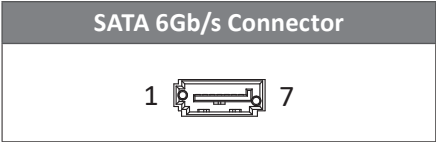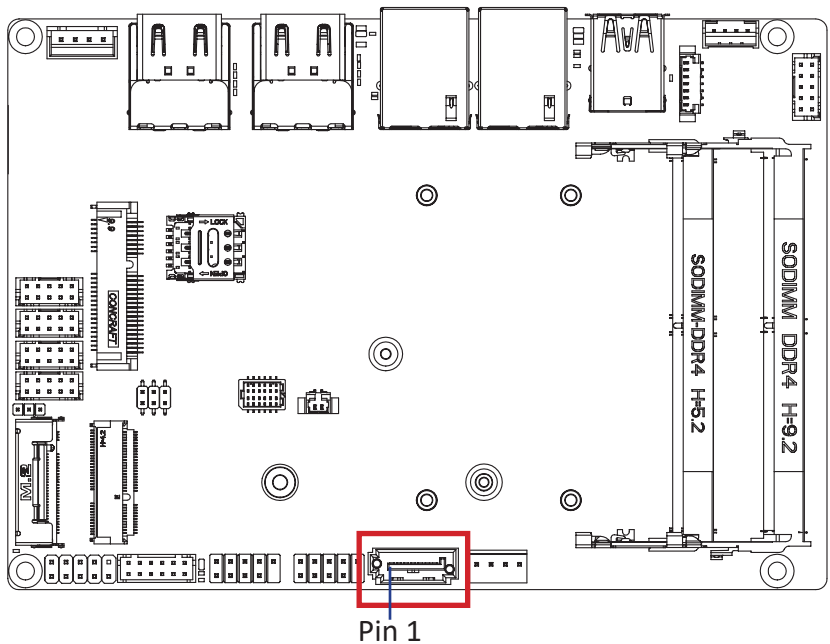

Pin No.	Definition
1	GND
2	TXp
3	TXn
4	GND
5	RXn
6	RXp
7	GND

3.2.10 F_USB2_2 (USB 2.0 header)

13

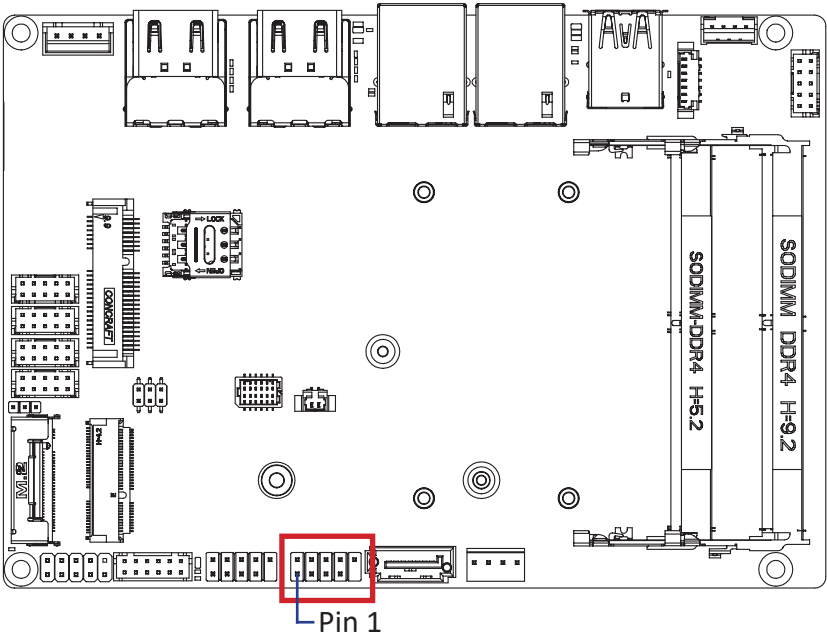


USB 2.0 header	
2	10
1	9

Connector PN	Vendor
210-92-05G117	PINREX
Connector type	
2x5pin header, pitch 2.54mm	

Pin No.	Definition
1	5V
2	5V
3	D1n
4	D2n
5	D1p
6	D2p
7	GND
8	GND
9	No Pin
10	GND

3.2.11 F_USB2_1 (USB 2.0 header)

14

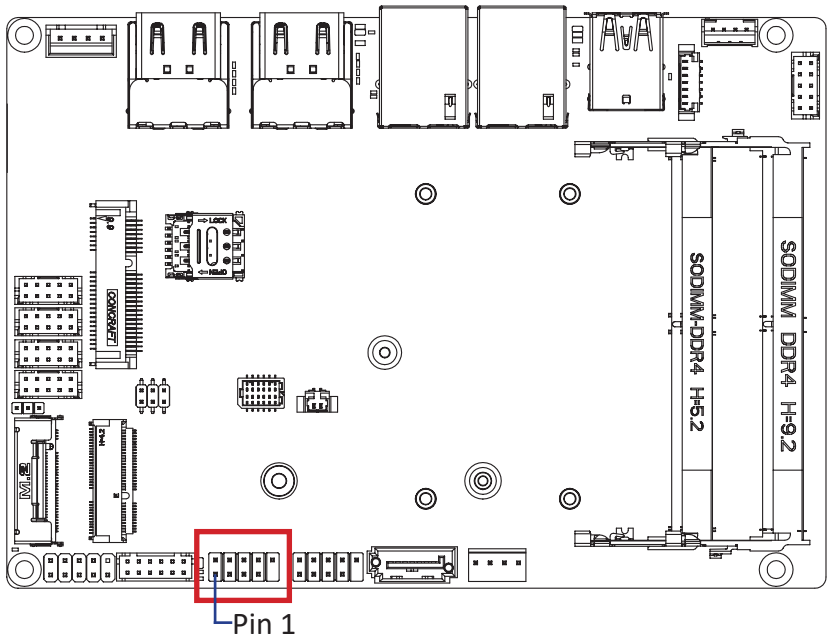

USB 2.0 header



Connector PN

210-92-05G117

Vendor

PINREX


Connector type

2x5pin header, pitch 2.54mm

Pin No.	Definition
1	5V
2	5V
3	D1n
4	D2n
5	D1p
6	D2p
7	GND
8	GND
9	No Pin
10	GND

3.2.12 GPIO_CNT (General purpose input/output header)

15

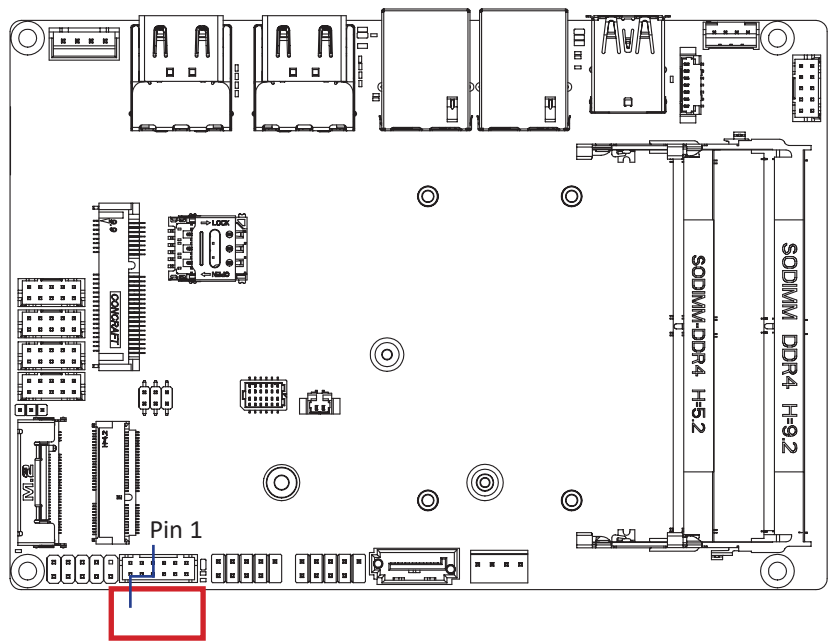


GPIO Connector	
1	11
2	12

Pin No.	Definition
1	GPIO-input_1
2	GPIO-output_1
3	GPIO-input_2
4	GPIO-output_2
5	GPIO-input_3
6	GPIO-output_3
7	GPIO-input_4
8	GPIO-output_4
9	SMBus Clock
10	SMBus DATA
11	5V
12	GND

Connector PN	Vendor
725-81-12TW00	PINREX
Connector type	
2x6pin header, pitch 2.0mm	

3.2.13 SYS_PANEL (Front panel header)

16

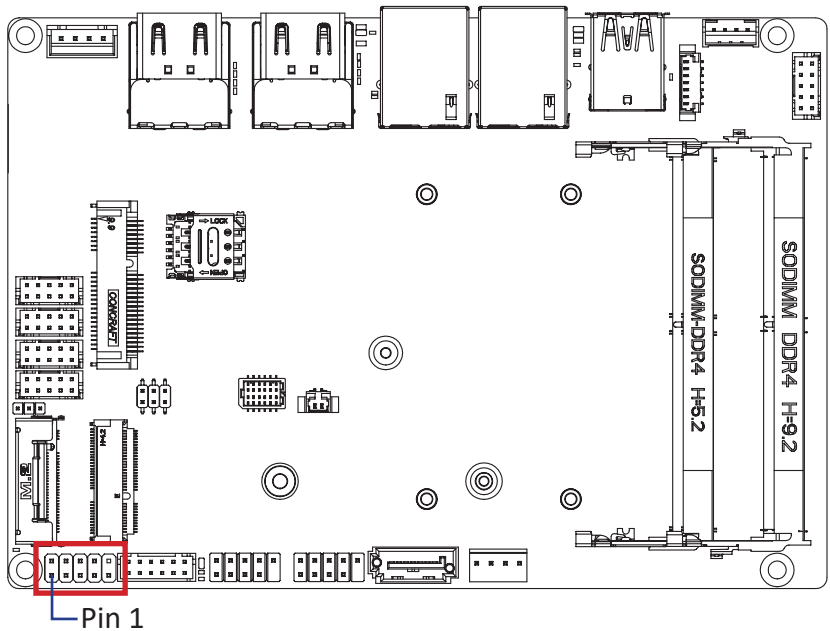

System Panel Header



Connector PN

210-92-05GW5W

Vendor

PINREX


Connector type

2x5pin header, pitch 2.54mm

Pin No.	Definition
1	HDD LED+
2	Power LED+
3	HDD LED-
4	Power LED-
5	GND
6	Power Button+
7	Reset Button
8	Power Button-
9	No Connect
10	No Pin

3.2.14 M2M (M.2 Slot, 2280 M-key)

17

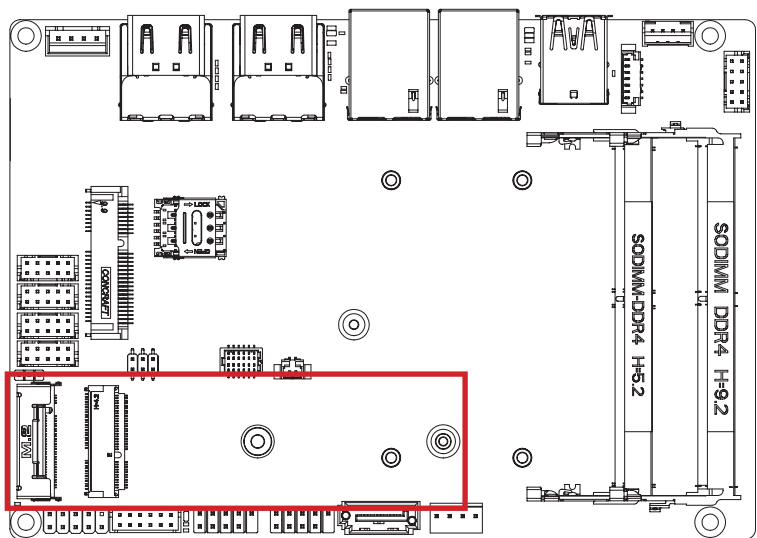

M.2 M Key Connector



Pin No.	Definition	Pin No.	Definition
1	GND	2	3.3V
3	GND	4	3.3V
5	RX3n	6	NC
7	RX3p	8	NC
9	GND	10	M2_LED
11	TX3n	12	3.3V
13	TX3p	14	3.3V
15	GND	16	3.3V
17	RX2n	18	3.3V
19	RX2p	20	NC
21	GND	22	NC
23	TX2n	24	NC
25	TX2p	26	NC
27	GND	28	NC
29	RX1n	30	NC
31	RX1p	32	NC
33	GND	34	NC
35	TX1n	36	NC


Pin No.	Definition	Pin No.	Definition
37	TX1p	38	DEVSLP
39	GND	40	NC
41	SATA_RXp	42	NC
43	SATA_RXn	44	NC
45	GND	46	NC
47	SATA_TXn	48	NC
49	SATA_TXp	50	PLT_RST
51	GND	52	CK_REQ
53	CLK_n	54	PCIE_WAKE#
55	CLK_p	56	NC
57	GND	58	NC

Pin No.	Definition	Pin No.	Definition
67	NC	68	SUSCLK
69	M2_SSD_Detect	70	3.3V
71	GND	72	3.3V
73	GND	74	3.3V
75	GND		

Connector PN	Vendor
2E0BC41-C85CM-LH	FOXCONN

3.2.15 AT_CN (AT/ATX mode select jumper)

18

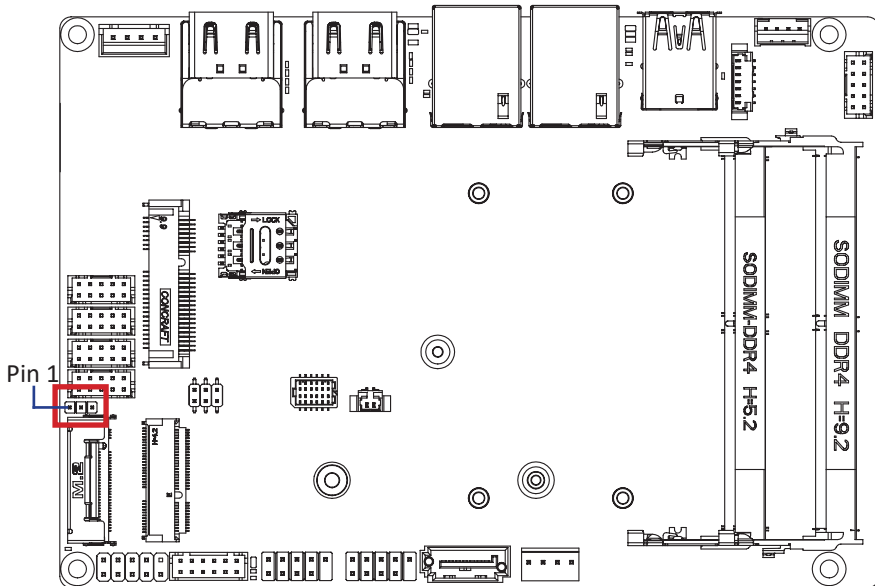

AT/ATX mode select jumper



1-2 Close : AT mode.

2-3 Close : ATX mode.
(Default setting)

Pin No.	Definition
1	AT mode
2	Detect
3	ATX mode

Connector PN

220-96-03GB001K

A2015WV-03P6T

Vendor

PINREX



JOINT-TECH

Connector type

1x3pin header, pitch 2.0mm

3.2.16 COM1, COM2, COM3, COM4 (Serial port header)

19

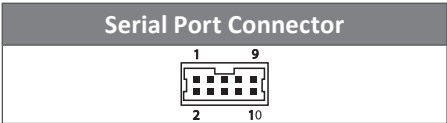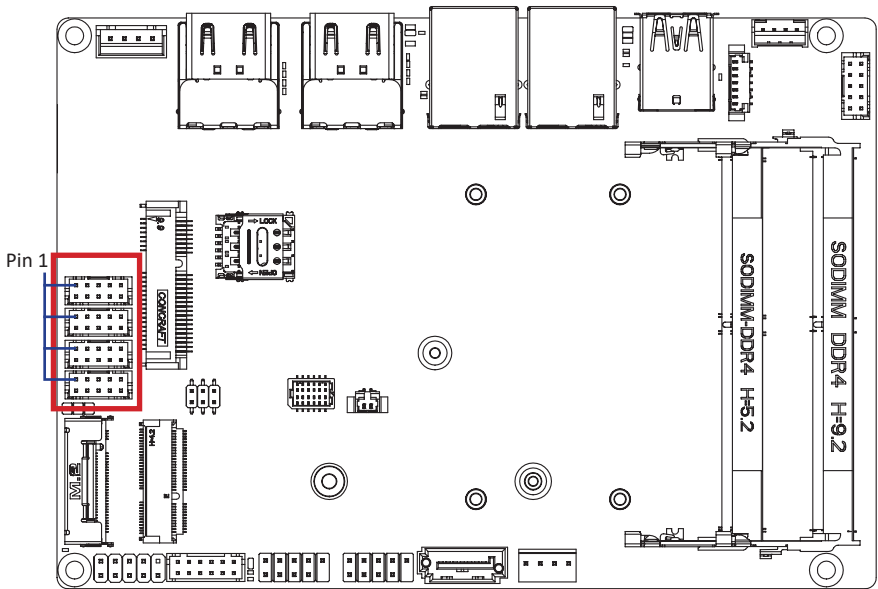


Pin No.	RS-232	RS-422 Full Duplex	RS-485 Half Duplex
1	RXD	TXD+	D+
2	DCD	TXD-	D-
3	DTR	RXD-	—
4	TXD	RXD+	—
5	DSR	—	—
6	GND	—	—
7	CTS	—	—
8	RTS	—	—
9	No Connect	—	—
10	RI/5V/12V	—	—

Connector PN	Vendor
A2004WV-2X05P46	JOINT-TECH
Connector type	
2x5pin header, pitch 2.0mm	


Note :
COM1 : Support RS-232/422/485 & RI/5V/12V, for RI/5V/12V jumper setting, please see P. 41
COM2 : Support RS-232/422/485
COM3, COM4 : Support RS-232

3.2.17 MPCIE (Mini PCIE slot)

20

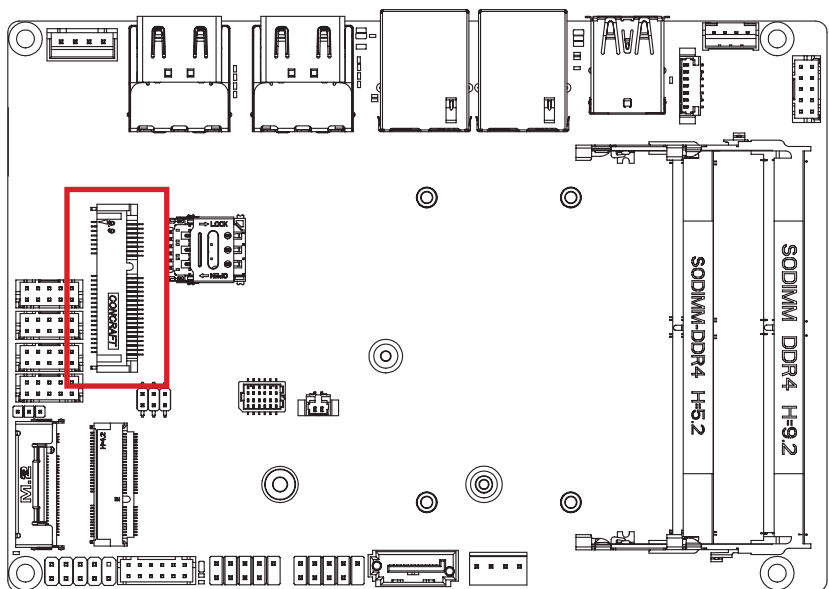

Mini PCIe Connector

 

Pin No.	Definition	Pin No.	Definition
1	PCIE_WAKE#	2	3.3V
3	NC	4	GND
5	NC	6	1.5V
7	PCIE_CLKREQ#	8	SIM_PWR
9	GND	10	SIM_DATA
11	PCIE_CLKn	12	SIM_CLK
13	PCIE_CLKp	14	SIM_RST
15	GND	16	SIM_VPP
17	NC	18	GND
19	NC	20	PCIE_DISABLE
21	GND	22	PCIRST#
23	PCIE_RXn	24	3.3V
25	PCIE_RXp	26	GND


27	GND	28	1.5V
29	GND	30	SMBCLK
31	PCIE_TXn	32	SMBDATA
33	PCIE_TXp	34	GND
35	GND	36	USBD-
37	GND	38	USBD+
39	3.3V	40	GND
41	3.3V	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	1.5V
49	NC	50	GND
51	NC	52	3.3V

Connector PN	Vendor
AS0B221-S99Q-7H	FOXCONN

3.2.18 DC IN (DC IN 1 x 4pin power connector)

3.2.18 M2E (M.2 Slot, 2230 E-key)

22

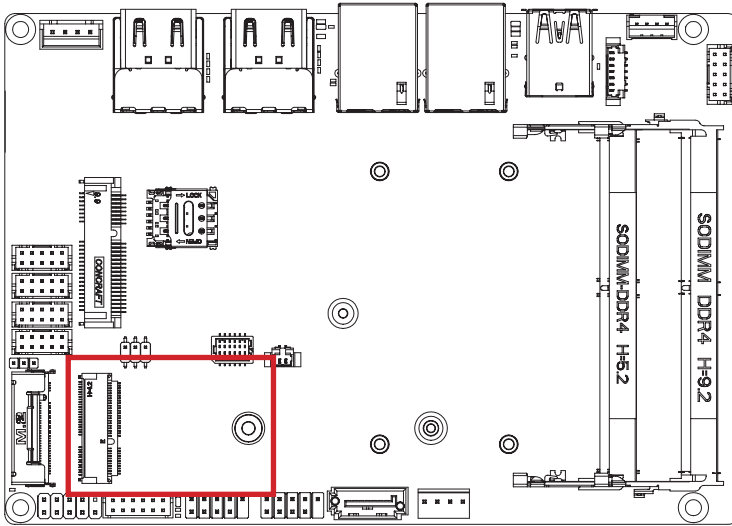

M.2 E Key Connector



Pin No.	Definition	Pin No.	Definition
1	GND	2	3.3V
3	USB_Dp	4	3.3V
5	USB_Dn	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	NC	14	NC
15	NC	16	NC
17	NC	18	GND
19	NC	20	NC
21	NC	22	NC
23	NC		


Pin No.	Definition	Pin No.	Definition
33	GND	32	NC
35	WLAN_TXp	34	NC
37	WLAN_TXn	36	NC

39	GND	38	NC
41	WLAN_RXp	40	NC
43	WLAN_RXn	42	NC
45	GND	44	NC
47	CLK_Dp	46	NC
49	CLK_Dn	48	NC
51	GND	50	SUSCLK
53	CLK_REQ	52	PCIE_RST
55	PCIE_WAKE	54	BT_Disable#
57	GND	56	WLAN_DISABLE
59	NC	58	NC
61	NC	60	NC
63	GND	62	NC
65	NC	64	NC
67	NC	66	NC
69	GND	68	NC
71	NC	70	NC
73	NC	72	3.3V
75	GND	74	3.3V

Connector PN	Vendor
80152-4221	BELLWETHER

3.2.19 JCOM1 (RI pin RI/5V/12V Select jumper for COM1 port)

23


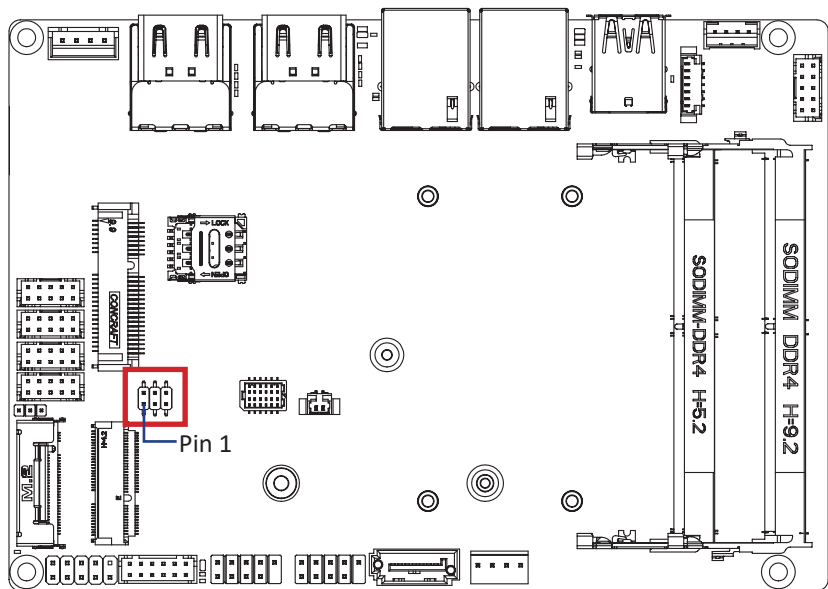


JCOM1 Jumper Select	
	1-2 Close: 5V (Power COM)
	3-4 Close: RI (Stand COM)
	5-6 Close: 12V (Power COM)

Connector PN	Vendor
222-97-03GBE1	PINREX
Connector type	
2x3pin header, pitch 2.0mm	

3.2.20 Battery (Battery Connector)



24

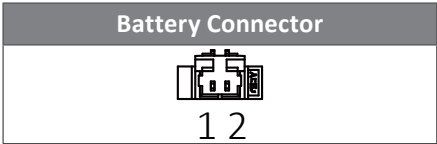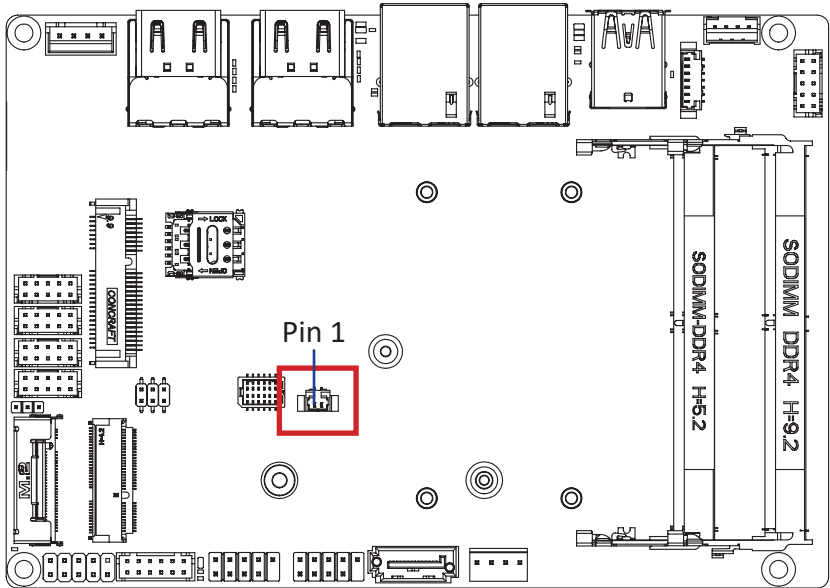

Pin No.	Definition
1	3V
2	GND

3.2.21 CPU_FAN (CPU FAN connector)

25

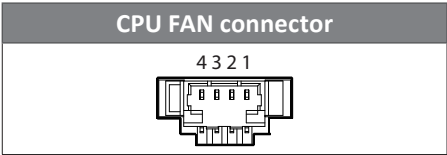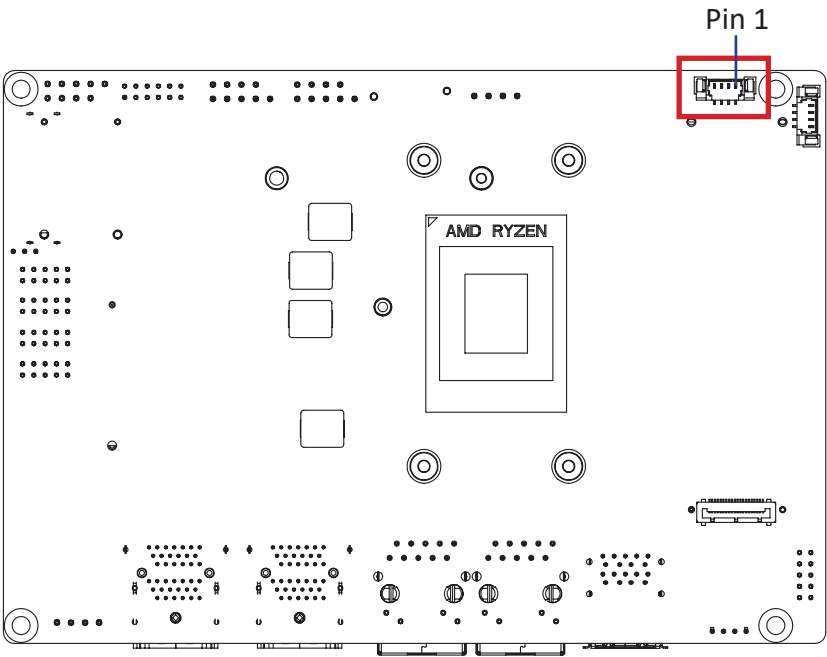


Connector PN	Vendor
85205-0470N	ACES
A1250WV-S-04PC	JOINT-TECH

Connector type
1x4pin header, pitch 1.25mm


Pin No.	Definition
1	GND
2	12V
3	Detect
4	Speed Control

3.2.22 SYS_FAN (System FAN connector)

26

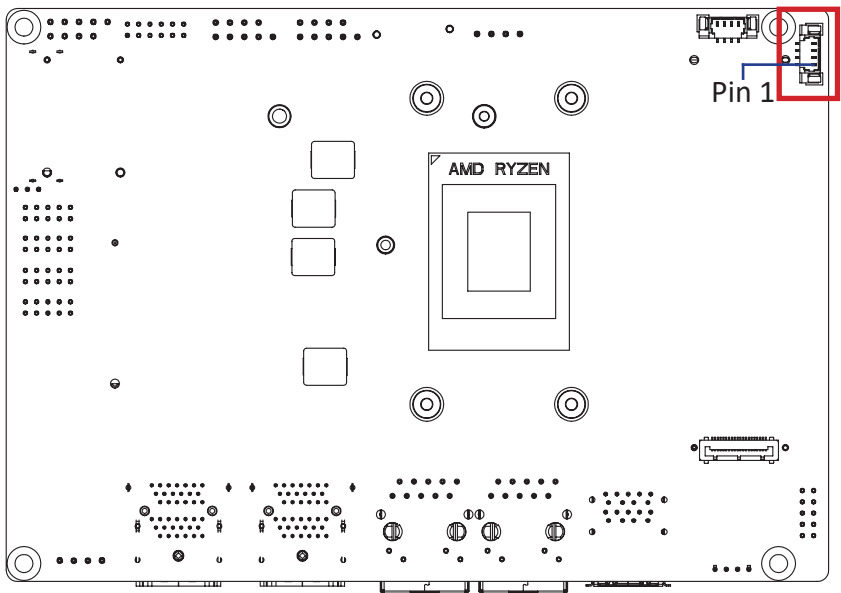

System FAN connector

 

Connector PN

85205-0470N

Vendor

ACES

A1250WV-S-04PC

JOINT-TECH


Connector type

1x4pin header, pitch 1.25mm

Pin No.	Definition
1	GND
2	12V
3	Detect
4	Speed Control

3.2.23 EDP (Embedded Display port connector)

27

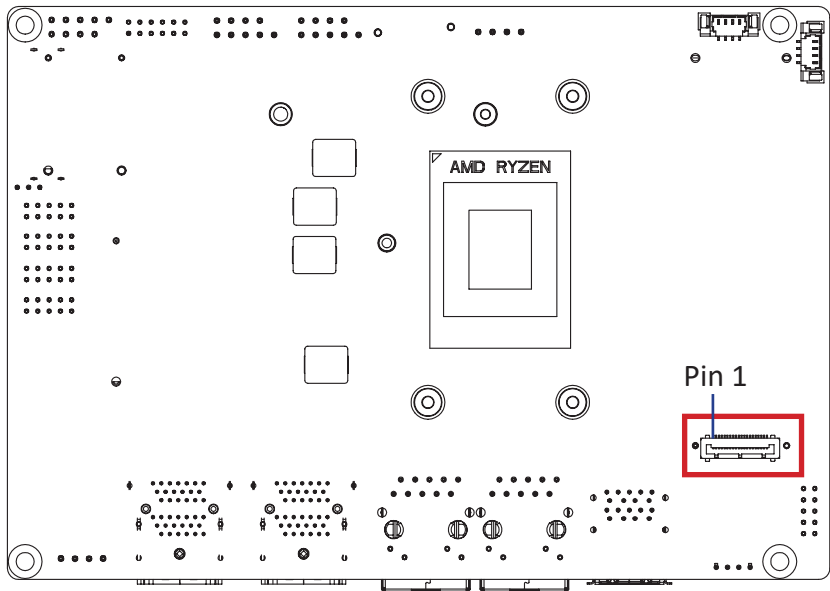

Embedded Display Port Connector			
Pin No.	Definition	Pin No.	Definition
1	GND	13	GND
2	EDP_TX0-	14	EDP_AUX-
3	EDP_TX0+	15	EDP_AUX+
4	GND	16	EDP_Detect
5	EDP_TX1-	17	Hotplug Detect
6	EDP_TX1+	18	Backlight Enable
7	GND	19	GND
8	EDP_TX2-	20	Backlight control
9	EDP_TX2+	21	H1 -> GND
10	GND	22	H2 -> GND

Pin No.	Definition	Pin No.	Definition
11	EDP_TX3-	23	H3 -> GND
12	EDP_TX3+	24	H4 -> GND

Connector PN	Vendor
115B20-100020-G4-R	STARCONN

Connector type
1x20pin header, pitch 0.5mm

Chapter 4

Chapter 4 – BIOS

4.1 Introduction

BIOS (Basic input/output system) provides hardware detailed information and boot-up options, which include firmware to control, set-up and test all hardware settings. Therefore, BIOS is the communication bridge between OS/application software and hardware.

4.1.1 How to Entering into BIOS menu


Once the system is power on, press the key as soon as possible to access into BIOS Setup program.

4.1.2 Function Keys to setup in BIOS Setup program

Function keys	Description
→←	Select Screen
↑↓	Select Item
Enter	Execute command or enter the submenu
+	Increase the numeric value or make changes
—	Decrease the numeric value or make changes
F1	General Help
F2	Previous Values
F3	Load Optimized Defaults Settings
F4	Save changes & Exit the BIOS Setup program
ESC	Exit the BIOS Setup program

4.2 The Main Menu


The main menu shows the basic system information.
Use arrow keys to move among the items.

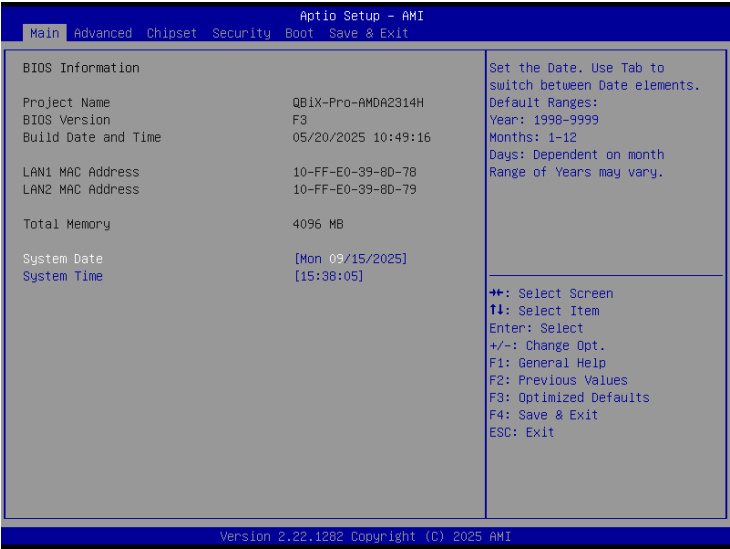

Items	Description
Project Name	Shows Project name information
BIOS Version	Shows the BIOS version of the system
Build Date and Time	Shows the Build Date and Time when the BIOS was created.
LAN1 MAC Address	Shows LAN1 MAC Address information
LAN2 MAC Address	Shows LAN2 MAC Address information
Total Memory	Shows the total memory size of the installed memory
System Date	Set the Date for the system (Format : Week - Month - Day - Year)
System Time	Set the time for the system (Format : Hour - Minute - Second)


4.3 Advanced

The Advanced menu is to configure the functions of hardware settings through submenu. Use arrow keys to move among the items, and press <Enter> to access into the related submenu.

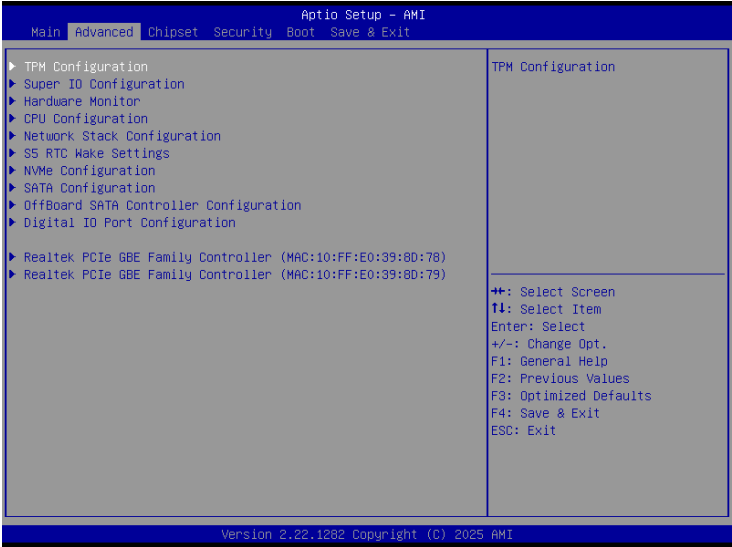


4.3.1 TPM Configuration

Use TPM Configuration submenu to choose TPM interface.

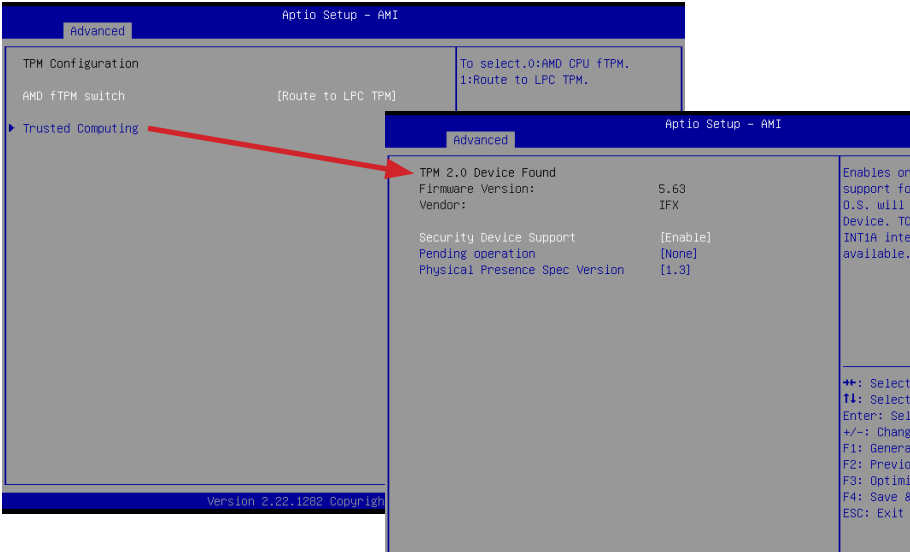


Item	Description
AMD fTPM switch	AMD CPU fTPM : Enables AMD CPU firmwarm TPM Route to LPC TPM : Enables to route to LPC TPM (Default setting)
Trusted Computing	Security Device Support : Enabled : Enables TPM feature (Default setting) Disabled : Disables TPM feature Pending operation : None : No execution will be conducted (Default setting) TPM clear : Set to clear data on TPM Physical Presence Spec Version : Choose PPI spec version Option items : 1.2 or 1.3 (Default setting)

4.3.2 Super IO Configuration

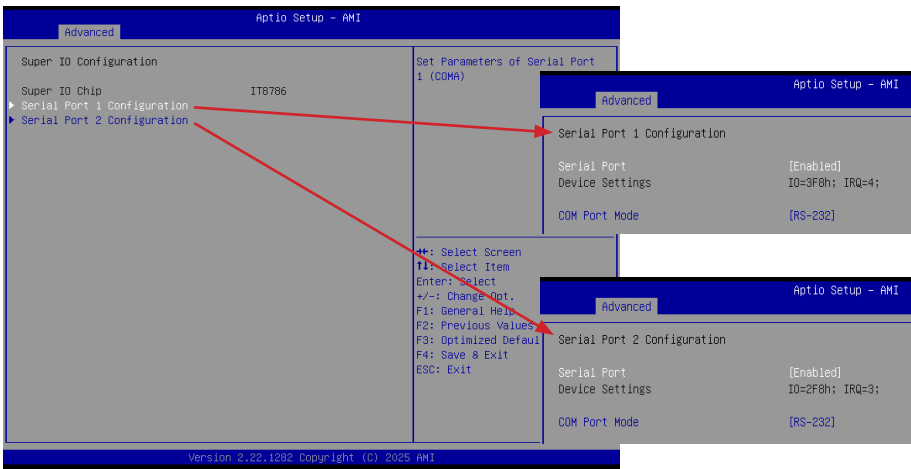

Item	Description
Serial Port 1 Configuration	Press [Enter] to configure advanced items : Serial Port : Enabled : Enables allows you to configure the serial port settings Disabled : if Disabled, displays no configuration for the serial port
Serial Port 2 Configuration	Device settings : Display the specified Serial Port base I/O address and IRQ COM Port Mode : Choose RS-232, RS-422, or RS-485 feature


4.3.3 Hardware Monitor

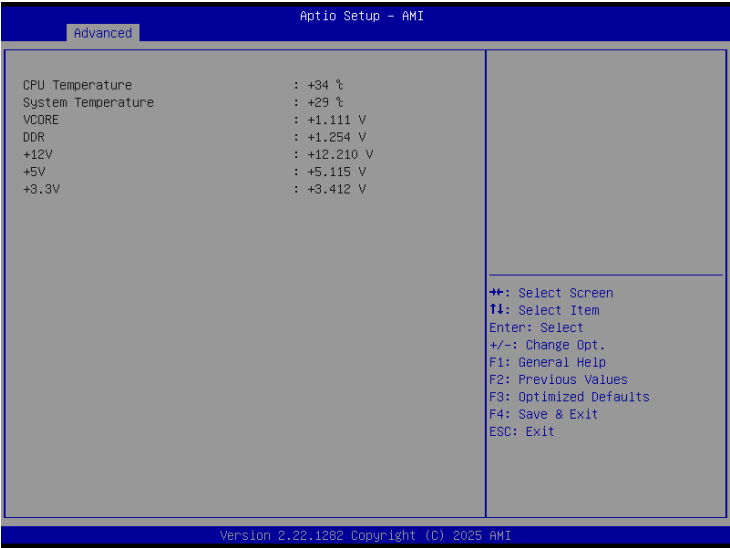

Item	Description
CPU Temperature	Shows current CPU temperature
System Temperature	Shows current system temperature


4.3.4 CPU Configuration

This submenu shows detailed CPU informations.

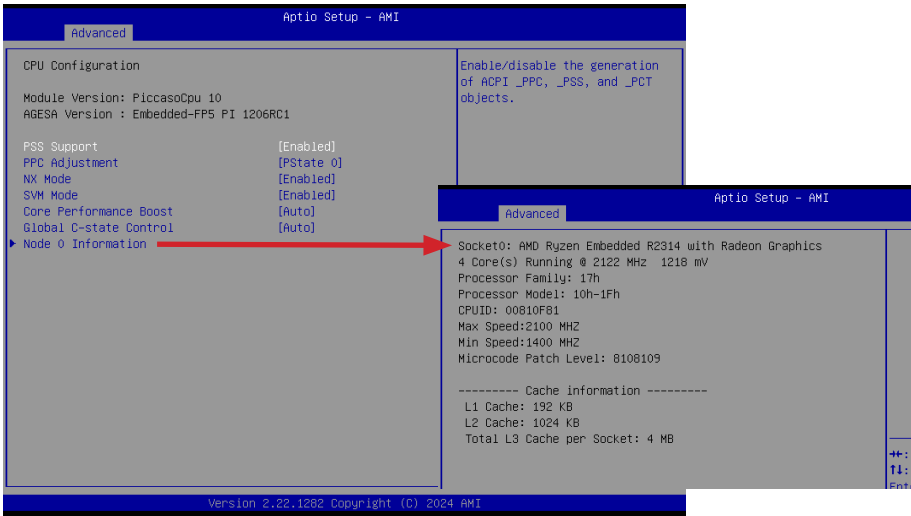


Item	Description
PSS Support	Allows you to get PState information Enabled : Enables to get PState information (Default setting) Disabled : Disables to get PState information
PPC Adjustment	To adjust the PState of the CPU Option items : PState 0 (Default setting), PState 1, PState 2
NX Mode	Enables or Disables the No-execute page-protection function. Enabled : Enables NX Mode (Default setting) Disabled : Disables NX Mode
SVM Mode	Enables or Disables the CPU virtualization funtion. Enabled : Enables SVM Mode (Default setting) Disabled : Disables SVM Mode
Core Performance Boost	To let CPU transits to a higher frequency. Disabled : Disables Core Performance Boost Auto : System will automatically allocate its' frequency (Default setting)
Global C-state Control	Command CPU to enter into low power consumption mode when CPU is under idle mode. Enabled : Enables Global C-states Control Disabled : Disables Global C-states Control Auto : System will automactically detect (Default setting)
Node 0 Information	Shows AMD CPU information

4.3.5 Network Stack Configuration

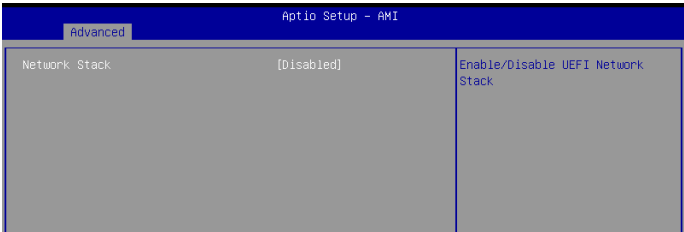


When Network stack is enabled :

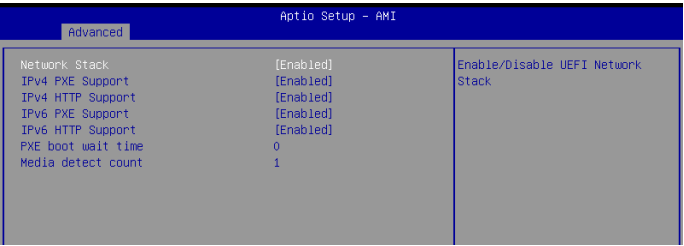

Item	Description
Network Stack	When system is power on, install LAN driver under UEFI mode Disabled : Disables UEFI Network Stack (Default setting) Enabled : Enables UEFI Network Stack
IPv4 PXE Support	When Network stack is enabled : Disabled : Disables IPv4 PXE Support Enabled : Enables IPv4 PXE Support
IPv4 HTTP Support	When Network stack is enabled : Disabled : Disables IPv4 HTTP Support Enabled : Enables IPv4 HTTP Support
IPv6 PXE Support	When Network stack is enabled : Disabled : Disables IPv6 PXE Support Enabled : Enables IPv6 PXE Support
IPv6 HTTP Support	When Network stack is enabled : Disabled : Disables IPv6 HTTP Support Enabled : Enables IPv6 HTTP Support
PXE boot wait time	Wait time in seconds, or use ESC key to abort the PXE boot.
Media detect count	Number of times the presence of media will be checked.


4.3.6 S5 RTC Wake Settings

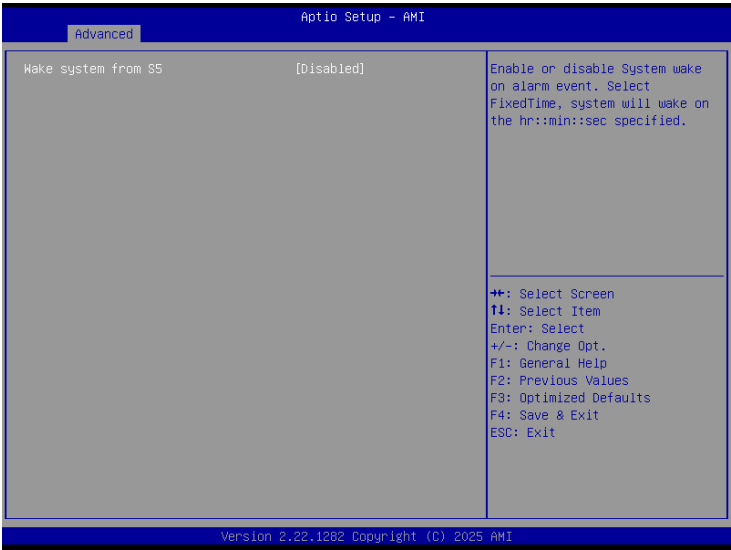


Item	Description
Wake system from S5	Enable or Disable System to wake on a specific time. Disabled : Disables system to wake on a specific time (Default setting) Fixed Time : Enables system to wake on a specific time (Format : hr : min : sec)

4.3.7 NVMe Configuration

NVMe Configuration shows information when your M.2 NVMe PCIe SSD is installed.

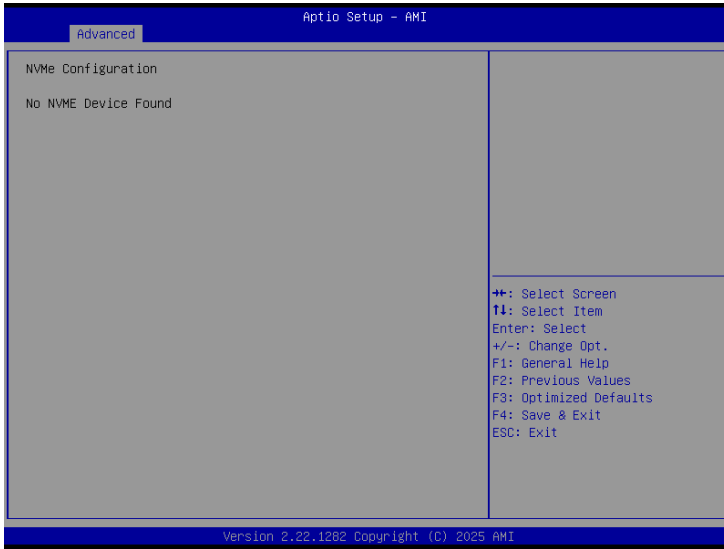


4.3.8 SATA Configuration

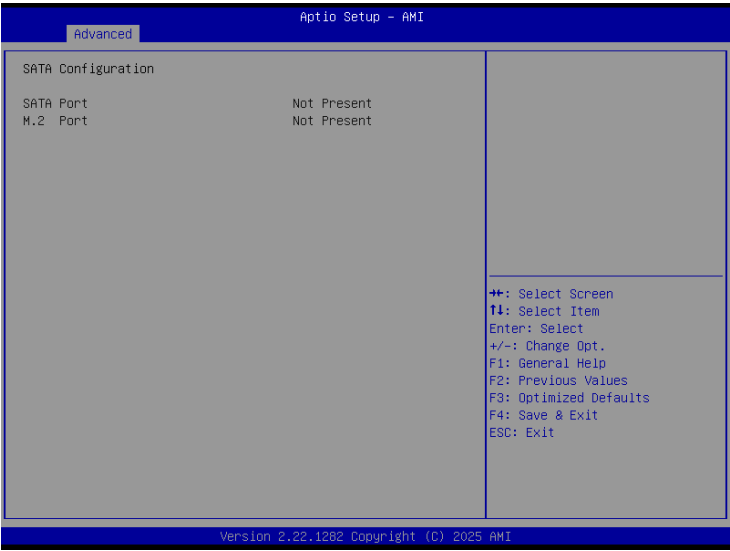


Item	Description
SATA Port	shows 2.5" SATA HDD/SSD information
M.2 Port	shows M.2 SSD information

4.3.9 Offboard SATA Controller Configuration

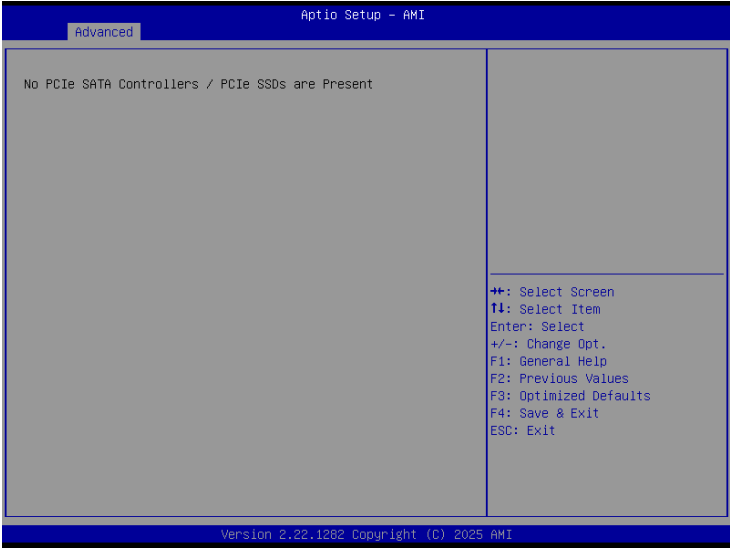


4.3.10 Digital IO Port Configuration

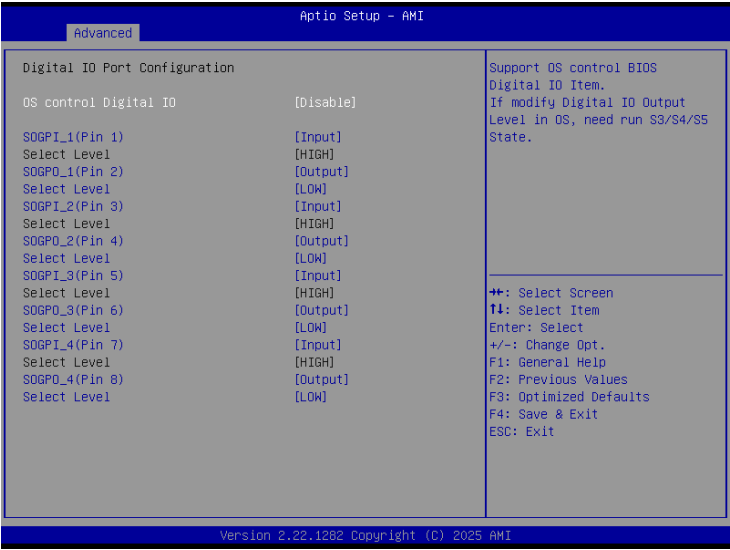

Item	Description
OS control Digital IO	Disabled : If Digital IO Output value/level is modified in OS, they will not be memorized and kept. (Default setting) Enabled : If Digital IO Output value/level is modified in OS, they will be memorized and kept.
SOGPI_1 (Pin 1) SOGPO_1 (Pin 2) SOGPI_2 (Pin 3) SOGPO_2 (Pin 4) SOGPI_3 (Pin 5) SOGPO_3 (Pin 6) SOGPI_4 (Pin 7) SOGPO_4 (Pin 8)	Configure Digital IO Input or Output values for each pin.

4.3.11 Realtek PCIe GBE Family Controller (MAC:10:FF:E0:39:8D:78) (MAC address may varied based on different motherboard)


Shows Realtek Ethernet controller information

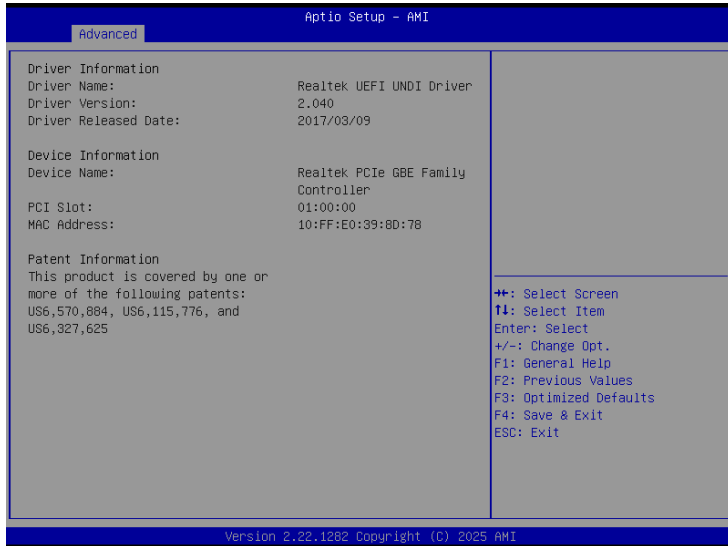

NOTE : MAC address may varied based on different motherboard


4.3.12 Realtek PCIe GBE Family Controller (MAC:10:FF:E0:39:8D:79) (MAC address may varied based on different motherboard)

Shows Realtek Ethernet controller information

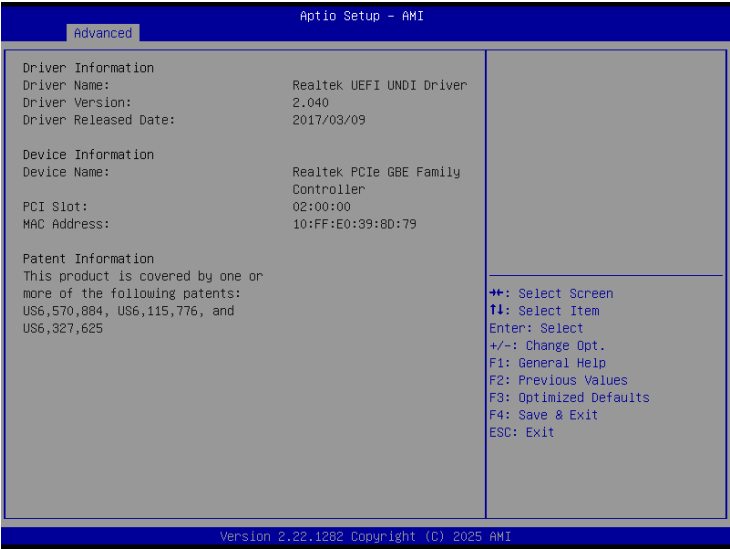


NOTE : MAC address may varied based on different motherboard

4.4 Chipset

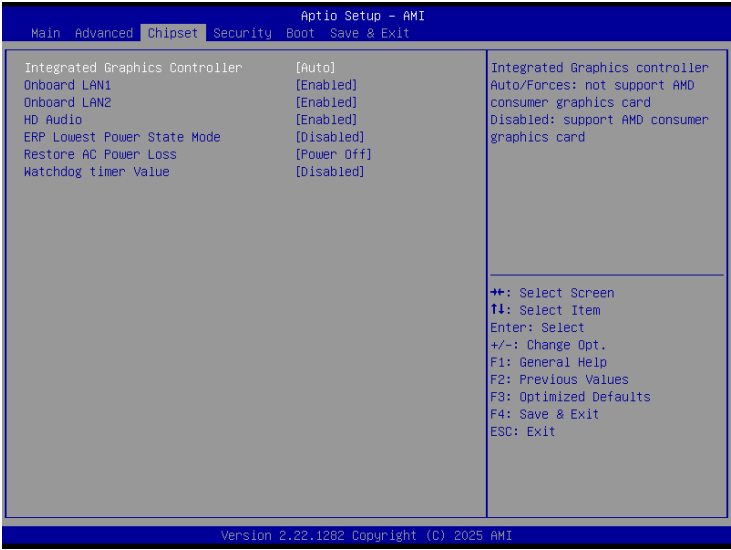

Item	Description
Integrated Graphics Controller	Enables or disables the onboard graphics function Auto : System will automatically enables or disables the onboard graphics depending on the graphics card being installed. (Default setting) Forces : Disables the onboard graphics.
Onboard LAN1 Onboard LAN2	Enable/Disable onboard LAN controller Enabled : Enables onboard LAN controller (Default setting) Disabled : Disables onboard LAN controller
HD Audio	Enable/Disable onboard audio controller Enabled : Enables onboard audio controller (Default setting) Disabled : Disables onboard audio controller
ERP Lowest Power State Mode	Enable/Disable power saving funtion Enabled : Enables ERP Lowest Power State Mode Disabled : Disabled ERP Lowest Power State Mode (Default setting)
Restore AC Power Loss	To set which option the system should returns if a sudden power loss occured Power on : System power on when the power is back Power off : Do not power on when the power is back (Default setting) Last state : Restore the system to the state before power loss occurs
Watchdog timer Value	Enable/Disable Watchdog Timer function Option item : Disabled : Disabled (Default setting), 30 Seconds, 60 Seconds


4.5 Security

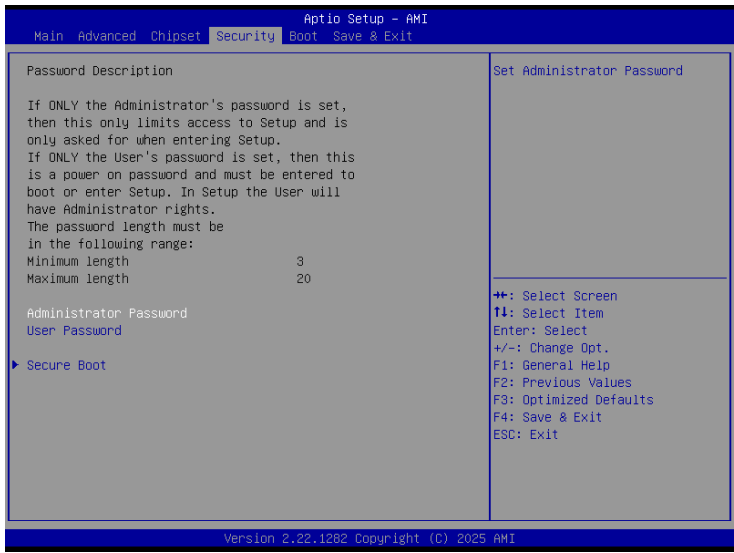

Item	Description
Administrator Password	To set up Administrator's password Minimum length : 3 Maximum length : 20
User Password	To set up User's password Minimum length : 3 Maximum length : 20
Secure Boot	Press <Enter> to configure the advanced items



Item	Description
Secure Boot	Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates Enabled : Enables Secure Boot function Disabled : Disables Secure Boot function (Default setting)
Secure Boot Mode	Standard : Standard mode Custom : Custom mode (Default setting)
Restore Factory Keys	To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings
Reset To Setup Mode	Yes : Agree to setup mode No : Cancel to setup mode
Key Management	Enables expert users to modify Secure boot policy variables without full authentication Press <Enter> to configure the advanced items

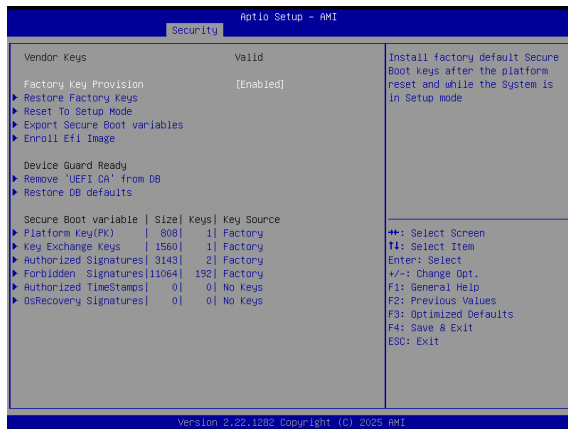

Item	Description
Factory Key Provision	Install factory default Secure Boot keys after the platform reset and while the system is in Setup mode Enabled : Enables Factory Key Provision (Default setting) Disabled : Disables Factory Key Provision
Restore Factory Keys	To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings
Reset To Setup Mode	Yes : Agree to setup mode No : Cancel to setup mode
Export Secure Boot variables	Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device
Enroll Efi Image	Allow the image to run in Secure Boot mode
Remove 'UEFI CA' from DB	To remove 'UEFI CA' from database Yes : Agree to remove 'UEFI CA' from database No : Cancel to remove 'UEFI CA' from database
Restore DB defaults	Restore DB variables to factory defaults Yes : Agree to restore DB defaults No : Cancel to restore DB defaults

Item	Description
Platform Key (PK)	These items allows you to enroll factory defaults or load Certificates from a file.
Key Exchange Keys	
Authorized Signatures	
Forbidden Signatures	
Authorized TimeStamps	
OsRecovery Signatures	


4.6 **Boot**

This Boot menu allows you to set/change system boot options



Item	Description
Built-in EFI Shell	Enabled : Enables Built-in EFI Shell Disabled : Disables Built-in EFI Shell (Default setting)
Full Screen LOGO Show	Enable/Disable full screen LOGO show on POST screen Enabled : Enables Full screen LOGO Show on POST screen Disabled : Disables Full screen LOGO Show on POST screen (Default setting)
Boot Option Priorities	Shows the information of the storage that be installed in the system Choose/set the boot priority

4.7 Save & Exit

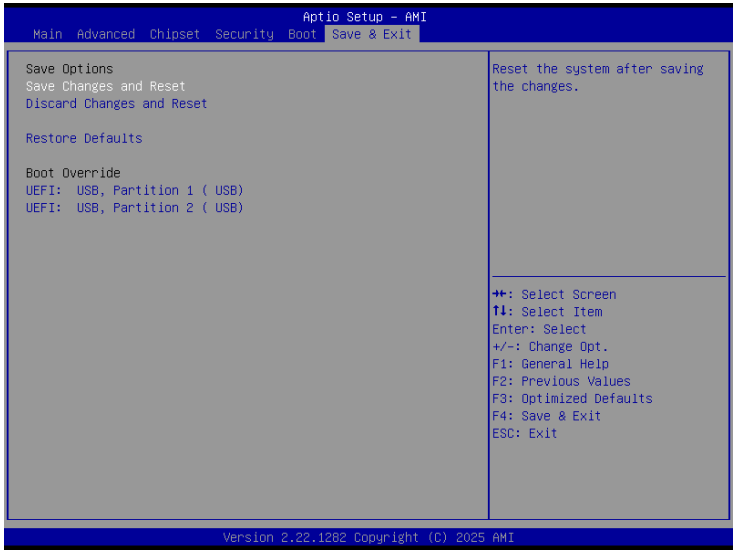

Item	Description
Save Changes and Reset	After configuring all the options that you wish to change, choose this option to save all the changes and reboot the system Yes : Agree to save and reset No : Cancel to save and reset
Discard Changes and Reset	Choose this option to reboot the system without saving any changes Yes : Agree to discard changes and reset No : Cancel to discard changes and reset
Restore Defaults	Restore/Load default values for all the setup options Yes : Agree to load optimized defaults No : Cancel to load optimized defaults
Boot Override	Boot override