

User Manual

**Nvidia Jetson Series Carrier board
Aetina ACE-N510**

Document Change History

Version	Date	Description	Authors
V1	2018/03/15	Initial Release.	Eric Chu
V2	2019/02/13	Update BSP installation guide.	Eric Chu

1. Introduction

ACE-N510 is the smallest form factor carrier board in Aetina production line. Support for NVIDIA® Jetson™ TX2 and Jetson™ TX1. You can quickly emulate the functionality of your desired end product for software development and hardware verification.

To build a functional prototype of your target system you will need:

- Nvidia TX1/TX2 module (Aetina's P/N: NSO-MD-TX1/NSO-MD-TX2)
- Nano-ITX carrier board (Aetina's P/N: ACE-N510)
- Power adaptor 12 DC/5A

1.1 Features

- Smallest design for Nvidia TX2/TX1
- Specifically designed for high performance and low-power envelope AI computing
- Extended temperature range -20°C to 70°C
- Suitable for general robotics, Drone, UAV, industrial inspection, medical imaging and deep learning


1.2 Board

- 6-layer printed circuit board(PCB)
- Physical dimensions: 87mm x 50 mm
- Board Power: 15W
- High-Bandwidth Digital Content Protection (HDCP) support


2. Board Specification


Specification	ACE-N510 Description
Module Compatibility	Nvidia Jetson TX1 / Nvidia Jetson TX2
GPU	Jeston TX1 : - Nvidia Maxwell™, 256 CUDA cores. Jetson TX2 : - Nvidia Pascal™, 256 CUDA cores.
CPU	Jetson TX1: - Quad ARM® A57/2MB L2 Jetson TX2: - HMP Dual Denver 2/2MB L2 + Quad ARM® A57/2MB L2
Dimension	87mm x 50mm
Display	- 1 x HDMI
Audio	- HDMI Integrated
Ethernet	- 1 x Gigabit Ethernet(10/100/1000)
USB	Jetson TX1 : - 1 x USB3.0 Type A - 1 x USB2.0 Type A - 1 x USB OTG Micro AB Jetson TX2 : - 2 x USB3.0 Type A - 1 x USB OTG Micro AB
SD CARD	- Micro SD CARD Slot
UART	- 1 x UART
RS232	- 1 x RS232
GPIO	- 4 x GPIO
CAN Bus	- 2 x DB9 connector.(TX2 support only)
Input Power	- +12V DC input Euroblock connector
Operating Temperature	- 0°C to + 55°C - -20°C to + 70°C (Optional)
Storage Temperature	- -25°C to + 80°C
Warranty	- 14 Months

3. Block Diagram

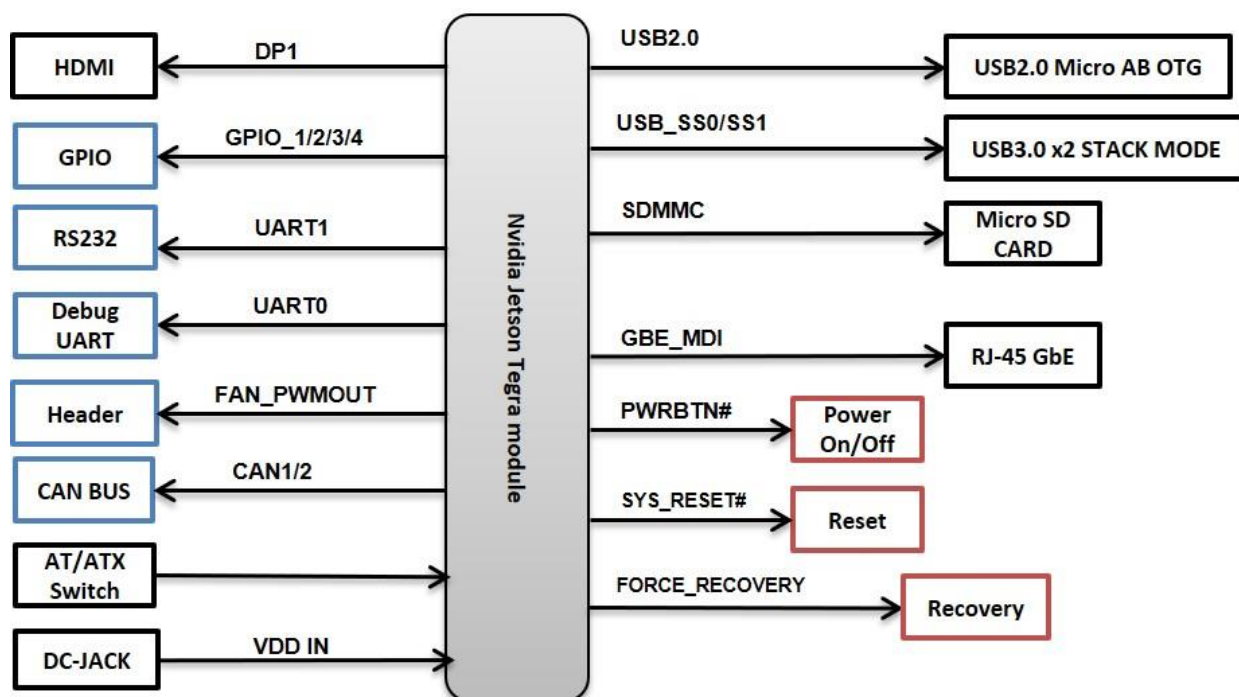


3.1 Board Placement

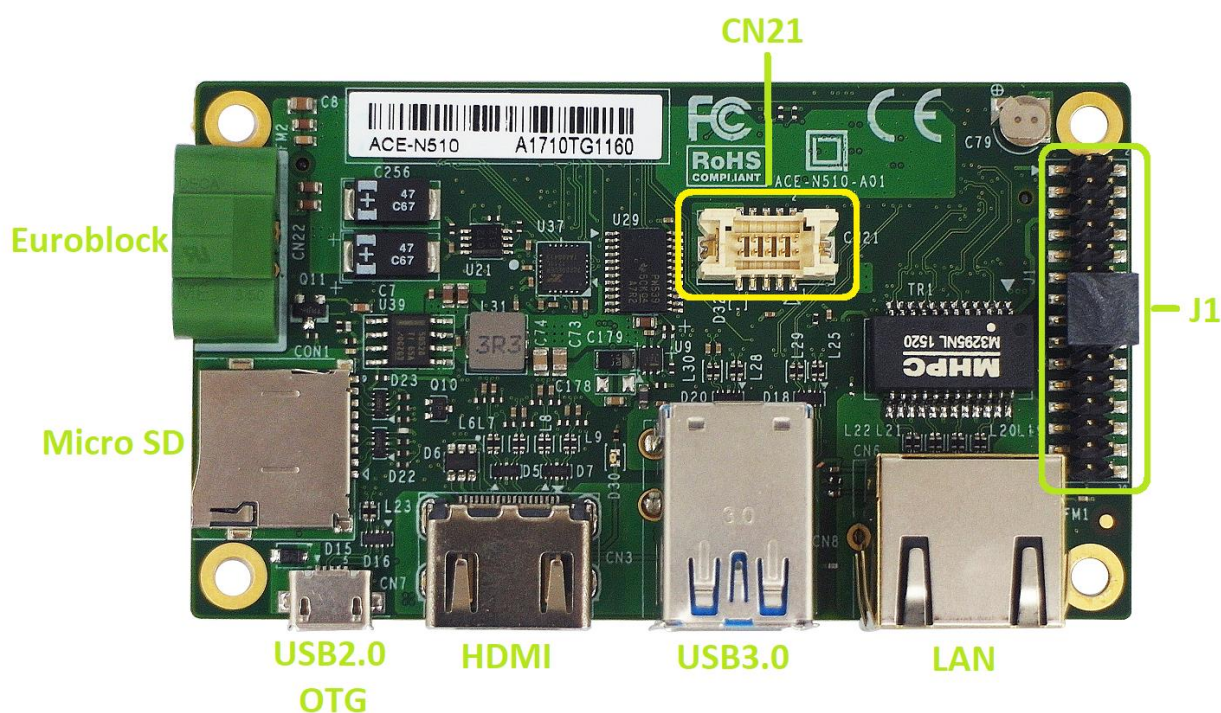

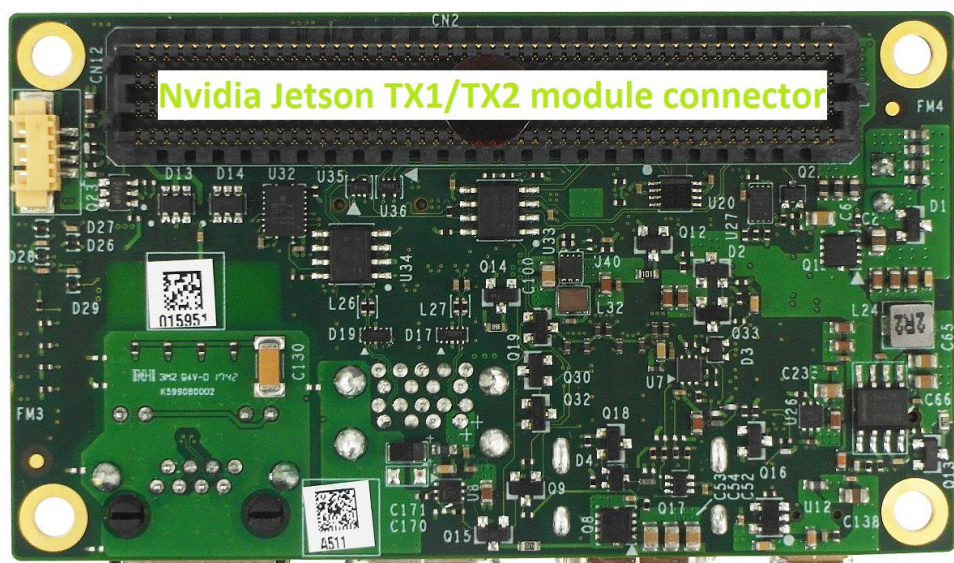

TX1/TX2 Module Connector	Compatible with Jetson TX1/TX2
HDMI	Type A
Euroblock Connector	2-pin DC in
USB3.0	Type A
CN21	CAN BUS x2 (10-pin)
LAN	RJ45
USB2.0 OTG	Micro-AB
J1	Front Panel+Expansion I/O(30-pin)

3.2 Mechanical Dimensions

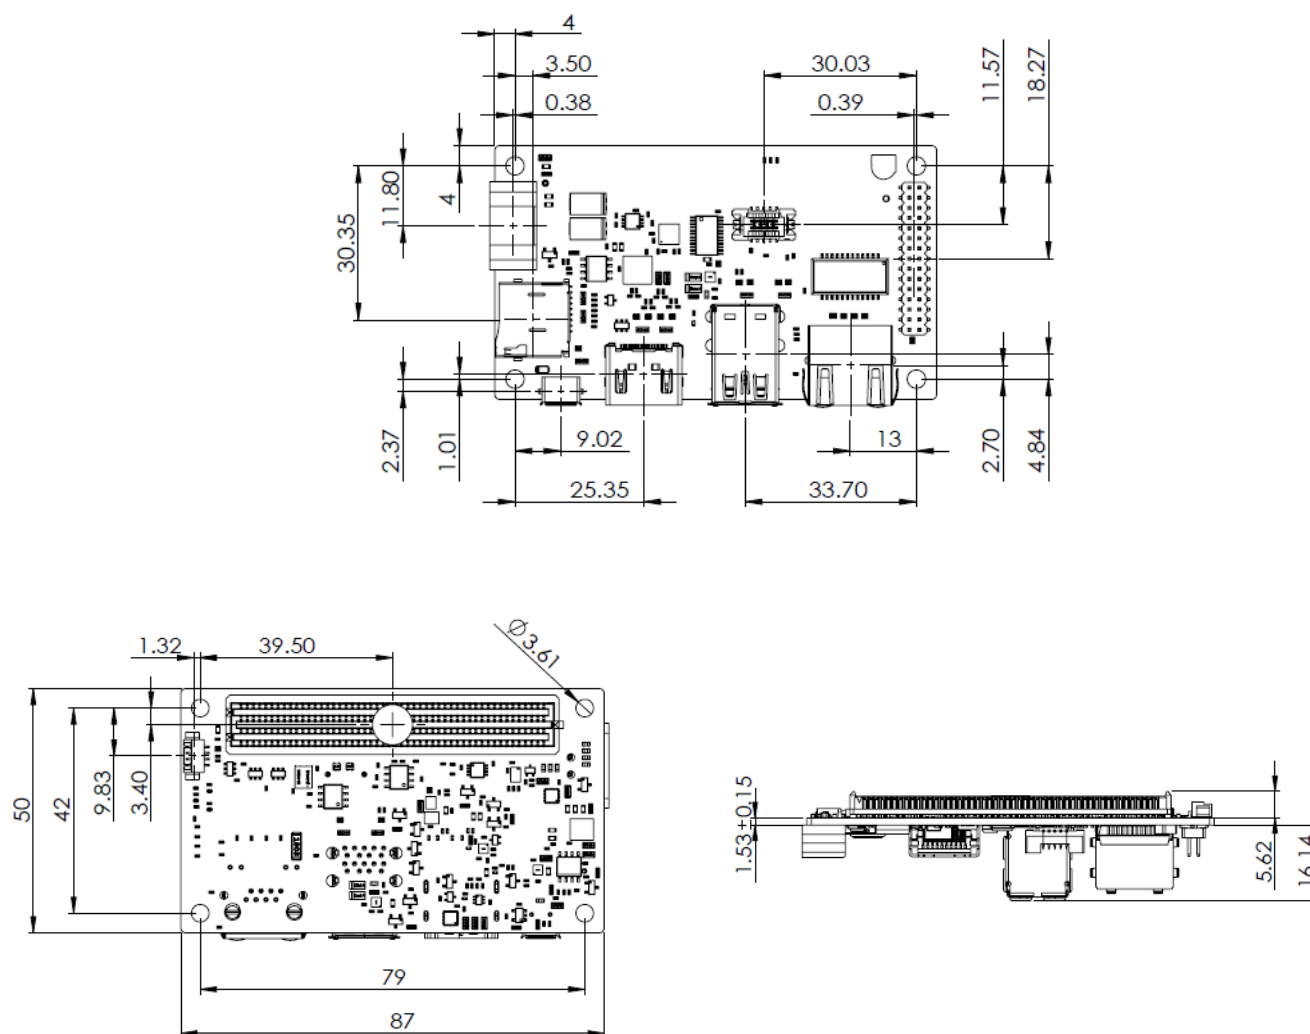

4. Connectors and Pin-outs

4.1 J1 (Front Panel and Expansion I/O)

Pin number	Define	Pin number	Define
PIN 1	UART1_RXD_HDR_3V3	PIN 2	RS232_RXD
PIN 3	UART1_TXD_HDR_3V3	PIN 4	RS232_TXD
PIN 5	UART1_RTS_HDR_3V3	PIN 6	RS232_RTS
PIN 7	UART1_CTS_HDR_3V3	PIN 8	RS232_CTS
PIN 9	GND	PIN 10	GND
PIN 11	POWER_BTN_R	PIN 12	GND
PIN 13	RESET_IN_L_R	PIN 14	GND
PIN 15	FORCE_RECOVERY_L_R	PIN 16	GND
PIN 17	SLEEP_R	PIN 18	GND
PIN 19	VDD_3V3_SYS	PIN 20	EXT_LED
PIN 21	GPIO_1	PIN 22	GND
PIN 23	GPIO_2	PIN 24	GND
PIN 25	GPIO_3	PIN 26	GND
PIN 27	GPIO_4	PIN 28	GND
PIN 29	ACOK	PIN 30	GND



* In order to boot up the system, please quickly short-circuit Pin11 and Pin12.

* Disable Pin29 and Pin30 can enable Auto power on function.


4.2 GPIO PIN Define

Pin Number	Define	Sysfs TX1	Sysfs TX2
PIN 21	GPIO_1	GPIO186	GPIO298
PIN 23	GPIO_2	GPIO187	GPIO388
PIN 25	GPIO_3	GPIO63	GPIO389
PIN 27	GPIO_4	GPIO184	GPIO481


* The default setting of GPIO1 is high.

4.3 CAN BUS PIN Define

CN21 Pin number	Define
PIN 1	CAN0H
PIN 2	CAN1H
PIN 3	CAN0L
PIN 4	CAN1L
PIN 5	CAN0_STBY
PIN 6	CAN1_STBY
PIN 7	CAN0_ERR
PIN 8	CAN1_ERR
PIN 9	CAN_WAKE
PIN 10	GND

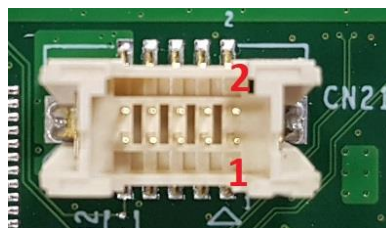

4.4 Power Input (Euroblock Connector)

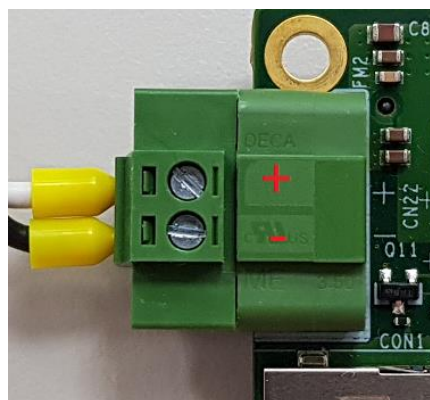

4.5 Micro USB

Pin No.	Pin Name
1	USB0_VBUS
2	USB0D_N
3	USB0D_P
4	USB0_ID
5	GND



4.6 Micro SD

Pin No.	Pin Name
P1	SDMMC3_DAT<2>
P2	SDMMC3_DAT<3>
P3	SDMMC3_CMD
P4	+3.3V
P5	SDMMC3_CLK
P6	GND
P7	SDMMC3_DAT<0>
P8	SDMMC3_DAT<1>
9	GND
10	SDMMC3_CD_L



4.7 HDMI

Pin No.	Pin Name
1	HDMI1_DATA_CON_P2
2	GND
3	HDMI1_DATA_CON_N2
4	HDMI1_DATA_CON_P1
5	GND
6	HDMI1_DATA_CON_N1
7	HDMI1_DATA_CON_P0
8	GND
9	HDMI1_DATA_CON_N0
10	HDMI1_CLK_CON_P
11	GND
12	HDMI1_CLK_CON_N
13	NC
14	NC
15	HDMI_DDC_SCL_CON
16	HDMI_DDC_SDA_CON
17	GND
18	5V_HDMI
19	HDMI1_HPD_CON



5. Accessory (Optional)

Cable kit	ACE-N510 Cable Kit(CAN bus / UART / RS232 / Front panel / GPIO)
9Z1253232020	TX1/TX2 Active Heat Sink
9Z2XX4141010	TX1/TX2 Passive Heat Sink
7W8000000040	Power cord.
9Z3BC0000020	100-240V 60W 12V 5A Adapter
7W3000000030	2.5mm DC JACK to Euroblock CABLE 200mm

9Z2XX4141010



9Z1253232020



Cable kit



7W3000000030



9Z3BC0000020



6. Software & BSP.

When customer use Nvidia standard BSP, some I/O function may not work. In order to support Aetina ACE-N510 system I/O config, please follow below method.

- (1) Before Installing the BSP you will need to install Jetpack on the x86 host system(UBUNTU14.04 up)

Download the proper JetPack3.3 from

<https://developer.nvidia.com/embedded/downloads>

- (2) After the JetPack is installed, copy the patch file **R28_2_1_TX2_N510_1.tar.gz** to the target folder

TX2: Copy R28_2_1_TX2_N510_1.tar.gz to the same folder with 64_TX2



- (3) Use the following command to patch the config and flash BSP:

TX2:

```
tar -xpvf R28_2_1_TX2_N510_1.tar.gz
```

```
cd R28_2_1_TX2_N510_1/
```

```
./setup.sh
```

- (4) How to check the config version

Use the following command in Jetson platform:

```
dmesg | grep dts
```

And the dts file name is the config version.

Recovery system

The TX1/TX2 embedded system contains a recovery system and could be triggered by GPIO.

- (1) For TX1, shut down the system first and connect the 3V3 pin & GPIO_4 (GPIO 184)

For TX2, shut down the system first and connect the 3V3 pin & GPIO_4 (GPIO 481)

- (2) Boot the device,

It will need about 3 minutes for recovering the system.

After finishing, it will shut down the device.

Remove the connected pins and power on the device.

Disclaimer

The information presented in this document is for informational purposes only and may contain technical inaccuracies, omissions and typographical errors.

The information contained herein is subject to change and may be rendered inaccurate for many reasons, including but not limited to product and roadmap changes, component and motherboard version changes, new model and/or product releases, product differences between differing manufacturers, software changes, BIOS flashes, firmware upgrades, or the like. Aetina assumes no obligation to update or otherwise correct or revise this information. However, Aetina reserves the right to revise this information and to make changes from time to time to the content hereof without obligation of Aetina to notify any person of such revisions or changes.

Aetina MAKES NO REPRESENTATIONS OR WARRANTIES WITH RESPECT TO THE CONTENTS HEREOF AND ASSUMES NO RESPONSIBILITY FOR ANY INACCURACIES, ERRORS OR OMISSIONS THAT MAY APPEAR IN THIS INFORMATION.

Aetina SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL Aetina BE LIABLE TO ANY PERSON FOR ANY DIRECT, INDIRECT, SPECIAL OR OTHER CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF ANY INFORMATION CONTAINED HEREIN, EVEN IF NVIDIA IS EXPRESSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.



安提國際股份有限公司

/ 新北市汐止區大同路一段237號2樓之1
2F-1, No.237, Sec.1, Datong Rd., Xizhi
Dist., New Taipei City 221, Taiwan

Aetina Corporation

/ Tel +886-2-7709-2568
/ Fax +886-2-7746-1102
/ www.aetina.com.tw
/ Email sales@aetina.com.tw