

IB895

**Intel® Cedarview-D or
Cedarview-M / NM10
3.5" Disk Size SBC**

USER'S MANUAL

Version 1.2A

Acknowledgments

AMI is a registered trademark of American Megatrends Inc.

PS/2 is a trademark of International Business Machines Corporation.

Intel and Intel® Cedar Trail Processor are registered trademarks of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

Winbond a registered trademark of Winbond Electronics Corporation.

All other product names or trademarks are properties of their respective owners.

Table of Contents

Introduction	1
Product Description.....	1
Checklist.....	2
IB895 Specifications	3
Board Dimensions	4
Installations	5
Installing the Memory	6
Setting the Jumpers	7
Connectors on IB895.....	11
BIOS Setup.....	19
Drivers Installation	39
Intel Chipset Software Installation Utility	40
VGA Drivers Installation	41
Realtek HD Audio Driver Installation	42
LAN Drivers Installation.....	43
Appendix.....	44
A. I/O Port Address Map	44
B. Interrupt Request Lines (IRQ).....	46
C. Digital I/O Sample Code	47
D. Watchdog Timer Configuration	52

This page is intentionally left blank.

Introduction

Product Description

The IB895 is a 3.5-inch single board computer based on the Intel® Atom Cedarview chipset. The Cedar Trail is a platform that uses the Intel Cedarview-D or Cedarview -M Processor and Intel NM10 Express Chipset family in the desktop platforms.

The role of the processor in the system is to manage the flow of information between the following interfaces: DDR3 System Memory interface, DVI display interface, VGA graphics interface, Low Voltage Differential Signaling (LVDS) and the Direct Media Interface (DMI). The processor supports single channel, one DDR3 SODIMMs.

The Intel® processors provide advanced performance in both computing and graphics quality. This meets the requirement of customers in the gaming, POS, digital signage and server market segment.

The processor is built on 32-nanometer Hi-K process technology with Micro-FCBGA11 packaging.

IB895 FEATURES:

- Supports Intel® Cedarview -D and Cedarview-M processors
- One DDR3 SO-DIMM, 800/1066 MHz, Max. 2GB/4GB memory*
- Integrated Graphics for DVI-I, LVDS displays
- 2 x SATA Connector
- 4x COM Port Connector
- 2 x Mini-PCIe(x1) slot (*w/ USB support*)
- 2x GbE (RJ-45) Connector
- 1x 24V to 12V DC-IN Power Connector

*** Note: IB895 with Intel Atom D2550 supports up to 4GB memory and IB895N with Intel Atom N2600 supports up to 2GB memory.**

Checklist

Your IB895 package should include the items listed below.

- The IB895 Embedded Flex Motherboard
- This User's Manual
- 1 CD containing chipset drivers and flash memory utility


IB895 Specifications

Product Name	IB895 [default silk screen model # on PCB] IB895N(N2600 onboard)
Form Factor	3.5"
CPU Type/Speed	Intel® Atom™ DC D2550 / 1MB cache / 1.86 GHz [TDP=10W] (IB895) Intel® Atom™ DC N2600 / 1MB cache / 1.60 GHz [TDP=3.5W] (IB895N) Package = FCBGA559 [22 mm x 22 mm] ; Cores / Threads = 2 / 4
Chipset	Intel® CG82NM10 PCH [TDP = 2.1W] Package = BGA360, 17mm x 17 mm
BIOS	AMI BIOS, support ACPI Function
Memory	Intel® Atom™ on-die memory controller 1x DDR3-1066 SO-DIMM socket [Horizontal type] Maximum memory: 4GB for D2550; 2GB for N2600 Non-ECC, Unbuffered, 1.5V
VGA	Intel® GMA 3650 (Gfx freq @ 640MHz) for D2550 Intel® Graphics Media Acc GMA accelerator 3600 (Gfx freq @ 400MHz) for N2600 Supports DirectX 9 Graphics, OpenGL 3.0 DVI-I x 1 (Thru VGA + ASM1422 for DVI-D via D2550 or N2600)
LVDS	24-bit dual channel via CH7511thru eDP
LAN	Intel 82583V PCIe Gigabit LAN x 2
USB	NM10 built-in USB 2.0 host controller, support 6 ports
SATA Ports	NM10 built-in SATA II controller, supports 2 ports
Audio	Intel® NM10 PCH built-in HD Audio controller + Realtek ALC269QHD Codec w/class-D speaker amplifier (2.3W per channel @ 5V power supply) [7mm x 7mm @ 48-QFN] ; support 2-channel audio out + amp
LPC I/O	Nuvoton NCT6627UD [128-pin QFP, 14x14x1.4mm] - COM #1 (RS232/422/485) support ring-in with power @500 mA (selectable for 5V or 12V) [EXAR SP339EER1 232/422/485 transceiver x 1 for jumper-less] - COM #2 (RS232 only) - COM #3 / COM #4 (RS-232 only) [Hardware Monitor] 2 x Thermal inputs; 2 x Voltage monitoring 1 x fan header (DC Fan type)
Digital IO	4 in & 4 out
Keyboard/ Mouse Connector	Pin headers
Expansion Slots	Mini PCI-e socket x 2 (1x Full-sized+1xHalf-sized) **Full-sized MiniPCle(1x) support mSATA**
Edge Connector	DVI-I, 2x RJ45, 2x USB, COM1
Onboard Header/ Connector	Keyboard/mouse, 4x USB 2.0, 2x DF13 for 24-bit dual channel LVDS, Audio, speaker, COM2, COM3/4, LPC (80-port card debugging purpose), 2x Mini PCI-e(1x), smart battery, backlight/brightness control, 2x power connector SATA HDD [JST type]

INTRODUCTION

Watchdog Timer	Yes (256 segments, 0, 1, 2...255 sec/min)
Power Connector	+12V ~ +24V DC-in
Others	- i-Smart function (TI MSP430G2433 MCU) - AT24C02C EEPROM [SO8 type] via SMBus (Optional)
OS Support	- Windows 7 (32-bit only) - Linux
RoHS	Yes
Board Size	102mm x 147mm

Board Dimensions

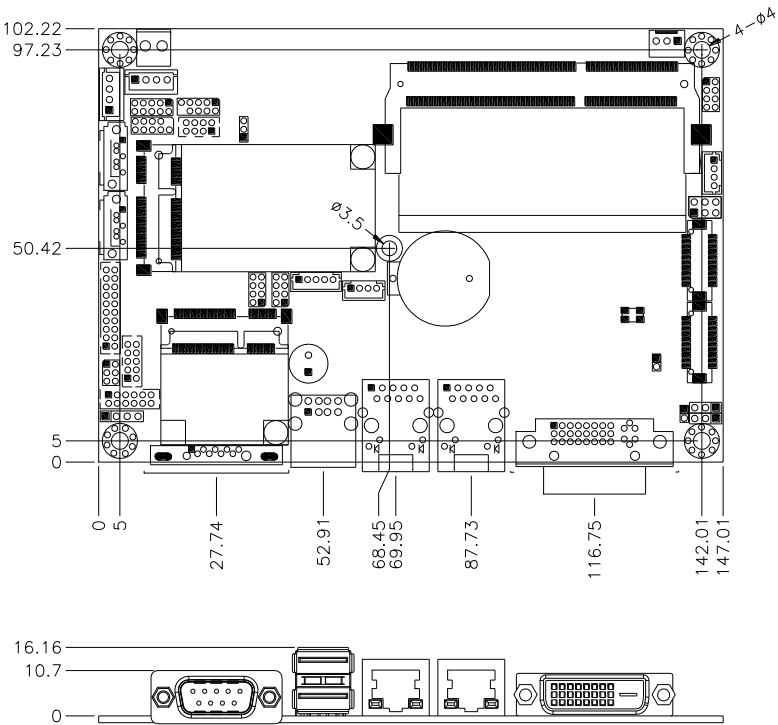

Installations

This section provides information on how to use the jumpers and connectors on the IB895 in order to set up a workable system. The topics covered are:

Installing the Memory	6
Setting the Jumpers	7
Connectors on IB895	11

Installing the Memory


The IB895 board supports one DDR3 memory socket for a maximum total memory of 2GB or 4GB DDR3 memory type.

Note: *IB895 with Intel Atom DC D2550 supports up to 4GB and IB895N with Intel Atom DC N2600 supports up to 2GB.*

Installing and Removing Memory Modules

To install the DDR3 modules, locate the memory slot on the board and perform the following steps:

1. Hold the DDR3 module so that the key of the DDR3 module aligned with that on the memory slot.
2. Gently push the DDR3 module in an upright position until the clips of the slot close to hold the DDR3 module in place when the DDR3 module touches the bottom of the slot.
3. To remove the DDR3 module, press the clips with both hands.

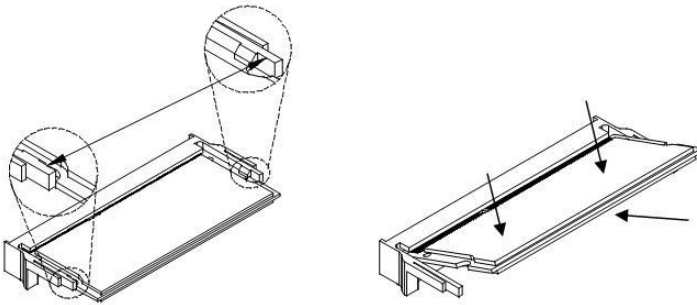


Setting the Jumpers

Jumpers are used on IB895 to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on IB895 and their respective functions.



Jumper Locations on IB895	8
JP2: Clear CMOS Contents	9
JP3: BL Voltage Setting	9
JP5: COM1 RS232 RI/+5V/+12V Power Setting.....	9
JP6: LVDS Panel Power Selection	9
JP7: BL_ADJ_LEVEL Setting(PWM Mode).....	10
JP8: Factory use only	10
SW1 : LVDS Panel Type setting	10

Jumper Locations on IB895

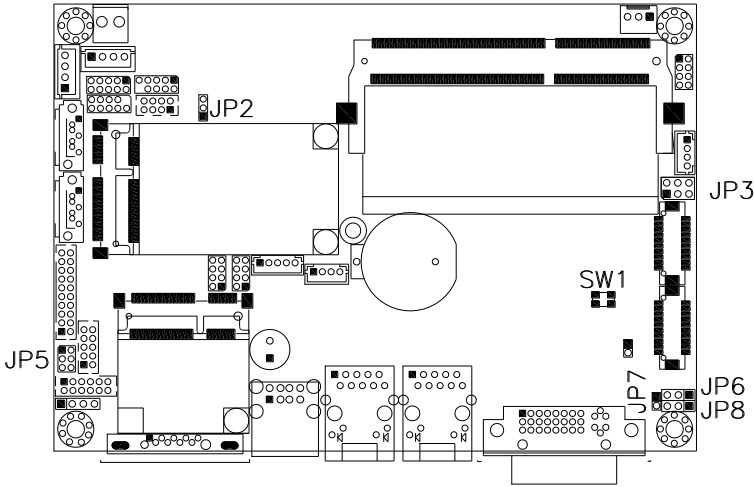


Jumpers on IB895	Page
JP2: Clear CMOS Contents.....	9
JP3: BL Voltage Setting.....	9
JP5: COM1 RS232 RI/+5V/+12V Power Setting.....	9
JP6: LVDS Panel Power Selection	9
JP7: BL_ADJ_LEVEL Setting(PWM Mode).....	10
JP8: Factory use only	10
SW1 : LVDS Panel Type setting	10


JP2: Clear CMOS Contents

JP2	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear CMOS



JP3: BL Voltage Setting

JP3	Setting	Function
	Pin 1-2 Short/Closed	+3.3V(Default)
	Pin 3-4 Short/Closed	+5V
	Pin 5-6 Short/Closed	+12V



JP5: COM1 RS232 RI/+5V/+12V Power Setting

JP5	Setting	Function
	Pin 1-2 Short/Closed	+12V
	Pin 3-4 Short/Closed	RI
	Pin 5-6 Short/Closed	+5V

JP6: LVDS Panel Power Selection

JP6	Setting	Panel Voltage
	Pin 1-2 Short/Closed	3.3V (default)
	Pin 2-3 Short/Closed	5V

JP7: BL_ADJ_LEVEL Setting (PWM Mode)

JP7	Setting	Voltage
	Open	3.3V (default)
	Close	5V


JP8: Factory use only**SW1: LVDS Panel Type Setting**


SW1-4	SW1-3	SW1-2	SW1-1	Panel Type
ON	ON	ON	ON	800*600 18bit 1ch
ON	ON	ON	OFF	1024*768 18bit 1ch
ON	ON	OFF	ON	1024*768 24bit 1ch
ON	ON	OFF	OFF	1280*768 18bit 1ch
ON	OFF	ON	ON	1280*800 18bit 1ch
ON	OFF	ON	OFF	1280*960 18bit 1ch
ON	OFF	OFF	ON	1280*1024 24bit 2ch
ON	OFF	OFF	OFF	1366*768 18bit 1ch
OFF	ON	ON	ON	1366*768 24bit 1ch
OFF	ON	ON	OFF	1440*900 24bit 2ch
OFF	ON	OFF	ON	1440*1050 24bit 2ch
OFF	ON	OFF	OFF	1600*900 24bit 2ch
OFF	OFF	ON	ON	1680*1050 24bit 2ch
OFF	OFF	ON	OFF	1600*1200 24bit 2ch
OFF	OFF	OFF	ON	1920*1080 24bit 2ch
OFF	OFF	OFF	OFF	1920*1200 24bit 2ch

Connectors on IB895

Connector Locations on IB895	12
CN4, CN5: Gigabit LAN (Intel 82583V)	13
CN6: USB 1/2 Connector	13
CN7: VGA DVI-I Connector	13
CN8: DB9 Connector	13
CN1, CN3: SATA Connector	14
CN2: LCD Backlight Connector	14
J1: Board Input Power Connector	14
J2, J3: SATA HDD Power Connector	14
J5: Digital I/O Connector	14
J6: SPI Flash Connector (factory use only)	14
J7: Keyboard & Mouse Connector (DF11 Connector)	15
J11: Smart Battery Interface Connector	15
J12, J13: USB3/4/5/6 Connector	15
J15: COM3, COM4 Serial Port (DF11 Connector)	16
J16: COM2/RS232 Serial Port	16
J18: Audio Connector (DF11 Connector)	16
J22: Amplify Connector	17
J23: LVDS EEPROM Flash Connector (factory use only)	17
CH1, CH2: LVDS Connectors	17
JP1: Front Panel Connector	18

Connector Locations on IB895

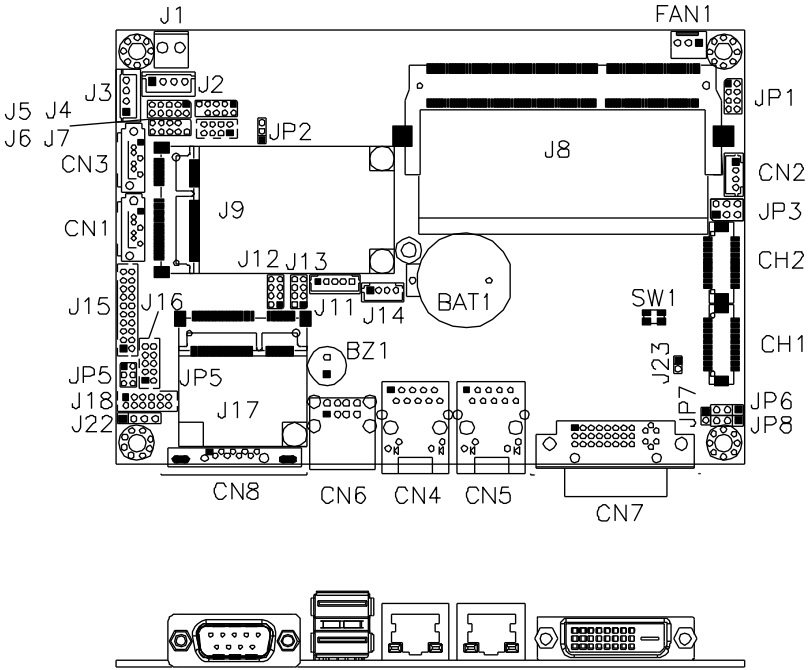

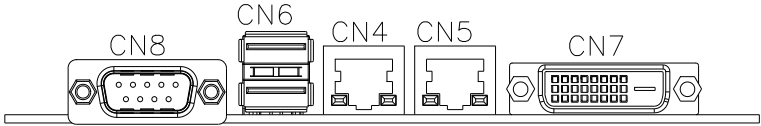

CN4, CN5: Gigabit LAN (Intel 82583V)

This RJ45 LAN connector (CN4 only) features for EUP LAN wakeup.

CN6: USB 1/2 Connector


CN7: VGA DVI-I Connector

CN8: DB9 Connector

(COM1) is a DB-9 connector.

Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	6	DSR, Data set ready
RXD, Receive data	2	7	RTS, Request to send
TXD, Transmit data	3	8	CTS, Clear to send
DTR, Data terminal ready	4	9	RI, Ring indicator
GND, ground	5	10	Not Used

COM1 is jumper-less for RS-232, RS-422 and RS-485 and configured with BIOS selection.



Pin #	Signal Name		
	RS-232	R2-422	RS-485
1	DCD	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	NC
4	DTR	RX-	NC
5	Ground	Ground	Ground
6	DSR	NC	NC
7	RTS	NC	NC
8	CTS	NC	NC
9	RI	NC	NC
10	NC	NC	NC

CN1, CN3: SATA Connectors**CN2: LCD Backlight Connector**

Pin #	Signal Name
1	Backlight Power
2	Backlight Enable
3	Brightness Control
4	Ground


Note: Brightness Control is only supported in PWM-Mode panels.

J1: Board Input Power Connector

Pin #	Signal Name
1	+12V to +24V
2	GND

J2, J3: SATA HDD Power Connector


Pin #	Signal Name
1	+5V
2	Ground
3	Ground
4	+12V

J4: Debug 80 Port Connector (factory use only)**J5: Digital I/O Connector**

Signal Name	Pin #	Pin #	Signal Name
GND	1	2	VCC
OUT3	3	4	OUT1
OUT2	5	6	OUT0
IN3	7	8	IN1
IN2	9	10	IN0

J6: SPI Flash Connector (factory use only)

J7: Keyboard & Mouse Connector (DF11 Connector)




Signal Name	Pin #	Pin #	Signal Name
VCC	2	1	VCC
KBDA	4	3	MDA
KBCL	6	5	MCL
Ground	8	7	Ground

J8: DDR3 SO-DIMM Socket

J9: Mini PCIE Connector(Support mSATA)


J9 also supports mSATA. However, when J9 is used for mSATA, then CN3 SATA port cannot be used. Only one of them can be used at one time to support SATA.

J11: Smart Battery Interface Connector



Pin #	Signal Name
1	RST
2	EXTSMI
3	Ground
4	DATA
5	CLK


J12, J13: USB3/4/5/6 Connector



Signal Name	Pin #	Pin #	Signal Name
Vcc	1	2	Ground
D-	3	4	D+
D+	5	6	D-
Ground	7	8	Vcc


J14: MCU Flash Connector (factory use only)

J15: COM3, COM4 Serial Port (DF11 Connector)



Signal Name	Pin #	Pin #	Signal Name
DSR3	2	1	DCD3
RTS3	4	3	RXD3
CTS3	6	5	TXD3
RI3	8	7	DTR3
NC	10	9	Ground
DSR4	12	11	DCD4
RTS4	14	13	RXD4
CTS4	16	15	TXD4
RI4	18	17	DTR4
NC	20	19	Ground


J16: COM2/RS232 Serial Port



Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	2	RXD, Receive data
TXD, Transmit data	3	4	DTR, Data terminal ready
GND, ground	5	6	DSR, Data set ready
RTS, Request to send	7	8	CTS, Clear to send
RI, Ring indicator	9	10	Not Used

J17: Mini PCIE Connector

J18: Audio Connector (DF11 Connector)



Signal Name	Pin #	Pin #	Signal Name
LINEOUT_R	2	1	LINEOUT_L
Ground	4	3	JD_FRONT
LINEIN_R	6	5	LINEIN_L
Ground	8	7	JD_LINEIN
MIC-R	10	9	MIC L
Ground	12	11	JD_MIC1


J22: Amplify Connector



Pin #	Signal Name
1	OUTL+
2	OUTL-
3	OUTR-
4	OUTR+

J23: LVDS EEPROM Flash Connector (factory use only)

CH1, CH2: LVDS Connectors

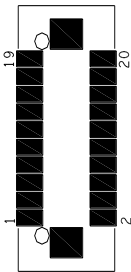

Signal Name	Pin #	Pin #	Signal Name
N.C	19	20	N.C
ENABLE	17	18	LCD_PWR
CLK+	15	16	CLK-
GND	13	14	GND
LD2+	11	12	LD2-
LD3+	9	10	LD3-
GND	7	8	LCD_PWR
LD1+	5	6	LD1-
GND	3	4	GND
LD0+	1	2	LD0-

JP1: Front Panel Connector

The following table shows the pin outs of the 2x4 pin header

1	□	○	2				
	○	○					
	○	○					
7	○	○	8				

Signal Name	Pin #	Pin #	Signal Name
Ground	1	2	PWR_SW
PWR_LED+	3	4	PWR_LED-(GND)
HDD_LED+	5	6	HDD_LED-
Ground	7	8	RESET

JP1 provides connectors for system indicators that provide light indication of the computer activities and switches to change the computer status. JP1 is an 8-pin header that provides interfaces for the following functions.

ATX Power ON Switch: Pins 1 and 2

This 2-pin connector is an “ATX Power Supply On/Off Switch” on the system that connects to the power switch on the case. When pressed, the power switch will force the system to power on. When pressed again, it will force the system to power off.

Power LED: Pins 3 and 4

Pin #	Signal Name
3	LED(+)
4	LED(-)

Hard Disk Drive LED Connector: Pins 5 and 6

This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.

Pin #	Signal Name
5	LED(+)
6	LED(-)

Reset Switch: Pins 7 and 8

The reset switch allows the user to reset the system without turning the main power switch off and then on again. Orientation is not required when making a connection to this header.

BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

BIOS Introduction	20
BIOS Setup	20
Advanced Settings	22
Chipset Settings.....	31
Boot Settings	36
Security Settings	37
Save & Exit Settings.....	38

BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Warning: *It is strongly recommended that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could cause the system to become unstable and crash in some cases.*

System Date

Set the Date. Use Tab to switch between Data elements.

System Time

Set the Time. Use Tab to switch between Data elements.

Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
	Legacy OpROM Support Launch PXE OpROM			Disabled	
	▶ PCI Subsystem Settings ▶ ACPI Settings ▶ Wake up event setting ▶ CPU Configuration ▶ iSmart Configuration ▶ IDE Configuration ▶ USB Configuration ▶ W83627UHG Super IO Configuration ▶ H/W Monitor ▶ PPM Configuration				→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit

Launch PXE OpROM

Enable or Disable Boot Option for Legacy Network Devices.

PCI Subsystem Settings

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
	PCI Bus Driver Version		V 2.05.01		
	PCI ROM Priority		Legacy ROM		→ ← Select Screen
	PCI Common Settings				↑ ↓ Select Item
	PCI Latency Timer		32 PCI Bus Clocks		Enter: Select
	VGA Palette Snoop		Disabled		+ - Change Opt
	PERR# Generation		Disabled		F1: General Help
	SERR# Generation		Disabled		F2: Previous Values
					F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

PCI ROM Priority

In case of multiple Option ROMs (Legacy and EFI Compatible), specifies what PCI Option ROM to launch.

PCI Latency Timer

Value to be programmed into PCI Latency Timer Register.

VGA Palette Snoop

Enables or Disables VGA Palette Registers Snooping.

PERR# Generation

Enables or Disables PCI Device to Generate PERR#.

SERR# Generation

Enables or Disables PCI Device to Generate SERR#.

ACPI Settings

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
ACPI Settings					
Enable ACPI Auto Configuration			Disabled		→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit

Enabled ACPI Auto Configuration

Enables or Disables BIOS ACPI Auto Configuration.

Wake up event setting

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
			Wake on Ring Disabled		→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit
			Wake on PCIE PME Disabled		

Wake on Ring

The options are Disabled and Enabled.

Wake on PCIE PME

The options are Disabled and Enabled.

CPU Configuration

This section shows the CPU configuration parameters.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
CPU Configuration					
Processor Type		Intel(R) Atom(TM) CPU			
EMT64		Supported			
Processor Speed		1865 MHz			
System Bus Speed		533 MHz			
Ratio Status		14			
Actual Ratio		14			
System Bus Speed		533 MHz			
Processor Stepping		30661			
Microcode Revision		269			
L1 Cache RAM		2x56 k		→ ← Select Screen	
L2 Cache RAM		2x512 k		↑ ↓ Select Item	
Processor Core		Dual		Enter: Select	
Hyper-Threading		Supported		+- Change Opt	
Hyper-Threading		Enabled		F1: General Help	
Execute Disable Bit		Enabled		F2: Previous Values	
Limit CPUID Maximum		Disabled		F3: Optimized Default	
				F4: Save & EXIT	
				ESC: Exit	

Hyper-threading

Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled, only one thread per enabled core is enabled.

Execute Disable Bit

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, Re33dHat Enterprise 3 Update 3.)

Limit CPUID Maximum

Disabled for Windows XP.

iSmart Controller

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
iSmart Controller					→ ← Select Screen
EuP/ErP standby power Control					↑ ↓ Select Item
Power-On after Power failure					Enter: Select
Schedule Slot 1					+ - Change Opt
Schedule Slot 2					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

EuP/ErP standby power Control

Saving the power consumption on power off.

Power-On after Power failure

This field sets the system power status whether *on* or *off* when power returns to the system from a power failure situation.

Schedule Slot

None / Power On / Power On/Off – Setup the hour/minute for system power on

IDE Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
SATA Port0					→ ← Select Screen
SATA Port1					↑ ↓ Select Item
SATA Controller(s)					Enter: Select
Configure SATA as					+ - Change Opt
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

SATA Controller(s)

Enable / Disable Serial ATA Controller.

Configure SATA as

- (1) IDE Mode.
- (2) AHCI Mode.

USB Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					
USB Devices:					
None					→ ← Select Screen
Legacy USB Support					↑ ↓ Select Item
Enabled					Enter: Select
EHCI Hand-off					+ - Change Opt
Enabled					F1: General Help
USB hardware delays and time-outs:					F2: Previous Values
USB Transfer time-out					F3: Optimized Default
20 sec					F4: Save & EXIT
Device reset time-out					ESC: Exit
20 sec					
Device power-up delay					
Auto					

Legacy USB Support

Enables Legacy USB support.

AUTO option disables legacy support if no USB devices are connected.

DISABLE option will keep USB devices available only for EFI applications.

EHCI Hand-off

Enabled/Disabled. This is a workaround for OSeS without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

USB Transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

Device reset time-out

USB mass Storage device start Unit command time-out.

Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

Super IO Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
W83627UHG Super IO Configuration					
Super IO Chip			Winbond W83627UHG		
<ul style="list-style-type: none"> ▶ W83627UHG Serial Port 0 Configuration ▶ W83627UHG Serial Port 1 Configuration ▶ W83627UHG Serial Port 2 Configuration ▶ W83627UHG Serial Port 3 Configuration 					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit

Serial Port Configuration

Set Parameters of Serial Ports. User can Enable/Disable the serial port and Select an optimal settings for the Super IO Device.

H/W Monitor

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Pc Health Status					
System temperature			+50 C		
CPU temperature			+55 C		
CPU Fan Speed			N/A		
VCORE			+1.184 V		
+12V			+12.032 V		
+3.3V			+3.248 V		
+5V			+4.960 V		
CPU Shutdown Temperature			Disabled		
SmartFan Control			Disabled		
					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit

Temperatures/Voltages

These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status.

CPU Shutdown Temperature

The default setting is Disabled.

Smart Fan Control

Disabled (default)

60 °C

70 °C

80 °C

90 °C


PPM Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
PPM Configuration					
EIST			Enabled		
					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit

Chipset Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

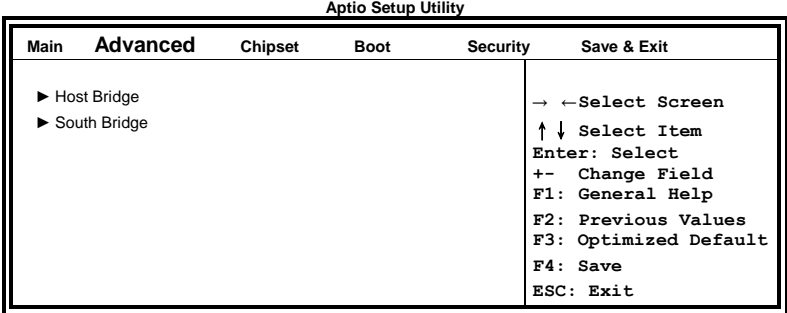

Host Bridge


This item shows the Host Bridge Parameters.

South Bridge

This item shows the South Bridge Parameters.

Host Bridge

This section allows you to configure the Host Bridge Chipset.

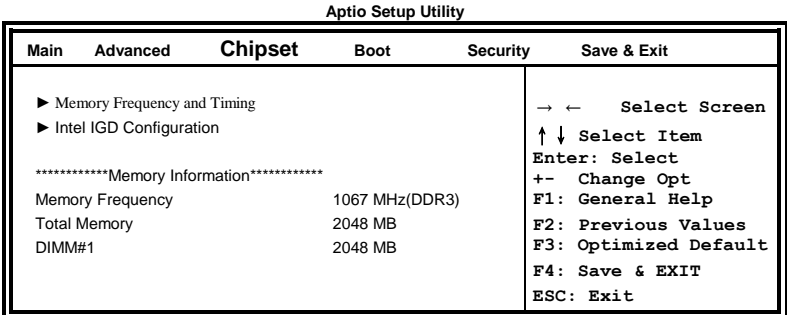

Memory Frequency and Timing

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Memory Frequency and Timing					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit
MRC Fast Boot		Enabled			
Max TOLUD		Dynamic			

MRC Fast Boot

The options are Disabled and Enabled.

Max TOLUD

The default setting is Dynamic.

Intel IGD Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Intel IGD Configuration					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit
IGFX-Boot Type		VBIOS Default			
LVDS Back Light Control		7(MAX)			

IGFX-Boot Type

Select the video Device which will be activated during POST .

South Bridge

This section allows you to configure the South Bridge Chipset.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
<ul style="list-style-type: none"> ▶ TPT Device ▶ PCI Express Root Port0 ▶ PCI Express Root Port1 ▶ PCI Express Root Port2 ▶ PCI Express Root Port3 					
DMI Link ASPM Control			Enabled		→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit
PCI-Exp. High Priority Port			Disabled		
High Precision Event Timer Configuration					
High Precision Timer			Enabled		
SLP_SP4 Assertion Width			1-2 Seconds		

DMI Clink ASPM Control

The control of Active State Power Management on both NB side and SB side of the DMI Link.

PCI-Exp. High Priority Port

The options are Disabled, Port1, Port2, Port3, and Port4.

High Precision Event Timer Configuration

Enable/or Disable the High Precision Event Timer.

SLP_S4 Assertion Stretch Enable

Select a minimum assertion width of the SLP_S4# signal.

TPT Device

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
		Azalia Controller	HD Audio		→ ← Select Screen
		Select USB Mode	By Controllers		↑ ↓ Select Item
		UHCI #1 (port 0 and 1)	Enabled		Enter: Select
		UHCI #2 (port 2 and 3)	Enabled		+ - Change Opt
		UHCI #3 (port 4 and 5)	Enabled		F1: General Help
		UHCI #4 (port 6 and 7)	Enabled		F2: Previous Values
		USB 2.0(EHCI) Support	Enabled		F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

PCI Express Root Port0

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
		PCI Express Port 0	Enabled		→ ← Select Screen
		Port 0 IOxAPIC	Disabled		↑ ↓ Select Item
		Automatic ASPM	Manual		Enter: Select
		ASPM L0s	Root Port Only		+ - Change Opt
		ASPM L1	Enabled		F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

PCI Express Root Port1

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
		PCI Express Port 0	Auto		→ ← Select Screen
		Port 0 IOxAPIC	Disabled		↑ ↓ Select Item
		Automatic ASPM	Manual		Enter: Select
		ASPM L0s	Root Port Only		+ - Change Opt
		ASPM L1	Enabled		F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

PCI Express Root Port2

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
		PCI Express Port 2	Auto		→ ← Select Screen
		Port 0 IOxAPIC	Disabled		↑ ↓ Select Item
		Automatic ASPM	Manual		Enter: Select
		ASPM L0s	Disabled		+ - Change Opt
		ASPM L1	Disabled		F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

PCI Express Root Port3

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
		PCI Express Port 3	Auto		→ ← Select Screen
		Port 0 IOxAPIC	Disabled		↑ ↓ Select Item
		Automatic ASPM	Manual		Enter: Select
		ASPM L0s	Disabled		+ - Change Opt
		ASPM L1	Disabled		F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & EXIT
					ESC: Exit

Boot Settings**Aptio Setup Utility**

Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot Configuration					
Setup Prompt Timeout			1		
Bootup NumLock State			On		
Quiet Boot			Disabled		→ ← Select Screen
Fast Boot			Disabled		↑ ↓ Select Item
CSM16 Module Version			07.68		Enter: Select
GateA20 Active			Upon Request		+ - Change Opt
Option ROM Messages			Force BIOS		F1: General Help
Interrupt 19 Capture			Enabled		F2: Previous Values
CSM Support			Enabled		F3: Optimized Default
Boot Option Priorities					F4: Save & EXIT
					ESC: Exit

Setup Prompt Timeout

Number of seconds to wait for setup activation key.
65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Quiet Boot

Enables/Disables Quiet Boot option.

Fast Boot

Enables/Disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

GateA20 Active

UPON REQUEST – GA20 can be disabled using BIOS services.
ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.

Option ROM Messages

Set display mode for Option ROM. Options: Force BIOS; Keep Current.

Interrupt 19 Capture

Enable: Allows Option ROMs to trap Int 19.

CSM Support

Enables/Disables/Auto CSM Support.

Security Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Password Description If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup. If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights Administrator Password User Password					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit

Administrator Password

Set Setup Administrator Password.

User Password

Set User Password.

Save & Exit Settings**Aptio Setup Utility**

Main	Advanced	Chipset	Boot	Security	Save & Exit
Save Changes and Exit				→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit	
Discard Changes and Exit					
Save Changes and Reset					
Discard Changes and Reset					
Save Options					
Save Changes					
Discard Changes					
Restore Defaults					
Save as User Defaults					
Restore User Defaults					
Boot Override					

Save Changes and Exit

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Save Changes

Save Changes done so far to any of the setup options.

Discard Changes

Discard Changes done so far to any of the setup options.

Restore Defaults

Restore/Load Defaults values for all the setup options.

Save as User Defaults

Save the changes done so far as User Defaults.

Restore User Defaults

Restore the User Defaults to all the setup options.

Drivers Installation

This section describes the installation procedures for software and drivers. The software and drivers are included with the motherboard. If you find the items missing, please contact the vendor where you made the purchase. The contents of this section include the following:

Intel Chipset Software Installation Utility	40
VGA Drivers Installation.....	41
Realtek HD Audio Driver Installation	42
LAN Drivers Installation	43

IMPORTANT NOTE:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.


Intel Chipset Software Installation Utility

The Intel Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation.

1. Insert the disc that comes with the board. Click **Intel** and then **Intel(R) Cedarview Chipset Drivers**.



2. Click **Intel(R) Chipset Software Installation Utility**.

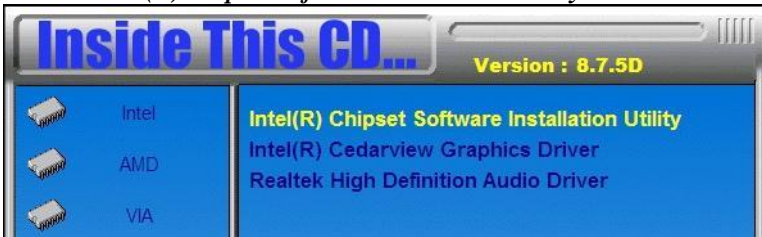

3. When the Welcome screen to the Intel® Chipset Device Software appears, click **Next** to continue.

4. Click **Yes** to accept the software license agreement and proceed with the installation process.

5. On the Readme File Information screen, click **Next** to continue the installation.

6. The Setup process is now complete. Click **Finish** to restart the computer and for changes to take effect.

VGA Drivers Installation

IMPORTANT NOTE: After installing the graphics driver, the default display is still LVDS. Both VGA/CRT and DVI will only be extended displays. To switch to any of these displays, use the hot key:

For VGA – **Ctrl+Alt+F1**

For DVI – **Ctrl+Alt+F3**

1. Click **Intel(R) Cedarview Graphics Driver**.



2. When the Welcome screen appears, click **Next** to continue.




4. Click **Yes** to to agree with the license agreement and continue the installation.
5. On the Readme File Information screen, click **Next** to continue the installation of the Intel® Graphics Media Accelerator Driver.
6. On Setup Progress screen, click **Next** to continue.
7. Setup complete. Click **Finish** to restart the computer and for changes to take effect.

Realtek HD Audio Driver Installation

1. Click *Realtek High Definition Audio Driver*.



2. On the Welcome to the InstallShield Wizard screen, click *Next* to proceed with and complete the installation process.

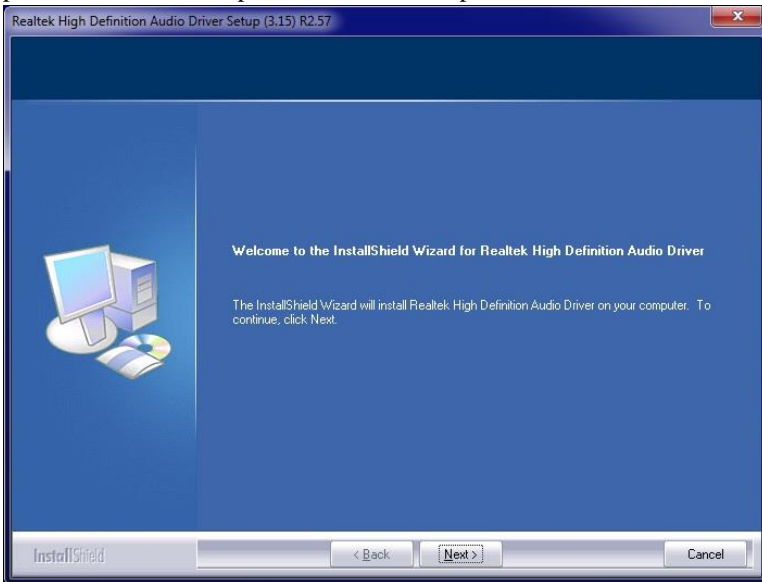

3. Restart the computer when prompted.

LAN Drivers Installation

1. Insert the CD that comes with the board. Click *LAN Card* and then *Intel(R) LAN Controller Drivers*.
2. Click *Intel(R) Gigabit Ethernet Drivers*.



3. In the Welcome screen, click *Next*.
4. In the License Agreement screen, click *I accept the terms in license agreement* and *Next* to accept the software license agreement and proceed with the installation process.
5. Click the checkbox for **Drivers** in the Setup Options screen to select it and click **Next** to continue.
6. When the Ready to Install the Program screen appears, click *Install* to continue.
7. When InstallShield Wizard is complete, click *Finish*.

Appendix

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
0000-001F	Direct memory access controller
0000-001F	PCI bus
0020-0021	Programmable interrupt controller
0024-0025	Programmable interrupt controller
0028-0029	Programmable interrupt controller
002C-002D	Programmable interrupt controller
0030-0031	Programmable interrupt controller
0034-0035	Programmable interrupt controller
0038-0039	Programmable interrupt controller
003C-003D	Programmable interrupt controller
0040-0043	System timer
0050-0053	System timer
0060-0060	Standard PS/2 Keyboard
0064-0064	Standard PS/2 Keyboard
0070-0077	System CMOS/real time clock
0081-0091	Direct memory access controller
0093-009F	Direct memory access controller
00A0-00A1	Programmable interrupt controller
00A4-00A5	Programmable interrupt controller
00A8-00A9	Programmable interrupt controller
00AC-00AD	Programmable interrupt controller
00B0-00B1	Programmable interrupt controller
00B4-00B5	Programmable interrupt controller
00B8-00B9	Programmable interrupt controller
00BC-00BD	Programmable interrupt controller
00C0-00DF	Direct memory access controller
00F0-00F0	Numeric data processor
02E8-02EF	Communications Port (COM4)
02F8-02FF	Communications Port (COM2)

Address	Device Description
03B0-03BB	Intel(R) Graphics Media Accelerator 3600 Series
03C0-03DF	Intel(R) Graphics Media Accelerator 3600 Series
03E8-03EF	Communications Port (COM3)
03F8-03FF	Communications Port (COM1)
04D0-04D1	Programmable interrupt controller
0D00-FFFF	PCI bus
D000-DFFF	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
E000-EFFF	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0
F000-F01F	Intel(R) N10/ICH7 Family SMBus Controller - 27DA
F020-F03F	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
F040-F05F	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
F060-F07F	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
F080-F09F	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
F0A0-F0AF	Intel(R) N10/ICH7 Family Serial ATA Storage Controller - 27C0
F0B0-F0B3	Intel(R) N10/ICH7 Family Serial ATA Storage Controller - 27C0
F0C0-F0C7	Intel(R) N10/ICH7 Family Serial ATA Storage Controller - 27C0
F0D0-F0D3	Intel(R) N10/ICH7 Family Serial ATA Storage Controller - 27C0
F0E0-F0E7	Intel(R) N10/ICH7 Family Serial ATA Storage Controller - 27C0
F0F0-F0F7	Intel(R) Graphics Media Accelerator 3600 Series

B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices.

Level	Function
IRQ 0	System timer
IRQ 1	Standard PS/2 Keyboard
IRQ 3	Communications Port (COM2)
IRQ 4	Communications Port (COM1)
IRQ 5	Communications Port (COM3)
IRQ 7	Communications Port (COM4)
IRQ 8	System CMOS/real time clock
IRQ 11	Intel(R) N10/ICH7 Family SMBus Controller - 27DA
IRQ 12	Microsoft PS/2 Mouse
IRQ 13	Numeric data processor
IRQ 16	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
IRQ 18	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
IRQ 19	Intel(R) N10/ICH7 Family Serial ATA Storage Controller - 27C0
IRQ 19	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
IRQ 22	High Definition Audio Controller
IRQ 23	Intel(R) N10/ICH7 Family USB2 Enhanced Host Controller - 27CC
IRQ 23	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
IRQ 4294967290	Intel(R) 82583V Gigabit Network Connection
IRQ 4294967291	Intel(R) 82583V Gigabit Network Connection #2
IRQ 4294967292	Intel(R) Graphics Media Accelerator 3600 Series
IRQ 4294967293	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
IRQ 4294967294	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0

C. Digital I/O Sample Code

File of the W627UHG.H

```
//-----  
//  
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY  
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE  
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR  
// PURPOSE.  
//  
//-----  
#ifndef __W627UHG_H  
#define __W627UHG_H            1  
//-----  
#define W627UHG_INDEX_PORT    (W627UHG_BASE)  
#define W627UHG_DATA_PORT     (W627UHG_BASE+1)  
//-----  
#define W627UHG_REG_LD        0x07  
//-----  
#define W627UHG_UNLOCK        0x87  
#define W627UHG_LOCK          0xAA  
//-----  
unsigned int Init_W627UHG(void);  
void Set_W627UHG_LD( unsigned char);  
void Set_W627UHG_Reg( unsigned char, unsigned char);  
unsigned char Get_W627UHG_Reg( unsigned char);  
//-----  
#endif// __W627UHG_H
```

File of the W627UHG.CPP

```
//-----  
//  
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY  
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE  
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR  
// PURPOSE.  
//  
//-----  
#include "W627UHG.H"  
#include <dos.h>  
//-----  
unsigned int W627UHG_BASE;  
void Unlock_W627UHG (void);  
void Lock_W627UHG (void);  
//-----  
unsigned int Init_W627UHG(void)  
{  
    unsigned int result;  
    unsigned char ucDid;  
  
    W627UHG_BASE = 0x4E;  
    result = W627UHG_BASE;  
  
    ucDid = Get_W627UHG_Reg(0x20);  
    if (ucDid == 0xA2)                                //W83627UHG??  
    {        goto Init_Finish;    }  
  
    W627UHG_BASE = 0x2E;  
    result = W627UHG_BASE;  
  
    ucDid = Get_W627UHG_Reg(0x20);  
    if (ucDid == 0xA2)                                //W83627UHG??  
    {        goto Init_Finish;    }  
  
    W627UHG_BASE = 0x00;  
    result = W627UHG_BASE;  
  
Init_Finish:  
    return (result);  
}  
//-----  
void Unlock_W627UHG (void)  
{  
    outportb(W627UHG_INDEX_PORT, W627UHG_UNLOCK);  
    outportb(W627UHG_INDEX_PORT, W627UHG_UNLOCK);  
}  
//-----  
void Lock_W627UHG (void)  
{  
    outportb(W627UHG_INDEX_PORT, W627UHG_LOCK);  
}  
//-----  
void Set_W627UHG_LD( unsigned char LD)
```

```
{
    Unlock_W627UHG();
    outportb(W627UHG_INDEX_PORT, W627UHG_REG_LD);
    outportb(W627UHG_DATA_PORT, LD);
    Lock_W627UHG();
}
//-----
void Set_W627UHG_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_W627UHG();
    outportb(W627UHG_INDEX_PORT, REG);
    outportb(W627UHG_DATA_PORT, DATA);
    Lock_W627UHG();
}
//-----
unsigned char Get_W627UHG_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_W627UHG();
    outportb(W627UHG_INDEX_PORT, REG);
    Result = inportb(W627UHG_DATA_PORT);
    Lock_W627UHG();
    return Result;
}
//-----
```

File of the MAIN.CPP

```
//-----  
//  
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY  
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE  
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR  
// PURPOSE.  
//  
//-----  
#include <dos.h>  
#include <conio.h>  
#include <stdio.h>  
#include <stdlib.h>  
#include "W627UHG.H"  
//-----  
int main (void);  
  
void Dio5Initial(void);  
void Dio5SetOutput(unsigned char);  
unsigned char Dio5GetInput(void);  
void Dio5SetDirection(unsigned char);  
unsigned char Dio5GetDirection(void);  
//-----  
int main (void)  
{  
    char SIO;  
  
    SIO = Init_W627UHG();  
    if (SIO == 0)  
    {  
        printf("Can not detect Winbond 83627UHG, program abort.\n");  
        return(1);  
    }  
  
    Dio5Initial();  
  
    //for GPIO50..57  
    Dio5SetDirection(0x0F); //GP50..53 = input, GP54..57=output  
    printf("Current DIO direction = 0x%X\n", Dio5GetDirection());  
  
    printf("Current DIO status = 0x%X\n", Dio5GetInput());  
  
    printf("Set DIO output to high\n");  
    Dio5SetOutput(0x0F);  
  
    printf("Set DIO output to low\n");  
    Dio5SetOutput(0x00);  
  
    return 0;
```

```
}
//-----
void Dio5Initial(void)
{
    unsigned char ucBuf;

    Set_W627UHG_LD(0x08); //switch to logic device 8
    //enable the GP5 group
    ucBuf = Get_W627UHG_Reg(0x30);
    ucBuf |= 0x02;
    Set_W627UHG_Reg(0x30, ucBuf);
}
//-----
void Dio5SetOutput(unsigned char NewData)
{
    Set_W627UHG_LD(0x08); //switch to logic device 8
    Set_W627UHG_Reg(0xE1, NewData);
}
//-----
unsigned char Dio5GetInput(void)
{
    unsigned char result;

    Set_W627UHG_LD(0x08); //switch to logic device 8
    result = Get_W627UHG_Reg(0xE1);
    return (result);
}
//-----
void Dio5SetDirection(unsigned char NewData)
{
    //NewData : 1 for input, 0 for output
    Set_W627UHG_LD(0x08); //switch to logic device 8
    Set_W627UHG_Reg(0xE0, NewData);
}
//-----
unsigned char Dio5GetDirection(void)
{
    unsigned char result;

    Set_W627UHG_LD(0x08); //switch to logic device 8
    result = Get_W627UHG_Reg(0xE0);
    return (result);
}
//-----
```

D. Watchdog Timer Configuration

The WDT is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven. Under normal circumstance, the user will restart the WDT at regular intervals before the timer counts to zero.

SAMPLE CODE:

File of the W627UHG.CPP

```
//-----  
//  
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY  
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE  
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR  
// PURPOSE.  
//  
//-----  
#include "W627UHG.H"  
#include <dos.h>  
//-----  
unsigned int W627UHG_BASE;  
void Unlock_W627UHG (void);  
void Lock_W627UHG (void);  
//-----  
unsigned int Init_W627UHG(void)  
{  
    unsigned int result;  
    unsigned char ucDid;  
  
    W627UHG_BASE = 0x4E;  
    result = W627UHG_BASE;  
  
    ucDid = Get_W627UHG_Reg(0x20);  
    if (ucDid == 0xA2) //W83627UHG??  
    { goto Init_Finish; }  
  
    W627UHG_BASE = 0x2E;  
    result = W627UHG_BASE;  
  
    ucDid = Get_W627UHG_Reg(0x20);  
    if (ucDid == 0xA2) //W83627UHG??  
    { goto Init_Finish; }  
  
    W627UHG_BASE = 0x00;  
    result = W627UHG_BASE;
```



```
Init_Finish:
    return (result);
}
//-----
void Unlock_W627UHG (void)
{
    outportb(W627UHG_INDEX_PORT, W627UHG_UNLOCK);
    outportb(W627UHG_INDEX_PORT, W627UHG_UNLOCK);
}
//-----
void Lock_W627UHG (void)
{
    outportb(W627UHG_INDEX_PORT, W627UHG_LOCK);
}
//-----
void Set_W627UHG_LD( unsigned char LD)
{
    Unlock_W627UHG();
    outportb(W627UHG_INDEX_PORT, W627UHG_REG_LD);
    outportb(W627UHG_DATA_PORT, LD);
    Lock_W627UHG();
}
//-----
void Set_W627UHG_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_W627UHG();
    outportb(W627UHG_INDEX_PORT, REG);
    outportb(W627UHG_DATA_PORT, DATA);
    Lock_W627UHG();
}
//-----
unsigned char Get_W627UHG_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_W627UHG();
    outportb(W627UHG_INDEX_PORT, REG);
    Result = inportb(W627UHG_DATA_PORT);
    Lock_W627UHG();
    return Result;
}
//-----
```

File of the W627UHG.H

```
//-----  
//  
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY  
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE  
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR  
// PURPOSE.  
//  
//-----  
#ifndef __W627UHG_H  
#define __W627UHG_H          1  
//-----  
#define W627UHG_INDEX_PORT (W627UHG_BASE)  
#define W627UHG_DATA_PORT  (W627UHG_BASE+1)  
//-----  
#define W627UHG_REG_LD      0x07  
//-----  
#define W627UHG_UNLOCK      0x87  
#define W627UHG_LOCK        0xAA  
//-----  
unsigned int Init_W627UHG(void);  
void Set_W627UHG_LD( unsigned char);  
void Set_W627UHG_Reg( unsigned char, unsigned char);  
unsigned char Get_W627UHG_Reg( unsigned char);  
//-----  
#endif// __W627UHG_H
```

File of the MAIN.CPP

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <comio.h>
#include <stdio.h>
#include <stdlib.h>
#include "W627UHG.H"
//-----
int main (void);

void WDTInitial(void);
void WDTEnable(unsigned char);
void WDTDisable(void);

//-----
int main (void)
{
    char SIO;

    SIO = Init_W627UHG();
    if (SIO == 0)
    {
        ..... printf("Can not detect Winbond 83627UHG, program abort.\n");
        ..... return(1);
    }

    WDTInitial();

    WDTEnable(10);

    WDTDisable();

    return 0;
}
//-----
void WDTInitial(void)
{
    unsigned char bBuf;
    Set_W627UHG_LD(0x08); .....//switch to logic device 8
    bBuf = Get_W627UHG_Reg(0x30);
    bBuf &= (~0x01);
    Set_W627UHG_Reg(0x30, bBuf); .....//Enable WDTO
}
//-----
void WDTEnable(unsigned char NewInterval)
```

```
{
    unsigned char bBuf;

    Set_W627UHG_LD(0x08); .....//switch to logic device 8
    Set_W627UHG_Reg(0x30, 0x01); ..... //enable timer
    bBuf = Get_W627UHG_Reg(0xF5);
    bBuf &= (~0x08);
    Set_W627UHG_Reg(0xF5, bBuf); ..... //count mode is second

    Set_W627UHG_Reg(0xF6, NewInterval); ..... //set timer
}
//-----
void WDTDisable(void)
{
    Set_W627UHG_LD(0x08); .....
    Set_W627UHG_Reg(0xF6, 0x00); ..... //clear watchdog timer
    Set_W627UHG_Reg(0x30, 0x00); ..... //watchdog disabled
}
//-----
```