

SE-602-N

User Manual

Revision	Release Date
V1.0	2016/01/18

Copyright © 2013 IBASE Technology Inc. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of IBASE Technology INC. ("IBASE ").

Products and corporate names mentioned in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used for identification purposes only. All trademarks are the property of their respective owners.

Every effort has been made to ensure that the contents of this manual are correct and up to date. However, the manufacturer makes no guarantee regarding the accuracy of its contents, and reserves the right to make changes without prior notice.

Table of Contents

Setting up your system	v
Care during use	vi
Acknowledgments	vii
CHAPTER 1 INTRODUCTION	1
1.1 General Description	1
1.2 System Specifications.....	2
1.2.1 Hardware Specifications	2
1.2.2 Dimensions	3
1.2.3 I/O View	4
1.3 Exploded View of the SE-602-N Assembly.....	6
1.3.1 Parts Description	6
1.4 Packing List.....	7
1.4.1 Optional Items module	7
1.5 HARDWARE INSTALLATION.....	9
1.5.1 Mounting Installation.....	9
1.5.2 Installing the storage.....	10
CHAPTER 2 MOTHERBOARD INTRODUCTION	11
2.1 Introduction	11
2.2 Installations	133
2.2.1 Installing the Memory	13
2.3 Jumpers and Connectors	144
CHAPTER 3 BIOS SETUP	177
3.1 BIOS Introduction	17
3.2 BIOS Setup	177
CHAPTER 4 DRIVERS INSTALLATION	35
4.1 Intel Chipset Software Installation Utility	35
4.2 VGA Drivers Installation.....	388
4.3 Realtek HD Audio Driver Installation	422
4.4 LAN Drivers Installation	444
4.5 Intel® Management Engine Interface	477
4.6 Intel® USB 3.0 Drivers.....	5050
Appendix	54
A. I/O Port Address Map.....	54
B. Interrupt Request Lines (IRQ).....	555
C. Watchdog Timer Configuration	566
D. MBD602 MCU ISP Specification	569

Safety Information

Your SE-602-N is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important that you read the following safety instructions

Setting up your system

- Read and follow all instructions in the documentation before you operate your system.
- Do not use this product near water.
- Set up the system on a stable surface. Do not secure the system on any unstable plane.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- Slots and openings on the chassis are for ventilation. Do not block or cover these openings. Make sure you leave plenty of space around the system for ventilation.
Never insert objects of any kind into the ventilation openings.
- This system should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Use this product in environments with ambient temperatures between -40°C and 75°C.
- If you use an extension cord, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.
- DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -50° C (-58° F) OR ABOVE 85° C (185° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill water or any other liquids on your system.
- When the system is turned off, a small amount of electrical current still flows. Always unplug all power, and network cables from the power outlets before cleaning the system.
- If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not function properly even if you follow the operating instructions.
 - The system was dropped or the cabinet is damaged.

Lithium-Ion Battery Warning

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

NO DISASSEMBLY

The warranty does not apply to the products that have been disassembled by users

WARNING

HAZARDOUS MOVING PARTS

KEEP FINGERS AND OTHER BODY PARTS AWAY

Equipment Location

This equipment can only be accessed by SERVICE PERSONNEL or by USERS who have been instructed about the reasons for the restrictions applied to the location. Access is through the use of a TOOL or lock and key, or other means of security, and is controlled by the authority responsible for the location.

Acknowledgments

- AMI is a registered trademark of AMI Software International, Inc.
- AMD and ATI are registered trademarks of AMD Corporation.
- Microsoft Windows is a registered trademark of Microsoft Corporation.
- FINTEK is a registered trademark of FINTEK Electronics Corporation.
- REALTEK is a registered trademark of REALTEK Electronics Corporation.
- All other product names or trademarks are properties of their respective owners.


1.2 System Specifications

1.2.1 Hardware Specifications

Model Name	SE-602-N
System Mainboard	MBD602
CPU	5th Generation Intel® Core™ i7-5650U ULT 2.2GHz 5th Generation Intel® Core™ i5-5350U ULT 1.8GHz
Memory	2x DDR3L-1600 SO-DIMM Max. 16GB
I/O Interface	2x DVI-I with EDID emulation function 2x USB 2.0 2x USB 3.0 2x RJ45 for Gigabit LAN 1x RJ45 for RS-232 serial port 2x Microjack audio connectors for Mic-in / Line-out Power / HDD LED, 1x Power on/off button 1x 4 pin 7-36V DC terminal block 1x clear EDID switch
Storage	1x 2.5" HDD/SSD 1x mSATA 1x NGFF M key 22 x 80mm (2280)
Expansion Slots	1x Mini PCI-E(x1) slot for Wi-Fi/ Bluetooth/ TV Tuner/ 3G / LTE Wireless options 1x SIM card slot 2x M2(NGFF) slots for Solid State Storage Devices (SSD)/ Wi-Fi/ Bluetooth/ 3G/LTE/ TV tuner options
Power Supply	7V-36V DC-in
Construction	Aluminum + SGCC
Mounting	Standard system bracket
Dimensions	280mm(W) x 216mm(D) x 46mm(H) 10.7"(W) x 8.6"(D) x 1.8"(H)
Operating Temperature	-40°C~ 75°C (-40°F~166°F)
Storage Temperature	-50° ~ 85°C (-58°F~185°F)
Relative Humidity	5~90% @ 45°C, (non-condensing)
Vibration	mSATA: 5 grms / 5~500Hz / random operation
RoHS	Available
Certification	CE, FCC, CCC, UL & e24 Mark

·This specification is subject to change without prior notice.


1.2.2 Dimensions

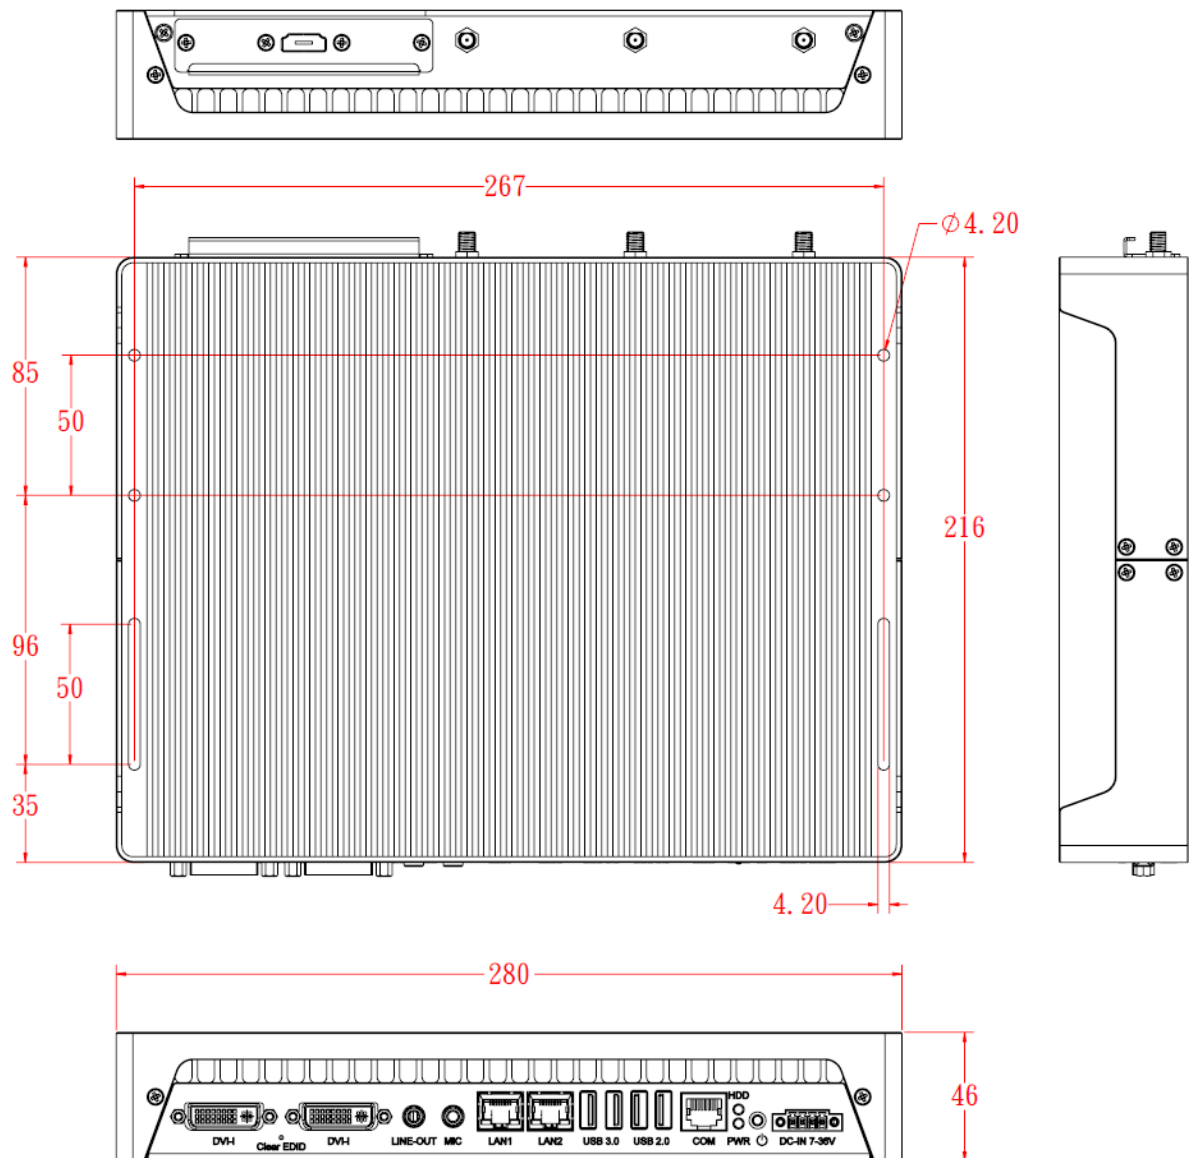

1.2.3 I/O View



SE-602-N front side

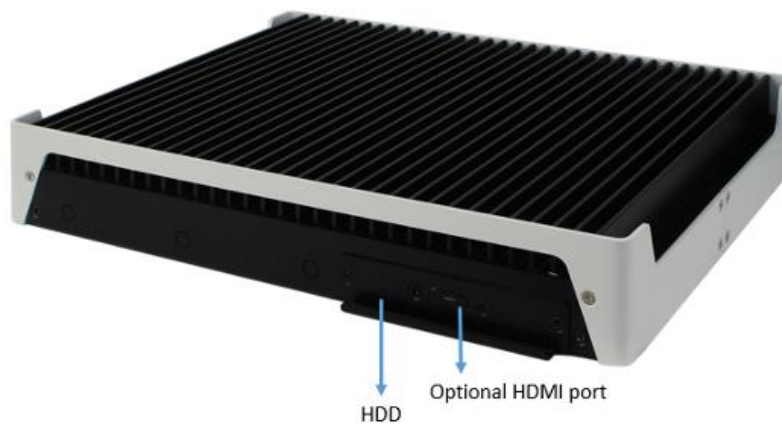


SE-602-N rear side

*****Based on the design of SE-602-N, the use of DVI port has certain limitations. In order to have an image on the screen, the “odd number” port should be plugged in first. If the “even number” port is plugged in first, then there will be no image on the screen. This procedure also applies when using the two ports at the same time in order to have image on the screens. The only requirement is to always plugged in first the “odd number” port.***



*****In order to erase the EDID data, the system needs to be powered off and the DVI connector has to be removed. Afterwards, press and hold the EDID button while power is introduced for five (5) seconds; then, release the EDID button.***

1.3 Exploded View of the SE-602-N Assembly

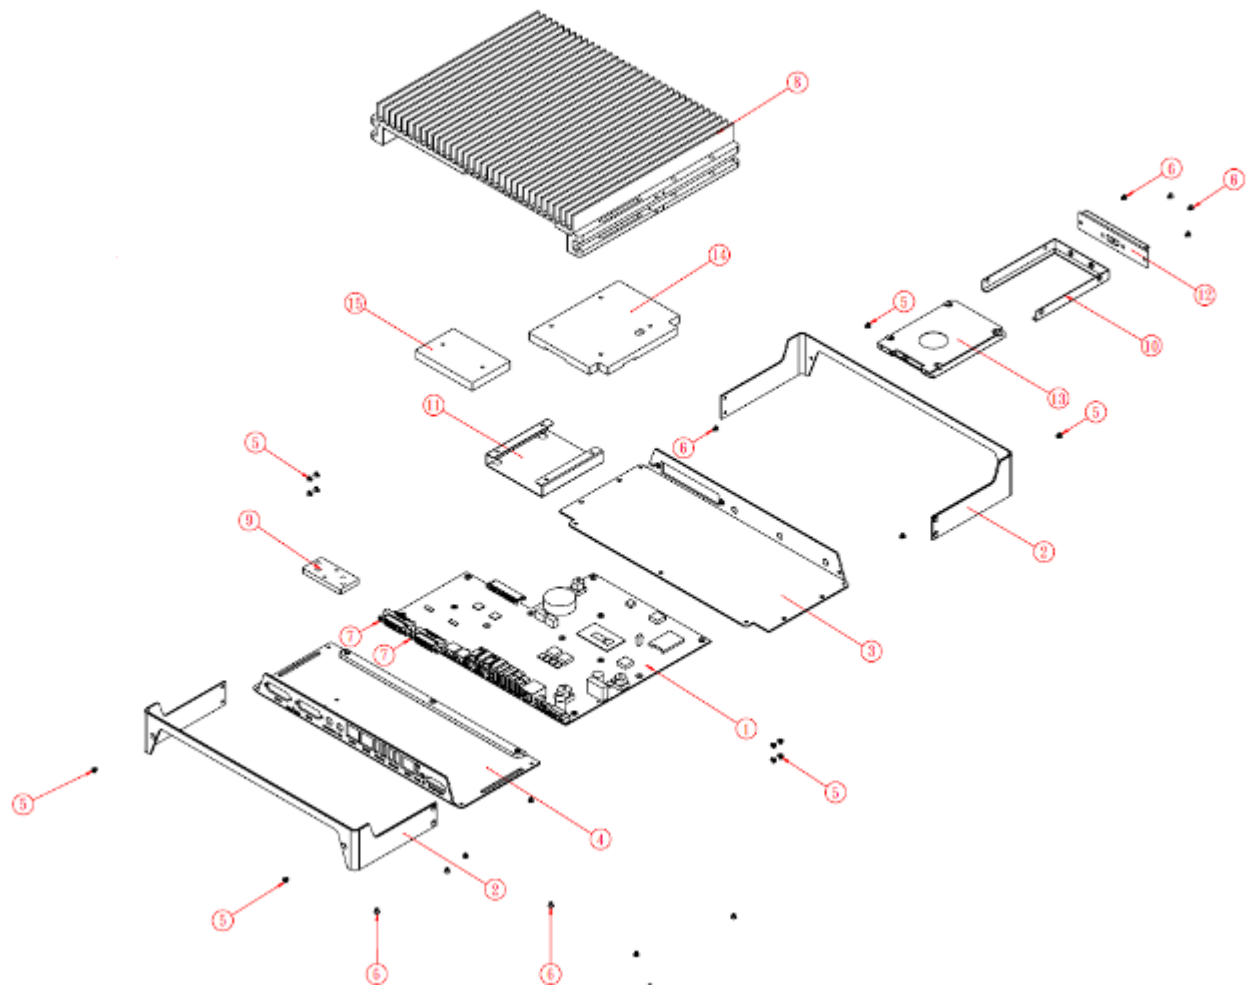

1.3.1 Parts Description


Part No.	Description	Part No.	Description
1	MBD602 motherboard	2	SE-602-N_perimeter
3	SE-602-N_rear cover	4	SE-602-N_front cover
5	SCREW-B30	6	SCREW-B30-B
7	NUTBOSS-S6	8	SE-602-N_heat sink
9	SE-602-N_ic heat sink_2	10	SE-602-N_hdd bracket
11	SE-602-N_HDD tray	12	SE-602-N_HDD cover bracket
13	SATA_25HDD	14	SE-602-N_CPU Heat Sink
15	SE-602-N_ic heat sink_4		

1.4 Packing List

Item No.	Description	Qty
1	Driver CD	1

1.4.1 Optional Items module

WiFi Solution	Description
WiFi module	Wireless Card;Mini PCI 802.11 A/B/G/N WT [WPEA-252NI] RoHS (A008WIRELESS00840P)
WIFI CABLE KIT-6	Internal cable / Antenna / Bracket / Screws Kit (SC2WIFI----A10600P)
3G Solution	Description
3G	Wireless; 3.75G UMTS/HSPA [ZU202] RoHS (A008WIRELESS00520P)
3G+GPS	Wireless; 3.75G UMTS/HSPA & GPS Module [ZU200] RoHS (A008WIRELESS00510P)
WW-350U	Wireless; 3.75G UMTS/HSPA [NAVISYS WW-350U] RoHS (A008WIRELESS00530P)
Cable	Cable; SMA IPX Cable For 3G 30CM [RF11030A] RoHS (A012INTENAL010000P)
Antenna	3G [ANT0921Q2P] RoHS (A055ANT0921Q2P000P)
COM Port Cable	Description
EXT-311	Cable; EXT-311 2-HD 10C 150CM; DSUB-9F => RJ45-10M RoHS (C501EXT3110A12000P)
EXT-312	Cable; EXT-312 2-HD 10C 150CM; DSUB-9M => RJ45-10M RoHS (C501EXT3120A12000P)
Power adapter/cable	Description
150W power adapter	P/S;ADAPTER 150W 12V 4PIN W/LOCK [FSP150-AHAN2] RoHS (A005PS150W0313000P)
4 pin external power cable	CABLE;EXT-532 2-HD 30CM MINI-DIN 4-pin => EC350VM 04P+SW RoHS (C501EXT5320302000P)

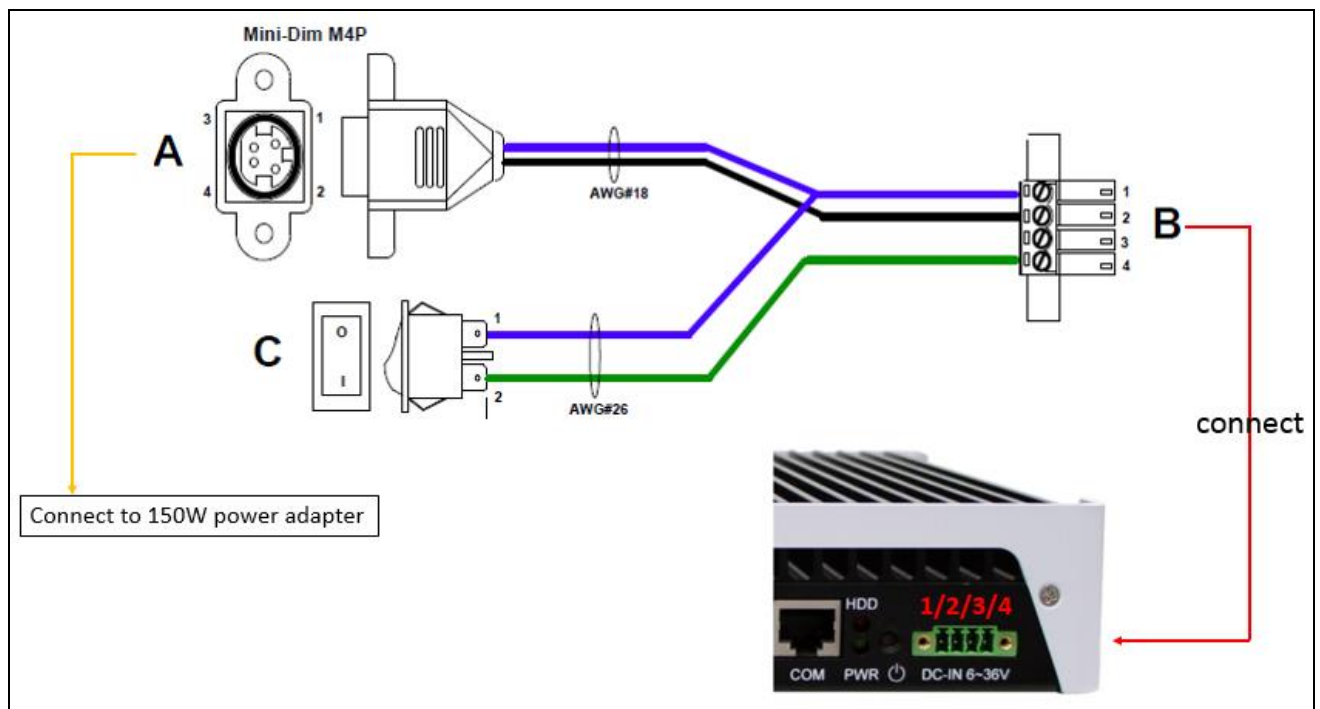
**** Power adapter connection**

[Important] If you shutoff the electric switch, DO NOT push the power button of the external power cable at the same time. Otherwise, it will send a wrong signal.

1.5 HARDWARE INSTALLATION

1.5.1 Mounting Installation

1. Please install SE-602-N to the desired location using 6 screws, as shown in the picture.

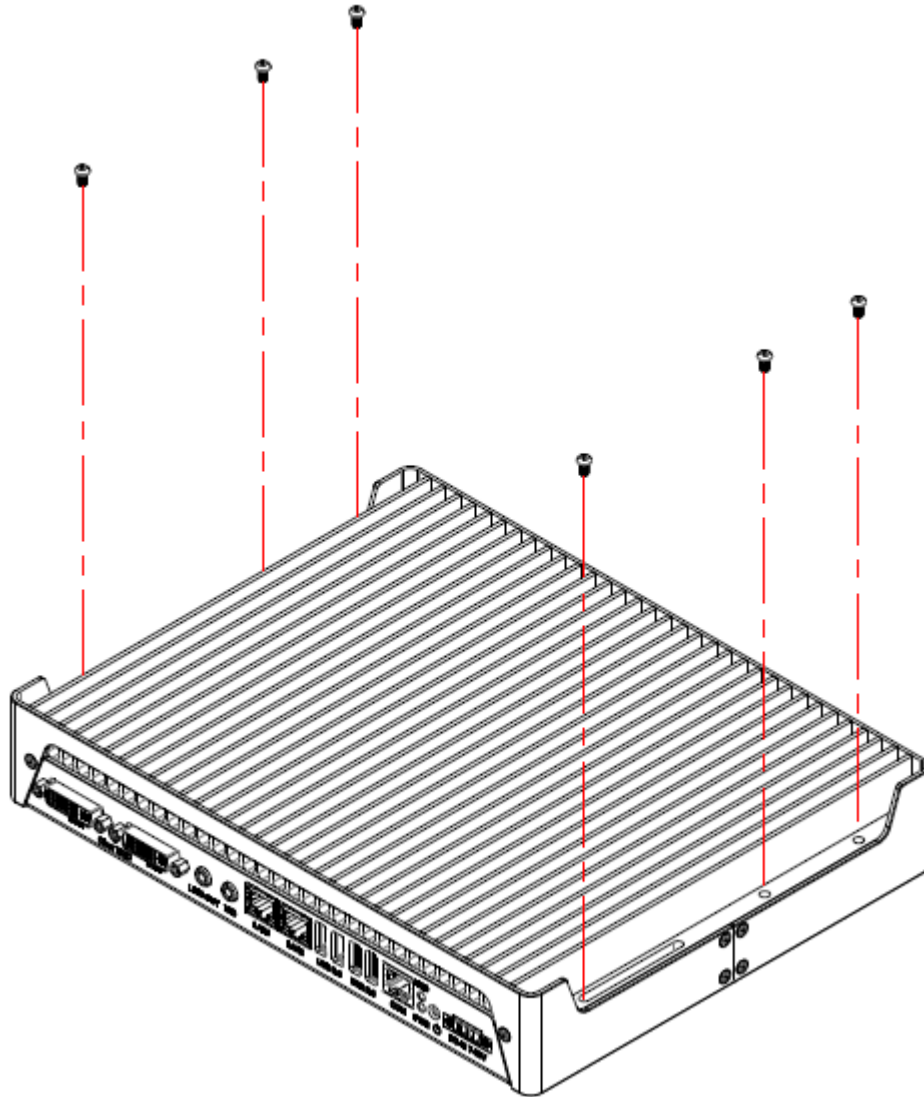


1.5.2 Installing the storage

1. Remove the two screws on the HDD cover and draw it out.




2. Install the HDD/SSD to the HDD bracket with 4 screws.

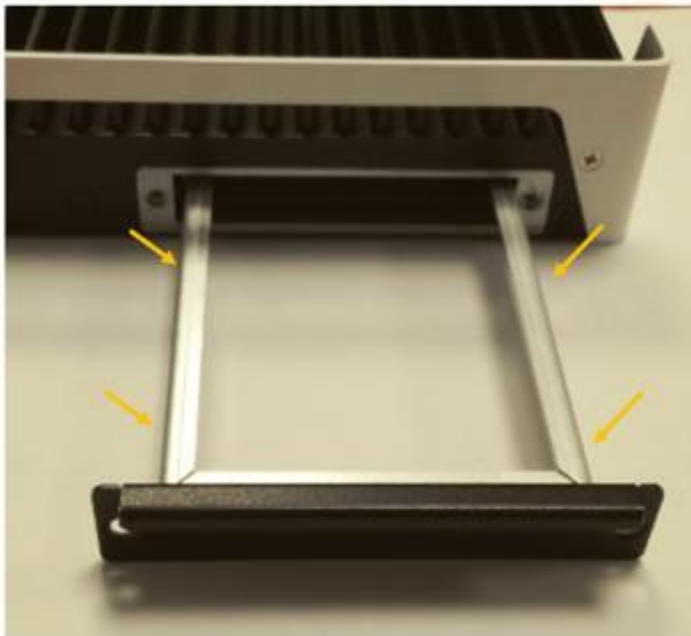


CHAPTER 2 MOTHERBOARD INTRODUCTION

2.1 Introduction

MBD602 Jumpers and Connectors

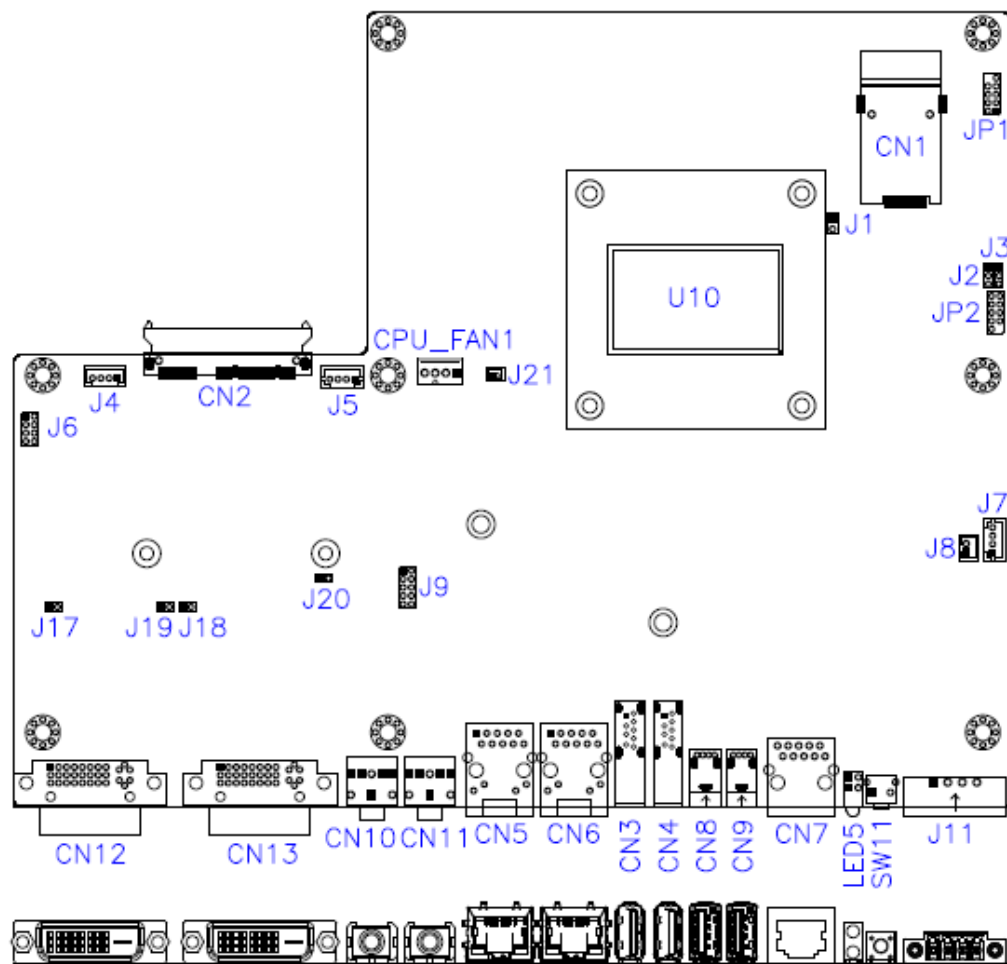

MBD602 Board Dimensions

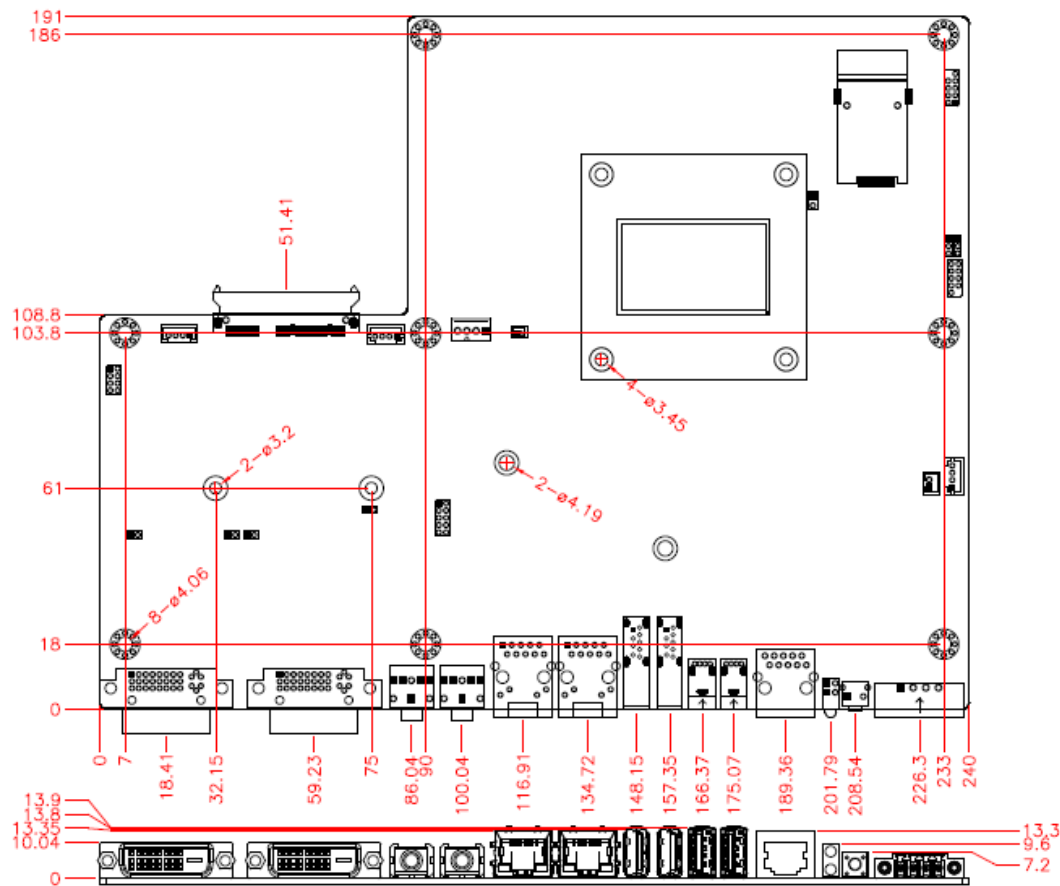

2.2 Installations


2.2.1 Installing the Memory

The MBD602 board supports two DDR3 memory sockets for a maximum total memory of 16GB DDR3 memory type.

Installing and Removing Memory Modules

To install the DDR3 modules, locate the memory slot on the board and perform the following steps:

1. Hold the DDR3 module so that the key of the DDR3 module aligned with that on the memory slot.
2. Gently push the DDR3 module in an upright position until the clips of the slot close to hold the DDR3 module in place when the DDR3 module touches the bottom of the slot.
3. To remove the DDR3 module, press the clips with both hands.

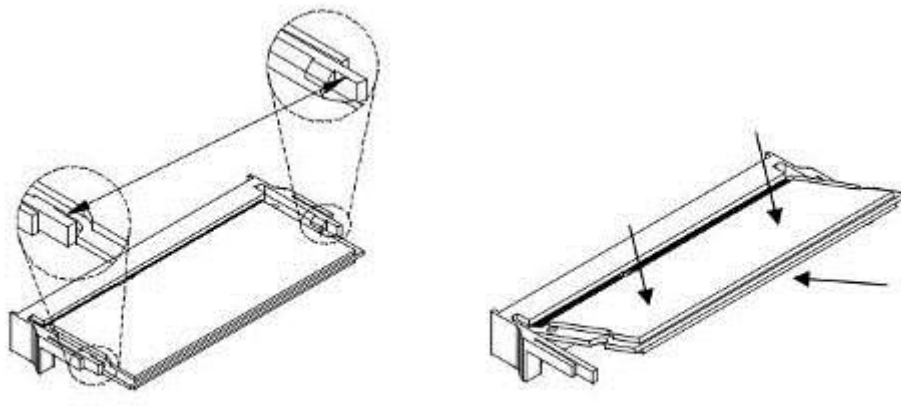

2.3 Jumpers and Connectors

CN3: USB3 #2

CN4: USB3 #1

CN5: I210 Gigabit LAN

CN6: I218LM Gigabit LAN

CN7: COM1

CN8: USB2 #4

CN9: USB2 #5

CN10: LINE OUT

CN11: MIC IN

CN12: DVI-I

CN13: DVI-I

LED5: Power LED

SW1: Power Button

SW2: Clear EDID data

J1: Flash Descriptor Security Override (Factory use only)

J2: Clear COMS

J3: Clear ME


J11: Power Connector

JP1: LPC debug Connector (Factory use only)

JP5: SPI Flash connector (Factory use only)

CN7: COM1 Serial Ports

Pin#	Signal Name
1	DSR#
2	GND
3	GNS
4	SOUT
5	SIN
6	DCD
7	DTR
8	CTS#
9	RTS#
10	RI#


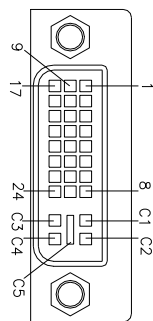
CN12/CN13: DVI-I Connector

Signal Name	Pin #	Pin #	Signal Name
DATA 2-	1	16	HOT POWER
DATA 2+	2	17	DATA 0-
Shield 2/4	3	18	DATA 0+
DATA 4-	4	19	SHIELD 0/5
DATA 4+	5	20	DATA 5-
DDC CLOCK	6	21	DATA 5+
DDC DATA	7	22	SHIELD CLK
N.C	8	23	CLOCK -
DATA 1-	9	24	CLOCK +
DATA 1+	10	C1	N.C
SHIELD 1/3	11	C2	N.C
DATA 3-	12	C3	N.C
DATA 3+	13	C4	N.C
DDC POWER	14	C5	A GROUND2
A GROUND 1	15	C6	A GROUND3



J11: Power Connector

Pin #	Signal Name
1	DC-IN
2	GND
3	EARTH GND
4	IGS-IN

J3: Clear ME Contents

J3	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear CMOS

J2: Clear CMOS Contents

J2	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear CMOS

J1: Flash Descriptor Security Override (Factory use only)

J1	Flash Descriptor Security Override
Open	Disabled (Default)
Close	Enabled

CHAPTER 3 BIOS SETUP

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

3.1 BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

3.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

Press or <ESC> to Enter Setup

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Main Settings

Aptio Setup Utility – Copyright © 2011 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
					Choose the system default language
Total memory			4096 MB (DDR3)		
Memory Frequency			1600 Mhz		
System Date			[Tue 10/29/2013]		→ ←Select Screen ↑ ↓Select Item
System Time			[15:27:20]		Enter: Select +- Change Field
Access Level			Administrator		F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

System Date

Set the Date. Use Tab to switch between Data elements.

System Time

Set the Time. Use Tab to switch between Data elements.

Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
	<ul style="list-style-type: none">▶ CPU Configuration▶ Trusted Computing▶ ACPI Settings▶ ISmart Controller▶ AMT Configuration▶ NCT5523D Super IO Configuration▶ NCT5523D H/W Monitor▶ SATA Configuration▶ CSM Configuration▶ USB Configuration				<ul style="list-style-type: none">→ ← Select Screen↑ ↓ Select ItemEnter: Select+ - Change FieldF1: General HelpF2: Previous ValuesF3: Optimized DefaultF4: SaveESC: Exit

CPU Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
CPU Configuration Intel(R) CPU Core(TM)i7-5650U @ 2.20GHz CPU Signature 306d4 Microcode Patch e Max CPU Speed 2200 MHz Min CPU Speed 500 MHz CPU Speed 3100 MHz Processor Cores 2 Intel HT Technology Supported Intel VT-x Technology Supported Intel SMX Technology Supported 64-bit Supported EIST Technology Supported Hyper-threading Enabled Active Processor Cores All Overclocking lock Disabled Execute Disable Bit Enabled Intel Virtualization Technology Enabled EIST Enabled Turbo Mode Enabled					→ ←Select Screen ↑↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

Hyper-threading

Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.

Active Processor Cores

Number of cores to enable in each processor package.

Overclocking lock

FLEX_RATIO(194) MSR

Execute Disable Bit

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

Intel Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

EIST

Enabled/Disabled Intel Speedstep.

Turbo Mode

Turbo Mode.

Trusted Computing

Aptio Setup Utility – Copyright © 2012 American Megatrends, Inc

Main	Advanced	Chipset	Boot	Security	Save & Exit
Configuration					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
Security Device Support			Disabled		
Current Status Information					
SUPPORT TURNED OFF					

Security Device Support

Enables or disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

TPM State

Enable/Disable Security Device. NOTE: Your Computer will reboot during restart in order to change State of the Device.

Pending operation

Schedule an Operation for the Security Device. NOTE: Your Computer will reboot during restart in order to change State of Security Device.

ACPI Settings

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
ACPI Settings					<div>→ ←Select Screen</div> <div>↑ ↓ Select Item</div> <div>Enter: Select</div> <div>+ - Change Field</div> <div>F1: General Help</div> <div>F2: Previous Values</div> <div>F3: Optimized Default</div> <div>F4: Save</div> <div>ESC: Exit</div>
Enable Hibernation			Enabled		
ACPI Sleep State			S1 (CPU Stop Clock)		
Lock Legacy Resources			Disabled		

Enable Hibernation

Enables or Disables System ability to hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

ACPI Sleep State

Select ACPI sleep state the system will enter, when the SUSPEND button is pressed.

Lock Legacy Resources

Enabled or Disabled Lock of Legacy Resources

iSmart Controller

Aptio Setup Utility – Copyright © 2012 American Megatrends, Inc

Main	Advanced	Chipset	Boot	Security	Save & Exit
iSmart Controller					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
Power-On after Power failure		Disable			
Temperature Guardian		Disable			
Schedule Slot 1		None			
Schedule Slot 2		None			

Power-On after Power failure

This field sets the system power status whether Disable or Enable when power returns to the system from a power failure situation.

Temperature Guardian

Generate the reset signal when system hangs up on POST.

Schedule Slot 1 / 2

Setup the hour/minute for system power on.

AMT Configuration

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Intel AMT				Enabled	→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
BIOS Hotkey Pressed				Disabled	
MEBx Selection Screen				Disabled	
Hide Un-Configure ME Confirmation				Disabled	
Amt Wait Timer				0	
Activate Remote Assistance Process				Disabled	
USB Configure				Enabled	
PET Progress				Enabled	
AMT CIRA Timeout				0	
Watchdog				Disabled	
OS Timer				0	
BIOS Timer				0	

Intel AMT

Enable/Disable Intel (R) Active Management Technology BIOS Extension.

Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution.

If enabled, this requires additional firmware in the SPI device

BIOS Hotkey Pressed

OEMFlag Bit 1:

Enable/Disable BIOS hotkey press.

AMT Configuration

OEMFlag Bit 2:

Enable/Disable MEBx selection screen.

Hide Un-Configure ME Configuration

OEMFlag Bit 6:

Hide Un-Configure ME without password Confirmation Prompt

Amt Wait Timer

Set timer to wait before sending ASF_GET_BOOT_OPTIONS

Activate Remote Assistance Process

Trigger CIRA boot.

USB Configure

Enable/Disable USB Configure function.

PET Progress

User can Enable/Disable PET Events progress to receive PET events or not.

Watchdog Timer

Enable/Disable Watchdog Timer.

NCT5523D Super IO Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
NCT5523D Super IO Configuration					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
Super IO Chip NCT5523D					
▶ Serial Port 1 Configuration					
▶ Serial Port 2 Configuration					

Serial Port Configuration

Set parameters of serial ports. User can Enable/Disable the serial port and Select an optimal settings for the Super IO Device.

NCT5523D H/W Monitor

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
PC Health Status					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
ACPI Shutdown Temperature Disable					
SYS Temperature +39.0 C					
CPU Temperature +39.5 C					
Vcore +1.776 V					
VIN2 +1.360 V					
VCC3V +3.360 V					
VSB3V +3.344 V					

ACPI Shutdown Temperature

The default setting is Disabled.

Temperatures/Voltages

These fields are the parameters of the hardware monitoring function feature of the board. The values are read-only values as monitored by the system and show the PC health status.

SATA Configuration

SATA Devices Configuration.

Aptio Setup Utility			
Main	Advanced	Chipset	Boot Security Save & Exit
SATA Controller(s)		Enabled	
SATA Mode Selection		AHCI	
SATA Controller Speed		Default	
SATA Port0		Empty	
Software Preserve		Unknown	
Port 0		Enabled	
Hot Plug		Disabled	
SATA Port1		Empty	
Software Preserve		Unknown	
Port 1		Enabled	
Hot Plug		Disabled	
SATA Port2		Empty	
Software Preserve		Unknown	
Port 2		Enabled	
Hot Plug		Disabled	
SATA Port3		Empty	
Software Preserve		Unknown	
Port 3		Enabled	
Hot Plug		Disabled	
		→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit	

SATA Controller(s)

Enable / Disable Serial ATA Controller.

SATA Mode Selection

- (1) AHCI Mode.
- (2) RAID Mode.

SATA Controller Speed

Indicates the maximum speed the SATA controller can support

Port

Enable or Disable SATA Port

Hot Plug

Designates this port as Hot Pluggable.

CSM Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Compatibility Support Module Configuration					
CSM Support			Enabled		
CSM16 Module Version			07.76		
GateA20 Active			Upon		
Option ROM Messages			Force BIOS		
Boot option filter			UEFI and Legacy		→ ←Select Screen
Option ROM execution					↑ ↓ Select Item
Network			Do not launch		Enter: Select
Storage			Legacy only		+ - Change Field
Video			Legacy only		F1: General Help
Other PCI device			UEFI		F2: Previous Values
					F3: Optimized Default
					F4: Save
					ESC: Exit

CSM Support

Enable/Disable CSM Support.

Boot option filter

This option controls what devices system can boot to.

Network

Controls the execution of UEFI and Legacy PXE OpROM.

Storage

Controls the execution of UEFI and Legacy Storage OpROM.

Video

Controls the execution of UEFI and Legacy Video OpROM.

Other PCI device

Determines OpROM execution policy for devices other than Network, Storage, or Video

USB Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					
USB Module Version				8.11.02	
USB Devices:					
1 Keyboard, 1 Mouse					
Legacy USB Support				Enabled	→ ← Select Screen
XHCI Hand-off				Enabled	↑ ↓ Select Item
EHCI Hand-off				Enabled	Enter: Select
USB Mass Storage Driver Support				Enabled	+ - Change Field
USB hardware delays and time-outs:					F1: General Help
USB Transfer time-out				20 sec	F2: Previous Values
Device reset time-out				20 sec	F3: Optimized Default
Device power-up delay				Auto	F4: Save
					ESC: Exit

Legacy USB Support

Enables Legacy USB support.

AUTO option disables legacy support if no USB devices are connected.

DISABLE option keeps USB devices available only for EFI applications.

XHCI Hand-off

This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

USB Mass Storage Driver Support

Enable/Disable USB Mass Storage Driver Support.

EHCI Hand-off

This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

USB Transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

Device reset time-out

USB mass Storage device start Unit command time-out.

Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

Chipset Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
► System Agent (SA) Configuration ► PCH-IO Configuration					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

System Agent (SA) Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
System Agent Bridge Name			Broadwell		<div>→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit</div>
System Agent RC Version			2.2.2.0		
VT-d Capability			Supported		
VT-d			Enabled		

VT-d

Check to enable VT-d function on MCH.

PCH-IO Configuration

This section allows you to configure the North Bridge Chipset.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Intel PCH RC Version			2.2.2.0		→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
Intel PCH SKU Name			Premium SKU(BDW-U)		
Intel PCH Rev ID			03/B2		
► PCI Express Configuration ► USB Configuration ► PCH Azalia Configuration					
PCH LAN Controller			Enabled		
Wake on LAN			Disabled		

PCH LAN Controller

Enable or disable onboard NIC.

Wake on LAN

Enable or disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.)

PCI Express Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
PCI Express Configuration					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
► PCI Express Root Port 1 PCI-E Port 2 is assigned to LAN					
► PCI Express Root Port 3					
► PCI Express Root Port 4					
► PCI Express Root Port 5					
► PCI Express Root Port 6					

PCI Express Configuration

PCI Express Root Port Settings.

USB Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
USB Precondition			Disabled		
xHCI Mode			Auto		
USB Ports Per-Port Disable Control			Disabled		

USB Precondition

Precondition work on USB host controller and root ports for faster enumeration.

xHCI Mode

Mode of operation of xHCI controller.

USB Ports Per-Port Disable Control

Control each of the USB ports (0~13) disabling.

PCH Azalia Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
PCH Azalia Configuration					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
Azalia			Enabled		

Azalia

Control Detection of the Azalia device.

Disabled = Azalia will be unconditionally be disabled.

Enabled = Azalia will be unconditionally be enabled.

Auto = Azalia will be enabled if present, disabled otherwise.

Security Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit				
<p>Password Description</p> <p>If ONLY the Administrator's password is set, then this only limit access to Setup and is only asked for when entering Setup.</p> <p>If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights</p> <p>The password length must be in the following range:</p> <table><tr><td>Minimum length</td><td>3</td></tr><tr><td>Maximum length</td><td>20</td></tr></table> <p>Administrator Password</p> <p>User Password</p>					Minimum length	3	Maximum length	20	<p>→ ←Select Screen</p> <p>↑ ↓ Select Item</p> <p>Enter: Select</p> <p>+ - Change Field</p> <p>F1: General Help</p> <p>F2: Previous Values</p> <p>F3: Optimized Default</p> <p>F4: Save</p> <p>ESC: Exit</p>
Minimum length	3								
Maximum length	20								

Administrator Password

Set Setup Administrator Password.

User Password

Set User Password.

Boot Settings

This section allows you to configure the boot settings.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot Configuration					
Setup Prompt Timeout			1		
Bootup NumLock State			On		
Quiet Boot			Disabled		
Fast Boot			Disabled		
Boot mode select			LEGACY		
FIXED BOOT ORDER Priorities					
Boot Option #1			Hard Disk		
Boot Option #2			CD / DVD		→ ← Select Screen
Boot Option #3			USB Hard Disk		↑ ↓ Select Item
Boot Option #4			USB CD / DVD		Enter: Select
Boot Option #5			USB Key		+ - Change Field
Boot Option #6			USB Floppy		F1: General Help
Boot Option #7			USB LAN		F2: Previous Values
Boot Option #8			Network		F3: Optimized Default
					F4: Save
					ESC: Exit

Setup Prompt Timeout

Number of seconds to wait for setup activation key.
65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Quiet Boot

Enables/Disables Quiet Boot option.

Fast Boot

Enables/Disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

Boot mode select

Select boot mode LEGACY/UEFI

FIXED BOOT ORDER Priorities

Sets the system boot order.

Save & Exit Settings

Main	Advanced	Chipset	Boot	Security	Save & Exit
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset Save Options Save Changes Discard Changes Restore Defaults Save as User Defaults Restore User Defaults Boot Override					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

Save Changes and Exit

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Save Changes

Save Changes done so far to any of the setup options.

Discard Changes

Discard Changes done so far to any of the setup options.

Restore Defaults

Restore/Load Defaults values for all the setup options.

Save as User Defaults

Save the changes done so far as User Defaults.

Restore User Defaults

Restore the User Defaults to all the setup options.

CHAPTER 4 DRIVERS INSTALLATION

The Intel Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation.

IMPORTANT NOTE:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.

4.1 Intel Chipset Software Installation Utility

1. Insert the DVD that comes with the board. Click **System** and then **SE-602-N Series Products**.



2. Click **Intel(R) Chipset Software Installation Utility**.




3. When the Welcome screen to the Intel® Chipset Device Software appears, click **Next** to continue.



4. Click **Accept** to accept the software license agreement and proceed with the installation process.



5. On the Readme File Information screen, click **Install** to continue the installation.

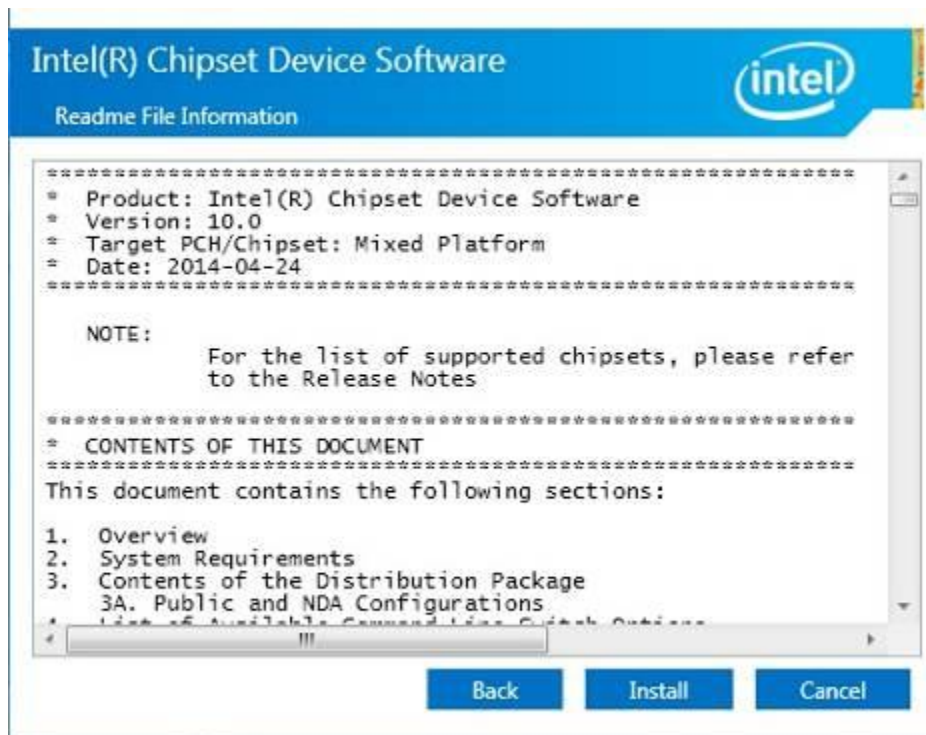

6. The Setup process is now complete. Click **Finish** to restart the computer and for changes to take effect.



4.2 VGA Drivers Installation

1. Insert the DVD that comes with the board. Click **System** and then **SE-602-N Series Products**.




2. Click *Intel(R) Broadwell Graphics Driver*.




3. When the Welcome screen appears, click **Next** to continue.




4. When the License Agreement, click **Next** to continue.

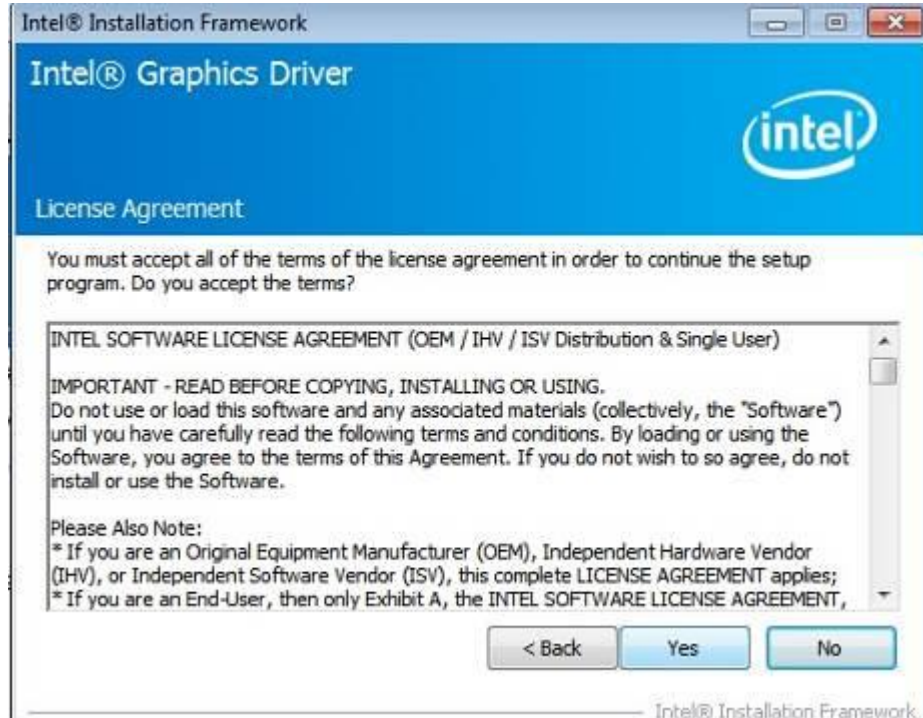


5. Click **Next** to agree with the license agreement and continue the installation.

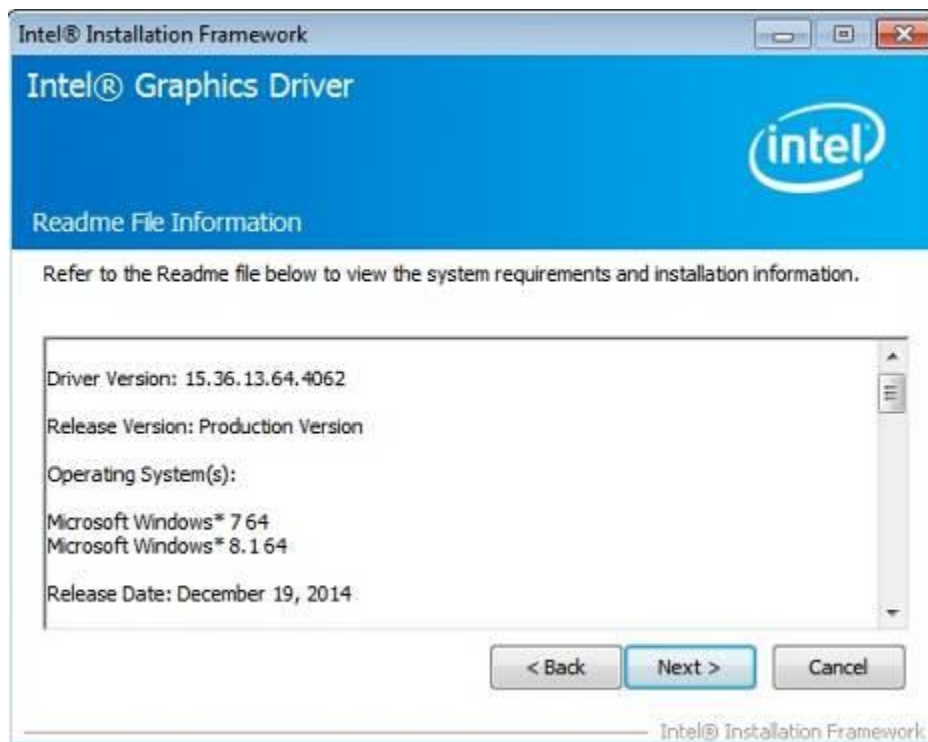

6. Setup Progress. Click **Next** to restart the computer and for changes to take effect.

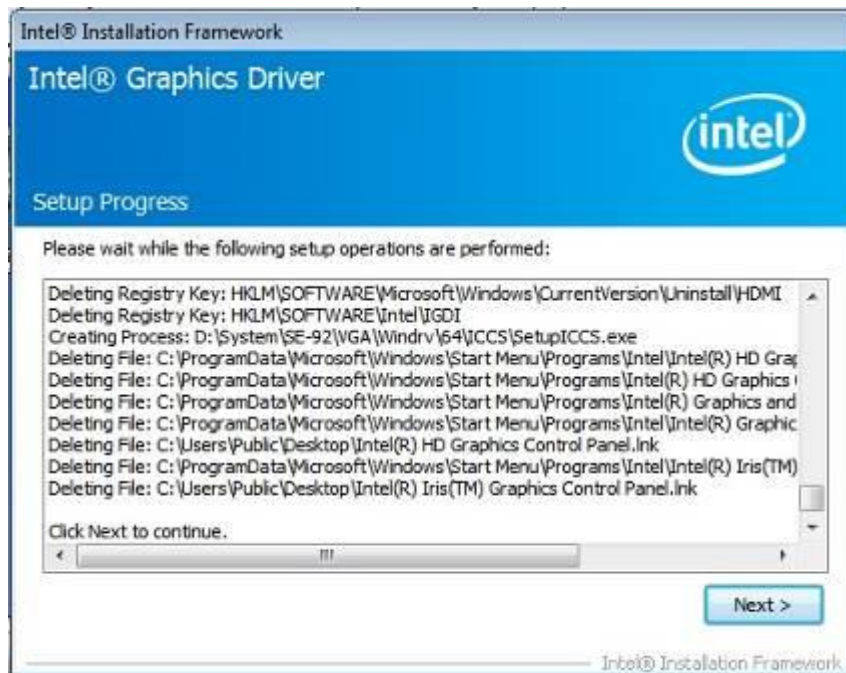

7. Setup complete. Click **Finish** to restart the computer and for changes to take effect

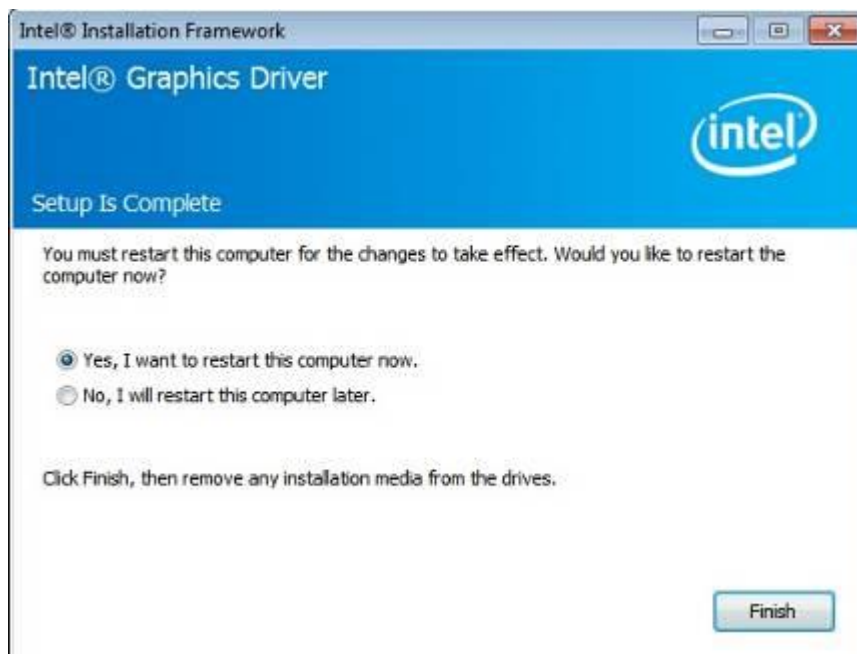

4.3 Realtek HD Audio Driver Installation

1. Insert the DVD that comes with the board. Click **System** and then **SE-602-N Series Products**.



2. Click **Realtek High Definition Audio Driver**.



3. On the Welcome to the InstallShield Wizard screen, click **Yes** to proceed with and complete the installation process.



4. The InstallShield Wizard Complete. Click **Finish** to restart the computer and for changes to take effect.



4.4 LAN Drivers Installation

1. Insert the DVD that comes with the board. Click **System** and then **SE-602-N Series Products**.



2. Click **Intel(R) PRO LAN Network Driver**.




3. When the Welcome screen appears, click **Next**.




4. Click **Next** to agree with the license agreement.



5. Click the checkbox for **Drivers** in the Setup Options screen to select it and click **Next** to continue.

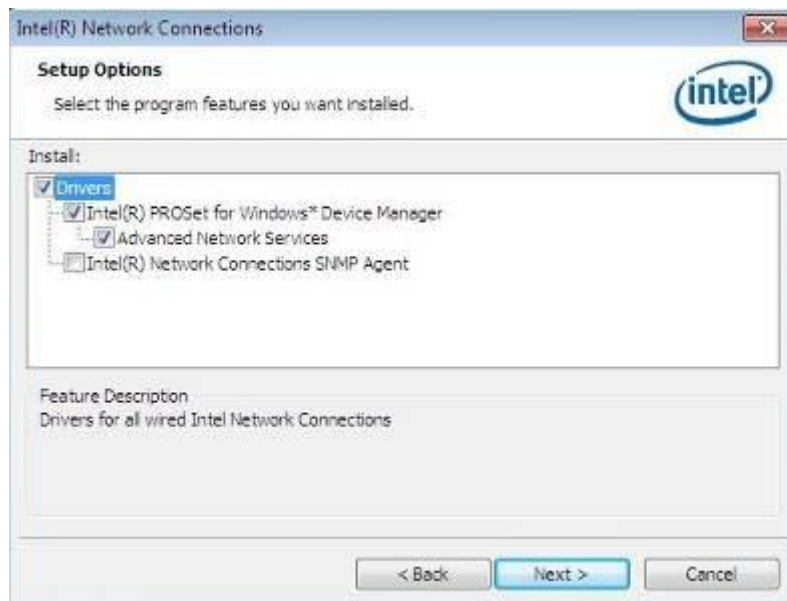

6. The wizard is ready to begin installation. Click **Install** to begin the installation.

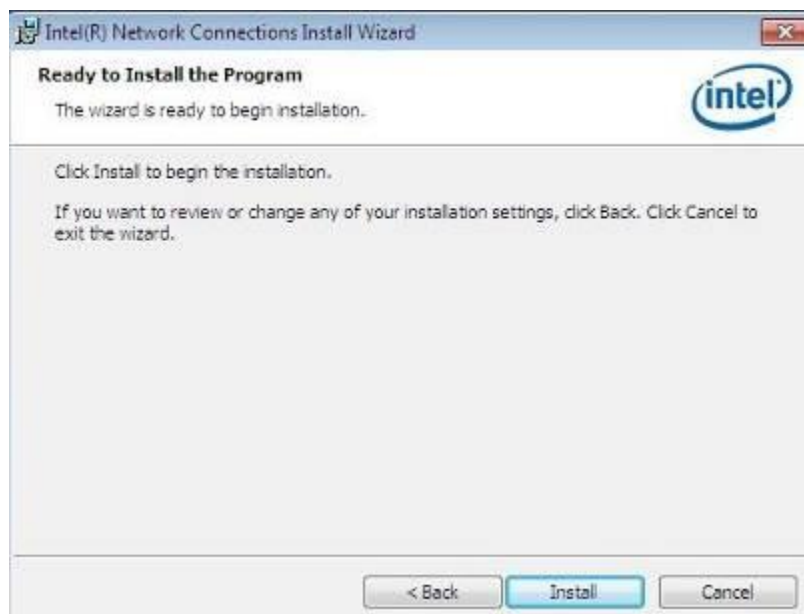

7. When InstallShield Wizard is complete, click **Finish**.

4.5 Intel® Management Engine Interface

IMPORTANT NOTE:

After installing your Windows operating system, you must install first the Kernel-Mode Driver Framework (KMDF) 1.11 KB2685811 patch before installing Intel(R) Management Engine(ME) Driver.

1. Insert the DVD that comes with the board. Click **System** and then **SE-602-N Series Products**.



2. Click **Intel(R) Management Engine(ME) Driver**



3. When the Welcome screen to the InstallShield Wizard for Intel® Management Engine Components, click the checkbox for **Install Intel® Control Center** & click **Next**.



4. Click **Next** to to agree with the license agreement.



5. When the Destination Folder, click *Next*. Then, click *Finish* when the setup progress has been successfully installed.



4.6 Intel® USB 3.0 Drivers

1. Insert the DVD that comes with the board. Click **System** and then **SE-602-N Series Products**.



2. Click **Intel(R) USB3.0 eXtensible Host Controller Driver**



3. When the Welcome screen to the InstallShield Wizard for Intel® USB 3.0 eXtensible Host Controller Driver, click **Next**.



4. Click **Yes** to agree with the license agreement and continue the installation.



5. On the Readme File Information screen, click **Next** to continue the installation of the Intel® USB 3.0 eXtensible Host Controller Driver.




6. Setup complete. Click **Finish** to restart the computer and for changes to take effect.



[Important]

After installing the driver, please go to the page “Windows Control Panel -> All Control Panel Items -> Power Options -> System Settings”.

Please set the “When I press the power button” item default to “shutdown”.

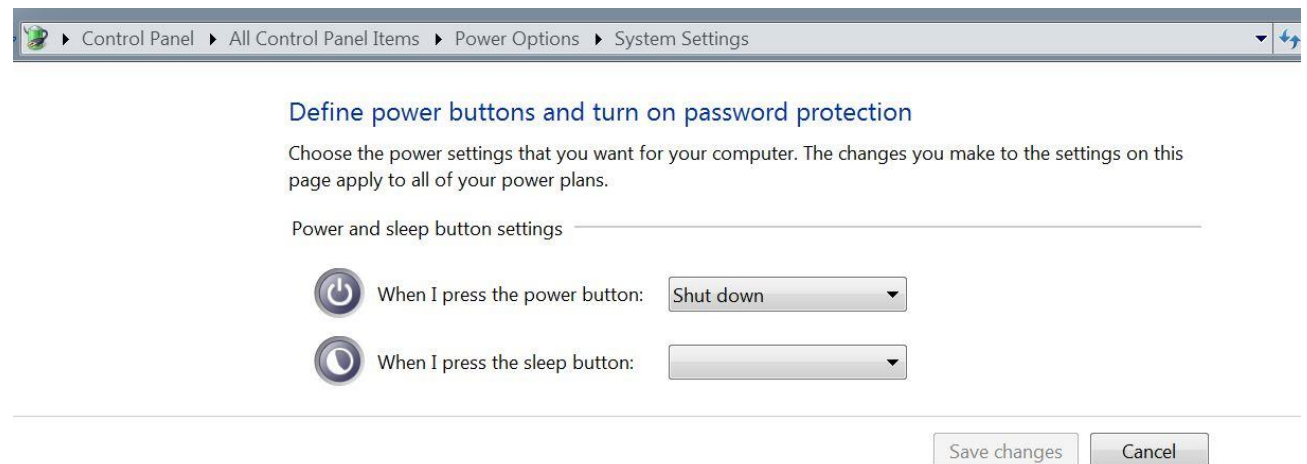

Appendix

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 021h	Interrupt Controller #1
040h - 043h	System Timer
070h - 077h	System/CMOS Real Time Clock
081h - 091h	DMA Controller #2
0A0h - 0A1h	Interrupt Controller #2
081h - 091h	DMA Controller #3
2F8h - 2FFh	Serial Port #2(COM2)
3C0h - 3DFh	Graphics adapter Controller
3F8h - 3FFh	Serial Port #1(COM1)
D000 - FFFh	PCI Root Ports

B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

Level	Function
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ5	SMBus Controller
IRQ8	Real Time Clock
IRQ19	SATA AHCI Controller

C. Watchdog Timer Configuration

The WDT is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven. Under normal circumstance, the user will restart the WDT at regular intervals before the timer counts to zero.

SAMPLE CODE:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "6106"
//-----
int main (int argc, char *argv[]);
void EnableWDT(int);
void DisableWDT(void);
//-----
int main (int argc, char *argv[])
{
    unsigned char bBuf;
    unsigned char bTime;
    char **endptr;

    char SIO;

    printf("6106 watch dog program\n");

    bTime = strtol (argv[1], endptr, 10);
    printf("System will reset after %d seconds\n", bTime);

    if (bTime)
    {
        else
        {
            if (bTime > 0 && bTime < 256)
            {
                A=2;

                unsigned char result;
                Set_6106_LD(0x08);
                gotoxy(1,12);
            }
        }
    }
}
```



```

        return 0;
    }
//-----
void EnableWDT(int interval)
{
    unsigned char bBuf;

    Set_6106_LD(0x08);
    Set_6106_Reg(0x30, 0x01);
    Set_6106_Reg(0xF1, interval);

}
//-----
void DisableWDT(void)
{
    unsigned char bBuf;

    Set_6106_LD(0x08);
    Set_6106_Reg(0x30, 0x00);

}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "6106.H"
#include <dos.h>
//-----
unsigned int 6106_BASE;
void Unlock_6106 (void);
void Lock_6106 (void);
//-----
unsigned int Init_6106(void)
{
    unsigned int result;
    unsigned char ucDid;

    6106_BASE = 0x4E;
    result = 6106_BASE;

    ucDid = Get_6106_Reg(0x20);
    if (ucDid == 0x07)

//6106

    {goto Init_Finish;}

    6106_BASE = 0x2E;
    result = 6106_BASE;

    ucDid = Get_6106_Reg(0x20);
    if (ucDid == 0x07)
    { goto Init_Finish; }

//6106

    6106_BASE = 0x00;
    result = 6106_BASE;

    Init_Finish:
    return (result);
}

```

```

}
//-----
void Unlock_6106 (void)
{

}
//-----
void Lock_6106 (void)
{

}
//-----
void Set_6106_LD( unsigned char LD)
{

}
//-----
void Set_6106_Reg( unsigned char REG, unsigned char DATA)
{

}
//-----
unsigned char Get_6106_Reg(unsigned char REG)
{

}
//-----

```

```

outportb(6106_INDEX_PORT, 6106_UNLOCK);
outportb(6106_INDEX_PORT, 6106_UNLOCK);

```

```

outportb(6106_INDEX_PORT, 6106_LOCK);

```

```

Unlock_6106();
outportb(6106_INDEX_PORT, 6106_REG_LD);
outportb(6106_DATA_PORT, LD);
Lock_6106();

```

```

Unlock_6106();
outportb(6106_INDEX_PORT, REG);
outportb(6106_DATA_PORT, DATA);
Lock_6106();

```

```

unsigned char Result;
Unlock_6106();
outportb(6106_INDEX_PORT, REG);
Result = inportb(6106_DATA_PORT);
Lock_6106();
return Result;

```

D. MBD602 MCU ISP Specification

1. Software Requirements

1.1 Description

Security MCU provides following functionality

1.1.1 Get Firmware Version

Software can get the firmware version, MCU provides commands to get current Major Version, Minor version and build version.

1.1.2 High Voltage Protection

While car battery is higher than the high voltage protection value, MCU will cut off system power after 10 seconds.

1.1.3 Low Voltage Protection

While car battery is lower than the low voltage protection value, MCU will cut off system power after 30 seconds.

1.1.4 Set Power On Delay Timer

MCU provides command to set power on delay timer, when arrived the setting time, MCU will send power button to let the system power on.

1.1.5 Set Power Off Delay Timer

MCU provides command to set power off delay timer, when arrived the setting time, MCU will send power button to let the system power off.

1.1.6 Set DC Off Delay Timer

MCU provides command to set DC off delay timer, when arrived the setting time, MCU will cut off system power.

1.1.7 Get status

MCU provides command to get current status which includes the high voltage protection value, low voltage protection value, power on delay timer setting value, power off delay timer setting value and DC off delay timer setting value..

Note : Before using the ISP, the software engineer have to make sure the firmware version (GET_FORMWARE_VERSION) **MUST** be major version is 0 and minor version is 0 and build version is 1(or above), otherwise the ISP function will not works.

1.2 Protocol

1.2.1 Signal transmit format

Bandwidth

Baud rate: 19200 bps.

Data Format

Parity: No Parity

1 start bit

8 data bits

1 stop bit

1.2.2 Packet Format

Header	Size	Command	Data	CRC
2 bytes	1 byte	1 byte	0 – 64 bytes	2 bytes

Header bytes indicate start of the packet.

Size specifies number of bytes for data field.

Command identifies action, which is required to be performed on the data.

CRC verifies data integrity for header, size, command and data bytes.

1.2.3 CRC

Protocol uses 16-bit CCITT CRC to verify data integrity.

$P(x) = X^{16} + X^{12} + X^5 + 1$.

```
unsigned calc_crc(unsigned char *data, unsigned n, unsigned start) {
    unsigned I, k, q, c, crcval;
    crcval=start;
    for (I=0; I<n; I++) {
        c=data(I) & 0xFF;
        q=(crcval^c) & 0x0F;
        crcval=(crcval>>4)^(q*0x1081);
    }
    return crcval;
}
```

1.2.4 Communications flow

Communication between PC and Security MCU utilizes Master-Slave model, where PC is a master, and Security MCU is a slave. Master sends requests to the slave, and slave has to reply to them. Slave acts like a passive device and cannot send any requests to the master.

1.3 Command and Reply Codes

1.3.1 Summary

Code	Value	Description
GET_FIRMWARE_VERSION	0x01	Get Firmware version
SET_HYSTERESIS_HIGH	0x02	Hysteresis High Voltage setting
SET_HYSTERESIS_LOW	0x03	Hysteresis Low Voltage setting
SET_POWER_ON_DELAY_TIMER	0x04	Power on delay timer setting
SET_POWER_OFF_DELAY_TIMER	0x05	Power off delay timer setting
SET_DC_OFF_DELAY_TIMER	0x06	DC off delay timer setting
GET_STATUS	0x07	Get Current Status

1.3.2 Get Firmware Version

GET_FIRMWARE_VERSION

Read version number of the security MCU firmware.

Request

Header	Size	Command	Data	CRC
0xFF 0xEE	0x00	GET_FIRMWARE_VERSION	None	

Reply

Header	Size	Command	Data	CRC
0xFF 0xEE	Size of Version structure	GET_FIRMWARE_VERSION	BSL Version Structure	

BSL Version Structure

Field	Type	Description
Major Version	Byte	Major version number
Minor Version	Byte	Minor version number
Build	Byte	Build version number

1.3.3 Set hysteresis high voltage

SET_HYSTERESIS_HIGH_VOLTAGE

Hysteresis High Voltage setting .

Request

Header	Size	Command	Data0	Data1	CRC
0xFF 0xEE	0x02	SET_HYSTERESIS_HIGH	High Byte	Low Byte	

Round off to the 1st decimal place.

Ex. Setting 11.2V mapping to 11200 (11.2x1000) = 2BC0(hex)

Data0 = 2B(hex)

Data1 = C0(hex)

The tolerance for the temperature measurement is plus and minus 0.3 Volts.

Reply

Header	Size	Command	Data	CRC
0xFF 0xEE	0x00	SET_HYSTERESIS_HIGH	None	

1.3.4 Set hysteresis low voltage

SET_HYSTERESIS_LOW_VOLTAGE

Hysteresis Low Voltage setting .

Request

Header	Size	Command	Data0	Data1	CRC
0xFF 0xEE	0x02	SET_HYSTERESIS_LOW	High Byte	Low Byte	

Round off to the 1st decimal place.

Ex. Setting 11.2V mapping to 11200 (11.2x1000) = 2BC0(hex)

Data0 = 2B(hex)

Data1 = C0(hex)

The tolerance for the temperature measurement is plus and minus 0.3 Volts.

Reply

Header	Size	Command	Data	CRC
0xFF 0xEE	0x00	SET_HYSTERESIS_LOW	None	

1.3.5 Set Power On Delay Timer

SET_POWER_ON_DELAY_TIMER

Power on delay timer setting.

Request

Header	Size	Command	Data0	Data1	CRC
0xFF 0xEE	0x02	SET_POWER_ON_DELAY_TIMER	N (Minutes)	N (seconds)	

Reply

Header	Size	Command	Data	CRC
0xFF 0xEE	0x00	SET_POWER_ON_DELAY_TIMER	None	

1.3.6 Set Power Off Delay Timer**SET_POWER_OFF_DELAY_TIMER**

Power off delay timer setting.

Request

Header	Size	Command	Data0	Data1	CRC
0xFF 0xEE	0x02	SET_POWER_OFF_DELAY_TIMER	N (Minutes)	N (seconds)	

Reply

Header	Size	Command	Data	CRC
0xFF 0xEE	0x00	SET_POWER_OFF_DELAY_TIMER	None	

1.3.7 Set DC Off Delay Timer**SET_DC_OFF_DELAY_TIMER**

DC off delay timer setting.

Request

Header	Size	Command	Data0	Data1	CRC
0xFF 0xEE	0x02	SET_DC_OFF_DELAY_TIMER	N (Minutes)	N (seconds)	

Reply

Header	Size	Command	Data	CRC
0xFF 0xEE	0x00	SET_DC_OFF_DELAY_TIMER	None	

1.3.8 Get Status

Get the current hysteresis high voltage, hysteresis low voltage, power_on_delay_timer, power_off_delay_timer and power_off_delay_timer.

Request

Header	Size	Command	Data	CRC
0xFF 0xEE	0x00	GET_STATUS	None	

Reply

Header	Size	Command	Data	CRC
0xFF 0xEE	0x0 A	GET_STATUS	Status structure	

Status Structure

Field	Type	Description
Hysteresis high voltage	Word	Byte0+ Byte1
Hysteresis low voltage	Word	Byte2+ Byte3
Power on delay timer	Word	Byte4+ Byte5
Power off delay timer	Word	Byte6+ Byte7
DC off delay timer	Word	Byte8+ Byte9