

AMS210

Embedded System with MB211

User's Manual

Version 1.0
(March 2020)



Copyright

© 2020 IBASE Technology, Inc. All rights reserved.

No part of this publication may be reproduced, copied, stored in a retrieval system, translated into any language or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without the prior written consent of IBASE Technology, Inc. (hereinafter referred to as "IBASE").

Disclaimer

IBASE reserves the right to make changes and improvements to the products described in this document without prior notice. Every effort has been made to ensure the information in the document is correct; however, IBASE does not guarantee this document is error-free.

IBASE assumes no liability for incidental or consequential damages arising from misapplication or inability to use the product or the information contained herein, nor for any infringements of rights of third parties, which may result from its use.

Trademarks

All the trademarks, registrations and brands mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Compliance

CE

This product has passed CE tests for environmental specifications and limits. This product is in accordance with the directives of the Union European (EU). If users modify and/or install other devices in this equipment, the CE conformity declaration may no longer apply.

FCC

This product has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications.

WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive of for waste electrical and electronic equipment (WEEE - 2012/19/EU). Instead, it should be disposed of by returning it to a municipal recycling collection point. Check local regulations for disposal of electronic products.

Green IBASE



This product is compliant with the current RoHS restrictions and prohibits use of the following substances in concentrations exceeding 0.1% by weight (1000 ppm) except for cadmium, limited to 0.01% by weight (100 ppm).

- Lead (Pb)
- Mercury (Hg)
- Cadmium (Cd)
- Hexavalent chromium (Cr6+)
- Polybrominated biphenyls (PBB)
- Polybrominated diphenyl ether (PBDE)

Important Safety Information

Carefully read the precautions before using the device.

Environmental conditions:

- Lay the device horizontally on a stable and solid surface in case the device may fall, causing serious damage.
- Make sure you leave plenty of space around the device for ventilation.
- Use this product in environments with ambient temperatures $-20^{\circ}\text{C} \sim 55^{\circ}\text{C}$.
- **DO NOT LEAVE THIS DEVICE IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20°C OR ABOVE 80°C .** This could damage the device. The device must be used in a controlled environment.

Care for your IBASE products:

- Before cleaning the device, turn it off and unplug all cables such as power in case a small amount of electrical current may still flow.
- Use neutral cleaning agents or diluted alcohol to clean the device chassis with a cloth. Then wipe the chassis with a dry cloth.
- Vacuum the dust with a computer vacuum cleaner to prevent the air vent or slots from being clogged.



WARNING

Attention during use:

- Do not use this product near water.
- Do not spill water or any other liquids on your device.
- Do not place heavy objects on the top of the device.
- Operate this device from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your distributor or local power company.
- Do not walk on the power cord or allow anything to rest on it.
- If you use an extension cord, make sure that the total ampere rating of the product plugged into the extension cord does not exceed its limits.

Avoid Disassembly

You are not suggested to disassemble, repair or make any modification to the device. Disassembly, modification, or any attempt at repair could generate hazards and cause damage to the device, even bodily injury or property damage, and will void any warranty.



CAUTION

Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Warranty Policy

- **IBASE standard products:**

24-month (2-year) warranty from the date of shipment. If the date of shipment cannot be ascertained, the product serial numbers can be used to determine the approximate shipping date.

- **3rd-party parts:**

12-month (1-year) warranty from delivery for the 3rd-party parts that are not manufactured by IBASE, such as CPU, memory, HDD, power adapter, panel and touchscreen.

* PRODUCTS, HOWEVER, THAT FAILS DUE TO MISUSE, ACCIDENT, IMPROPER INSTALLATION OR UNAUTHORIZED REPAIR SHALL BE TREATED AS OUT OF WARRANTY AND CUSTOMERS SHALL BE BILLED FOR REPAIR AND SHIPPING CHARGES.

Technical Support & Services

1. Visit the IBASE website at www.ibase.com.tw to find the latest information about the product.
2. If you need any further assistance from your distributor or sales representative, prepare the following information of your product and elaborate upon the problem.
 - Product model name
 - Product serial number
 - Detailed description of the problem
 - The error messages in text or in screenshots if there is any
 - The arrangement of the peripherals
 - Software in use (such as OS and application software, including the version numbers)
3. If repair service is required, you can download the RMA form at <http://www.ibase.com.tw/english/Supports/RMAService/>. Fill out the form and contact your distributor or sales representative.

Table of Contents

| | | |
|------------------|---|-----------|
| Chapter 1 | General Information | 1 |
| 1.1 | Introduction | 2 |
| 1.2 | Features | 2 |
| 1.3 | Packing List | 3 |
| 1.4 | Optional Accessories | 3 |
| 1.5 | Specifications – AMS210 | 4 |
| 1.6 | System View – AMS210 | 6 |
| 1.7 | Dimensions – AMS210 | 8 |
| Chapter 2 | Hardware Configuration | 10 |
| 2.1 | Essential Installations | 11 |
| 2.2 | Setting the Jumpers | 16 |
| 2.3 | Jumper & Connector Locations on Motherboard | 17 |
| 2.4 | Jumpers Quick Reference | 17 |
| 2.5 | Connectors Quick Reference | 21 |
| Chapter 3 | Driver Installation | 36 |
| 3.1 | Introduction | 37 |
| 3.2 | HD Graphics Driver Installation | 38 |
| 3.3 | HD Audio Driver Installation | 40 |
| 3.4 | LAN Driver Installation | 41 |
| 3.5 | Intel® Management Engine Drivers Installation | 43 |
| Chapter 4 | BIOS Setup | 45 |
| 4.1 | Introduction | 46 |
| 4.2 | BIOS Setup | 46 |
| 4.3 | Main Settings | 47 |
| 4.4 | Advanced Settings | 48 |
| 4.5 | Chipset Settings | 55 |
| 4.6 | Security Settings | 58 |
| 4.7 | Boot Settings | 59 |
| 4.8 | Save & Exit Settings | 60 |
| Appendix | | 61 |
| A. | I/O Port Address Map | 62 |
| B. | Interrupt Request Lines (IRQ) | 64 |
| C. | Watchdog Timer Configuration | 65 |

Chapter 1

General Information

The information provided in this chapter includes:

- Features
- Packing List
- Optional Accessories
- Specifications
- Overview
- Dimensions

1.1 Introduction

The AMS210 embedded system is based on the Intel® 9th/8th Gen. Core™/ Pentium® / Celeron® processors and houses the MB211 motherboard built with two DDR4 memory slots with a 32GB capacity. Measuring 265mm x 247mm, the system has four Gigabit Ethernet connectors, four serial ports, USB 3.1 and USB 2.0 connectors, two DP++ display ports, and 24V DC power input.



Pictures of AMS210

1.2 Features

- With IBASE MB211 customized board
- 9th / 8th Gen Intel® Core™ i7/i5/i3 Desktop Processors
- 2x DDR4 2666/2400 memory slots; Max. 32GB
- 2x DP++ display interface, 4x Gigabit LAN
- 4x USB 3.1, 4x USB 2.0, 2x SATA 3.1, 2x PCI-E(16x)
- 24V DC power input

1.3 Packing List

Your product package should include the items listed below. If any of the items below is missing, contact the distributor or the dealer from whom you have purchased the product.

AMS210

- AMS210 x 1
- Bracket x 2
- Terminal block x 1

- Round Head Screw (for Bracket) x 6

- PCI Power Cable x1

1.4 Optional Accessories

IBASE provide the following optional accessories:

| | |
|--|--|
| ABP-IP701 riser card: PCI-e(x16) slot + PCI-e(x4) slot |  |
| ABP-IP702 riser card: PCI-e(x16) slot + PCI-e slot (default) |  |
| ABP-IP703 riser card: 2x PCI slots |  |

1.5 Specifications – AMS210


| | | |
|-------------------------|--|---|
| Product Name | AMS210 | |
| System | | |
| Motherboard | MB211 | |
| Operating System | <ul style="list-style-type: none"> Windows10 (64-bit) / 7 (32-bit & 64-bit) | |
| CPU | Intel® 9th/8th Gen. Core™ / Pentium® / Celeron® processors TDP = 35W | |
| Chipset | Intel® Q370 | |
| Memory | 2 x DDR4-2666/2400 SO-DIMM; Max. 32GB (Non-ECC) | |
| Super I/O | Fintek F81964D -I | |
| Audio Codec | Realtek ALC662 | |
| Network | <ul style="list-style-type: none"> Four Gigabit Ethernet <ul style="list-style-type: none"> Intel® I219LM GbE PHY, Intel® I210IT GbE, Intel® I210IT GbE, Intel® I210IT GbE | |
| SATA | <ul style="list-style-type: none"> 2x SATA III port (6Gbps) for 2.5" SATA HDD or SSD | |
| Expansion Slot | <ul style="list-style-type: none"> The riser cards ABP-IP701, ABP-IP702, and ABP-IP703 come with two golden fingers to support 2 slots: <ul style="list-style-type: none"> 1xPCI-e(x16) slot + 1 xPCIe(x4) slot / ABP-IP701 1xPCI-e(x16) slot + 1 xPCI slot (Default) / ABP-IP702 2XPCI slots / ABP-IP703 | |
| Front Panel I/O | <ul style="list-style-type: none"> 24V Power Input Power Switch Expansion Slots COM1 Serial Port Line Out | <ul style="list-style-type: none"> 4x GbE Ports 4x USB 3.0 Ports 4x USB 2.0 Ports 3x DP Ports 50x50mm DC fan for PSU |
| Rear Panel I/O | <ul style="list-style-type: none"> 60x60 mm DC fan for CPU NVRAM Battery Compartment code Power (red) and HDD (green) LEDs Space for two optional COM ports | |
| BIOS | AMI BIOS | |
| Watchdog | Watchdog Timer 256 segments, 0, 1, 2...255 sec/min | |
| Other Features | 512K SRAM; LPC 80 port | |

| Mechanical and Environmental | |
|-------------------------------------|---|
| Dimensions | 297.4mm(W) x 265.9mm(D) x 78.5mm(H) |
| Construction | Aluminum |
| Chassis color | Silver |
| Mounting type | Desktop & Wall mount |
| Operating Temperature | -20°C to 55°C |
| Storage Temperature | -20°C~80°C |
| Humidity | 5%~90%@45°C (non-condensing) |
| Vibration | Operating : 0.25Grms / 5~500Hz Non-operating : 1Grms / 5~500Hz |
| Shock | Operating : 20G / 11ms Non-operating : 40G / 11ms |
| Certification | CE / FCC Class A / LVD |

All specifications are subject to change without prior notice.


1.6 System View – AMS210

Front View

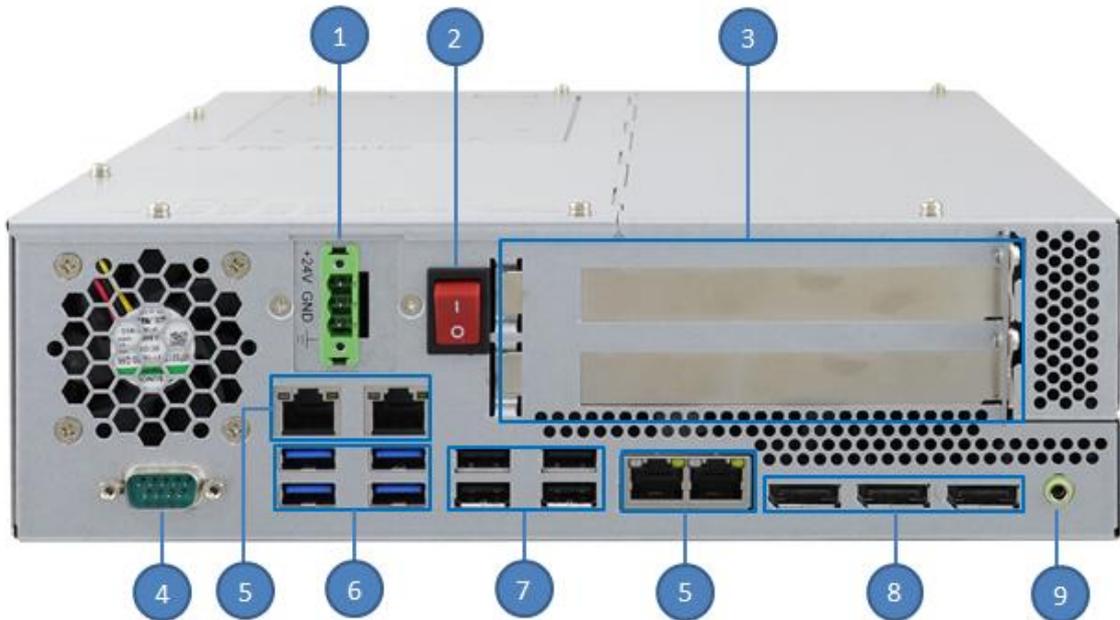

| No. | Name | No. | Name |
|-----|------------------|-----|---------------|
| 1 | 24V Power Input | 6 | USB 3.0 Ports |
| 2 | Power Switch | 7 | USB 2.0 Ports |
| 3 | Expansion Slots | 8 | DP Ports |
| 4 | COM1 Serial Port | 9 | Line Out |
| 5 | GbE Ports | | |


Rear View

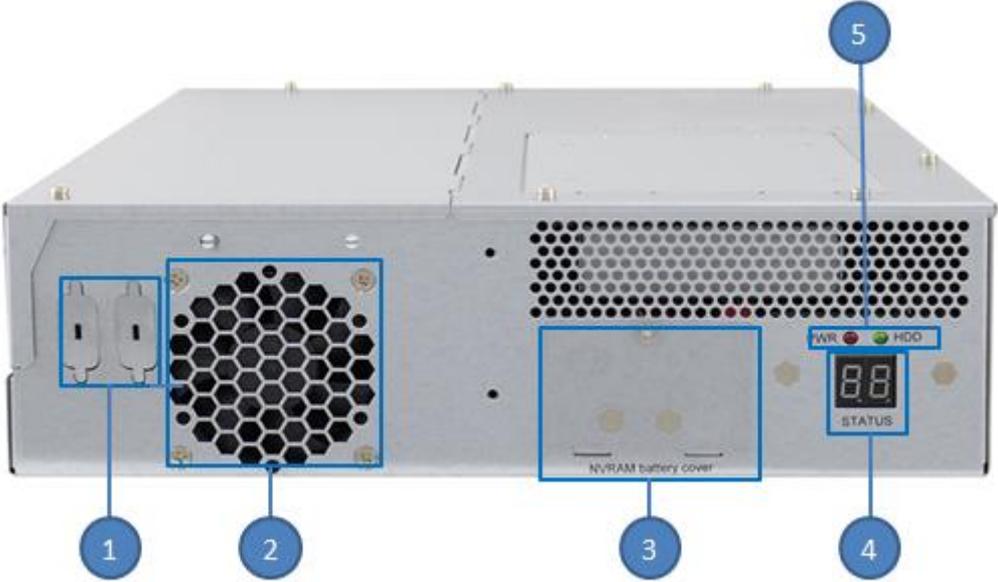

| No. | Name | No. | Name |
|-----|---------------------------|-----|--------------------|
| 1 | Optional COM Ports | 4 | BIOS POST Code |
| 2 | DC Fan for PSU | 5 | Power and HDD LEDs |
| 3 | NVRAM Battery Compartment | | |

1.7 Dimensions – AMS210

Unit: mm

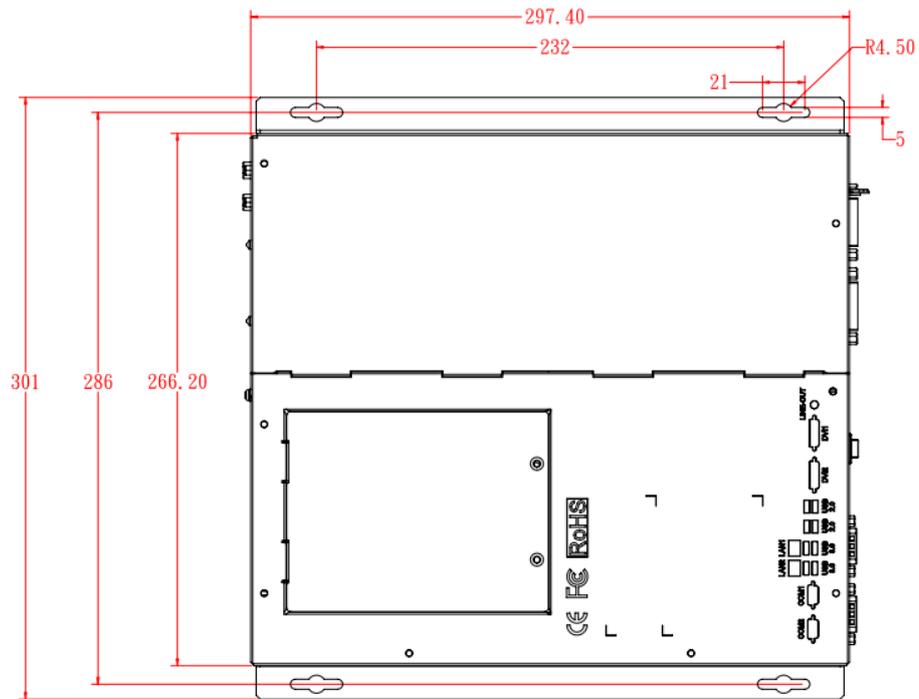

This page is intentionally left blank.

Chapter 2


Hardware Configuration

The information provided in this chapter includes:

- Essential installations before you begin
- Information and locations of connectors


2.1 Essential Installations

The system cover has two parts – the left and the right. To remove the right-side cover, loosen the two screws (M3x6) as shown in the picture below. This is done prior to the installation the PCI-E expansion card. The left-side cover uses six screws (M3x6). To remove or install the HDD, there is no need to remove any of the above-mentioned screws, just the two screws of the HDD compartment cover.

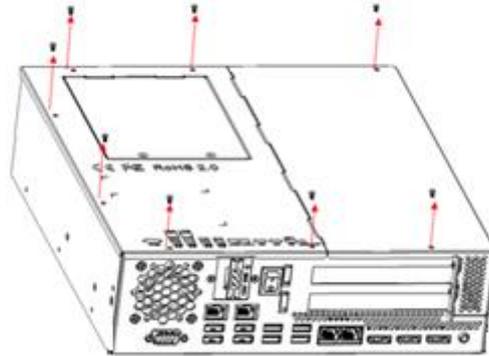


2.1.1 Battery Installation

The battery compartment is secured by one screw (M3x6). Unscrew the compartment cover and install the battery as shown below.

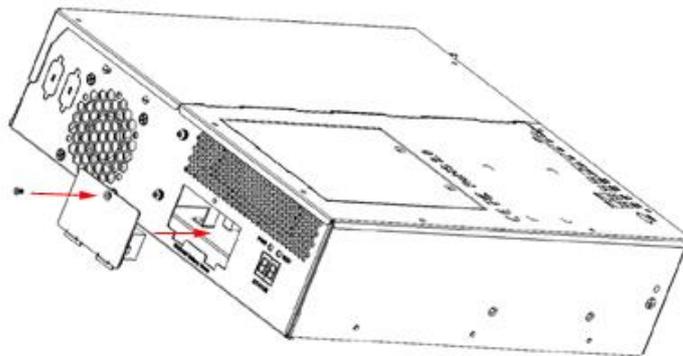


Position the battery by observing the polarity. Replace the cover.

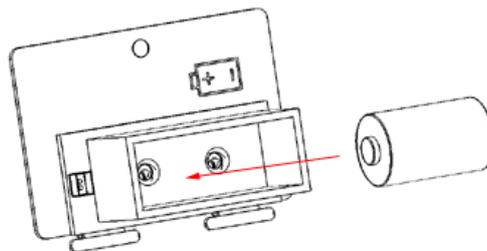


2.1.2 PCI-E Card Installation


After removing the L-shape chassis cover, install your PCI-E expansion card in the upper empty expansion slot as shown in the pictures below.

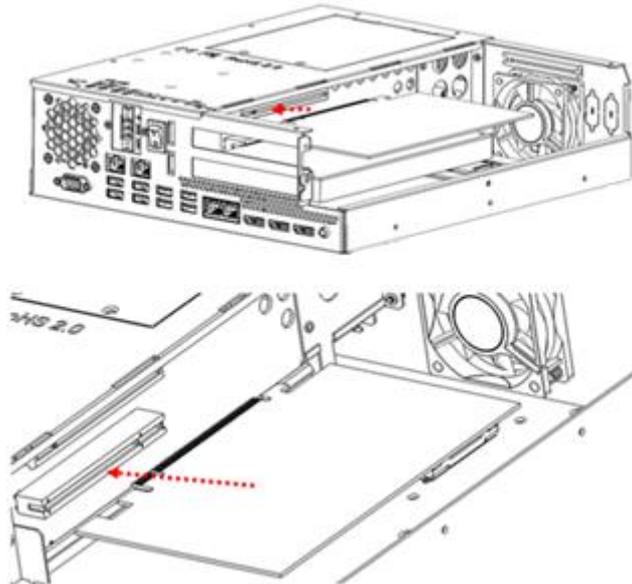

After installing the card into place, secure the expansion card slot cover by using one M3*4 screw.

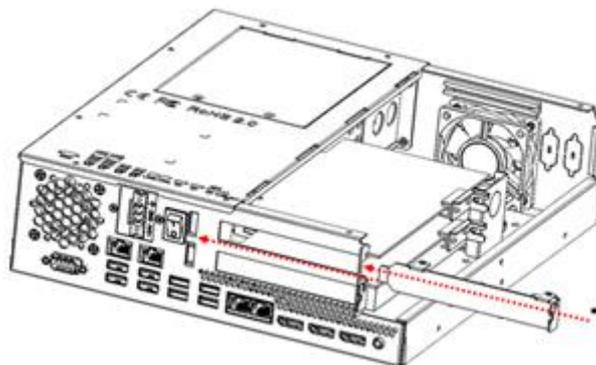


The riser card bracket, as encircled below, can be used to secure the expansion card. Use one M3*4 screw to fasten the bracket. Replace the chassis cover.

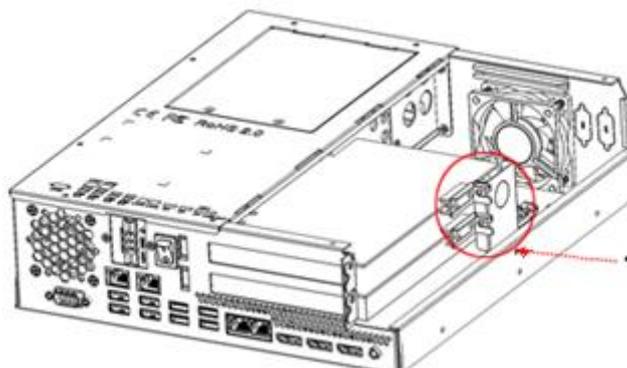


2.1.3 Mounting Bracket Installation

A pair of mounting brackets is supplied with the package. Use the supplied screws (M3*6) to install the mounting brackets.

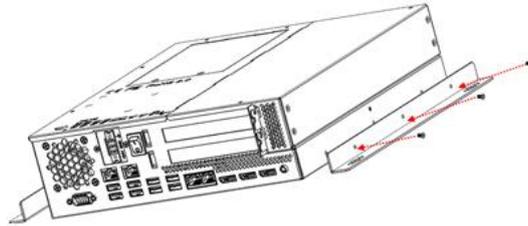


2.1.4 Hard Disk Drive Installation

Remove the (M3*6) screws of the HDD tray cover and pull the tray out. There are four screws securing the hard disk drive as shown below.

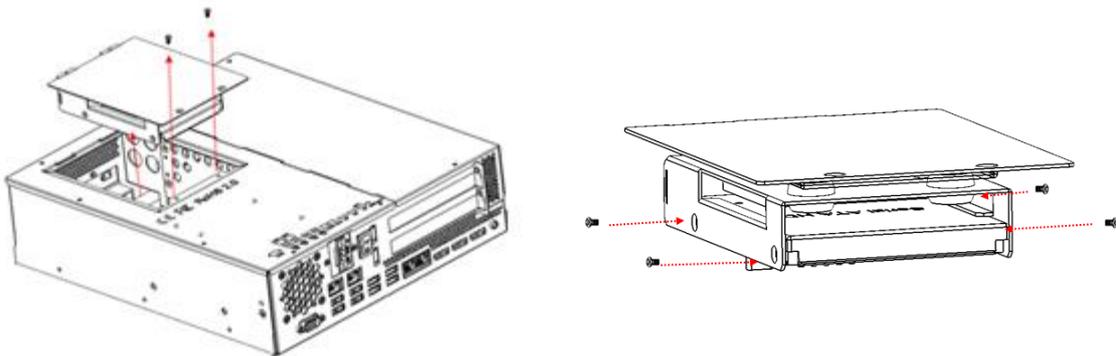


Please note that the SATA interface connector and the HDD power interface are to be connected first during the HDD installation.

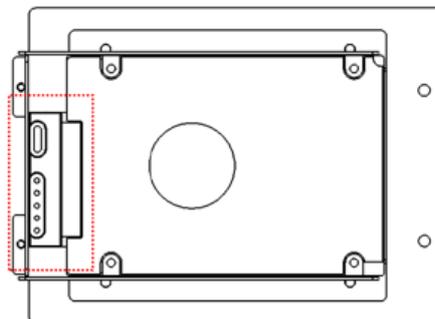



2.1.5 Mini-PCIe Card Installation

1. If you need to replace or install a Mini-PCIe card, remove the following left chassis cover by loosening the six screws that are securing the cover.
2. Locate the Mini-PCIe slot inside the system.
3. Align the key of the mini-PCIe card to the mini-PCIe interface, and insert the card slantwise.

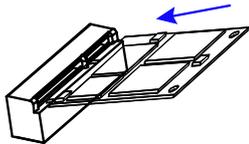

4. Push the mini-PCIe card down and fix it with the an M2 screw.


Mini PCIe:

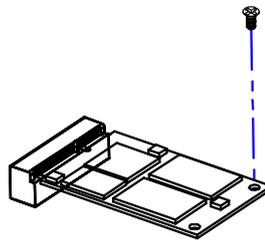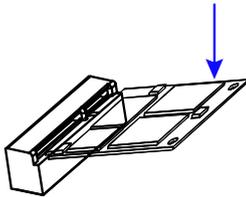

2.1.6 Memory Module Installation

There are two SO-DIMM memory slots inside the system. The maximum memory capacity is 32GB. Follow the instructions below to remove, replace or install memory modules.

1. Remove the left chassis cover by loosening the six screws that are securing the cover.
2. Locate the memory slots inside the system.
3. Align the key of your memory module with that on the memory slot and insert the module slantwise.
4. Gently push the module until the clips of the slot click to hold the module in place when the module touches the bottom of the slot.

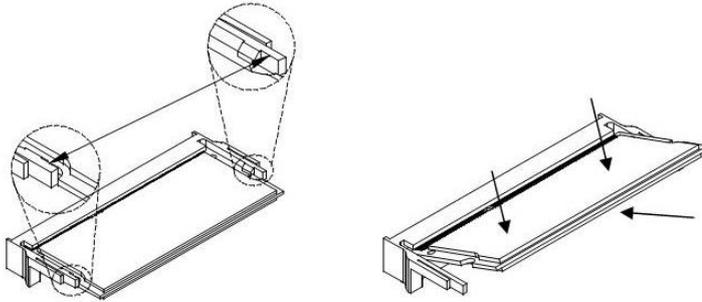


5. To remove the module, press the clips outwards with both hands.

2.2 Setting the Jumpers






Set up and configure your device by using jumpers for various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your use.

2.2.1 How to Set Jumpers

Jumpers are short-length conductors consisting of several metal pins with a non-conductive base mounted on the circuit board. Jumper caps are used to have the functions and features enabled or disabled. If a jumper has 3 pins, you can connect either PIN1 to PIN2 or PIN2 to PIN3 by shorting.

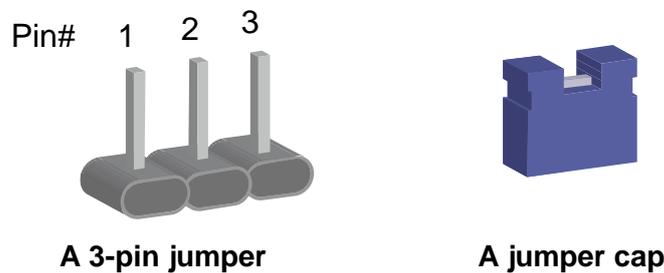


Refer to the illustration below to set jumpers.
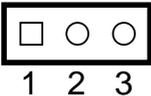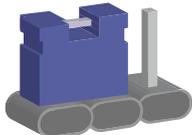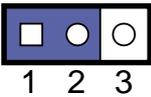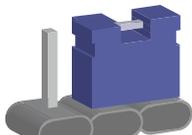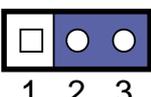
| Pin closed | Oblique view | Illustration |
|------------|---|--|
| Open |  |  1 2 3 |
| 1-2 |  |  1 2 3 |
| 2-3 |  |  1 2 3 |

When two pins of a jumper are encased in a jumper cap, this jumper is **closed**, i.e. turned **On**.

When a jumper cap is removed from two jumper pins, this jumper is **open**, i.e. turned **Off**.

2.3 Jumper & Connector Locations on Motherboard

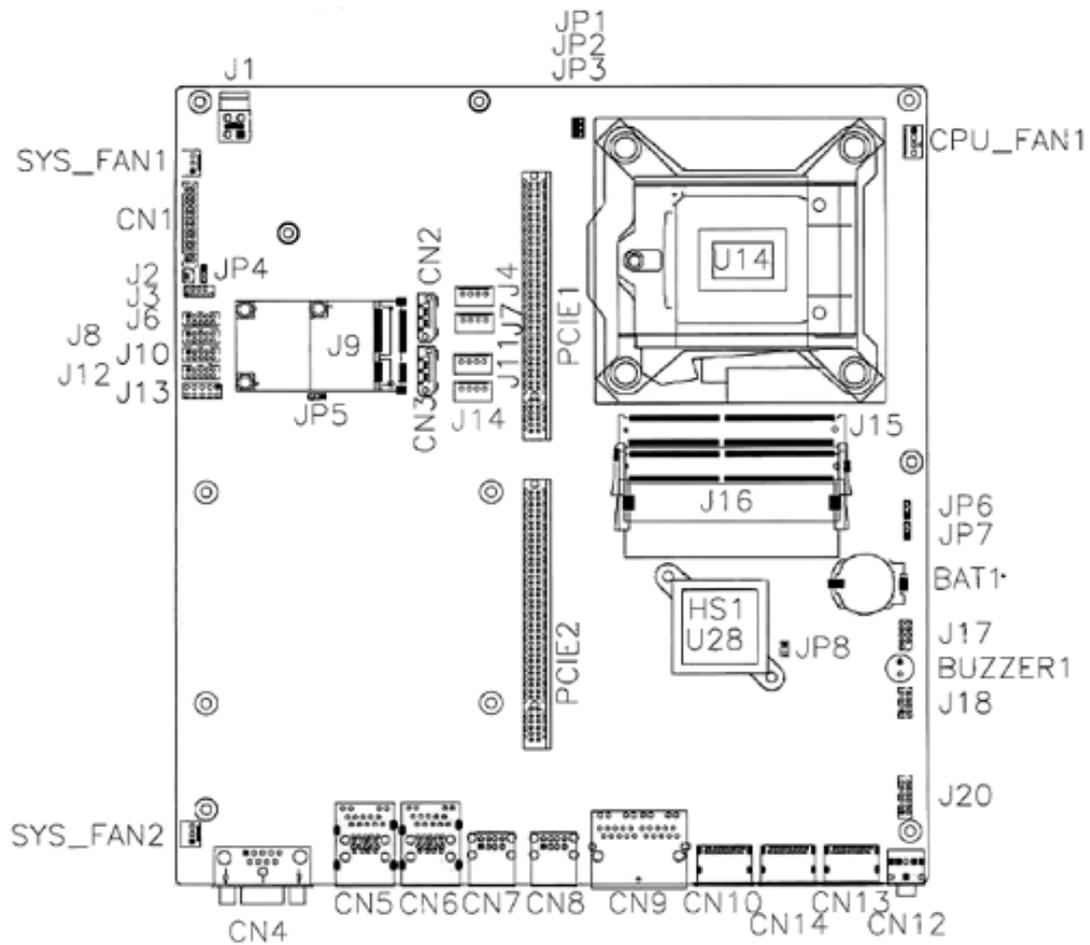


MB211 Motherboard

2.4 Jumpers Quick Reference


| Function | Jumper Name | Page |
|----------------------------------|-------------|------|
| Clearing CMOS Data | JP6 | 18 |
| Clearing ME Register | JP7 | 18 |
| ATX/AT Select | JP4 | 19 |
| PCIe (x16) Bifurcation Selection | JP1 & JP2 | 19 |
| PCIe_X16 Reverse | JP3 | 20 |
| Factory Use Only | JP8 | 20 |

2.4.1 Clearing CMOS Data (JP6)

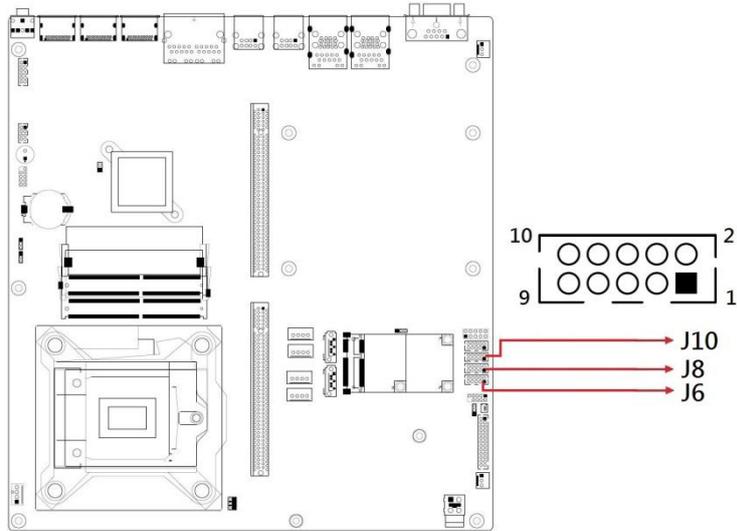


| Function | Pin closed | Illustration |
|---------------------|------------|--------------|
| Normal (default) | 1-2 | 1 |
| Clear CMOS | 2-3 | 1 |

2.4.2 JP7: Clearing ME Register

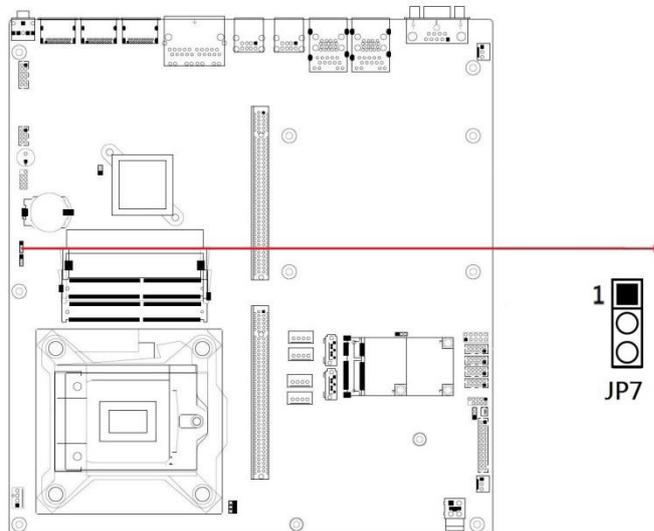


| Function | Pin closed | Illustration |
|---------------------|------------|--------------|
| Normal (default) | 1-2 | 1 |
| Clear ME | 2-3 | 1 |

2.4.3 JP4: ATX/AT Select

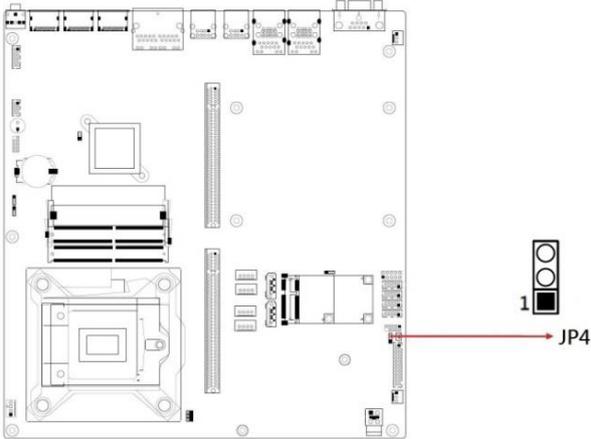


| Function | Pin closed | Illustration |
|--------------|------------|--------------|
| ATX(default) | 1-2 | 1 |
| AT Mode | 2-3 | 1 |

2.4.4 JP1 & JP2: PCIe (x16) Bifurcation Selection

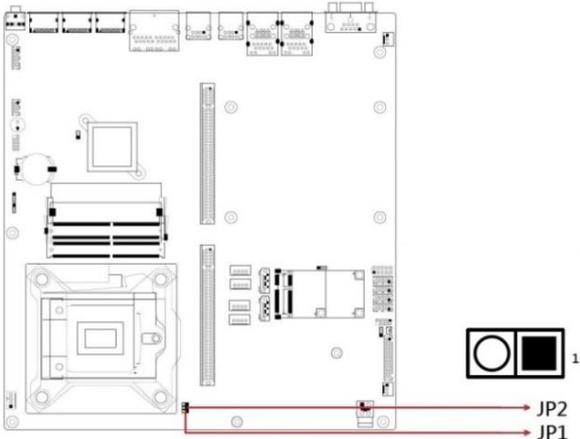


| Function | Pin closed | Illustration |
|---|------------|--------------|
| 1 x PCIe (x16) | JP1: Open | 1 |
| | JP2: Open | 1 |
| 2 x PCIe (x8) | JP1: Open | 1 |
| | JP2: Close | 1 |
| 1 x PCIe (x8) 2 x PCIe (x4) (default) | JP1: Close | 1 |
| | JP2: Close | 1 |

2.4.5 JP3: PCIe_X16 Reverse

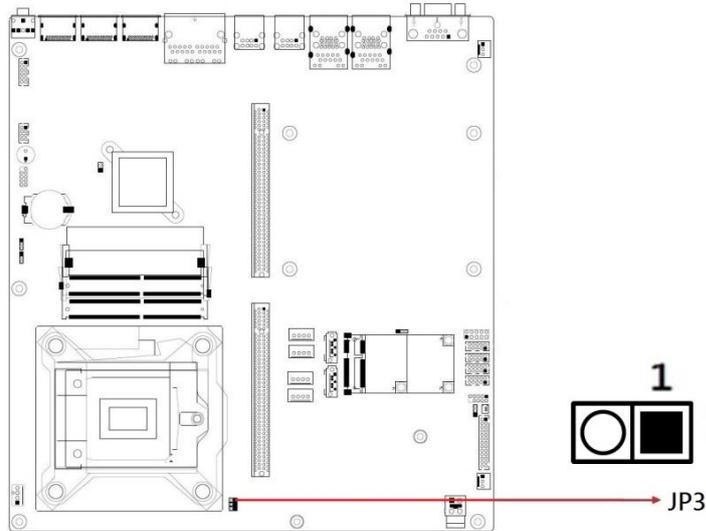

| Function | Pin closed | Illustration |
|------------------|------------|--|
| Normal | Open |  1 |
| Reverse(default) | Closed |  1 |

2.4.6 JP8: Flash Descriptor Security Override (Factory use only)

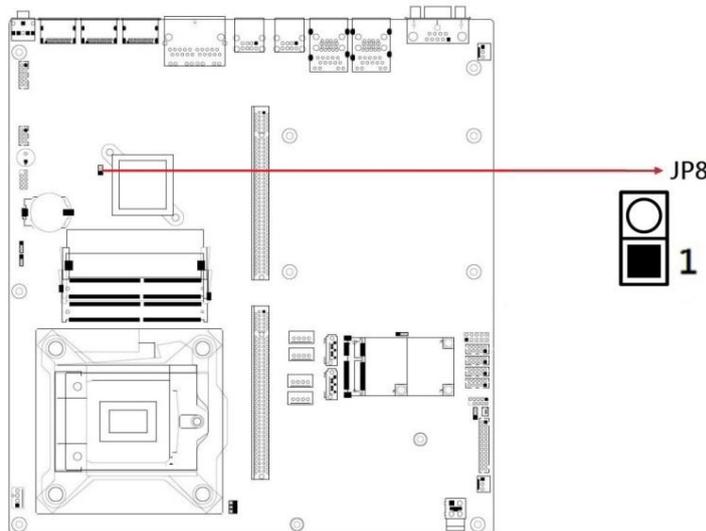


| Function | Pin closed | Illustration |
|--------------------|------------|---|
| Disabled (Default) | Open |  1 |
| Enabled | Closed |  1 |

2.5 Connectors Quick Reference

| Function | Connector Name | Page |
|---|------------------|------|
| Interface to ABP-ID45 | CN1 | 30 |
| SATA III Port | CN2, CN3 | -- |
| COM1 Ports | CN4 | -- |
| GbE LAN Port & Dual USB 3.1 Gen1 Ports | CN5, CN6 | 30 |
| USB 2.0 Connector | CN7, CN8, J18 | 33 |
| Dual GbE LAN Port | CN9 | 31 |
| DisplayPort | CN10, CN13, CN14 | 31 |
| Audio L-OUT Connector | CN12 | 32 |
| DC_IN Power 2X2 Connector | J1 | -- |
| Battery 1/2AA Connector | J2 | -- |
| SATA Power Connector | J4,J7 | -- |
| COM2 & COM3 & COM4 RS-232 Ports | J10,J8,J6 | -- |
| MINI_PCIE Slot | J9 | 34 |
| PCI Power Connector | J11,J14 | -- |
| Digital I/O Connector | J12 | -- |
| DDR4 SO-DIMM Slot | J15, J16 | -- |
| SPI Flash Header | J17 | -- |
| Audio Connector | J20 | 32 |
| PCIe (x16) Slot | PCIE1 | -- |
| PCIe (x16) Combo Slot | PCIE2 | -- |
| CPU Fan Connector | CPU_FAN1 | -- |
| System Fan Connector | SYS_FAN1 /2 | -- |
| Factory Use Only | J3,J13,J19 | -- |


2.5.1 CN4: COM1 RS-232/422/485 Ports

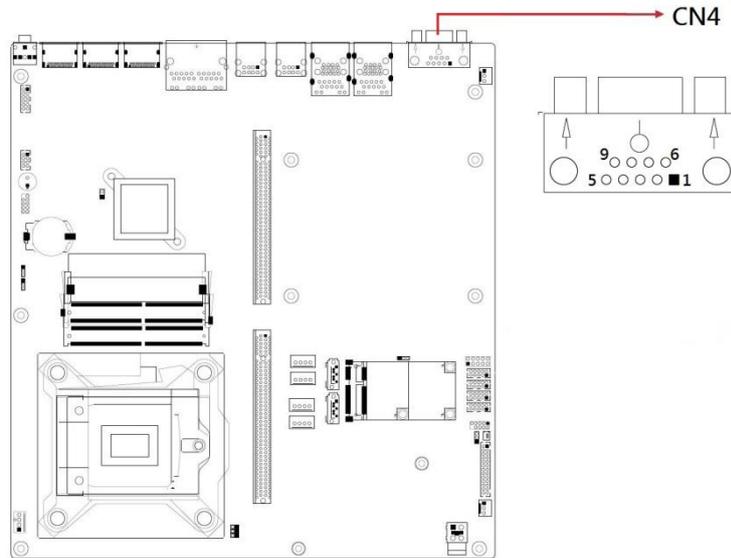

| Pin | Signal Name | Pin | Signal Name |
|-----|--------------------------|-----|----------------------|
| 1 | DCD, Data carrier detect | 6 | DSR, Data set ready |
| 2 | RXD, Receive data | 7 | RTS, Request to send |
| 3 | TXD, Transmit data | 8 | CTS, Clear to send |
| 4 | DTR, Data terminal ready | 9 | RI, Ring indicator |
| 5 | Ground | | |


| Pin | Signal Name | | |
|-----|-------------|--------|--------|
| | RS-232 | RS-422 | RS-485 |
| 1 | DCD | TX- | DATA- |
| 2 | RX | TX+ | DATA+ |
| 3 | TX | RX+ | NC |
| 4 | DTR | RX- | NC |
| 5 | Ground | Ground | Ground |
| 6 | DSR | NC | NC |
| 7 | RTS | NC | NC |
| 8 | CTS | NC | NC |
| 9 | RI | NC | NC |

2.5.2 J6, J8, J10: COM2 & COM3 & COM4 RS-232 Ports

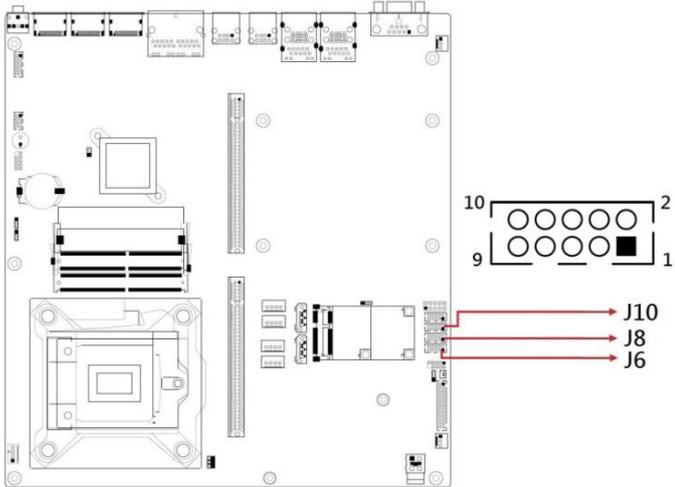


| Pin | Signal Name | Pin | Signal Name |
|-----|--------------------------|-----|--------------------------|
| 1 | DCD, Data carrier detect | 2 | RXD, Receive data |
| 3 | TXD, Transmit data | 4 | DTR, Data terminal ready |
| 5 | Ground | 6 | DSR, Data set ready |
| 7 | RTS, Request to send | 8 | CTS, Clear to send |
| 9 | RI, Ring indicator | 10 | Key |

2.5.3 J12: Digital I/O Connector

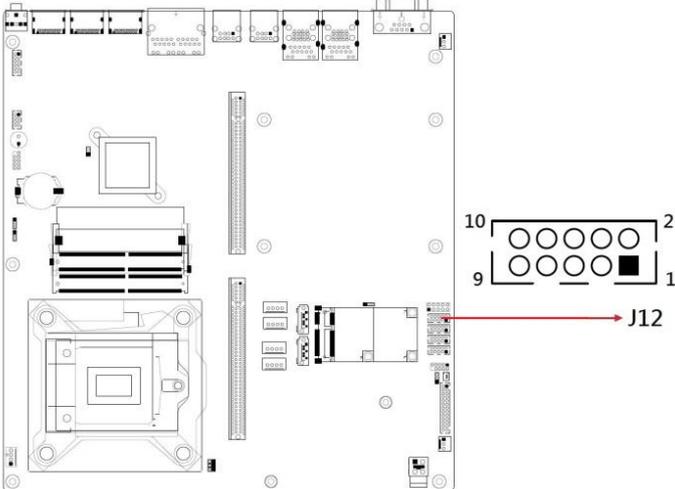


| Pin | Signal Name | Pin | Signal Name |
|-----|-------------|-----|-------------|
| 1 | Ground | 2 | +5V |
| 3 | OUT3 | 4 | OUT1 |
| 5 | OUT2 | 6 | OUT0 |
| 7 | IN3 | 8 | IN1 |
| 9 | IN2 | 10 | IN0 |

2.5.4 CPU_FAN1: CPU Fan Power Connector

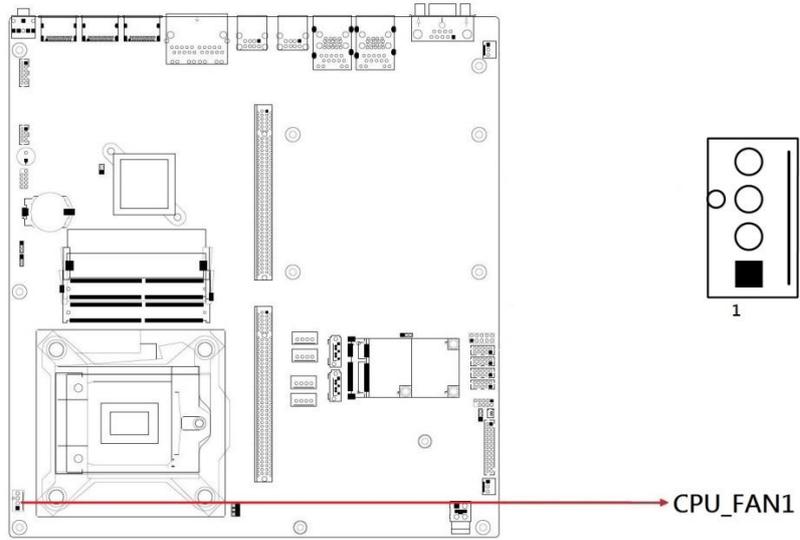


| Pin | Signal Name | Pin | Signal Name |
|-----|-------------|-----|--------------------|
| 1 | Ground | 3 | Rotation detection |
| 2 | +12V | 4 | Control |

2.5.5 SYS_FAN1/2: System Fan Power Connector

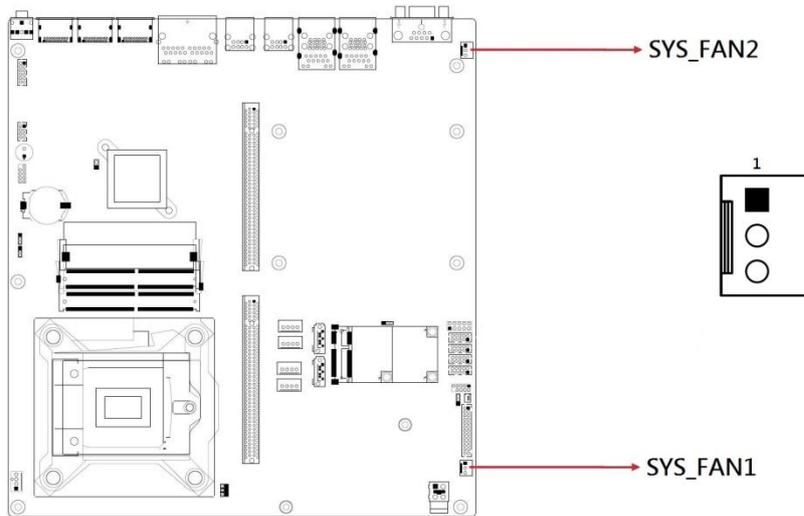


2.5.6 PCIE1: PCIe(x16) Slot

(Including PCI-E(x16) signal)

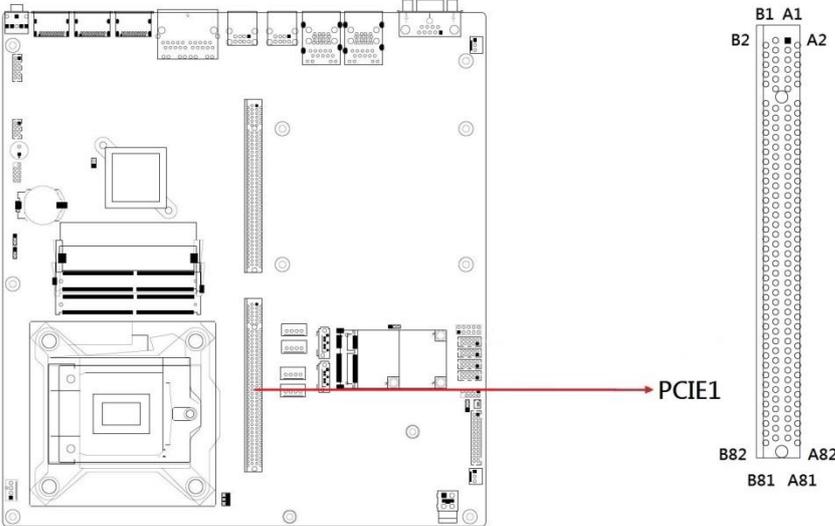


2.5.7 PCIE2: PCIe(x16) Slot


(Including PCI-E(x4) & PCI signals)

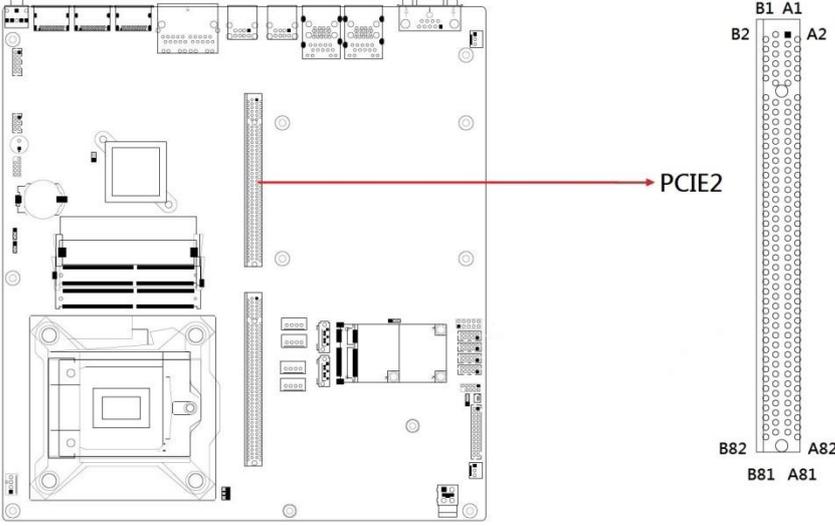


2.5.8 J16: DDR SO-DIMM Channel A

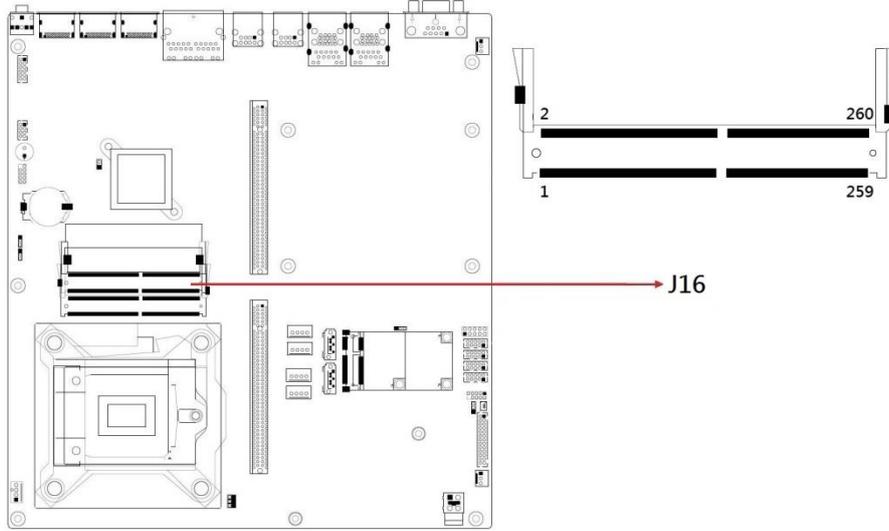

2.5.9 J15: DDR SO-DIMM Channel B

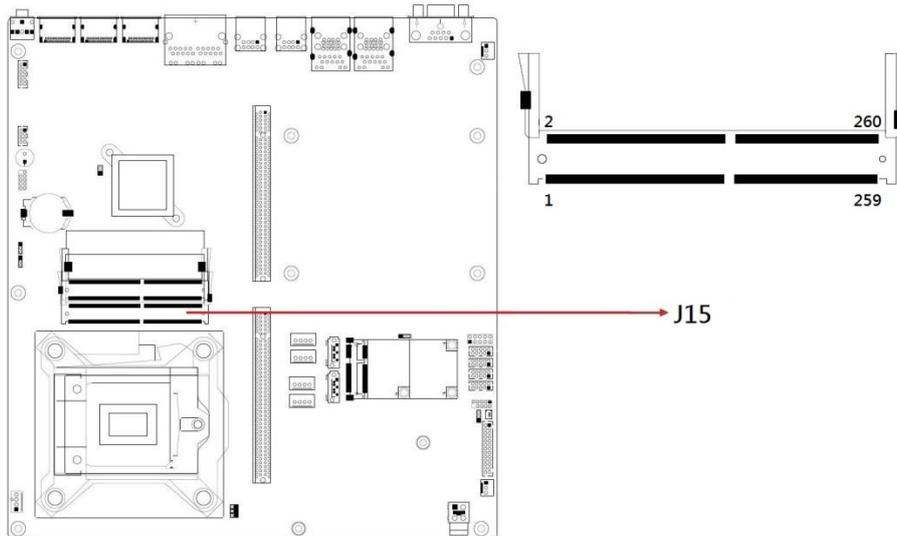


2.5.10 J1: DC-in Connector

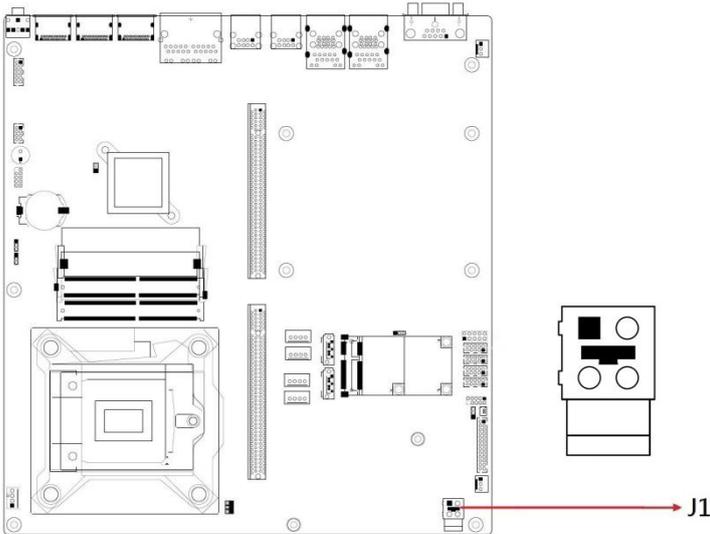


| Pin | Signal Name | Pin | Signal Name |
|-----|--------------|-----|-------------|
| 1 | Power Ground | 3 | +24V |
| 2 | Power Ground | 4 | +24V |

2.5.11 J17: SPI Flash Connector (Factory use only) (2mm)

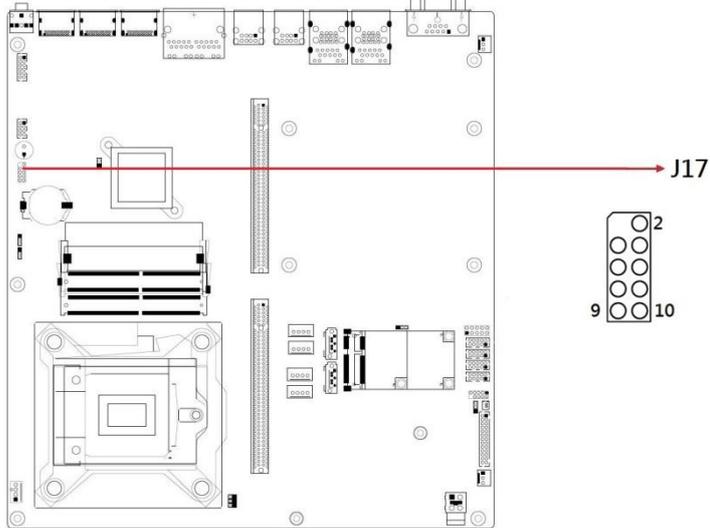


2.5.12 J3: LPC Debug Connector (Factory use only) (2mm)

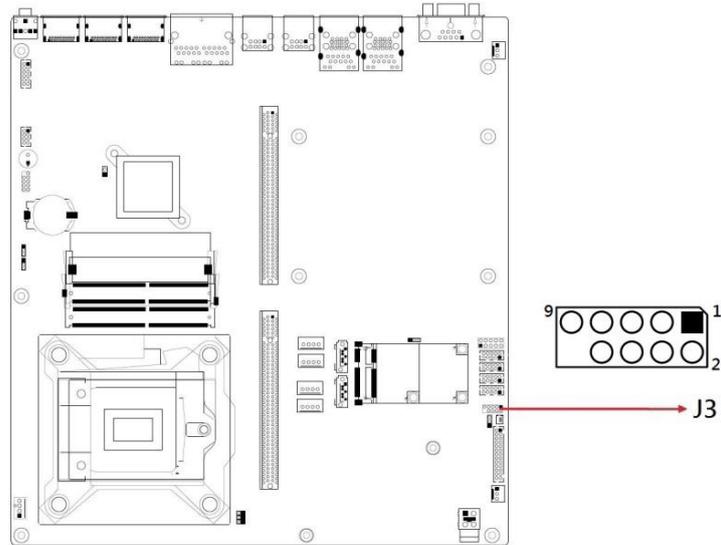


| Pin | Signal Name | Pin | Signal Name |
|-----|-------------|-----|-------------|
| 1 | LPC_AD0 | 2 | Reset# |
| 3 | LPC_AD1 | 4 | LPC_FRAME# |
| 5 | LPC_AD2 | 6 | +3.3V |
| 7 | LPC_AD3 | 8 | Ground |
| 9 | CLK_33MHz | 10 | Protect Pin |

2.5.13 J4, J7: SATA Power Connector

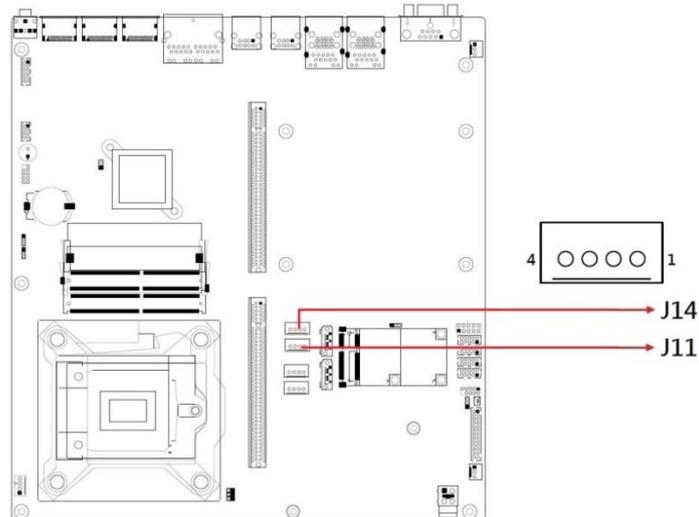


| Pin | Signal Name | Pin | Signal Name |
|-----|-------------|-----|-------------|
| 1 | +5V | 3 | Ground |
| 2 | Ground | 4 | +12V |

2.5.14 J11,J14: PCI Power Connector

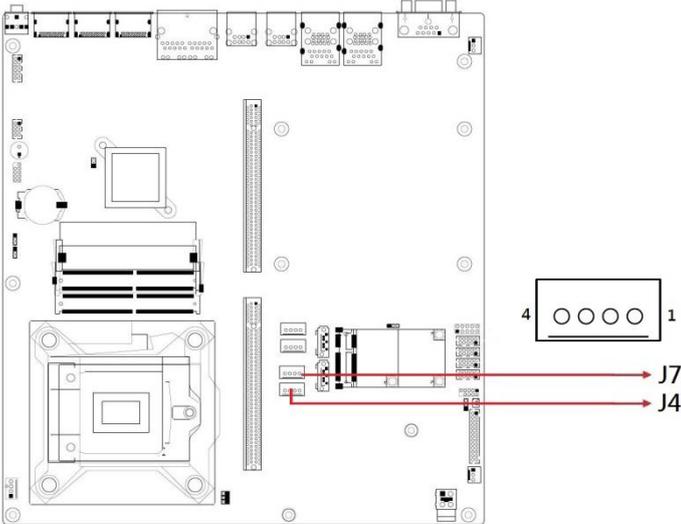


| Pin | Signal Name | Pin | Signal Name |
|-----|-------------|-----|-------------|
| 1 | +5V | 3 | Ground |
| 2 | Ground | 4 | +12V |

2.5.15 J2: Battery 1/2AA Connector

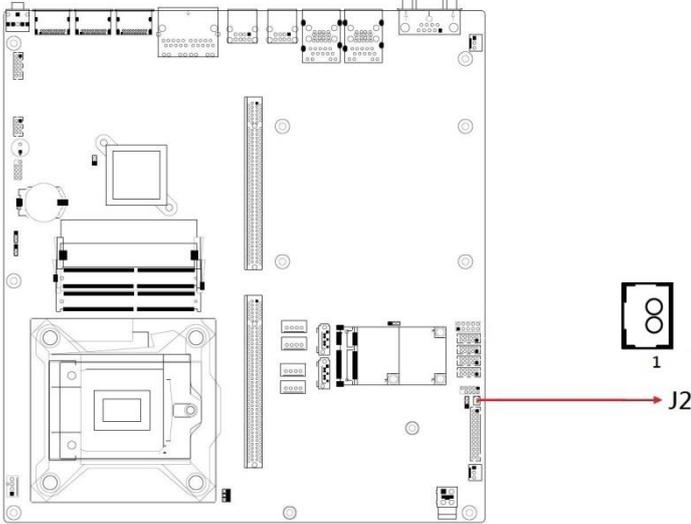


| Pin | Signal Name |
|-----|-------------|
| 1 | BAT |
| 2 | Ground |


2.5.16 CN1: Interface to ABP-ID45

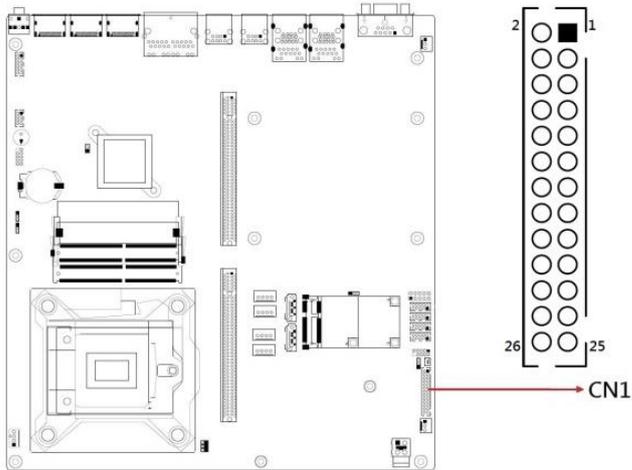


2.5.17 CN5 : RJ45 (I219LM) + USB3.1 Gen1 Connector

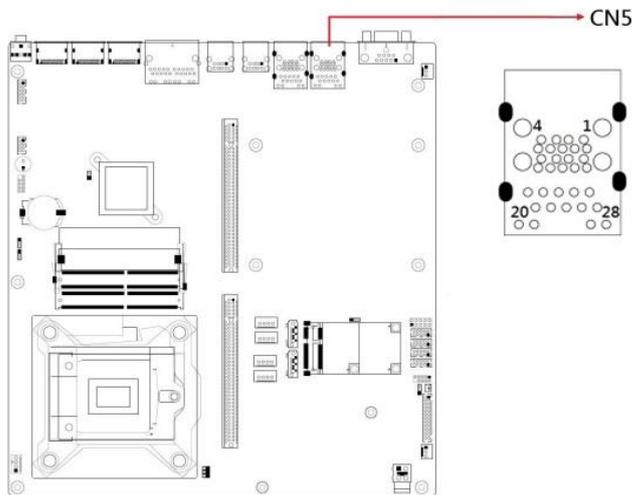


2.5.18 CN6 : RJ45 (I210IT) + USB3.1 Gen1 Connector

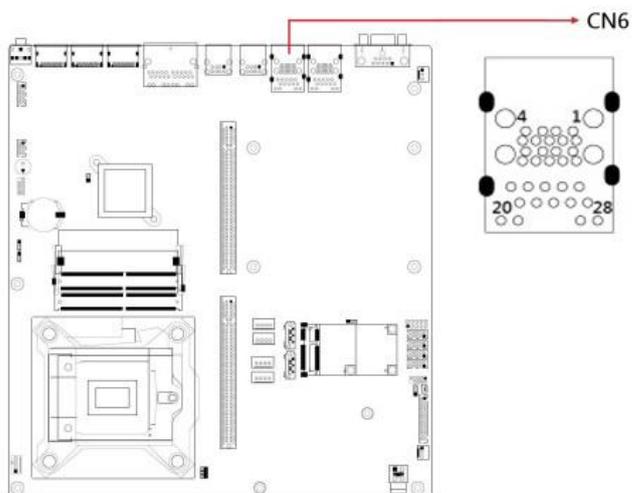


2.5.19 CN9 : Dual RJ45 I210IT Connector

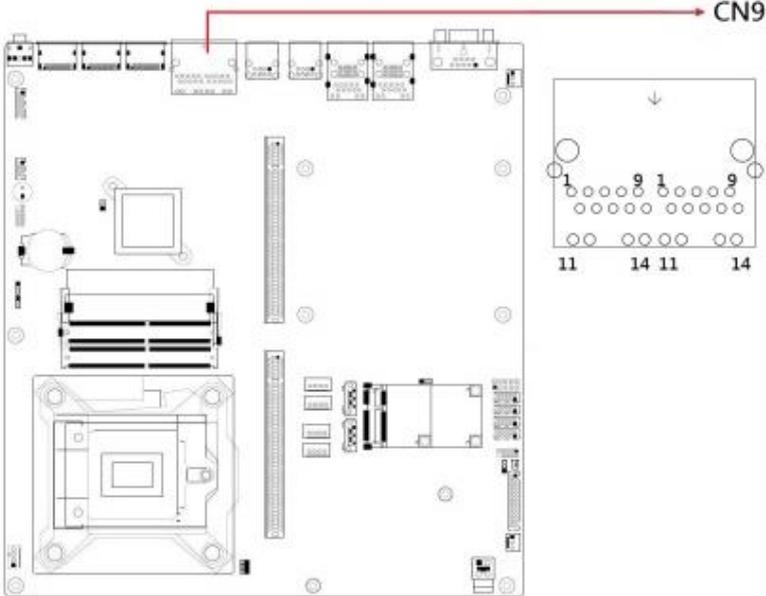

2.5.20 CN10, CN13, CN14 : DP Connector

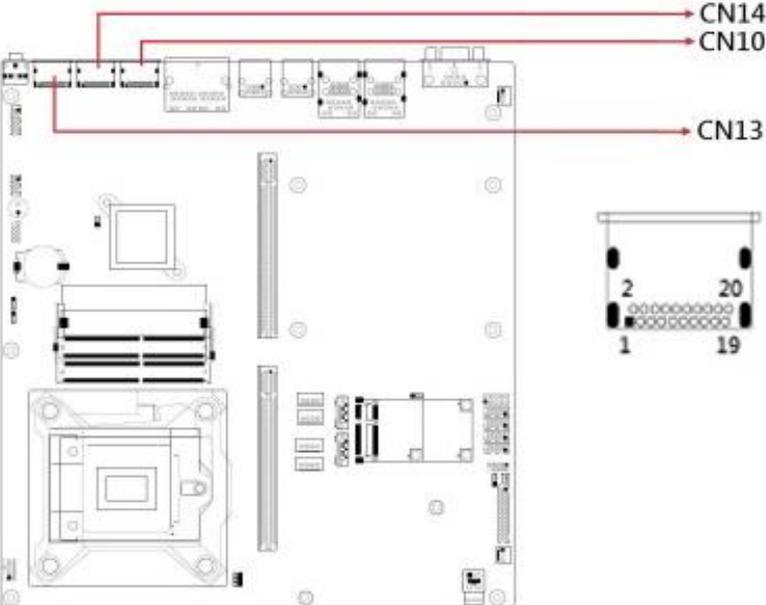


2.5.21 Audio Connector (J20)

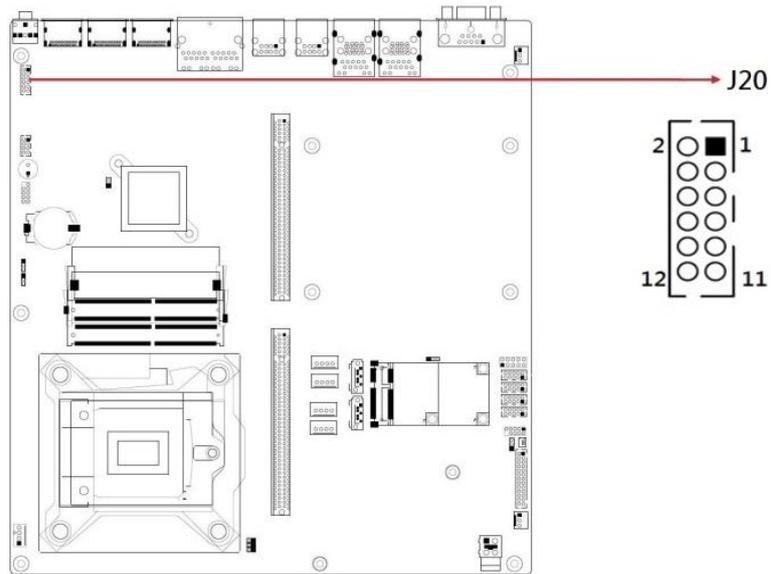


| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1 | Lineout_L | 2 | Lineout_R |
| 3 | JD_FRONT | 4 | Ground |
| 5 | LINEIN_L | 6 | Linein_R |
| 7 | JD_LINEIN | 8 | Ground |
| 9 | MIC_L | 10 | MIC-R |
| 11 | JD_MIC1 | 12 | Ground |


2.5.22 Audio Line-OUT Connector CN12

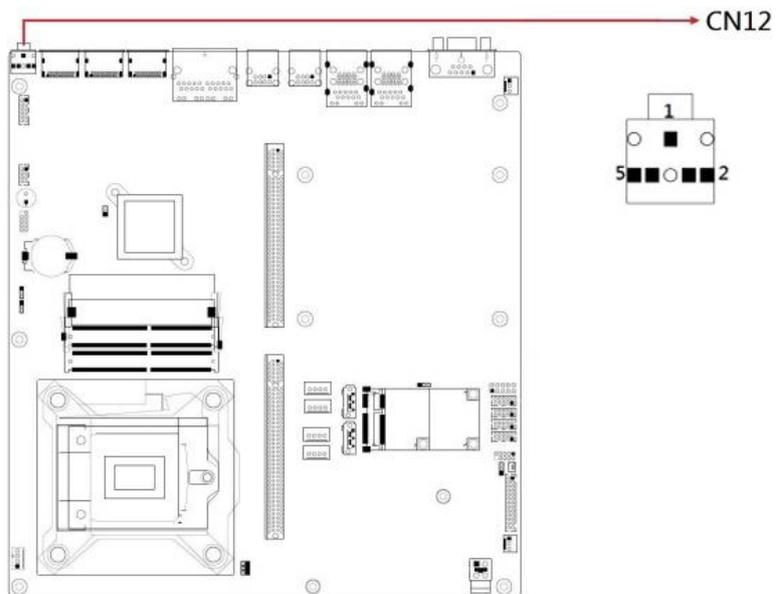

2.5.23 USB 2.0 Connector CN7 / CN8

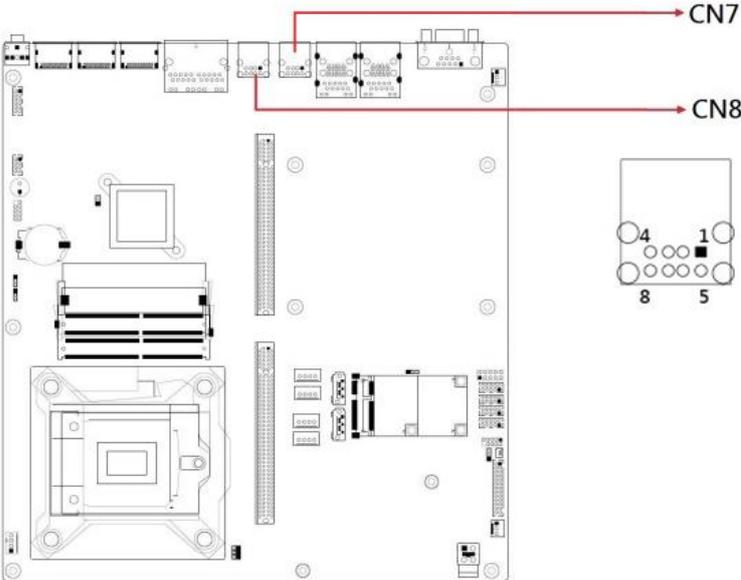


2.5.24 USB 2.0 DF11 Pin Header J18

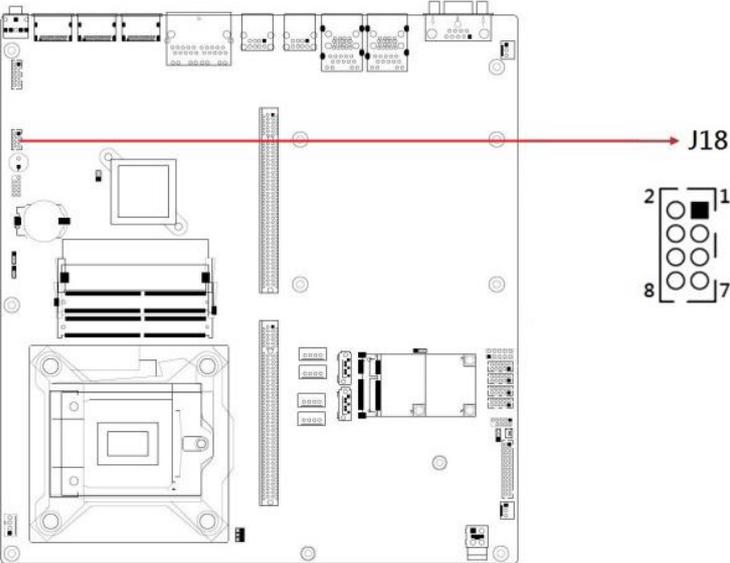

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 2 | Ground | 1 | Vcc |
| 4 | D+ | 3 | D- |
| 6 | D- | 5 | D+ |
| 8 | Vcc | 7 | Ground |

2.5.25 Mini-PCIE Connector and mSATA J9

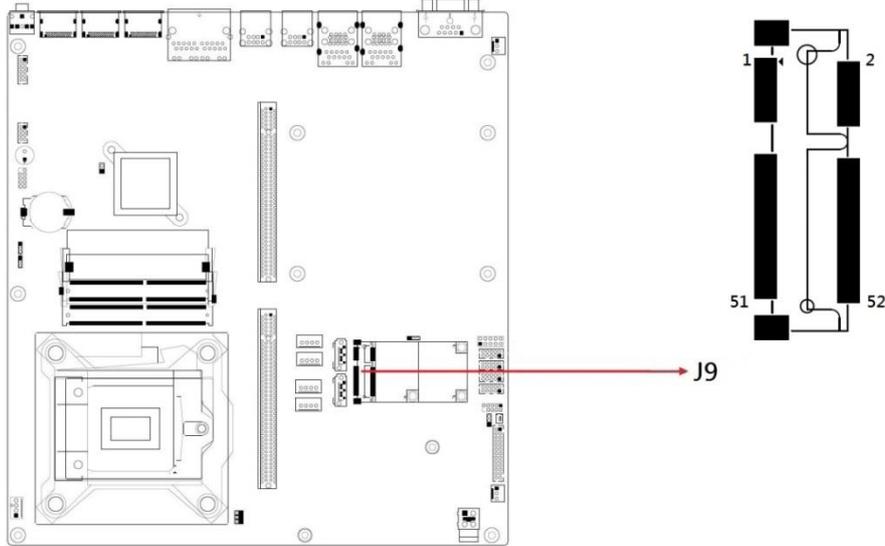

| Function | Connector Name | Page |
|--|----------------|------|
| COM1 & COM2 Ports | CN11 | 21 |
| COM3 & COM4 RS-232 Ports | CN10 | 22 |
| Digital I/O Connector | J10 | 22 |
| CPU Fan Connector | CPU_FAN1 | 23 |
| PCIe (x16) Slot | PCIE2 | 23 |
| PCIe (x4) Slot | PCIE1 | 23 |
| DC_IN Power 2X2 Connector | J14 | 24 |
| DC_IN Connector DINKLE | J15 | 24 |
| ISMART Debug Connector (factory use) | J1 | 24- |
| SPI Flash Connector (factory use) | J2 | 24 |
| LPC Debug Connector (factory use) | J12 | 25 |
| SATA Power Connector | J8,J9 | 25 |
| Reset Button Connector | J11 | 26 |
| Power Button | SW1/ CN7 | 26 |
| GbE LAN Port & Dual USB 3.1 Gen1 Ports | CN2, CN3 | 26 |
| PSE LAN (I210IT) | CN13, CN14 | 27 |
| Audio Connector | J5 | 27 |
| SATA III Port | CN8, CN9 | -- |
| DDR4 SO-DIMM Slot | J3, J16 | -- |
| M.2 M2280 Slot | J7 | -- |
| M.2 E2230 Slot | J6 | -- |
| M.2 B3042 Slot | J4 | -- |

This page is intentionally left blank.

Chapter 3

Driver Installation

The information provided in this chapter includes:

- Intel® Chipset Software Installation Utility
- Graphics Driver Installation
- HD Audio Driver Installation
- LAN Driver Installation
- Intel® Management Engine Driver Installation

3.1 Introduction

This section describes the installation procedures for software and drivers. The software and drivers are included with the motherboard. The contents of this section include the following:

Note:

1. After installing your operating system, you must install the Intel® Chipset Software Installation Utility first before proceeding with the drivers installation.
 2. Drivers are supported under Microsoft Windows 10 64-bit (RS3/RS4/ RS5) and Server 2016 (RS1) only.
-

3.1 Intel® Chipset Software Installation Utility

1. Insert the disk enclosed in the package with the board. Click **Intel** on the left pane and then **Intel(R) Coffeelake Chipset Drivers** on the right pane.




2. Click **Intel(R) Chipset Software Installation Utility**.



3. When the *Welcome* screen to the Intel® Chipset Device Software appears, click **Next** to continue.
4. Accept the software license agreement and proceed with the installation process.
5. On the *Readme File Information* screen, click **Install** for installation.
6. When the driver is completely installed, restart the computer for changes to take effect.

3.2 HD Graphics Driver Installation


1. Click **Intel(R) Coffeelake Chipset Drivers** on the right pane.

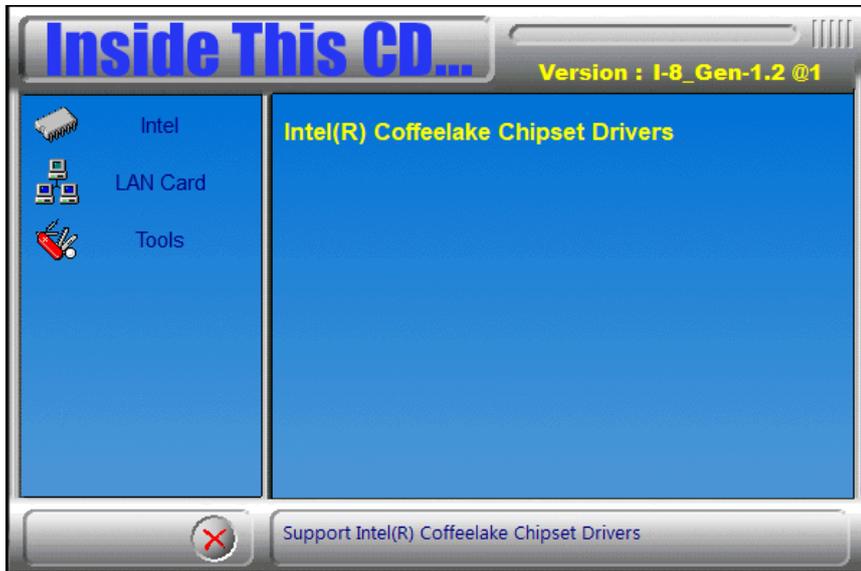

2. Click **Intel(R) HD Graphics Driver**.



3. When the *Welcome* screen appears, click **Next** to continue.

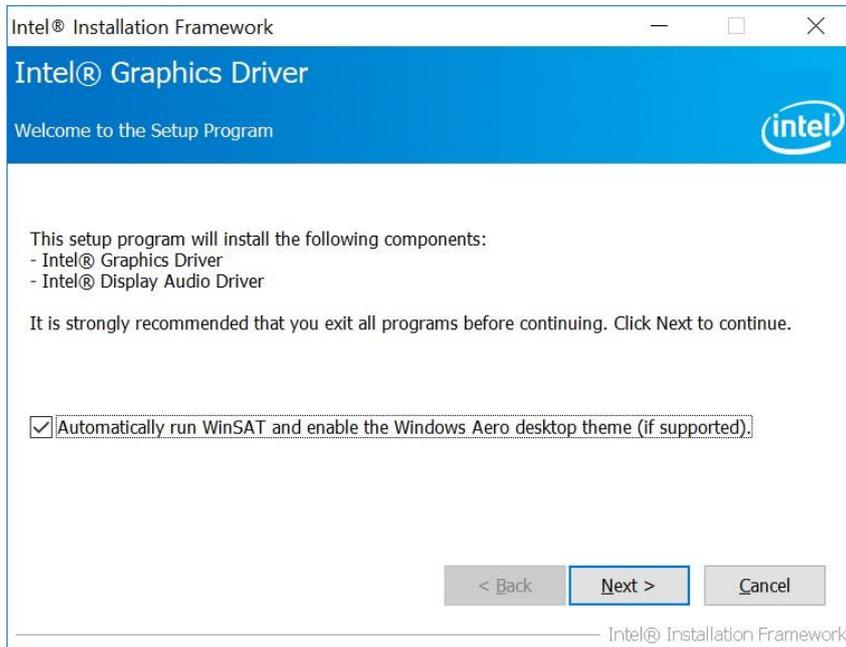


4. Accept the license agreement and click **Next**.
5. On the *Readme File Information* screen, click **Next** until the installation starts.
6. When the driver is completely installed, restart the computer for changes to take effect.

3.3 HD Audio Driver Installation

1. Click **Intel(R) Coffeelake Chipset Drivers** on the right pane.



2. Click **Realtek High Definition Audio Driver**.

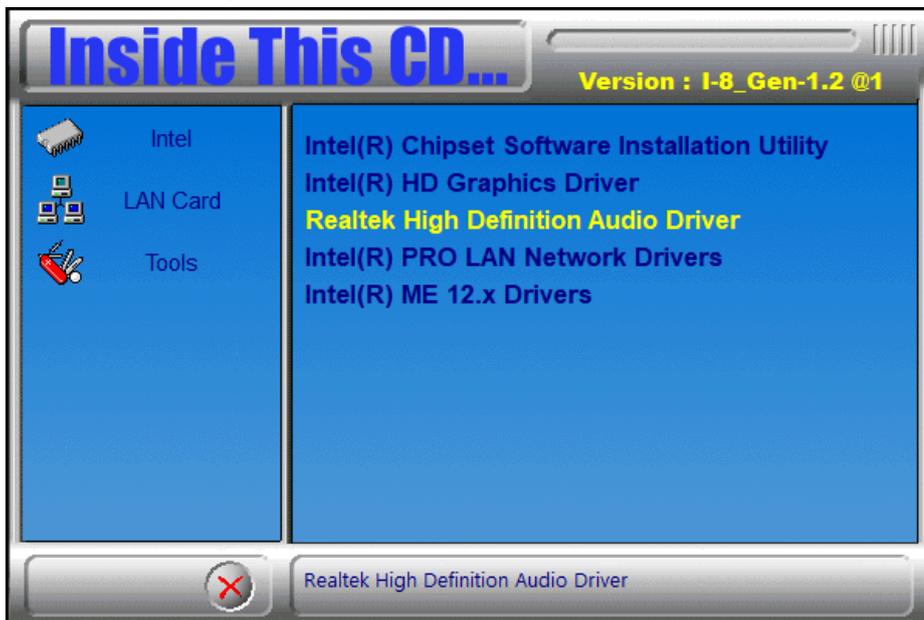

3. On the *Welcome* screen of the InstallShield Wizard, click **Next**.
4. Click **Next** until the installation starts.
5. When the driver is completely installed, restart the computer for changes to take effect.

3.4 LAN Driver Installation


1. Click **Intel(R) Coffeelake Chipset Drivers** on the right pane.




2. Click **Intel(R) PRO LAN Network Drivers**.



3. When the *Welcome* screen appears, click **Next**.

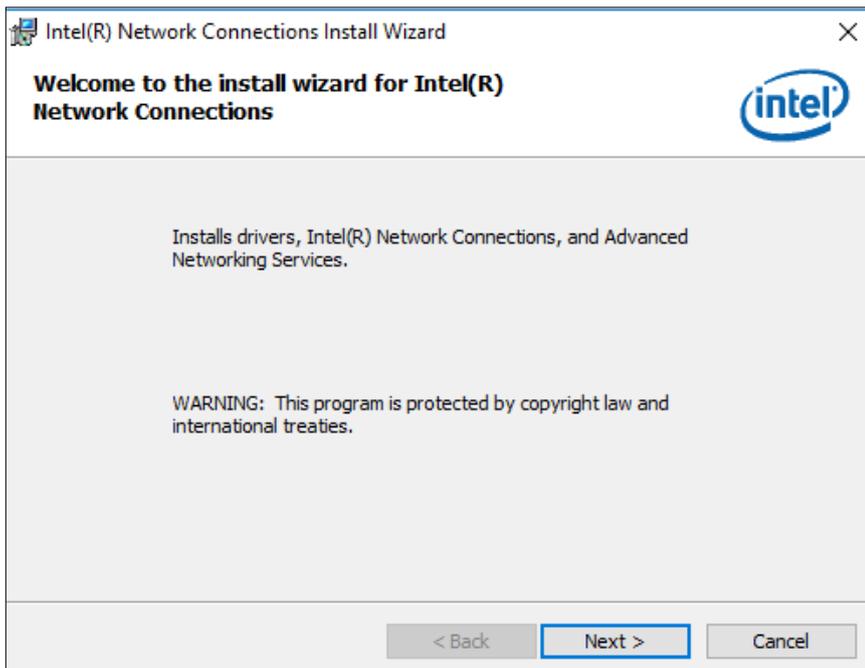


4. Accept the license agreement and click **Next**.
5. On the *Setup Options* screen, click the checkbox to select the desired driver(s) for installation. Then click **Next** to continue.

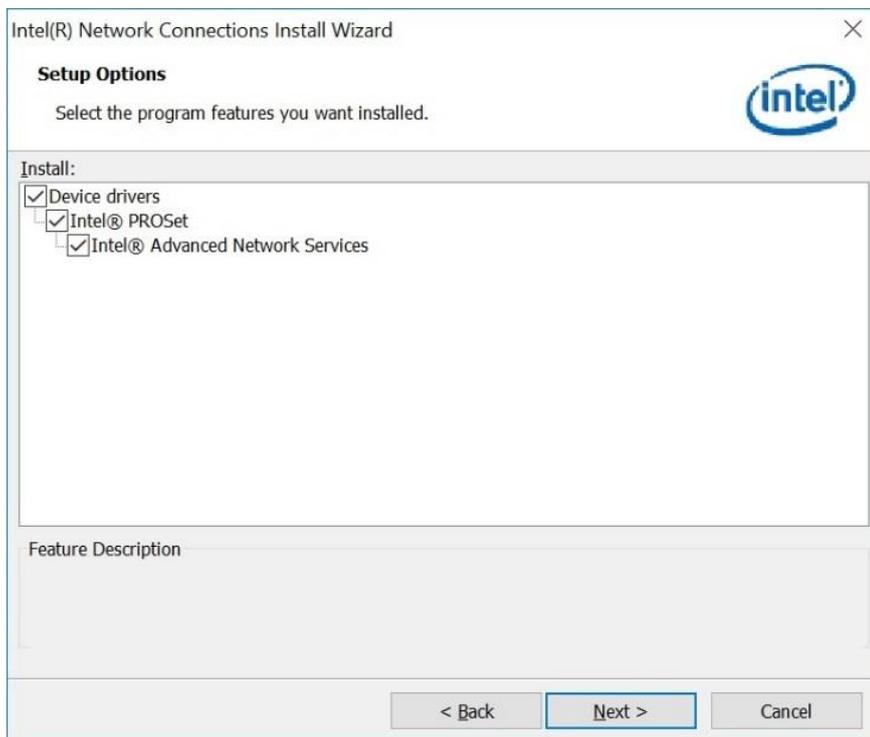

6. The wizard is ready for installation. Click **Install**.
7. As the installation is complete, restart the computer for changes to take effect.

3.5 Intel® Management Engine Drivers Installation

1. Click **Intel(R) Coffeelake Chipset Drivers** on the right pane.

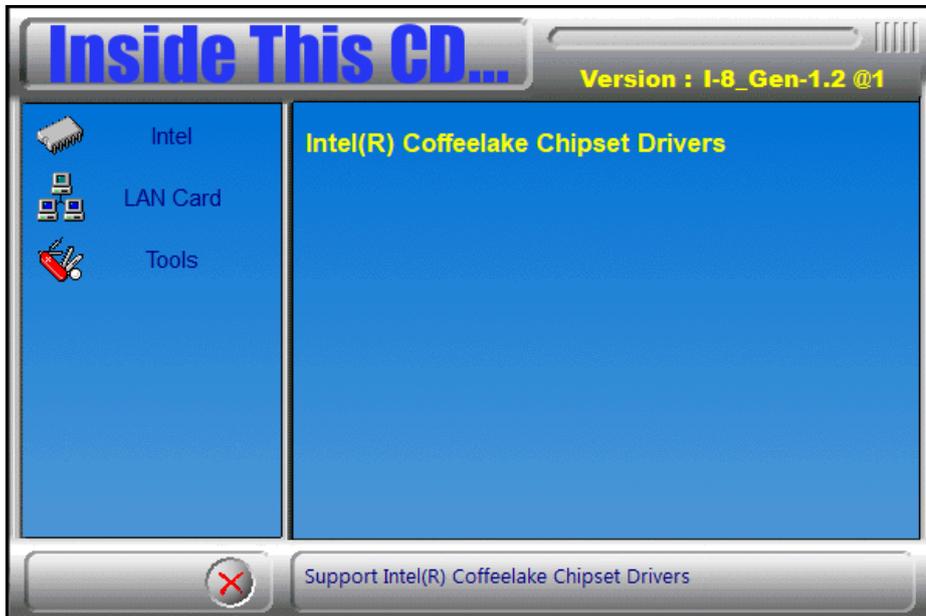


2. Click **Intel(R) ME 12.x Drivers**.



iBASE

3. When the *Welcome* screen appears, click **Next**.

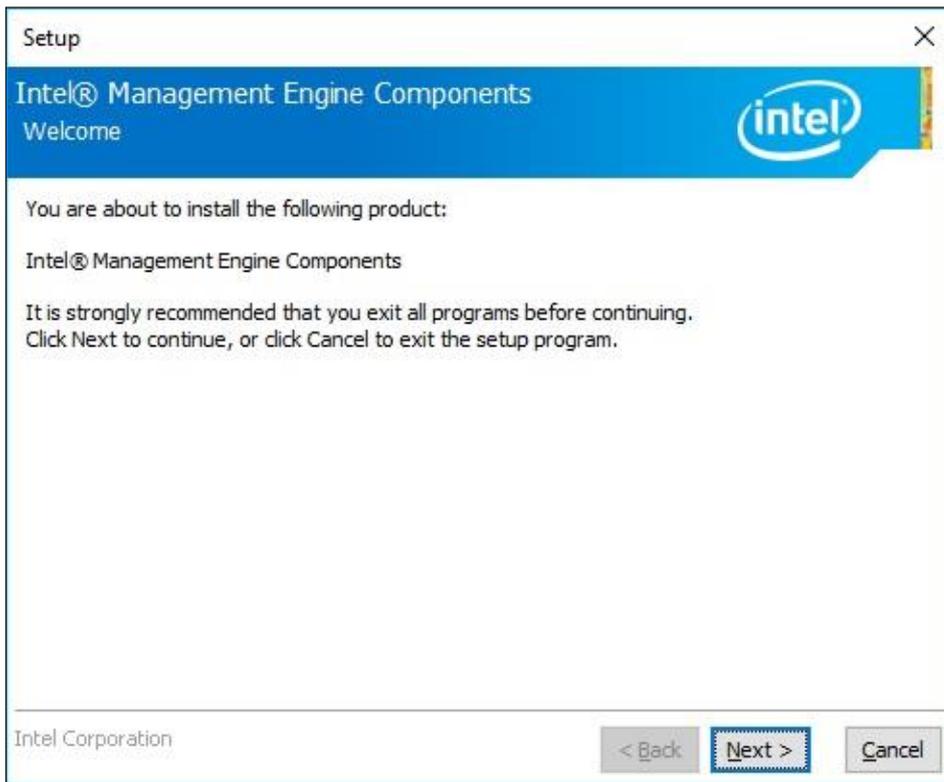

4. Accept the license agreement, choose a destination folder and click **Next** until the installation starts.
5. Restart the computer when installation is complete.

Chapter 4

BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

- Main Settings
- Advanced Settings
- Chipset Settings
- Security Settings
- Boot Settings
- Save & Exit

4.1 Introduction

The BIOS (Basic Input/Output System) installed in the ROM of your computer system supports Intel® processors. The BIOS provides critical low-level support for standard devices such as disk drives, serial ports and parallel ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

4.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Press the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. You can also press <F7> to call the pop-up Boot menu immediately.

If you still need to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again.

The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```


In general, press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help, and <Esc> to quit.

When you enter the BIOS Setup utility, the *Main Menu* screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Warning: It is strongly recommended that you avoid making any changes to the chipset defaults.

These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could make the system unstable and crash in some cases.

4.3 Main Settings

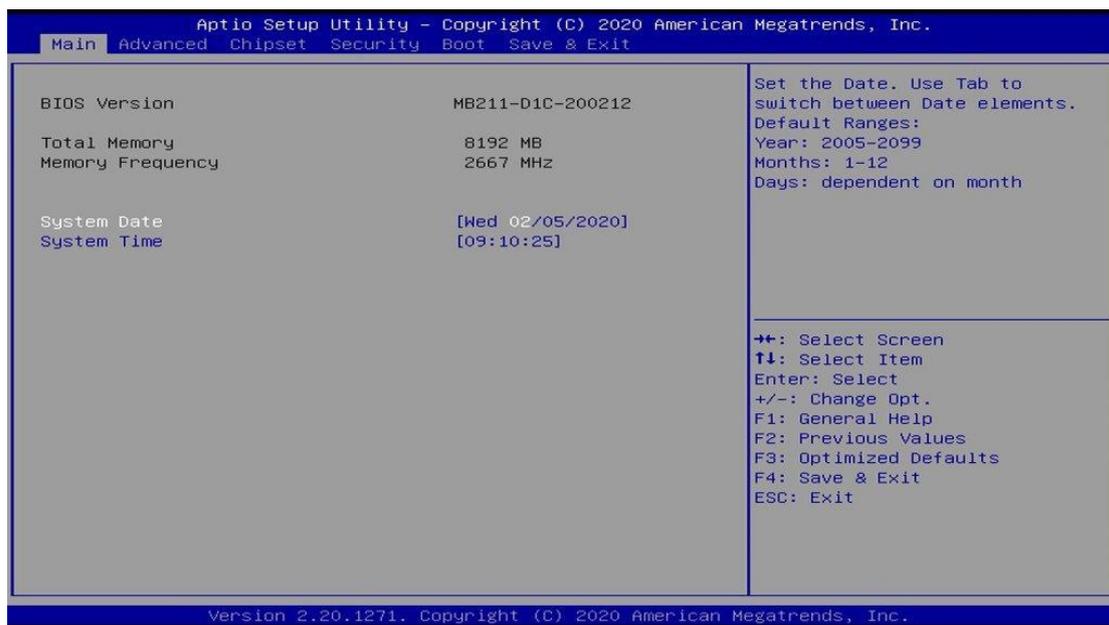

| BIOS Setting | Description |
|-----------------|--|
| System Language | Choose the system default language. |
| System Date | Sets the date. Use the <Tab> key to switch between the data elements. |
| System Time | Set the time. Use the <Tab> key to switch between the data elements. |

4.4 Advanced Settings

This section allows you to configure, improve your system and allows you to set up some system features according to your preference.



4.4.1 CPU Configuration




| BIOS Setting | Description |
|---------------------------------------|--|
| Intel (VMX) Virtualization Technology | When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. |
| Active Processor Cores | Number of cores to enable in each processor package. |
| AES | Enable/Disable AES (Advanced Encryption Standard) |
| Intel Trusted Execution Technology | Enables utilization of additional hardware capabilities provided by Intel (R) Trusted Execution Technology. Changes require a full power cycle to take effect. |

4.4.2 Power & Performance




| BIOS Setting | Description |
|--------------------------------|--|
| CPU – Power Management Control | CPU – Power Management Control Options |

4.4.3 PCH-FN Configuration

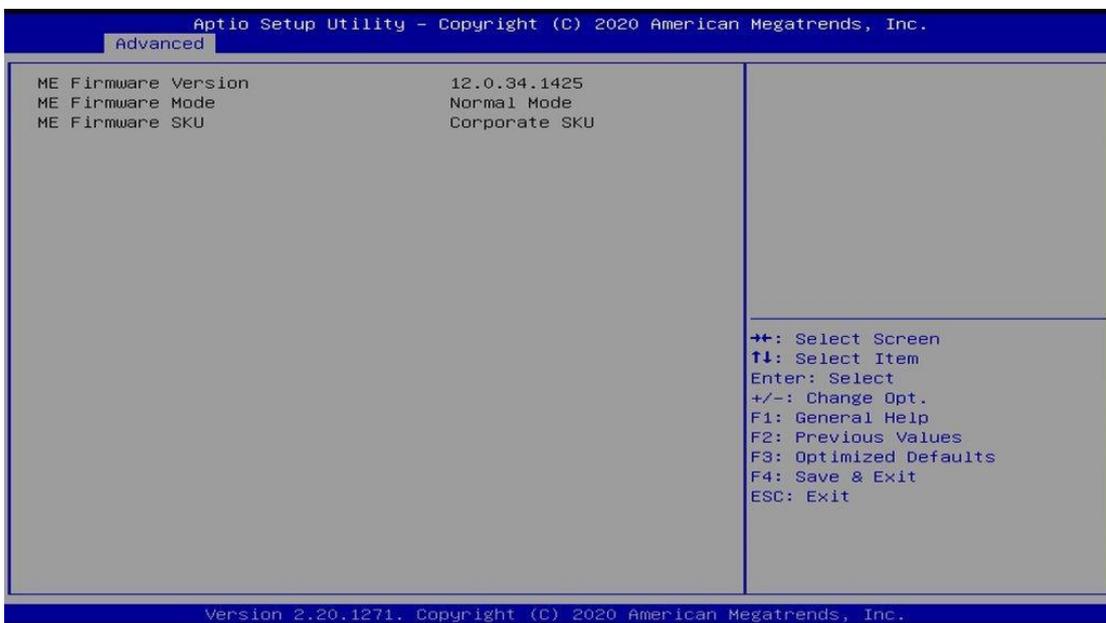

- Configure Management Engine Technology Parameters

4.4.4 ACPI Settings

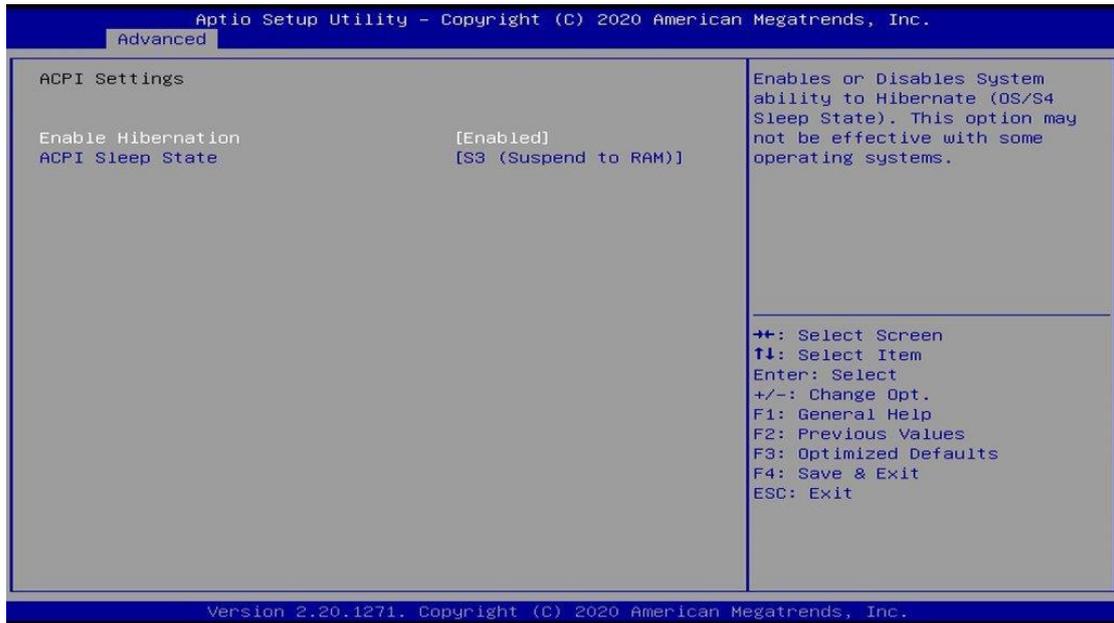

| BIOS Setting | Description |
|--------------------|---|
| Enable Hibernation | Enables / Disables the system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems. |
| ACPI Sleep State | Selects the highest ACPI sleep state for the system will enter when the SUSPEND button is pressed. Options: Suspend Disabled S3 (Suspend to RAM) |

4.4.5 F81966 Super IO Configuration



| BIOS Setting | Description |
|---------------------------|---|
| Serial Port Configuration | Sets parameters of Serial Ports. Enables / Disables the serial port and select an optimal setting for the Super IO device. |

4.4.6 Hardware Monitor



| BIOS Setting | Description |
|------------------------------|---|
| CPU Smart Fan Control | Enables / Disables the CPU smart fan feature. Options: Disabled / 50°C / 60°C / 70°C / 80°C / 90°C |
| System Fan Smart Fan Control | Enables / Disables the system smart fan feature. Options: Disabled / 50°C / 60°C / 70°C / 80°C / 90°C |
| Temperatures / Voltages | These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status. |

4.4.7 USB Configuration



| BIOS Setting | Description |
|---------------------------------|--|
| Legacy USB Support | Enables Legacy USB support. <ul style="list-style-type: none"> • Auto disables legacy support if there is no USB device connected. • Disable keeps USB devices available only for EFI applications. |
| XHCI Hand-off | This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver. |
| USB Mass Storage Driver Support | Enables / Disables the support for USB mass storage driver. |
| USB Transfer time-out | The time-out value for control, bulk, and Interrupt transfers. Options: 1 sec / 5 sec / 10 sec / 20 sec |
| Device reset time-out | Seconds of delaying execution of start unit command to USB mass storage device. Options: 10 sec / 20 sec / 30 sec / 40 sec |
| Device power-up delay | The maximum time the device will take before it properly reports itself to the Host Controller. Auto uses default value for a Root port it is 100ms. But for a Hub port, the delay is taken from Hub descriptor. Options: Auto / Manual |

4.4.8 CSM Configuration



| BIOS Setting | Description |
|--------------|---|
| CSM Support | Enables / Disables CSM support. |
| Network | Controls the execution of UEFI and Legacy Network OpROM. Options: Do not launch UEFI, Legacy |

4.5 Chipset Settings




| BIOS Setting | Description |
|---------------------------------|------------------------------|
| System Agent (SA) Configuration | System Agent (SA) parameters |
| PCH-IO Configuration | PCH parameters |

4.5.1 System Agent (SA) Configuration



| BIOS Setting | Description |
|------------------------|--|
| VT-d | Checks if VT-d function on MCH is supported. |
| Graphics Configuration | Configures the graphics settings. |

4.5.1.1. Graphics Configuration

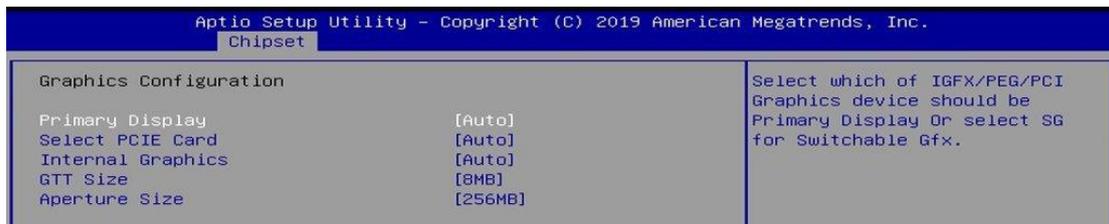


| BIOS Setting | Description |
|-------------------|---|
| Primary Display | Selects which of IGFX/PEG/PCI graphics device should be primary display, or selects SG for switchable Gfx. |
| Select PCIE Card | Select the card used on the platform. Auto: Skip GPIO based Power Enable to dGPU. Elk Creek 4: DGPU Power Enable = ActiveLow. PEG Eval: DGPU Power Enable = ActiveHigh |
| Internal Graphics | Keep IGFX enabled based on the setup options. |
| GTT Size | Sets the GTT size as 2 MB, 4 MB, or 8 MB. |
| Aperture Size | Select the aperture size. Note: Above 4 GB MMIO BIOS assignment is automatically enabled when selecting 2048 MB aperture. To use this feature, disable CSM support. |

4.5.2 PCH-IO Configuration




| BIOS Setting | Description |
|----------------------------|---|
| SATA and RST Configuration | Configures SATA devices. |
| PCH LAN Controller | Enables / Disables onboard NIC. |
| Wake on LAN | Enables / Disables integrated LAN to wake the system. |

4.6 Security Settings

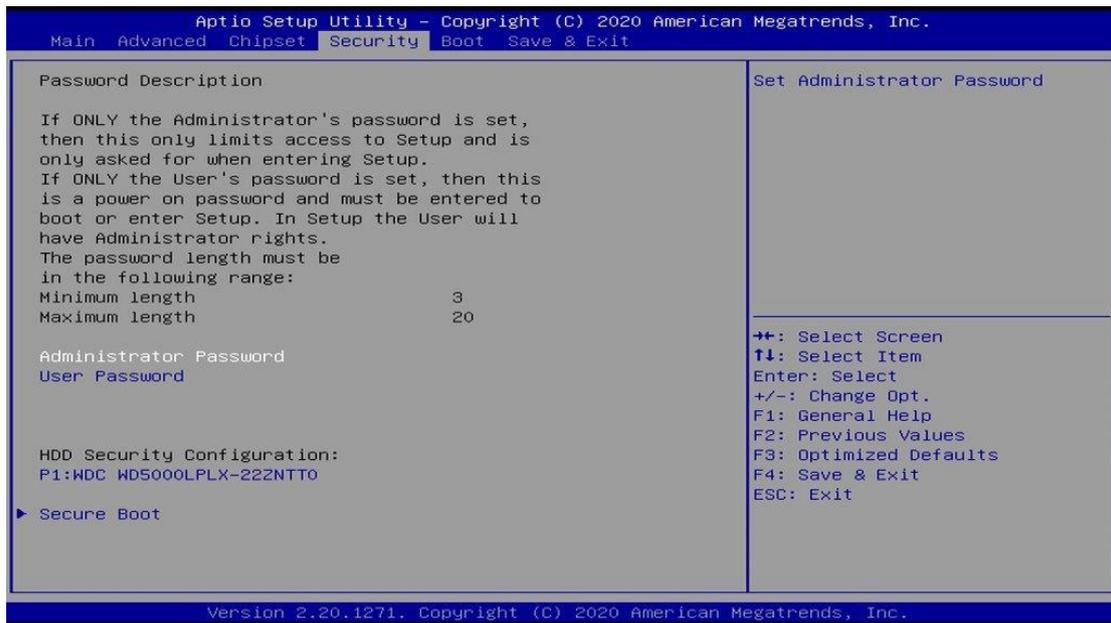

| BIOS Setting | Description |
|----------------------------|--|
| Administrator Password | Sets an administrator password for the setup utility. |
| User Password | Sets a user password. |
| HDD Security Configuration | HDD Security Configuration for selected drive |
| Secure Boot | Secure Boot feature is Active if Secure Boot is Enabled. Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset. |

4.7 Boot Settings

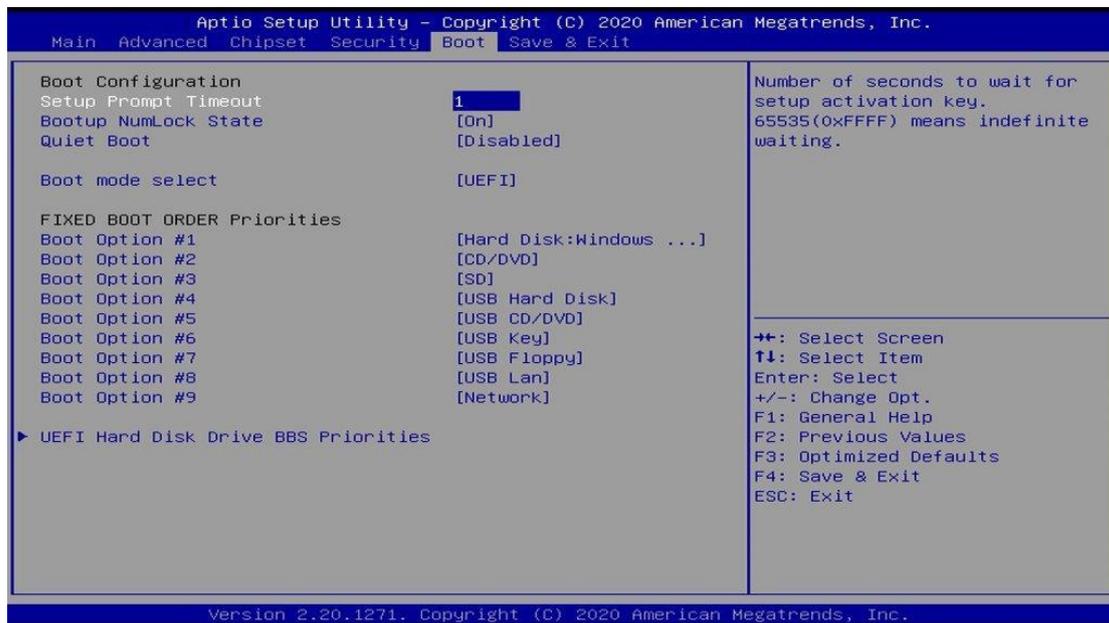

| BIOS Setting | Description |
|-------------------------------------|---|
| Setup Prompt Timeout | Number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting. |
| Bootup NumLock State | Selects the keyboard NumLock state. |
| Quiet Boot | Enables / Disables Quiet Boot option. |
| Boot mode select | Selects a Boot mode, Legacy / UEFI. |
| Fixed Boot Order Priorities | Sets the system boot order. |
| UEFI Hard Disk Drive BBS Priorities | Specifies the Boot Device Priority sequence from available UEFI Hard Disk Drives |

4.8 Save & Exit Settings



| BIOS Setting | Description |
|---------------------------|---|
| Save Changes and Exit | Exits system setup after saving the changes. |
| Discard Changes and Exit | Exits system setup without saving any changes. |
| Save Changes and Reset | Resets the system after saving the changes. |
| Discard Changes and Reset | Resets system setup without saving any changes. |
| Save Changes | Saves changes done so far to any of the setup options. |
| Discard Changes | Discards changes done so far to any of the setup options. |
| Restore Defaults | Restores / Loads defaults values for all the setup options. |
| Save as User Defaults | Saves the changes done so far as user defaults. |
| Restore User Defaults | Restores the user defaults to all the setup options. |

Appendix

This section provides the mapping addresses of peripheral devices and the sample code of watchdog timer configuration.

- I/O Port Address Map
- Interrupt Request Lines (IRQ)
- Watchdog Timer Configuration

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

| Address | Device Description |
|-----------------------|-----------------------------------|
| 0x00000000-0x00000CF7 | PCI Express Root Complex |
| 0x00000020-0x00000021 | Programmable interrupt controller |
| 0x00000024-0x00000025 | Programmable interrupt controller |
| 0x00000028-0x00000029 | Programmable interrupt controller |
| 0x0000002C-0x0000002D | Programmable interrupt controller |
| 0x0000002E-0x0000002F | Motherboard resources |
| 0x00000030-0x00000031 | Programmable interrupt controller |
| 0x00000034-0x00000035 | Programmable interrupt controller |
| 0x00000038-0x00000039 | Programmable interrupt controller |
| 0x0000003C-0x0000003D | Programmable interrupt controller |
| 0x00000040-0x00000043 | System timer |
| 0x0000004E-0x0000004F | Motherboard resources |
| 0x00000050-0x00000053 | System timer |
| 0x00000060-0x00000060 | Standard PS/2 Keyboard |
| 0x00000061-0x00000061 | Motherboard resources |
| 0x00000063-0x00000063 | Motherboard resources |
| 0x00000064-0x00000064 | Standard PS/2 Keyboard |
| 0x00000065-0x00000065 | Motherboard resources |
| 0x00000067-0x00000067 | Motherboard resources |
| 0x00000070-0x00000070 | Motherboard resources |
| 0x00000080-0x00000080 | Motherboard resources |
| 0x00000092-0x00000092 | Motherboard resources |
| 0x000000A0-0x000000A1 | Programmable interrupt controller |
| 0x000000A4-0x000000A5 | Programmable interrupt controller |
| 0x000000A8-0x000000A9 | Programmable interrupt controller |
| 0x000000AC-0x000000AD | Programmable interrupt controller |
| 0x000000B0-0x000000B1 | Programmable interrupt controller |
| 0x000000B2-0x000000B3 | Motherboard resources |
| 0x000000B4-0x000000B5 | Programmable interrupt controller |
| 0x000000B8-0x000000B9 | Programmable interrupt controller |
| 0x000000BC-0x000000BD | Programmable interrupt controller |

| Address | Device Description |
|-----------------------|--|
| 0x000000F0-0x000000F0 | Numeric data processor |
| 0x000002E8-0x000002EF | Communications Port (COM4) |
| 0x000002D8-0x000002FF | Communications Port (COM2) |
| 0x000003E8-0x000003EF | Communications Port (COM3) |
| 0x000003F8-0x000003FF | Communications Port (COM1) |
| 0x000004D0-0x000004D1 | Programmable interrupt controller |
| 0x00000680-0x0000069F | Motherboard resources |
| 0x00000A00-0x00000A0F | Motherboard resources |
| 0x00000A10-0x00000A1F | Motherboard resources |
| 0x00000A10-0x00000A1F | Motherboard resources |
| 0x00000D00-0x0000FFFF | PCI Express Root Complex |
| 0x0000164E-0x0000164F | Motherboard resources |
| 0x00001800-0x000018FE | Motherboard resources |
| 0x00001854-0x00001857 | Motherboard resources |
| 0x00002000-0x000020FE | Motherboard resources |
| 0x00003000-0x00003FFF | Intel(R) PCI Express Root Port #12 - A333 |
| 0x00004000-0x00004FFF | Intel(R) PCI Express Root Port #11 - A332 |
| 0x00005000-0x00005FFF | Intel(R) PCI Express Root Port #10 - A331 |
| 0x00006000-0x00006FFF | PCI-to-PCI Bridge |
| 0x00006000-0x00006FFF | PCI Standard RAM controller |
| 0x00006000-0x00006FFF | Intel(R) PCI Express Root Port #5 - A33C |
| 0x00006010-0x0000601F | PCI Standard RAM controller |
| 0x00007000-0x0000703F | Intel(R) UHD Graphics 630 |
| 0x00007060-0x0000707F | Standard SATA AHCI Controller |
| 0x00007080-0x00007083 | Standard SATA AHCI Controller |
| 0x00007090-0x00007097 | Standard SATA AHCI Controller |
| 0x0000EFA0-0x0000EFBF | Intel(R) SMBus - A323 |
| 0x0000FFF8-0x0000FFFF | Intel(R) Active Management Technology - SOL (COM5) |

B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

| Level | Function |
|-------------------|--|
| IRQ 0 | System timer |
| IRQ 1 | Standard PS/2 Keyboard |
| IRQ 3 | Communications Port (COM2) |
| IRQ 4 | Communications Port (COM1) |
| IRQ 5 | Communications Port (COM3) |
| IRQ 7 | Communications Port (COM4) |
| IRQ 11 | PCI Standard RAM Controller |
| IRQ 11 | Intel(R) Thermal Subsystem - A379 |
| IRQ 11 | Intel(R) SMBus - A323 |
| IRQ 12 | Microsoft PS/2 Mouse |
| IRQ 13 | Numeric data processor |
| IRQ 14 | Intel(R) Serial IO GPIO Host Controller - INT3450 |
| IRQ 16 | High Definition Audio Controller |
| IRQ 19 | Intel(R) Active Management Technology - SOL (COM5) |
| IRQ 55~ IRQ 511 | Microsoft ACPI-Compliant System |
| IRQ 4294967260 | Intel(R) Management Engine Interface |
| IRQ 4294967261-70 | Intel(R) I210 Gigabit Network Connection #3 |
| IRQ 4294967271-80 | Intel(R) I210 Gigabit Network Connection #2 |
| IRQ 4294967281-90 | Intel(R) I210 Gigabit Network Connection |
| IRQ 4294967291 | Intel(R) USB 3.1 eXtensible Host Controller - 1.10 (Microsoft) |
| IRQ 4294967292 | Intel(R) UHD Graphics 630 |
| IRQ 4294967293 | Intel(R) Ethernet Connection (7) I219-LM |
| IRQ 4294967294 | Standard SATA AHCI Controller |

C. Watchdog Timer Configuration

The Watchdog Timer (WDT) is used to generate a variety of output signals after a user programmable count. The WDT is suitable for the use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven.

Under normal circumstance, you will need to restart the WDT at regular intervals before the timer counts to zero.

Sample Code:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "F81966.H"
//-----
int main (int argc, char *argv[]);
void EnableWDT(int);
void DisableWDT(void);
//-----
int main (int argc, char *argv[])
{
    unsigned char bBuf;
    unsigned char bTime;
    char **endptr;

    char SIO;

    printf("Fintek 81966 watch dog program\n");
    SIO = Init_F81966();
    if (SIO == 0)
    {
        printf("Can not detect Fintek 81966, program abort.\n");
        return(1);
    }
    //if (SIO == 0)

    if (argc != 2)
    {
        printf(" Parameter incorrect!!\n");
        return (1);
    }

    bTime = strtol (argv[1], endptr, 10);
    printf("System will reset after %d seconds\n", bTime);

    if (bTime)
    { EnableWDT(bTime); }
    else
    { DisableWDT(); }
    return 0;
}
//-----
void EnableWDT(int interval)
{
    unsigned char bBuf;
```

```

bBuf = Get_F81966_Reg(0x2B);
bBuf &= (~0x20);
Set_F81966_Reg(0x2B, bBuf); //Enable WDTO

Set_F81966_LD(0x07); //switch to logic device 7
Set_F81966_Reg(0x30, 0x01); //enable timer

bBuf = Get_F81966_Reg(0xF5);
bBuf &= (~0x0F);
bBuf |= 0x52;
Set_F81966_Reg(0xF5, bBuf); //count mode is second

Set_F81966_Reg(0xF6, interval); //set timer

bBuf = Get_F81966_Reg(0xFA);
bBuf |= 0x01;
Set_F81966_Reg(0xFA, bBuf); //enable WDTO output

bBuf = Get_F81966_Reg(0xF5);
bBuf |= 0x20;
Set_F81966_Reg(0xF5, bBuf); //start counting
}
//-----
void DisableWDT(void)
{
    unsigned char bBuf;

    Set_F81966_LD(0x07); //switch to logic device 7

    bBuf = Get_F81966_Reg(0xFA);
    bBuf &= ~0x01;
    Set_F81966_Reg(0xFA, bBuf); //disable WDTO output

    bBuf = Get_F81966_Reg(0xF5);
    bBuf &= ~0x20;
    bBuf |= 0x40;
    Set_F81966_Reg(0xF5, bBuf); //disable WDT
}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "F81966.H"
#include <dos.h>
//-----
unsigned int F81966_BASE;
void Unlock_F81966 (void);
void Lock_F81966 (void);
//-----
unsigned int Init_F81966(void)
{
    unsigned int result;
    unsigned char ucDid;

    F81966_BASE = 0x4E;
    result = F81966_BASE;

    ucDid = Get_F81966_Reg(0x20);
    if (ucDid == 0x07) //Fintek 81966
    { goto Init_Finish; }

    F81966_BASE = 0x2E;
    result = F81966_BASE;

    ucDid = Get_F81966_Reg(0x20);
    if (ucDid == 0x07) //Fintek 81966
    { goto Init_Finish; }
}

```

```

        F81966_BASE = 0x00;
        result = F81966_BASE;

Init_Finish:
        return (result);
}
//-----
void Unlock_F81966 (void)
{
        outportb(F81966_INDEX_PORT, F81966_UNLOCK);
        outportb(F81966_INDEX_PORT, F81966_UNLOCK);
}
//-----
void Lock_F81966 (void)
{
        outportb(F81966_INDEX_PORT, F81966_LOCK);
}
//-----
void Set_F81966_LD( unsigned char LD)
{
        Unlock_F81966();
        outportb(F81966_INDEX_PORT, F81966_REG_LD);
        outportb(F81966_DATA_PORT, LD);
        Lock_F81966();
}
//-----
void Set_F81966_Reg( unsigned char REG, unsigned char DATA)
{
        Unlock_F81966();
        outportb(F81966_INDEX_PORT, REG);
        outportb(F81966_DATA_PORT, DATA);
        Lock_F81966();
}
//-----
unsigned char Get_F81966_Reg(unsigned char REG)
{
        unsigned char Result;
        Unlock_F81966();
        outportb(F81966_INDEX_PORT, REG);
        Result = inportb(F81966_DATA_PORT);
        Lock_F81966();
        return Result;
}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#ifndef F81966_H
#define F81966_H      1
//-----
#define F81966_INDEX_PORT      (F81966_BASE)
#define F81966_DATA_PORT (F81966_BASE+1)
//-----
#define F81966_REG_LD      0x07
//-----
#define F81966_UNLOCK      0x87
#define F81966_LOCK 0xAA
//-----
unsigned int Init_F81966(void);
void Set_F81966_LD( unsigned char);
void Set_F81966_Reg( unsigned char,
unsigned char); unsigned char
Get_F81966_Reg( unsigned char);
//-----
#endif // F81966_H

```