

CSB200-897

User Manual

2015 Aug Ver. A1

Copyright © 2014 IBASE Technology Inc. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of IBASE Technology INC. ("IBASE").

Products and corporate names mentioned in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used for identification purposes only. All trademarks are the property of their respective owners.

Every effort has been made to ensure that the contents of this manual are correct and up to date. However, the manufacturer makes no guarantee regarding the accuracy of its contents, and reserves the right to make changes without prior notice.

Table of Contents

Setting up your system.....	3
Care during use.....	4
Acknowledgments	4
CHAPTER 1 INTRODUCTION	6
1.1 General Description.....	6
1.2 System Specifications	7
1.2.1 Hardware Specifications	7
1.2.2 Dimensions	9
1.2.3 I/O View	10
1.3 Exploded View of the CSB200-897 Assembly	11
1.3.1 Parts Description	11
1.4 Packing List	12
1.4.1 Optional Items	12
CHAPTER 2 MOTHERBOARD INTRODUCTION	13
2.1 Introduction.....	13
2.2 Board Dimensions	15
2.3 Setting the Jumpers.....	16
2.4 Jumper Locations on IB897	16
CHAPTER 3 BIOS SETUP	34
CHAPTER 4 DRIVERS INSTALLATION	53
4.1 Intel Chipset Software Installation Utility	53
4.2 VGA Drivers Installation.....	55
4.3 Realtek HD Audio Driver Installation	56
4.4 Intel Trusted Execution Engine Installation	57
Appendix	59
Wall Mounting Requirements.....	60
Selecting the Location	60

Safety Information

Your CSB200-897 is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important that you read the following safety instructions

Setting up your system

- Read and follow all instructions in the documentation before you operate your system.
- Do not use this product near water.
- Set up the system on a stable surface. Do not secure the system on any unstable plane.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- Slots and openings on the chassis are for ventilation. Do not block or cover these openings. Make sure you leave plenty of space around the system for ventilation. ***Never insert objects of any kind into the ventilation openings.***
- This system should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Use this product in environments with ambient temperatures between 0°C and 40°C.
- If you use an extension cord, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.
- DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 80° C (176° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill water or any other liquids on your system.
- When the system is turned off, a small amount of electrical current still flows. Always unplug all power, and network cables from the power outlets before cleaning the system.
- If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not function properly even if you follow the operating instructions.
 - The system was dropped or the cabinet is damaged.

Lithium-Ion Battery Warning

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

NO DISASSEMBLY

The warranty does not apply to the products that have been disassembled by users

WARNING

HAZARDOUS MOVING PARTS

KEEP FINGERS AND OTHER BODY PARTS AWAY

Acknowledgments

- AMI is a registered trademark of AMI Software International, Inc.
- AMD and ATI are registered trademarks of AMD Corporation.
- Microsoft Windows is a registered trademark of Microsoft Corporation.
- FINTEK is a registered trademark of FINTEK Electronics Corporation.
- REALTEK is a registered trademark of REALTEK Electronics Corporation.
- All other product names or trademarks are properties of their respective owners.

CHAPTER 1 INTRODUCTION

1.1 General Description

The fanless CSB200-897 system comes with the IB897 3.5-inch SBC and integrates the Intel® Atom™ E3845 processor that featuring 22nm microarchitecture and 3-D Tri-Gate transistors. With unparalleled reliability, the 1.91GHz processor allows the CSB200-897 to operate in wide temperatures at -30°C to +60°C in harsh industrial environments for 24/7 operation. The CSB200-897 is ideal for IOT (Internet of Things), factory automation, In-vehicle and other rugged applications that could utilize its 12V to 24V DC wide-range power input.

Incorporating the E3845 system-on-chip (SoC), the CSB200-897 comes on board with two pieces of 2GB DDR3L-133 SO-DIMM memory. The maximum system memory capacity is 8GB. Moreover, it comes with a variety of functional interface at the rear panel including one USB 2.0, one USB 3.0, DisplayPort, CRT VGA, two serial ports, two Gigabit LAN, and one DC jack connector or a terminal block for 12V~24V DC input.

Measuring 172mm(w) by 112mm(d) by 52mm(h), the black CSB200-897 unit comes with a wall mount kit and optional 60W power adaptor. The model is currently available with either a 2.5-inch 320GB SATA HDD or 64GB industrial grade SSD. Expansion is provided by two Mini PCI-E slots. All units feature IBASE's iSMART green technology for power on/off scheduling and power resume functions.



1.2 System Specifications

1.2.1 Hardware Specifications


Engineer Specifications

Product Name	CSB200-897 CSB200-897-IT
Motherboard	IB897
CPU type	Intel® Atom™ QC E3845 [TDP=10W] (IB897-I45) Intel® Atom™ DC E3827 [TDP=8W] (IB897-I27)
Chipset	Integrated in SoC
Memory	Intel® Atom™ E3800 SoC processor integrated memory controller - DDR3L (1.35V) @1600 MHz , SO-DIMM [204-pin horizontal type] x 2 - Max. 8GB , Non-ECC *memory module with heatsink* [optional]
Storage	1 x 2.5" SATA HDD 2.5" 320GB 5400RPM Toshiba MQ01ABF032 HDD
Front Panel I/O	- 1 x HDD LED - 1 x PWR LED - 1 x RST Button - 1 x ON/OFF Button - 2 x USB2.0 ports - 1 x Line-out port - 1 x MIC-in port 2 x DB9 broken hole [reserved]
Rear Panel I/O	2 x Antenna reserved on real panel 1 x COM Port [thru pin header] 1 x DB15 for VGA port [thru pin header] 1 x 12V~24V DC-in (Terminal block 3 pins) 1 x DC jack with lock (share Terminal 3 pins space) 1 x DB9 for COM#1(RS232/422/485, select from BIOS) 1 x USB 3.0 port 1 x USB2.0 port 2 x RJ-45 GbE Connector


	1 x Display Port
Power Adaptor [optional]	DPS-60PBA-A00 60W Power Adapter Input Voltage: 90~264V Input Frequency: 47~63Hz Output Voltage: 12V/5A
Mounting	Desktop or wall mount
Chassis Material	Aluminum & Steel
Chassis Color	Black
External dimensions	172 (W) x ~111.6 (D) x 52 (H) mm
Operating Temperature	-30°C~60°C (22°F~140°F) [with 2.5" SSD] -10°C~50°C (14°F~122°F) [with 2.5" HDD]
Storage Temperature	-20°C~80°C (-4°F~176°F)
Relative Humidity	5%~90%@45°C (non-condensing)
Vibration	Operating : 0.25Grms / 5~500Hz Non-operating : 1Grms / 5~500Hz
Shock	Operating : 20G / 11ms Non-operating : 40G / 11ms
Certification	CE / LVD / FCC / CCC / UL-CB
Regulation	RoHS 2.0
Eup/Erp function	N/A

·This specification is subject to change without prior notice.


1.2.2 Dimensions

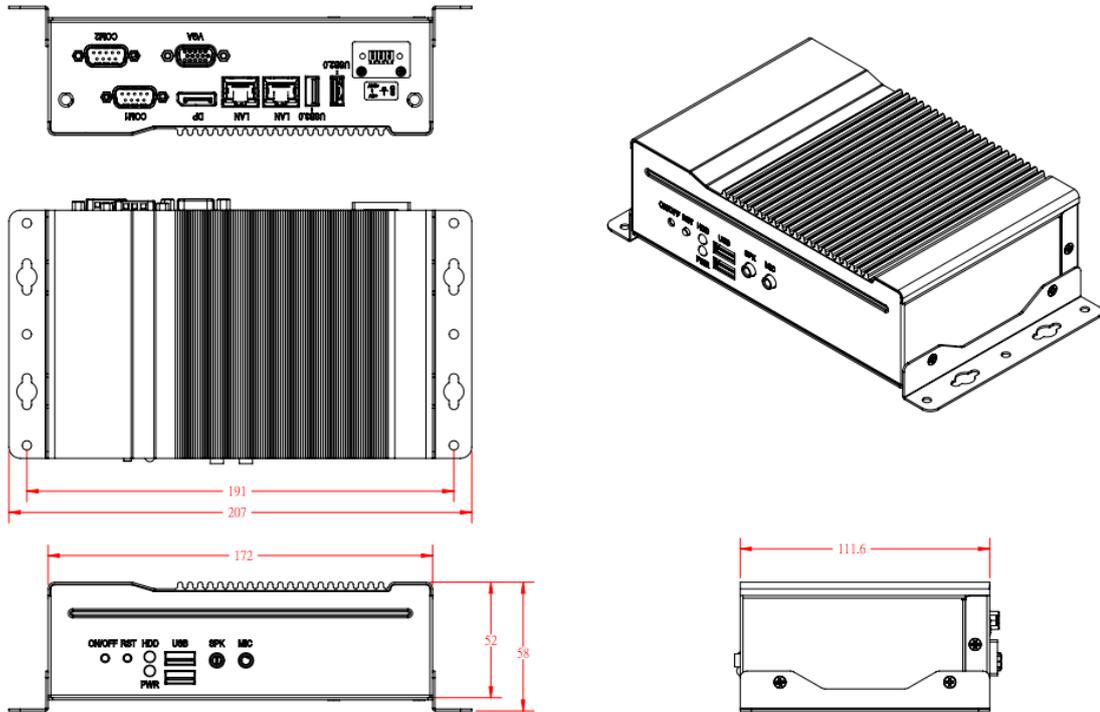

1.2.3 I/O View

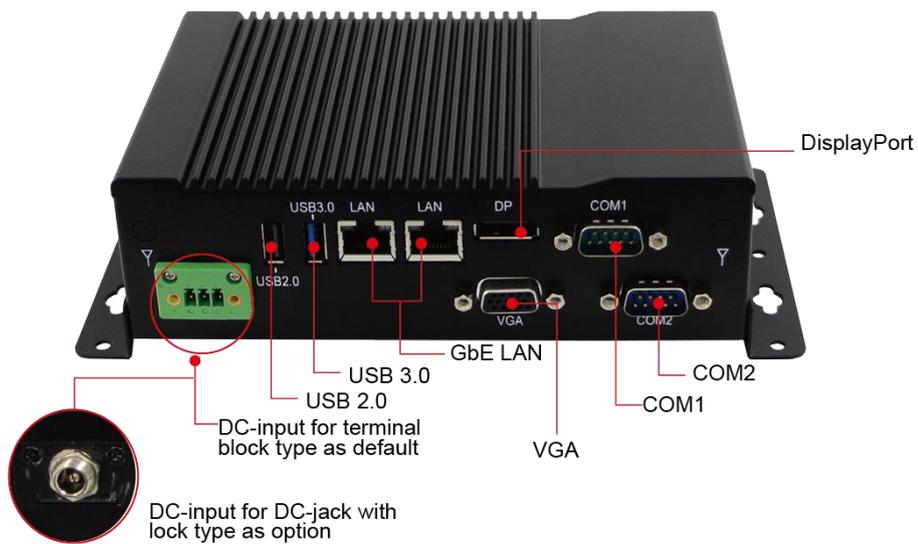

1.3 Exploded View of the CSB200-897 Assembly

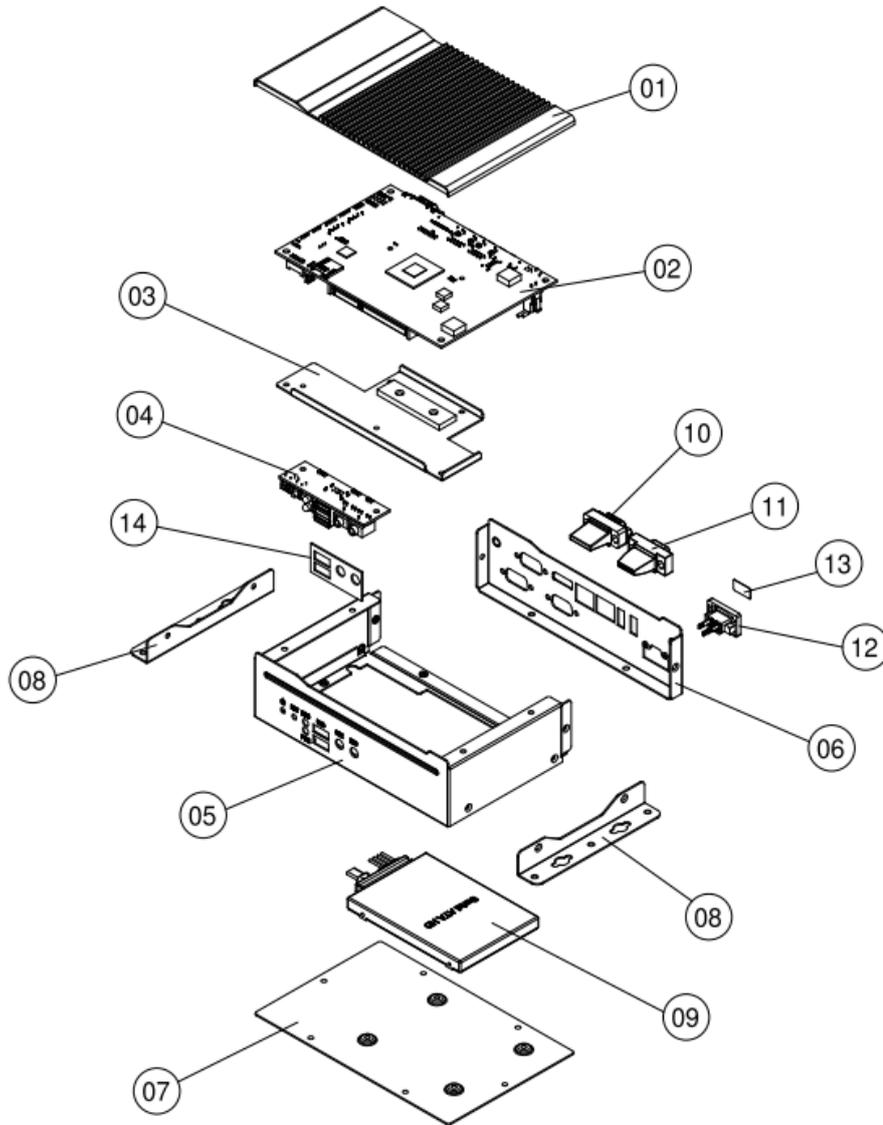



1.3.1 Parts Description

Part No.	Description	Part No.	Description
1	CSB200-897 Heatsink	2	DIP PCBA, IB897
3	Bracket for easier assembly	4	DIP PCBA, ID737A
5	BASE	6	CSB200-897_Front
7	Bottom side BASE	8	Wall mount bracket
9	2.5" HDD	10	COM port connector
11	VGA connector	12	Power input connector
13	Sticker_12V~24V	14	Gasket

1.4 Packing List

Item No.	Description	Qty
1	Driver CD	1
2	User manual	1
3	Wall mount kit	2

1.4.1 Optional Items

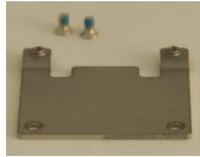WiFi Solution	Description	
WiFi module	WIRELESS;PCI-E MINI CARD 802.11B/G/N [AW-NE238H] (A008WLAWNE238H000P)	
External Antenna	WiFi Antenna (A055RFA02C2M20800P)	
Internal cable-1/2	From Wifi module to Rear/Front panel (A055RFA0000021000P/A055RFA0000032000P)	
Bracket	MPCIE-EXT V-B1 Bracket, RoHS; Extend Half to Full size. (SC2MPCIEEXT0B1100P)	
3G Solution	Description	
ZU 202	Wireless; 3.75G UMTS/HSPA [ZU202] RoHS (A008WIRELESS00520P)	
ZU 200	Wireless; 3.75G UMTS/HSPA & GPS Module [ZU200] RoHS (A008WIRELESS00510P)	
Cable	Cable; Antenna-2 30CM P 2pcs (C501ANT0200300000P)	
Antenna	Antenna; 3G, P, 2pcs (A055ANT0921Q2P000P)	
Power kit	Description	
Power Adaptor	P/S; ADAPTER 60W 12V 2 PIN bare wire type, [DPS-60PBA-A00] RoHS (A005PS060W0702000P)	
Power Cord	PW CORD; Chinese/American/Japan 3PIN 10A (A030PCAM040100000P)	

CHAPTER 2 MOTHERBOARD INTRODUCTION

2.1 Introduction

The IB897 is a 3.5-inch single board computer based on the Intel® Atom™ E3800 series SoC processors.

The IB897 platform is wide temperature for low-power and high-performance designs in a broad range of markets including Industrial Control & Automation, Digital Signage, Thin Client, Electronic Gaming Machines, and SMB storage appliances.

IB897 Features:


- Onboard Intel® Atom™ E3845/E3827 SoC 1.91GHz / 1.75GHz
- Two DDR3L SO-DIMM, 1333 MHz, Max. 8GB memory
- Integrated graphics for VGA, DisplayPort and 24 bit dual channel LVDS
- 2 x SATA II connector
- 2x COM port connector
- 2 x Mini-PCIe(x1) slots (1x Full-size, 1x Half size)
- Wide temperature operating supporting
- 1x 12V to 24V DC-IN power connector

Product Name	IB897
Form Factor	3.5"
CPU Type	Intel® Atom™ QC E3845 [TDP=10W](IB897-I45) Intel® Atom™ DC E3827 [TDP=8W] (IB897-I27) Package = FCBGA1170, Type-3, 25mmx27mm, 22nm, Tj= -40° C to +110° C
CPU Speed	Intel® Atom™ QC E3845 (1.91GHz, 2MB cache) Intel® Atom™ DC E3827 (1.75GHz, 1MB cache)
Cache	Up to 2MB for IB897-I45P Up to 1MB for IB897-I27P
Chipset	Integrated in Intel® Atom™ E3800 SoC processor
BIOS	AMI BIOS
Memory	Intel® Atom™ E3800 SoC processor integrated memory controller - DDR3L (1.35V) @1600 MHz , SO-DIMM [204-pin horizontal type] x 2 - Max. 8GB , Non-ECC

Display	Intel® Gen7 w/4EUs graphics engines(Gfx freq @ 542MHz/792MHz [Turbo]) Supports DX 11, OGL 3.0, OCL 1.1, OGLES 2.0, DP x 1 ; CRT x 1 via pin header
LVDS	- LVDS(Thru eDP, via NXP PTN3460 bridge IC) 24-bit dual channels LVDS interface w/DF20 socket x2
LAN	2 x Intel® I210IT PCIe Gigabit LAN [9mm x 9mm @64-QFC package, -40 to 85 degree]
USB (Universal Serial Bus)	Intel® Atom™ SoC built-in USB host controller Support USB 2.0 x 4 ports; USB 3.0 x 1 port, USB 2.0 HSIC** x 2 ports (Thru SMSC USB2514)
Serial ATA Ports	Intel® Atom™ SoC built-in SATA II controller, supports 2 ports
Audio	Intel® Atom™ SoC built-in HD Audio controller + Realtek ALC269QHD Codec w/class-D speaker amplifier(2.3W per channel @ 5V power supply) [7mm x 7mm @ 48-QFN] ; support 2-channel audio out + amp
LPC I/O	<u>Nuvoton NCT5523D [64-pin LQFP, 7x7x1.4mm]</u> - COM #1 (RS232/422/485) [EXAR SP339EER1 x 1 for jumper-less] - COM #2 (RS-232 only) [Hardware Monitor] 2 x Thermal inputs ; 2 x Voltage monitoring ; 1 x Fan Header(DC Fan type)
Digital IO	4 in & 4 out
Expansion Slots	Mini PCI-e socket x 2 (1xFull-sized+1xHalf-sized, both with USB HSIC signal) **Full-sized MiniPCIe(1x) support mSATA**
Edge Connector	DB9 x 1 for COM1 DisplayPort x 1 RJ45 x 2 for LAN 1 & 2 USB 2.0 vertical connector x 1 (from SoC) USB 3.0 vertical connector x 1 (from SoC)
On Board Header/Connector	DF11 2 x 8 pins headers x 1 for CRT DF11 2x4 pins header x 1 for 2 x USB 2.0 (from HSIC) DF20 socket connector x 2 for 24-bit dual channel LVDS 4 pins box header x 1 for backlight/brightness control (PWM mode) DF11 2x6 pins box header x1 for Audio

	<p>4 pins box header x1 for speaker</p> <p>DF11 2x5 pins box header x 1 for COM2</p> <p>2x5 pins headers x 1 for LPC(80-port card debugging purpose)</p> <p>Mini PCI-e(1x) connector x 2</p> <p>5 pins box header x 1 for smart battery</p> <p>SATA connector x 2 for SATA device</p> <p>4-pins power connector x 1 (JST type, For SATA device)</p> <p>2-pins connector x 1 for power input</p> <p>Micro SD slot x 1(3.3V type only)</p>
Watchdog Timer	Yes (256 segments, 0, 1, 2...255 sec/min)
Power Input	+12V ~ +24V DC-in
RoHS	Yes
Board Size	102mm x 147mm
OS supporting	<ul style="list-style-type: none"> - Windows 8.1/ Embedded ; Windows 7 / Embedded - Linux


2.2 Board Dimensions

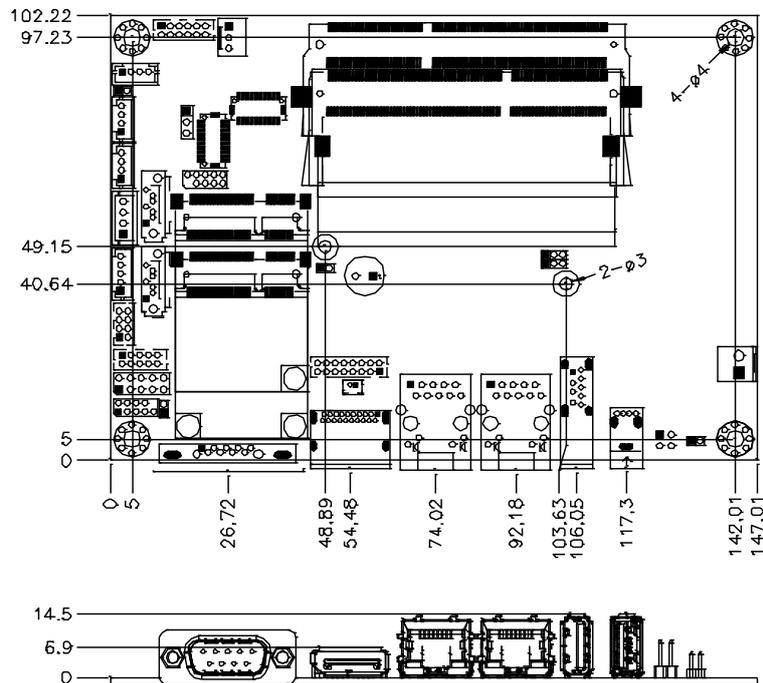


2.3 Setting the Jumpers

Jumpers are used on IB897-I45P to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on IB897-I45P and their respective functions.

2.4 Jumper Locations on IB897

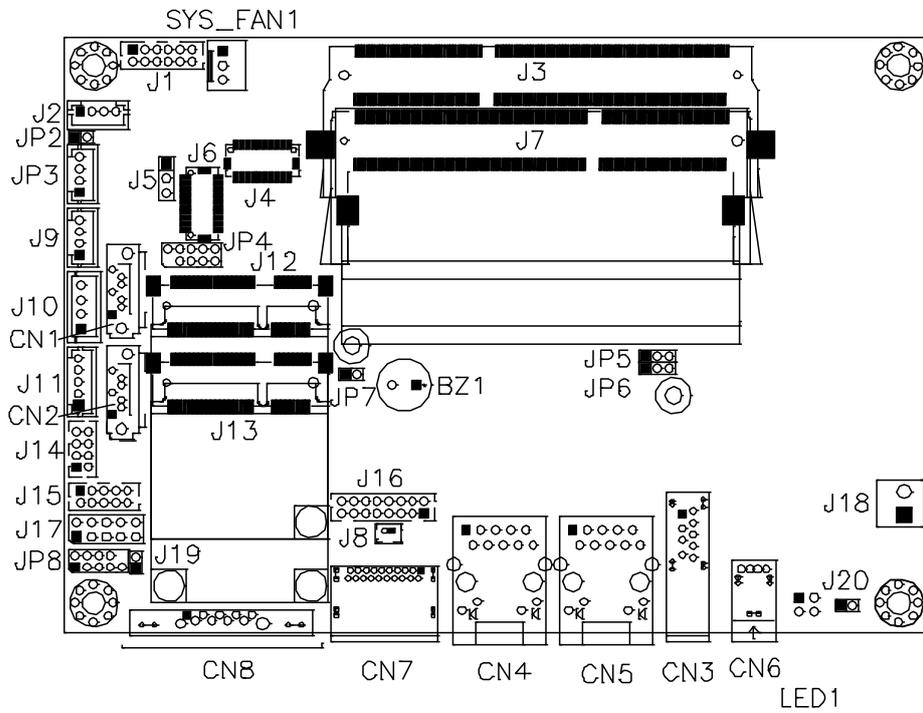




JP2: LVDS Panel Brightness Control Selection

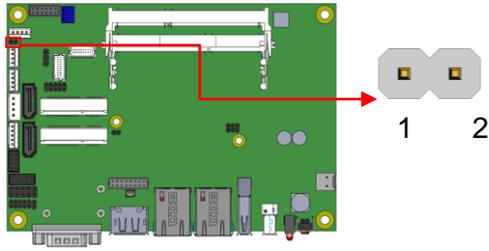


JP2	Brightness Control (PWM mode)
Open	3.3V
Close	5V(Default)

J5: LVDS Panel Power Selection

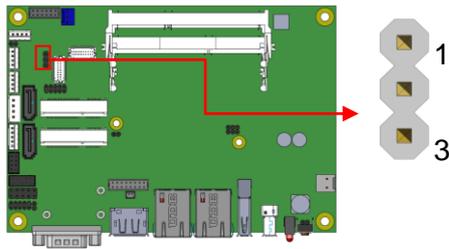


J5	Setting	Panel Voltage
	Pin 1-2 Short/Closed	3.3V (default)
	Pin 2-3 Short/Closed	5V

JP5: Clear ME Contents

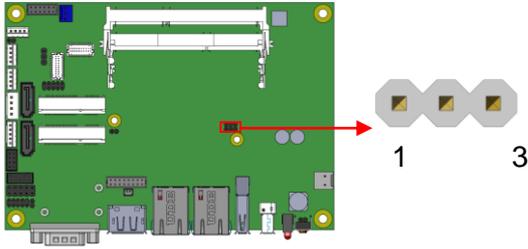


JP5	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear ME REGISTER

JP6: Clear CMOS Contents

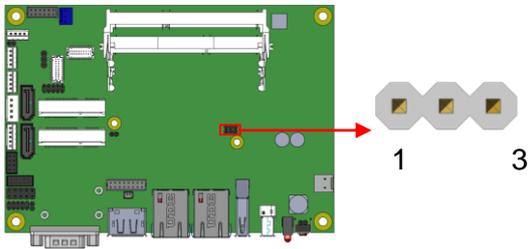


JP6	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear CMOS

Connector Locations on IB897-I45P

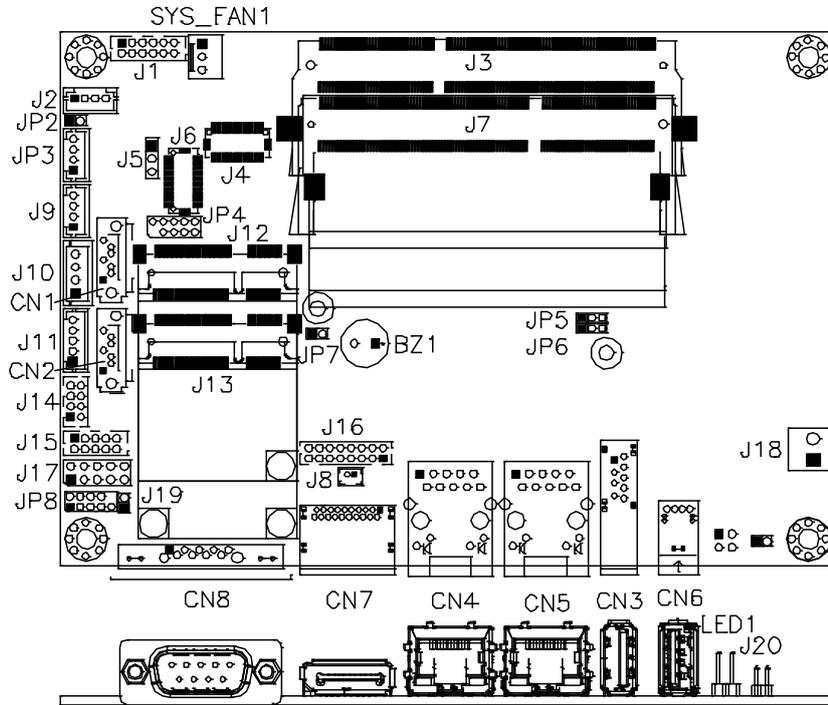

Bottom side

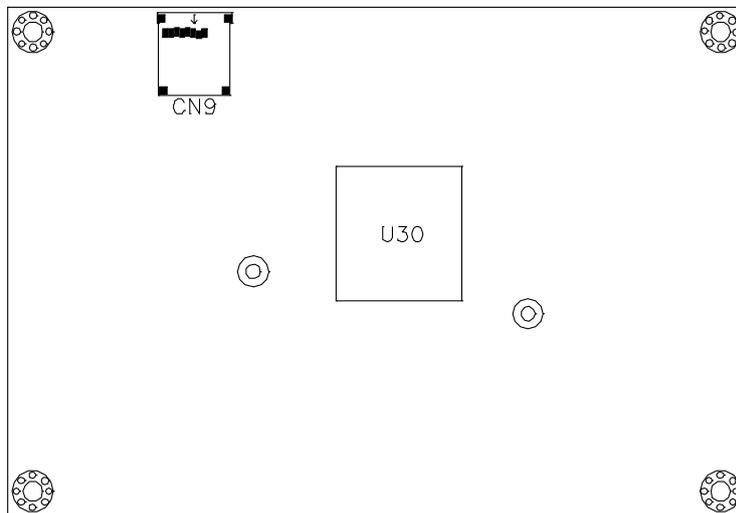

CN3: USB3.0 Connector

CN4, CN5: Gigabit LAN Connector

CN4: Intel® I210IT Connector

CN5: Intel® I210IT Connector


CN6: USB2.0 Connector

CN7: DP Connector

CN8: DB9 Connector (COM1)

Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	6	DSR, Data set ready
RXD, Receive data	2	7	RTS, Request to send
TXD, Transmit data	3	8	CTS, Clear to send
DTR, Data terminal ready	4	9	RI, Ring indicator
GND, ground	5	10	Not Used

COM1 is jumper-less for RS-232, RS-422 and RS-485 and is to be configured with BIOS Selection.




Pin #	Signal Name		
	RS-232	R2-422	RS-485
1	DCD	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	NC
4	DTR	RX-	NC
5	Ground	Ground	Ground
6	DSR	NC	NC
7	RTS	NC	NC
8	CTS	NC	NC
9	RI	NC	NC
10	NC	NC	NC

CN9: Micro SD (3.3V) Connector

SW1: Power Switch [For IB897-I45/I27/I15]


LED1:**Power LED and HDD LED Connector [For IB897-I45/I27/I15]****2x2 Pin-header (2.54mm) [For IB897-I45P/I27P/I15P]**

The green LED at the bottom is power LED. The red LED on top is the HDD LED.

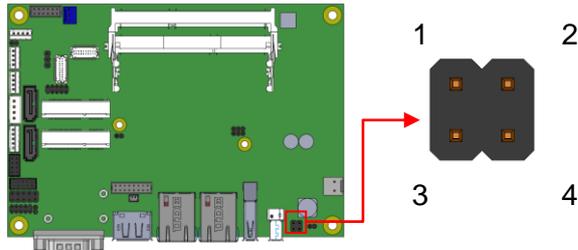


Signal Name	Pin #	Pin #	Signal Name
VCC3	1	2	HDD_LED
VCC5	3	4	GND


CN1: SATAII /share mSATA/ Connectors

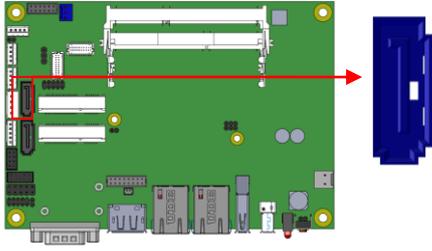

CN2: SATAII Connectors

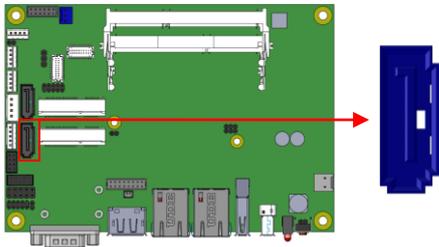


SYS_FAN1: SYSTEM Fan Power Connector

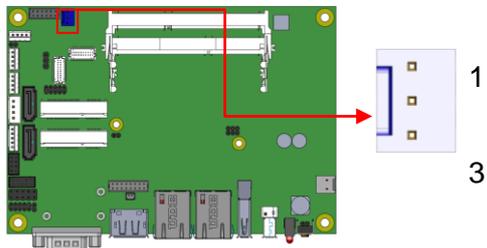


Pin #	Signal Name
1	Ground
2	+12V(500mA)
3	Rotation detection

J1: Audio Connector (DF11-12DP-2DSA)

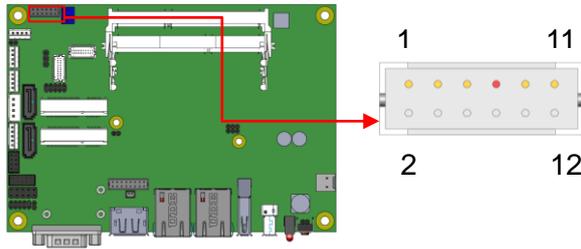

Signal Name	Pin #	Pin #	Signal Name
LINEOUT_R	2	1	LINEOUT_L
Ground	4	3	JD_FRONT
LINEIN_R	6	5	LINEIN_L
Ground	8	7	JD_LINEIN
MIC-R	10	9	MIC_L
Ground	12	11	JD_MIC1


J2: Amplify Connector (JST B4B-PH-K-S)

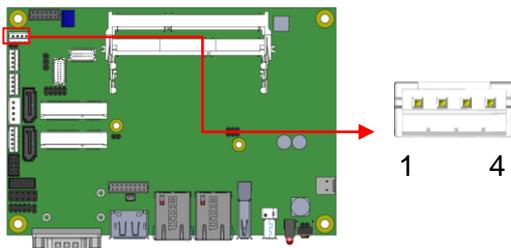


Pin #	Signal Name
1	OUTL+
2	OUTL-
3	OUTR-
4	OUTR+

J7: DDR3L SO-DIMM(CH-A) Sockets

** Please note CH-A must be installed for booting up**

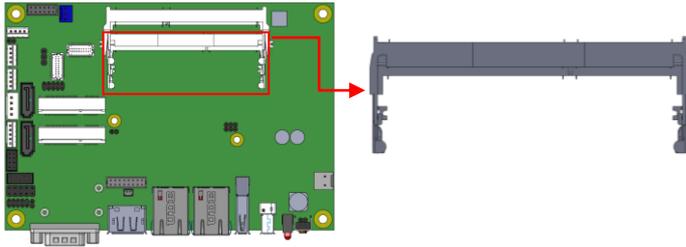


J3: DDR3L SO-DIMM(CH-B) Sockets

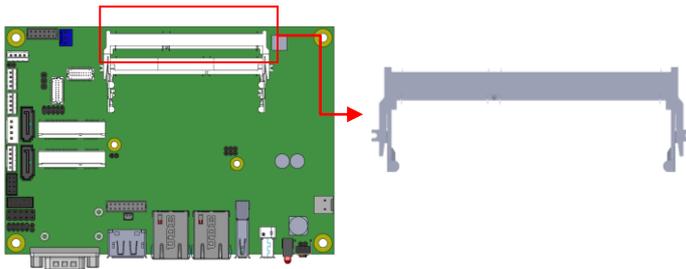


J4, J6: LVDS Connectors, (DF20G-20DP-1V)

J4: First Channel LVDS

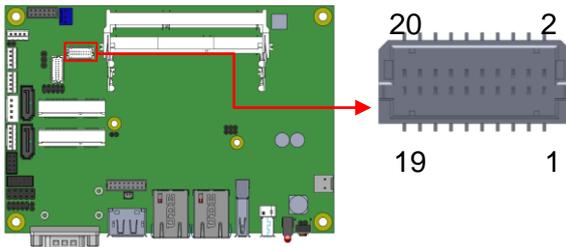


J6: Second Channel LVDS

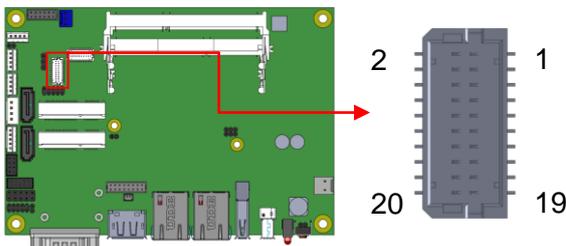


Signal Name	Pin #	Pin #	Signal Name
TX0N	2	1	TX0P
Ground	4	3	Ground
TX1N	6	5	TX1P
Ground	8	7	Ground
TX2N	10	9	TX2P

Ground	12	11	Ground
CLKN	14	13	CLKP
Ground	16	15	Ground
TX3N	18	17	TX3P
Power(1A)	20	19	Power

J9: MCU Flash Connector (factory use only)

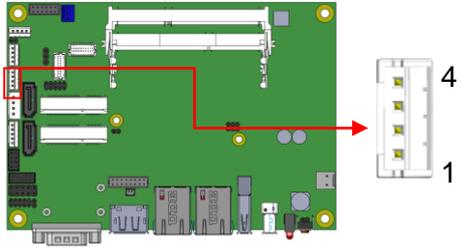


J10: SATA HDD Power Connectors(JST B4B-XH-A)

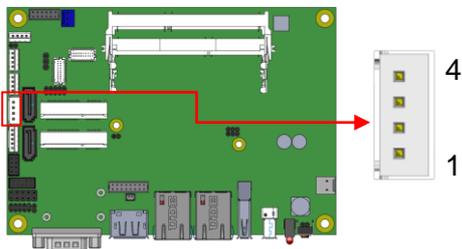


Pin #	Signal Name
1	+5V(1A)
2	Ground
3	Ground
4	+12V(1A)

J11: Smart Battery(JST B5B-PH-K-S)

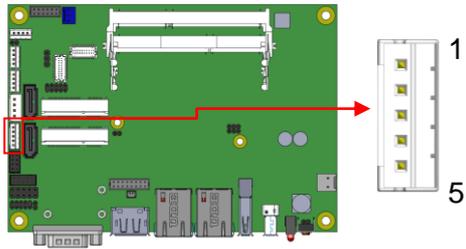


Pin #	Signal Name
1	RST#
2	ICHSWI#
3	Ground
4	SMB_DATA
5	SMB_CLK


J12: Mini PCIE Connector (share mSATA)

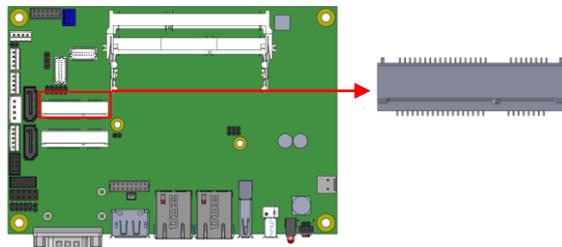

J13: Mini PCIE Connector (Half Size)

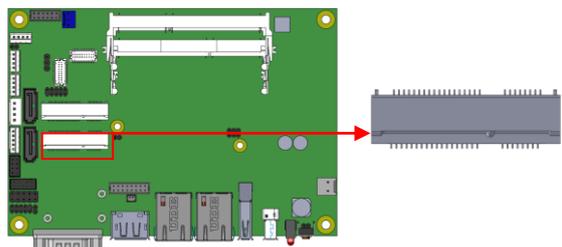


J14: USB 2.0 Connector(DF11-8DP-2DSA)

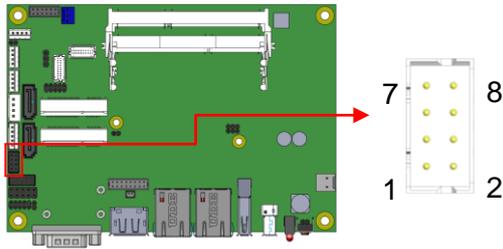


Signal Name	Pin #	Pin #	Signal Name
Vcc	1	2	Ground
D0-	3	4	D1+
D0+	5	6	D1-
Ground	7	8	Vcc

J15: COM2/RS232 Serial Port(DF11-10DP-2DSA)

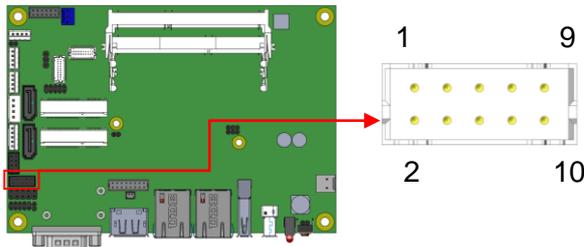


Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	2	RXD, Receive data
TXD, Transmit data	3	4	Data terminal ready
GND, ground	5	6	DSR, Data set ready
RTS, Request to send	7	8	CTS, Clear to send
RI, Ring indicator	9	10	Not Used

J16: VGA Connector (DF11-16DP-2DSA)

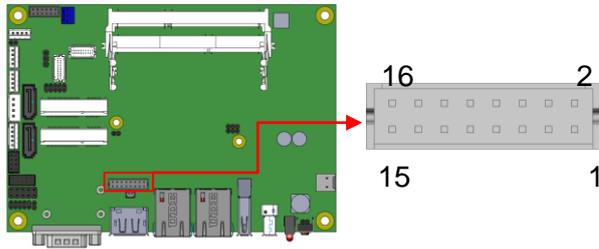


Signal Name	Pin #	Pin #	Signal Name
+5V	2	1	Red
Ground	4	3	Green
N.C	6	5	Blue
DDCDATA	8	7	N.C
H_SYNC	10	9	GND
V_SYNC	12	11	GND
DDCCLK	14	13	GND
N.C.	16	15	GND

J17: Digital I/O(signal level 5V)Connector(2.54mm)

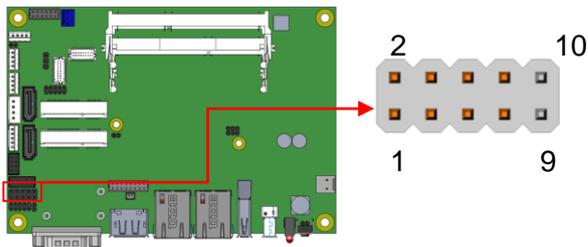


Signal Name	Pin #	Pin #	Signal Name
GND	1	2	VCC(500mA)
OUT3	3	4	OUT1
OUT2	5	6	OUT0
IN3	7	8	IN1
IN2	9	10	IN0

J18: Board Input Power Connector(HK_WAFER396-2S-WV)

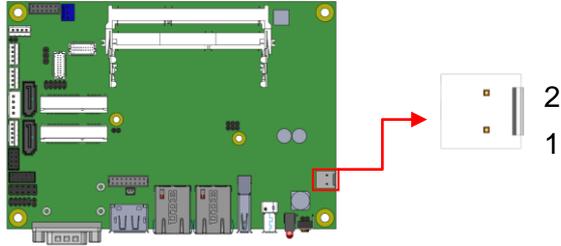


Pin #	Signal Name
1	+9V to +30V(80W)
2	GND

J19: Reset Switch(2mm)

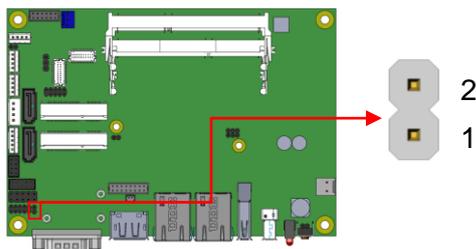

Pin #	Signal Name
1	Reset Switch
2	Ground


J20: Power Switch(2mm)

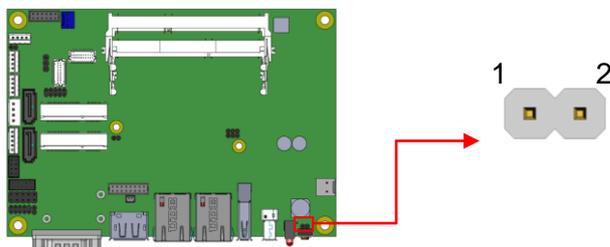

Pin #	Signal Name
-------	-------------


1	Power Switch
2	Ground

JP3: LCD Backlight Connector(JST B4B-PH-K-S)

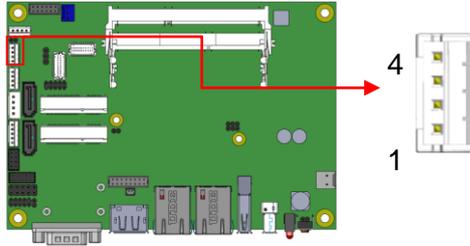


Pin #	Signal Name
1	+12V(1A)
2	Backlight Enable
3	Brightness Control
4	Ground


JP4: SPI Flash Connector (factory use only)

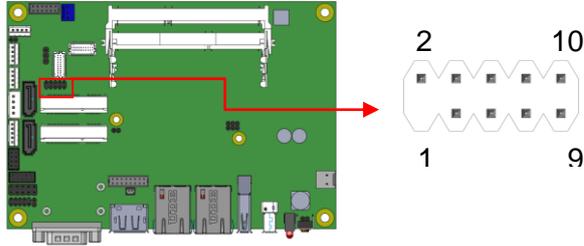

JP7: Factory use only

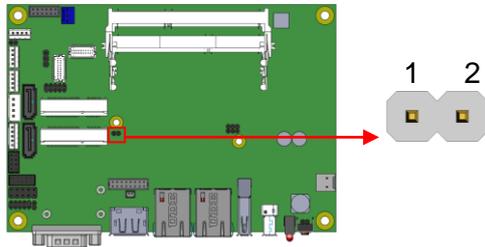

JP8: Debug 80 Port Connector (factory use only)

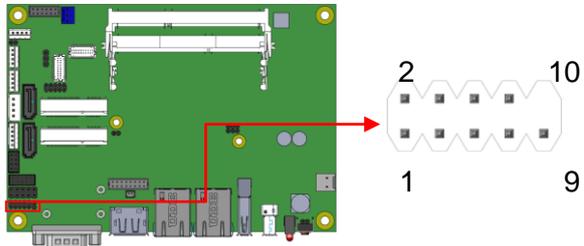

CHAPTER 3 BIOS SETUP

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

```
Press <DEL> or <F2> to Enter Setup
```

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Warning: *It is strongly recommended that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could cause the system to become unstable and crash in some cases.*

Main Settings

Aptio Setup Utility – Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
BIOS Information				Choose the system default language	
System Language		[English]			→ ← Select Screen
System Date		[Tue 01/20/2009]			↑ ↓ Select Item
System Time		[21:52:06]			Enter: Select
Access Level		Administrator			+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save ESC: Exit

System Language

Choose the system default language.

System Date


Set the Date. Use Tab to switch between Data elements.

System Time


Set the Time. Use Tab to switch between Data elements.

Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

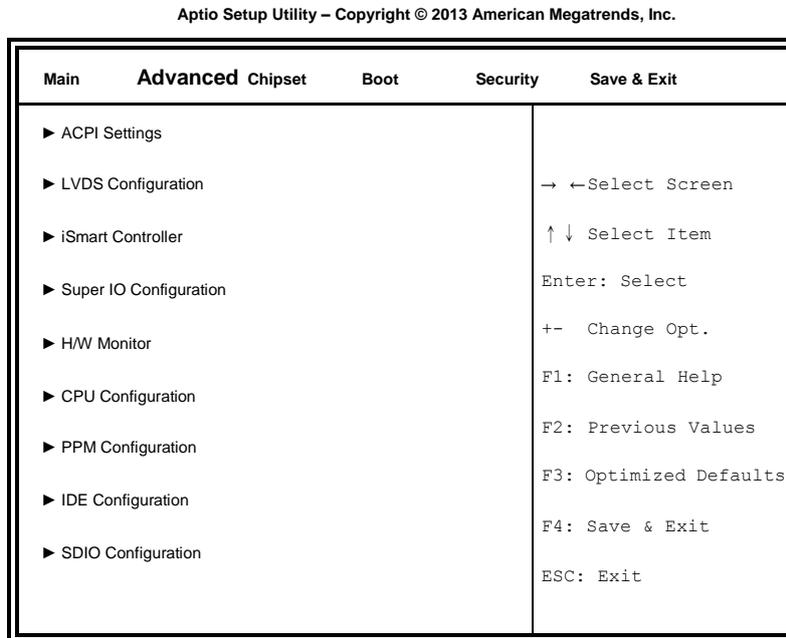

ACPI Settings

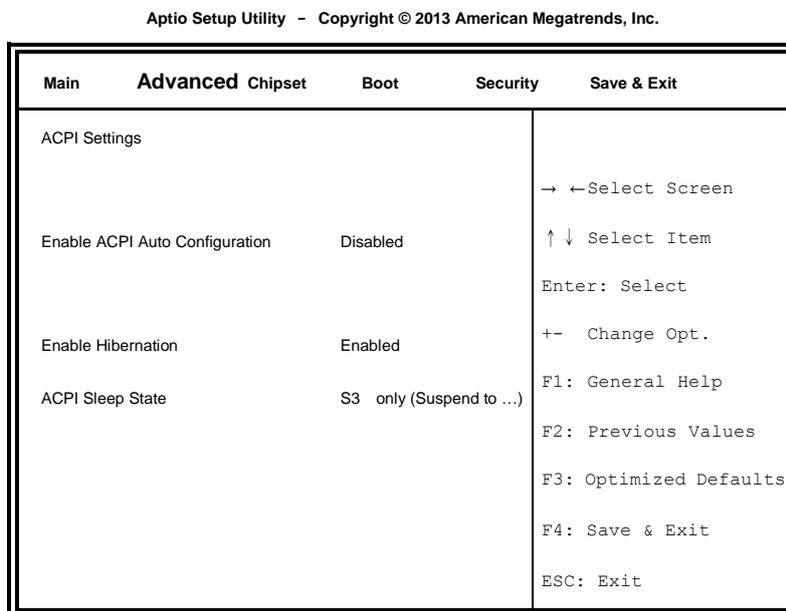

Enabled ACPI Auto Configuration

Enables or Disables BIOS ACPI Auto Configuration.

Enable Hibernation

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

ACPI Sleep State

Select ACPI sleep state the system will enter when the SUSPEND button is pressed.

LVDS Configuration

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
Configuration					→ ← Select Screen
Panel Color Depth			24 BIT		↑ ↓ Select Item
LVDS Channel Type			Single		Enter: Select
Panel Type			1024 x 768		+ - Change Opt.
LVDS Backlight Control			0(Min)		F1: General Help
					F2: Previous Values
					F3: Optimized Defaults
					F4: Save & Exit
					ESC: Exit

iSmart Controller

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
iSmart Controller					→ ← Select Screen
Power-On after Power failure			Disable		↑ ↓ Select Item
Schedule Slot 1			None		Enter: Select
Schedule Slot 2			None		+ - Change Opt.
					F1: General Help
					F2: Previous Values
					F3: Optimized Defaults
					F4: Save & Exit
					ESC: Exit


Power-On after Power failure

This field sets the system power status whether *Disable or Enable* when power returns to the system from a power failure situation.

Schedule Slot 1 / 2

Setup the hour/minute for system power on.

Super IO Configuration

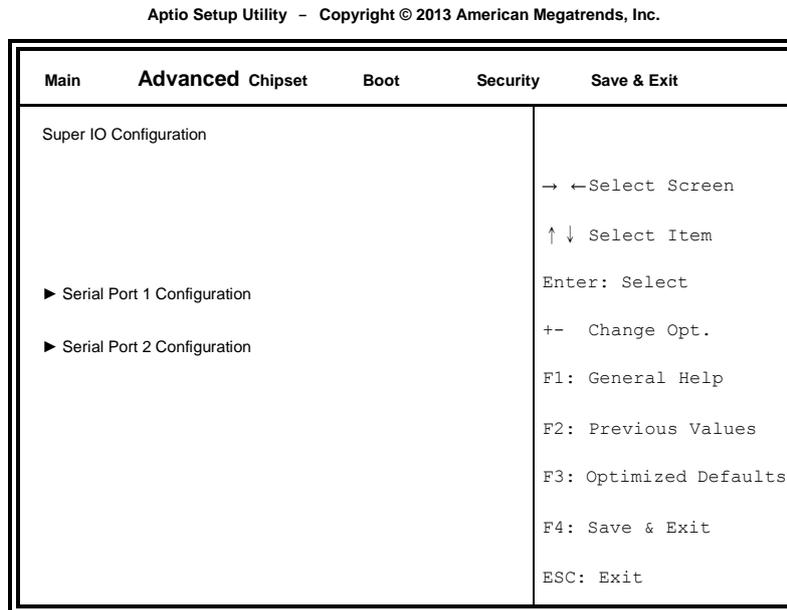

Serial Port 1 Configuration

Set parameters of serial port 1(COMA)

Serial Port 2 Configuration

Set parameters of serial port 2(COMA)

H/W Monitor

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
PC Health Status					
Smart Fan Function		Disabled			
SYS temp		+33.0 C			
CPU temp		+34.5 C		→ ← Select Screen	
FAN1 Speed		4066 RPM		↑ ↓ Select Item	
Vcore		+1.704 V		Enter: Select	
+1.35V		+1.544 V		+- Change Opt.	
AVCC		+3.360 V		F1: General Help	
VSB3		+3.344 V		F2: Previous Values	
VCC3V		+3.328 V		F3: Optimized Defaults	
				F4: Save & Exit	
				ESC: Exit	
CPU Shutdown Temperature		Disabled			

Smart Fan Function

This field enables or disables the smart fan feature.

Disabled (default)

50 °C

60 °C

70 °C

80 °C

90 °C

Shutdown Temperature

This field enables or disables the Shutdown Temperature

Disabled (default)

70 °C/158 F

75 °C/167 F

80 °C/176 F

85 °C/185 F

90 °C/194 F


90 °C/203 F

Temperatures/Voltages

These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status

CPU Configuration

This section shows the CPU configuration parameters.

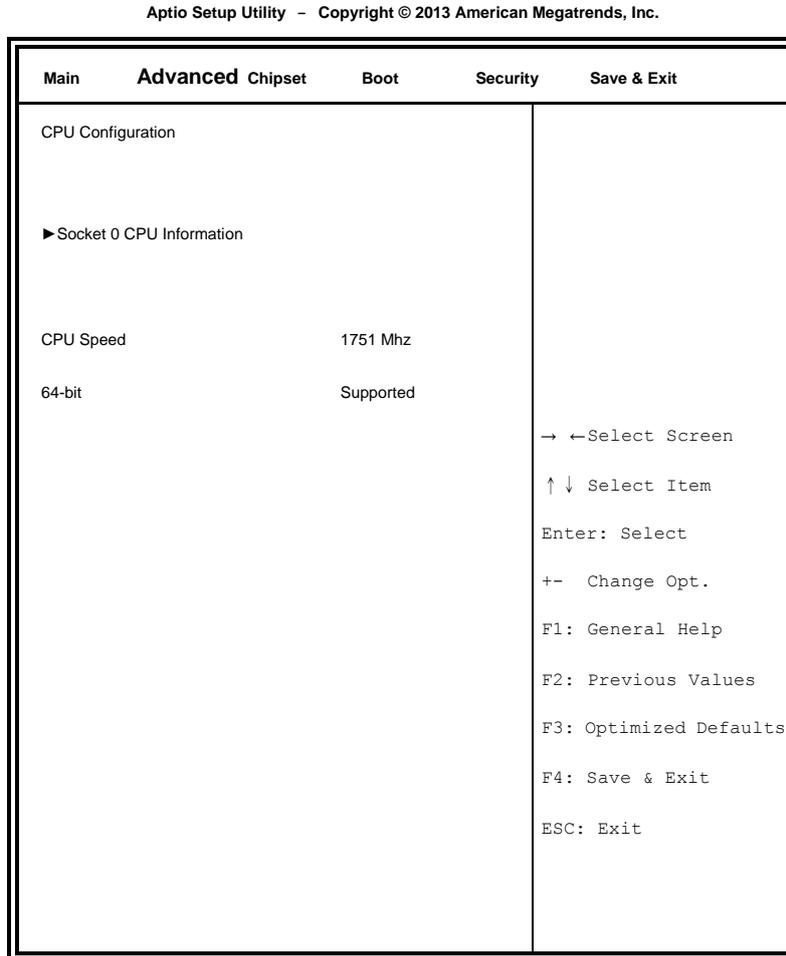

Socket 0 CPU Information

Socket specific CPU Information.

CPU PPM Configuration

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
CPU PPM Configuration					→ ← Select Screen
EIST	Enabled			↑ ↓ Select Item	Enter: Select
					+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save
					ESC: Exit

EIST

Enable/Disable Intel SpeedStep.

IDE Configuration

SATA Devices Configuration.

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
IDE Configuration					
Serial-ATA (SATA)			Enabled		
SATA Mode			AHCI		
Serial-ATA Port 0			Enabled		
SATA Port0 HotPlug			Disabled		→ ← Select Screen
Serial-ATA Port 1			Enabled		↑ ↓ Select Item
SATA Port1 HotPlug			Disabled		Enter: Select
SATA Port0			Not Present		+ - Change Field
SATA Port1			Not Present		F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save
					ESC: Exit

Serial-ATA(SATA)

Enabled / Disabled Serial ATA

SATA Mode

Select IDE / AHCI Mode

Serial -ATA Port 0

Enabled / Disabled Serial Port 0

SATA Port0 HotPlug

Enabled / Disabled SATA Port 0 HotPlug

Serail –ATA Port 1

Enabled / Disabled Serial Port 1

SATA Port1 HotPlug

Enabled / Disabled SATA Port 1 HotPlug

SDIO Configuration

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
SDIO Access Mode				Auto	→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

SDIO Access Mode

Auto Option: Access SD device in DMA mode if controller supports it. Otherwise, in PIO mode. DMA options: Access SD device in DMA mode. PIO Option: Access PIO device in DMA

Chipset Settings

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
▶ North Bridge			→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit		

North Bridge

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
Exit					
Memory Information			→ ← Select Screen		
Total Memory		4096 MB (LPDDR3)	↑ ↓ Select Item Enter: Select		
Memory Slot0		4096 MB (LPDDR3)	+- Change Opt.		
Memory Slot2		Not Present	F1: General Help		
			F2: Previous Values		
			F3: Optimized Defaults		
			F4: Save & Exit		
			ESC: Exit		

Boot Settings

This section allows you to configure the boot settings.

Aptio Setup Utility - Copyright © 2013 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot Configuration					
Setup Prompt Timeout			1		
Bootup NumLock State			On		→ ← Select Screen ↑ ↓ Select Item
Quiet Boot			Disabled		Enter: Select
Fast Boot			Disabled		+ - Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Boot Option Priorities					
Boot Option #1			UEFI:Built-in EFI		

Setup Prompt Timeout

Number of seconds to wait for setup activation key.

65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Quiet Boot

Enables or disables Quiet Boot option.


Fast Boot

Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

Boot Option Priorities

Sets the system boot order.

Save & Exit Settings

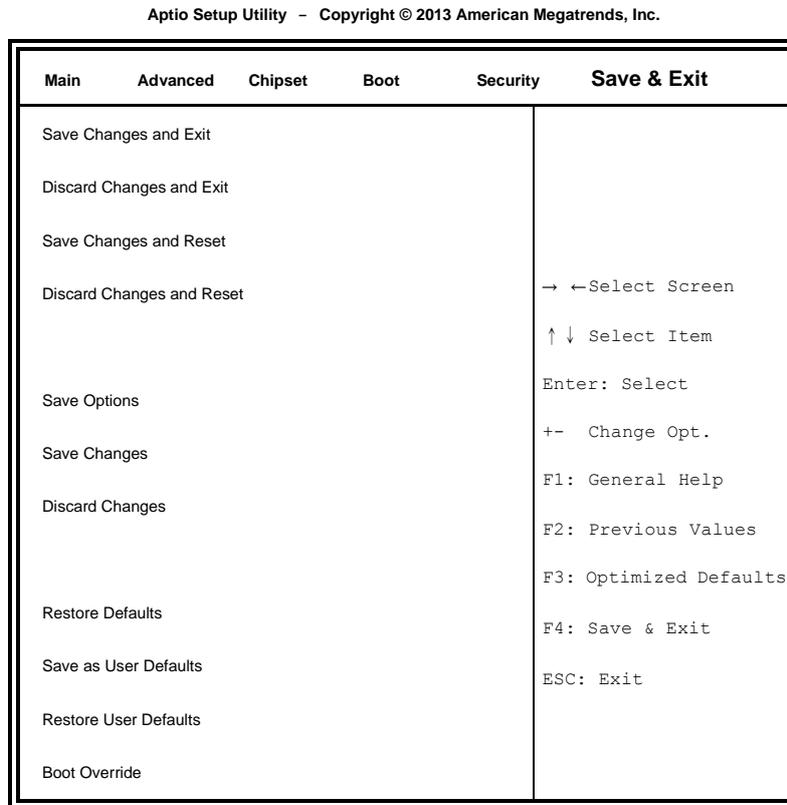

Save Changes and Exit

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Save Changes

Save Changes done so far to any of the setup options.

Discard Changes

Discard Changes done so far to any of the setup options.

Restore Defaults

Restore/Load Defaults values for all the setup options.

Save as User Defaults

Save the changes done so far as User Defaults.

Restore User Defaults

Restore the User Defaults to all the setup options.

CHAPTER 4 DRIVERS INSTALLATION

This section describes the installation procedures for software and drivers. The software and drivers are included with the motherboard. If you find the items missing, please contact the vendor where you made the purchase.

IMPORTANT NOTE:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.

4.1 Intel Chipset Software Installation Utility

The Intel Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation.

1. Insert the DVD that comes with the board.
2. Click **Intel** and then **Intel(R) Baytrail Chipset**.



3. Click **Intel(R) Chipset Software Installation Utility**.



4. When the Welcome screen to the Intel® Chipset Device Software appears, click **Next** to continue.

5. Click **Yes** to accept the software license agreement and proceed with the installation process.


6. The Setup process is now complete. Click **Finish** to restart the computer and for changes to take effect.

4.2 VGA Drivers Installation

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Baytrail Chipset**. Click **Intel(R) Baytrail Graphics Driver**.



2. When the Welcome screen appears, click **Next** to continue.
3. Click **Yes** to accept the license agreement and continue the installation.
4. Setup complete. Click **Finish** to restart the computer and for changes to take effect.

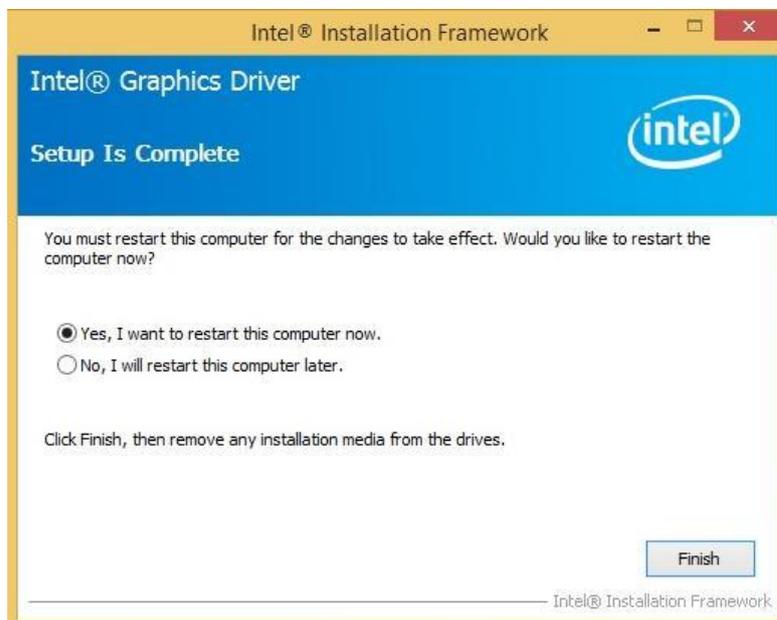


4.3 Realtek HD Audio Driver Installation

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Baytrail Chipset**. Click **Realtek High Definition Audio Driver**.



2. On the Welcome screen, click **Next** to proceed with the installation.

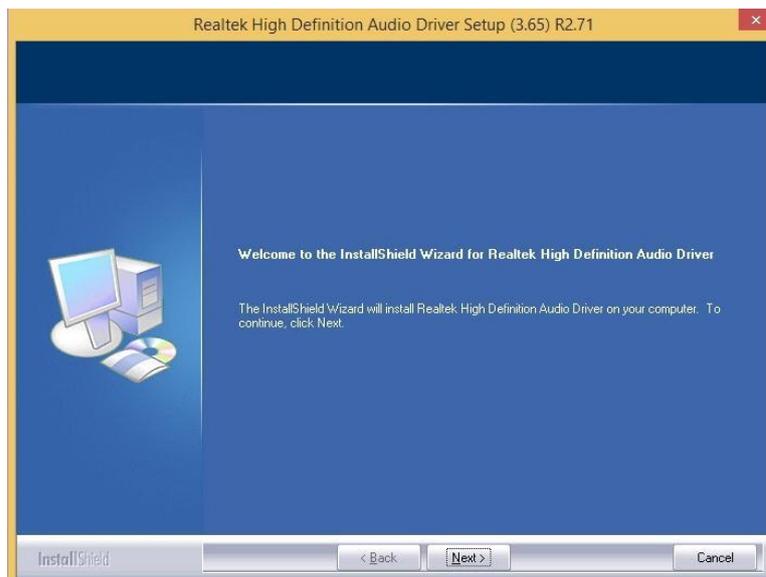

3. InstallShield Wizard is complete. Click **Finish** to restart the computer and for changes to take effect.

4.4 Intel Trusted Execution Engine Installation

Note :Windows 7 OS only

Important Notes

- 4) Intel TXE PV Firmware is signed by Intel
- PV POR configuration is signed Intel TXE FW and Production Silicon
 - Signed Intel TXE FW and Pre Production Silicon is supported for development needs only

Combination of unsigned Intel TXE Firmware and Production Silicon is not supported and will result in unexpected behavior

- 5) For Windows 7 OS only:
Intel® Trusted Execution Engine Interface (Intel® TXEI) Driver uses KMDF (WDF) 1.1.1, which is built-in on Windows 8 and Windows 8.1. However, Windows 7 doesn't have it. Please install Kernel-Mode Driver Framework (KMDF) version 1.1. Otherwise, yellow bang appears on Intel TXEI device upon installation. Please follow instructions in this [link: KB2685811](#)

Other names and brands may be claimed as the property of others.
All products, computer systems, dates and figures specified are preliminary based on current expectations, and are subject to change without notice.

Intel Confidential




4

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Baytrail Chipset**. Click **Intel(R) Baytrail Graphics Driver**.




2. On the Setup Welcome screen, click **Next** to proceed with the installation process.

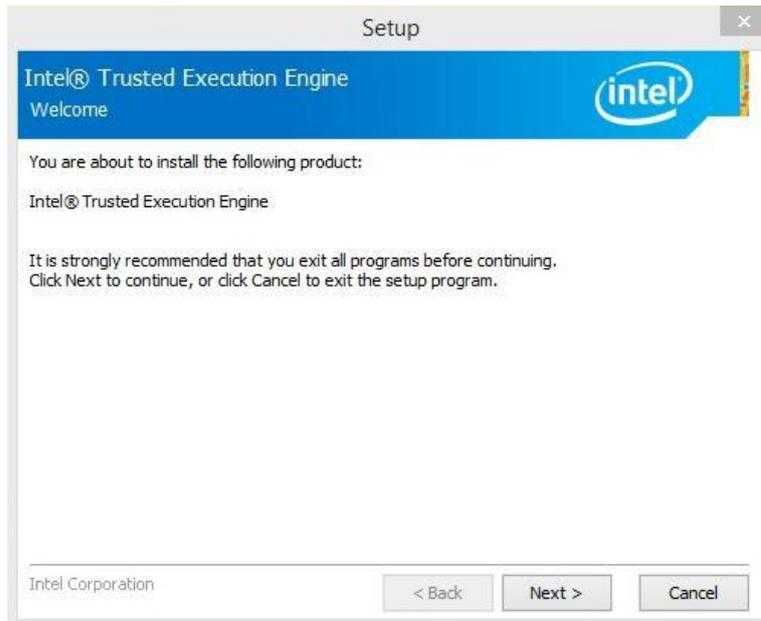

3. Click **Next** accept the license agreement and continue the installation.
4. Installation of the Intel Trusted Execution Engine is now complete. Click **Finish**.

Appendix

Mounting CSB200-897 to the Wall

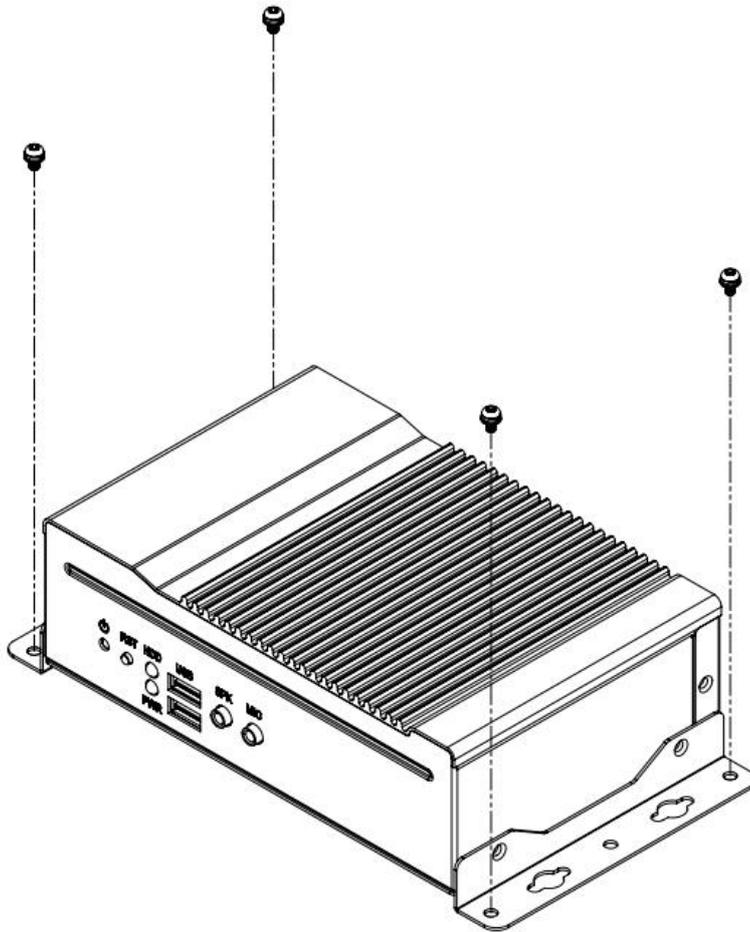

You can install CSB200-897 on plastic (LCD monitor), wood, drywall surface over studs, or a solid concrete or metal plane directly. Ensure the installer uses at least four M3 length 6mm screws to secure the system on wall. ***Four M3 length 6mm screws [Four M3 length 4.4mm for VESA mounting] are recommended to secure the system on wall.***

Fasteners are not included with the unit, and must be supplied by the installer. The types of fasteners required are dependent on the type of wall construction. Choose fasteners that are rated either "Medium Duty" or "Heavy Duty." To assure proper fastener selection and installation, follow the fastener manufacturer's

recommendations.

Wall Mounting Requirements

Note: Before mounting the system on wall, ensure that you are following all applicable building and electric codes.

When mounting, ensure that you have enough room for power and signal cable routing. And have good ventilation for power adapter. The method of mounting must be able to support weight of the CSB110-902 plus the suspend weight of all the cables to be attached to the system. Use the following methods for mounting your system:

Mounting to hollow walls

- **Method 1: Wood surface** – A minimum wood thickness – 38mm (1.5in.) by 25.4 cm (10in.) – of high, construction – grade wood is recommended.
Note: This method provides the most reliable attachment of the unit with little risk that the unit will come loose or require ongoing maintenance.
- **Method 2: Drywall walls** - Drywall over wood studs is acceptable.

Mounting to a solid concrete or brick wall - Mounts on a flat smooth surface.

Selecting the Location

Plan the mounting location thoroughly. Locations such as walkway areas, hallways, and crowded areas are not recommended. Mount the unit to a flat, sturdy, structurally sound column or wall surface.

The best mounting surface is a standard countertop, cabinet, table, or other structure that is minimally the width and length of the unit. This recommendation reduces the risk that someone may accidentally walk into and damage the device. Local laws governing the safety of individuals might require this type of consideration.