



AEx-8XP(H)

15", 15.6", 19", and 21.5" Full IP66 Stainless Steel Designed with M12 waterproof connector of Panel PC Series.

User Manual

Release Date

Revision

Mar. 2022

V2.0

©2022 Aplex Technology, Inc.

All Rights Reserved.

Published in Taiwan

Aplex Technology, Inc.

15F-1, No.186, Jian Yi Road, Zhonghe District, New Taipei City 235, Taiwan

Tel: 886-2-82262881

Fax: 886-2-82262883

URL: <http://www.aplextec.com/zh/home.php>

Revision History

Reversion	Date	Description
0.1	2017/11/24	For Preliminary Release
1.0	2018/01/02	Official version
1.1	2018/03/27	Modify power pin defined
1.2	2018/05/16	Modify power pin description
1.3	2018/06/22	Add Warning
1.4	2018/10/12	Revise specification wording
1.5	2019/08/28	Modify MB information
1.6	2020/11/03	Modify MB+ System Specification
1.7	2021/06/23	Add IECEX/ATEX Standards in P5 Modify Markings in P4
1.8	2021/11/25	Add Pin define data in 1.2 chart
1.9	2022/01/20	Modify ATEX Standards and Notice, Certification information
2.0	2022/03/10	Add UKCA LOGO and Standards

Warning!

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

If you need to connect or reconnect M12 cables, please make sure turning off the power before all the replacement procedures and must in normal environment, Recommend use ATEX certificated IO cables.

Disclaimer

This information in this document is subject to change without notice. In no event shall Apex Technology Inc. be liable for damages of any kind, whether incidental or consequential, arising from either the use or misuse of information in this document or in any related materials.

ATEX Instruction Guide

SAFETY INSTRUCTIONS

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Digital Electronics Corporation for any consequences arising out of the use of this material. A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

SCOPE

This present document applies when AEx-8XXP(H) Series bears  marking. They are supplied only with DC 9~36 V. This documentation has to be kept and always refer to those instructions for installation, operation, maintenance or evolution of your system.

Permitted zones of application

Refer to the section titled "Markings" to get information about the permitted zones of protection and the types of protection.


- AEx-8XXP(H) Series is installed in zones 2 hazardous areas must be certified and bear the  **UK
CA** marking.
- Ensure with the marking that the terminals are compatible with the conditions permitted for the hazardous area at the site where it is being used.

Notice

- 1.** Under certain extreme circumstances, the label may generate an ignition-capable level of electrostatic charge. Therefore the equipment shall not be installed in a location where the external conditions are conducive to the build-up of electrostatic charge on the label. In addition, the label shall only be cleaned with a damp cloth.
- 2.** Warning – in locations where high external humidity and internal temperature variations (e.g. frequent on-off cycles) may cause condensation inside the equipment, the interior should be periodically inspected.
- 3.** When the device is mounted in a hazardous area, connection and disconnection of external connectors while live is only permitted if the potentially explosive atmosphere is shown to be absent.
- 4.** The “9-36” VDC rated supply shall be protected such that transients are limited to a maximum of 119 V; no such protection is required for the signal lines.
- 5.** Equipotential bonding facilities on the outside of enclosure are assessed as providing effective connection of a conductor with a cross-sectional area of at least 4 mm², 10AWG, 600V wire
- 6.** The equipment is suitable for use in class I, division 2, groups A, B, C, D , Class II, Division2, Group F,G, T135°C, Class III OR non-hazardous locations only.
- 7.** Warning- Do not use USB while the circuit is live unless the area is known to be non-hazardous.
- 8.** Electrostatic charging hazard - Clean only with a damp cloth.

Markings

Markings applied to the AEx-8XXP(H) Series Graphic Operator Interface, are as follows:

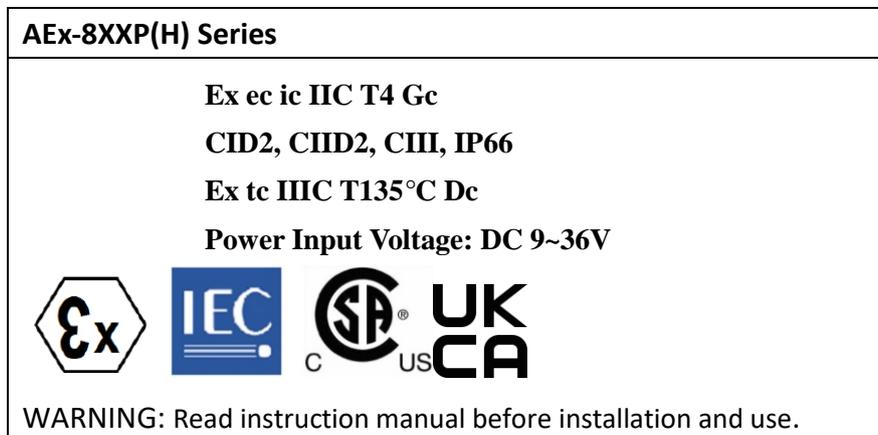

Below designated standards were certified with conform the relevant regulations:

New standards		
 II 3GD Ex ec ic IIC T4 Gc Ex tc IIIC T135°C Dc		
IECE _x	ATEX	UKCA
IEC 60079-0:2017	EN 60079-0:2018	BS 60079-0:2018
IEC 60079-11:2011	EN 60079-11:2012	BS 60079-11:2012
IEC 60079-7:2015 +AMD1:2017	EN 60079-7:2015/A1:2018	BS 60079-7:2015/A1:2018
IEC 60079-31:2013	EN 60079-31:2014	BS 60079-31:2014

Table of Contents

Revision History.....	1
Warning!/Disclaimer.....	2
ATEX Instruction Guide.....	3
Notice/Markings.....	4

Chapter 1 Getting Started

1.1 Features.....	8
1.2 Specifications.....	8
1.3 Dimensions.....	12
1.4 Brief Description of AEx-8XXP(H).....	14
1.5 VESA Mounting.....	15
1.6 Panel Mounting.....	15

Chapter 2 Hardware

2.1 Motherboard Introduction.....	16
2.2 Specifications.....	16
2.3 Jumpers and Connectors Location.....	20
2.4 Jumpers Setting and Connectors.....	21

Chapter 3 BIOS Setup

3.1 Operations after POST Screen.....	46
3.2 BIOS Setup Utility.....	46
3.3 Main Settings.....	47
3.4 Advanced Settings.....	48
3.5 Chipset Settings.....	55
3.6 Security Settings.....	58
3.7 Boot Settings.....	60
3.8 Save & Exit Settings.....	61

Chapter 4 Installation of Drivers

4.1 Intel® Atom™ SoC Chipset	64
4.2 Intel® VGA Chipset.....	67
4.3 Realtek ALC662 HD Audio Driver Installation.....	71
4.4 Com Driver.....	73
4.5 Intel_TXE(Win) Driver.....	75

Chapter 5

Touch Screen Installation

5.1 Windows 8.1/10 Universal Driver Installation.....	78
5.2 Software Function.....	82

Figures

Figure 1.1: Dimensions of AEx-815P(H).....	12
Figure 1.2: Dimensions of AEx-816P.....	12
Figure 1.3: Dimensions of AEx-819P(H).....	13
Figure 1.4: Dimensions of AEx-821P.....	13
Figure 1.5: Front View of AEx-8XXP(H).....	14
Figure 1.6: Rear View of AEx-8XXP(H).....	14
Figure 1.7: AEx-8XXP(H) Series VESA Mounting.....	15
Figure 1.8: AEx-8XXP(H) Series Panel Mounting.....	15
Figure 2.1: Motherboard Dimensions.....	19
Figure 2.2: Jumpers and Connectors Location-Board Top.....	20
Figure 2.3: Jumpers and Connectors Location-Board Bottom.....	20

Chapter 1

Getting Started

1.1 Features


- Intel® Celeron Processor N2930
- Full flat bezel and fanless design
- Full IP66 grade with M12 waterproof connector
- DC 9~36V wide range power input
- Projective capacitive touch
- 316 Stainless steel design
- Variety of IO applications
- Support Panel and VESA mount
- ATEX Zone2/22, IECEx and C1D2/C2D2/C3/UKCA Certified

1.2 Specifications

	AEx-815P(H)	AEx-816P	AEx-819P(H)	AEx-821P																
System																				
CPU	Onboard Intel Celeron N2930 1.83GHz Processor																			
Chipset	SoC																			
Memory	Onboard 4GB/8GB DDR3L 1333MHz																			
IO Port																				
USB	1 x M12 for 2 x USB2.0 with waterproof cover and chain		 <p>Pin Assignments Front View 正視圖</p>																	
	<table border="1"> <thead> <tr> <th>CN1</th> <th>Pin Define</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>USB1 5V</td> </tr> <tr> <td>3</td> <td>D1-</td> </tr> <tr> <td>4</td> <td>D1+</td> </tr> <tr> <td>7</td> <td>GND</td> </tr> <tr> <td>2</td> <td>USB2 5V</td> </tr> <tr> <td>5</td> <td>D2-</td> </tr> <tr> <td>6</td> <td>D2+</td> </tr> <tr> <td>8</td> <td>GND</td> </tr> </tbody> </table>				CN1	Pin Define	1	USB1 5V	3	D1-	4	D1+	7	GND	2	USB2 5V	5	D2-	6	D2+
CN1	Pin Define																			
1	USB1 5V																			
3	D1-																			
4	D1+																			
7	GND																			
2	USB2 5V																			
5	D2-																			
6	D2+																			
8	GND																			
Serial/Parallel	1 x M12 for COM1— RS-232(RS-422/485 for option)																			

	<table border="1"> <thead> <tr> <th>CN1</th> <th>RS-232/422/485</th> <th>CN2</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>DCD / 422R+</td> <td>1</td> </tr> <tr> <td>2</td> <td>RXD / 422R-</td> <td>2</td> </tr> <tr> <td>3</td> <td>TXD / 422T- / 485-</td> <td>3</td> </tr> <tr> <td>4</td> <td>DTR / 422T+ / 485+</td> <td>4</td> </tr> <tr> <td>5</td> <td>GND</td> <td>5</td> </tr> <tr> <td>6</td> <td>DSR</td> <td>6</td> </tr> <tr> <td>7</td> <td>RTS</td> <td>7</td> </tr> <tr> <td>8</td> <td>CTS</td> <td>8</td> </tr> </tbody> </table>	CN1	RS-232/422/485	CN2	1	DCD / 422R+	1	2	RXD / 422R-	2	3	TXD / 422T- / 485-	3	4	DTR / 422T+ / 485+	4	5	GND	5	6	DSR	6	7	RTS	7	8	CTS	8	 <p>Pin Assignments Front View 正視圖</p>
CN1	RS-232/422/485	CN2																											
1	DCD / 422R+	1																											
2	RXD / 422R-	2																											
3	TXD / 422T- / 485-	3																											
4	DTR / 422T+ / 485+	4																											
5	GND	5																											
6	DSR	6																											
7	RTS	7																											
8	CTS	8																											

LAN	<p>2 x M12 for LAN with waterproof cover and chain</p> <table border="1"> <thead> <tr> <th></th> <th>Pin Define</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>LAN1_0+</td> </tr> <tr> <td>2</td> <td>LAN1_0-</td> </tr> <tr> <td>3</td> <td>LAN1_1+</td> </tr> <tr> <td>4</td> <td>LAN1_1-</td> </tr> <tr> <td>5</td> <td>LAN1_2+</td> </tr> <tr> <td>6</td> <td>LAN1_2-</td> </tr> <tr> <td>7</td> <td>LAN1_3+</td> </tr> <tr> <td>8</td> <td>LAN1_3-</td> </tr> </tbody> </table>		Pin Define	1	LAN1_0+	2	LAN1_0-	3	LAN1_1+	4	LAN1_1-	5	LAN1_2+	6	LAN1_2-	7	LAN1_3+	8	LAN1_3-	 <p>Pin Assignments Front View 正視圖</p>
	Pin Define																			
1	LAN1_0+																			
2	LAN1_0-																			
3	LAN1_1+																			
4	LAN1_1-																			
5	LAN1_2+																			
6	LAN1_2-																			
7	LAN1_3+																			
8	LAN1_3-																			

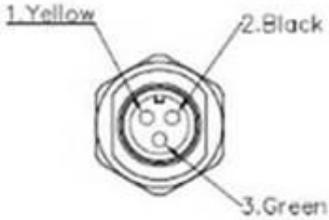Power	<p>1 x M12 for DC power 9~36V input by M12 connector</p> <table border="1"> <thead> <tr> <th></th> <th>Pin Define</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>VCC</td> </tr> <tr> <td>2</td> <td>GND</td> </tr> <tr> <td>3</td> <td>FG</td> </tr> </tbody> </table>		Pin Define	1	VCC	2	GND	3	FG	 <p>1.Yellow / VCC 2.Black / GND 3.Green / FG</p>
	Pin Define									
1	VCC									
2	GND									
3	FG									

VGA	1 x M12 for VGA with waterproof cover and chain
-----	---

Storage Space	
Storage	<p>1 x 2.5" SATA HDD or SSD space(SSD/HDD must be WT type)</p> <p>1 x Internal SD Card slot-movable</p> <p>1 x mSATA slot</p>

Expansion	
Expansion Slot	1 x Mini-PCIe full size

Display	
----------------	--

Display type	15" color TFT LCD	15.6" color TFT LCD	19" color TFT LCD	21.5" color TFT LCD
Max. Resolution	1024 x 768		1920 x 1080	1280 x 1024
Max. Color	16.2M	262K	16.7M	16.7M
Luminance (cd/m ²)	450	1000	400	350
Contrast Ratio	800: 1		700: 1	1000: 1
Viewing Angle(H/V)	160/150	160/140	160/140	170/160
Backlight Lifetime(Hrs)	70,000	50,000	50,000	70,000
Touch Screen				
Type	Projected Capacitive Touch			
Interface	USB			
Light Transmission%	90%			
Power				
Power Input	DC 9~36V			
Power Consumption	MAX: 19W	MAX: 23W	MAX: 24W	MAX: 35W
Mechanical				
Construction	316 Stainless Steel Chassis			
Mounting	VESA Mount 100 x100 (default) Panel Mount (option)			
Dimension (mm)	399 x 324 x 70	440 x 290 x 75	470 x 388.6 x 75	571 x 362 x 75.1
Net Weight (Kg)	9.8	10	12.3	12.6
Environmental				
Operating temperature	0~50°C /-20~60°C(option)-15" Models -20~60°C-15.6"~21.5" Models			
Storage temperature	-30~70°C			
Altitude limit for application	Under 2000m			
Overvoltage category	CAT II			
Pollution degree	2			
Humidity	15 to 90% @ 40°C, non- condensing			
Certification	CE/FCC Class A IECEX Certification: Ex ec ic IIC T4 Gc Ex tc IIIC T135°C Dc ATEX Certification:  II 3 GD Certification: Class I, Division2, Group A,B,C,D,T4 Class II, Division2, Group F,G, T135°C			

	<p>Class III</p> <p>ANSI/ISA 12.12.01-2013</p> <p>CSA Std.C22.2 No213-1987</p> <p>CSAE 22UKEX 1073X</p>
Operating System Support	
OS Support	<p>Windows Embedded 7</p> <p>Windows Embedded 8.1</p> <p>Windows 10 IOT Enterprise LTSB 2016</p>

1.3 Dimensions

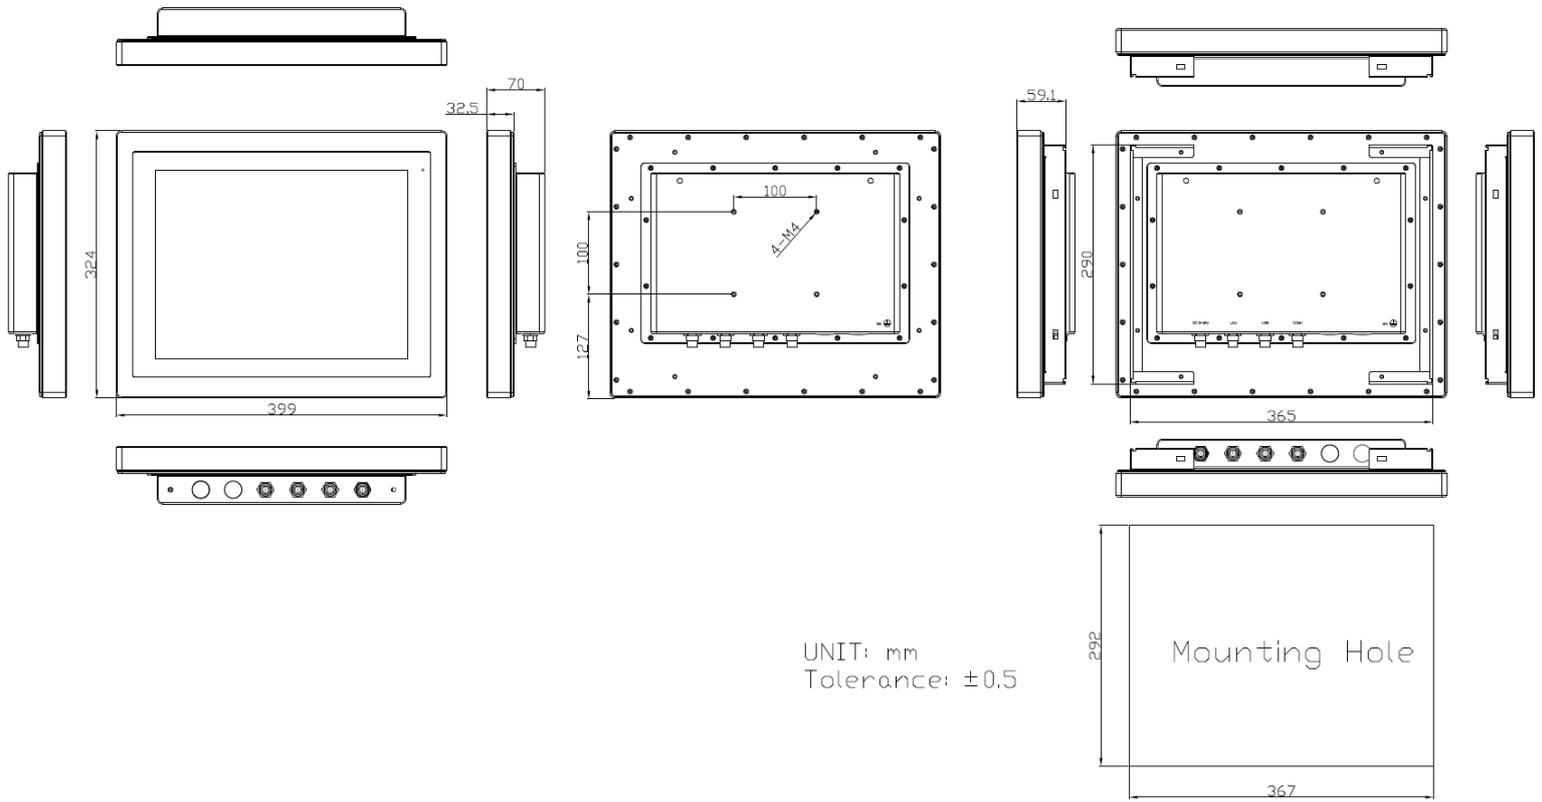


Figure 1.1: Dimensions of AEx-815P(H)

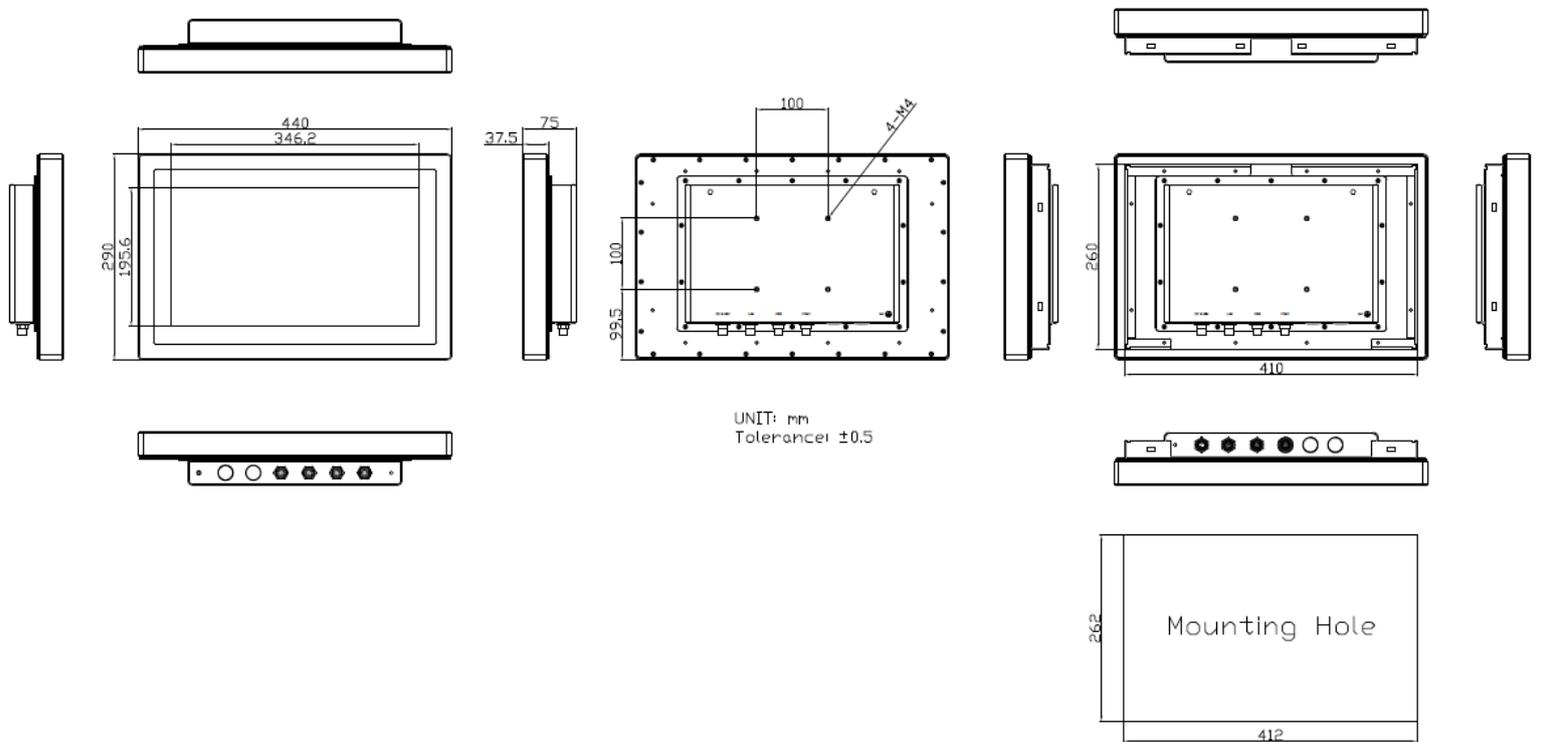


Figure 1.2: Dimensions of AEx-816P

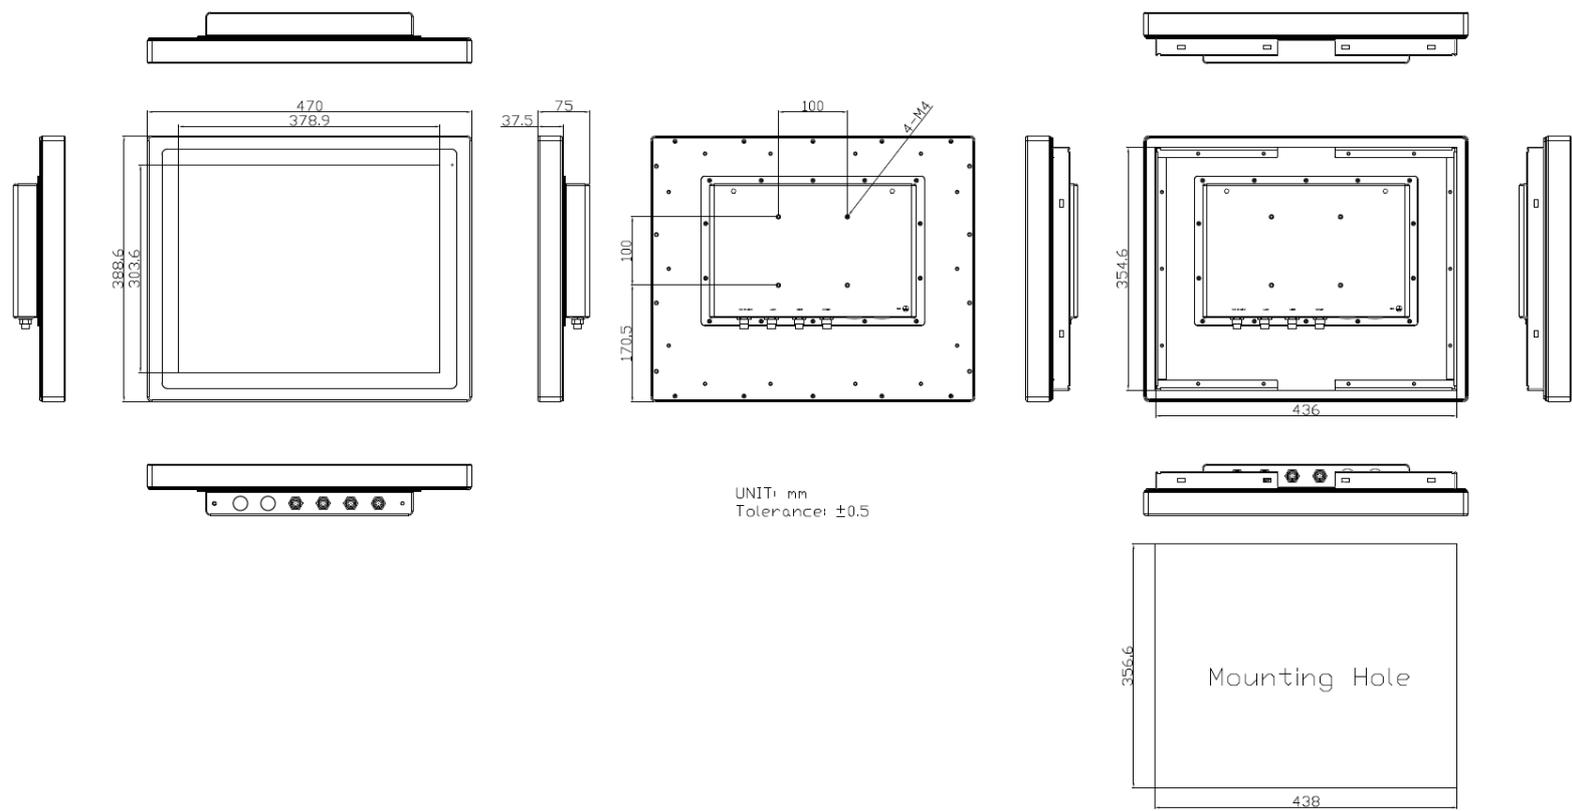


Figure 1.3: Dimensions of AEx-819P(H)

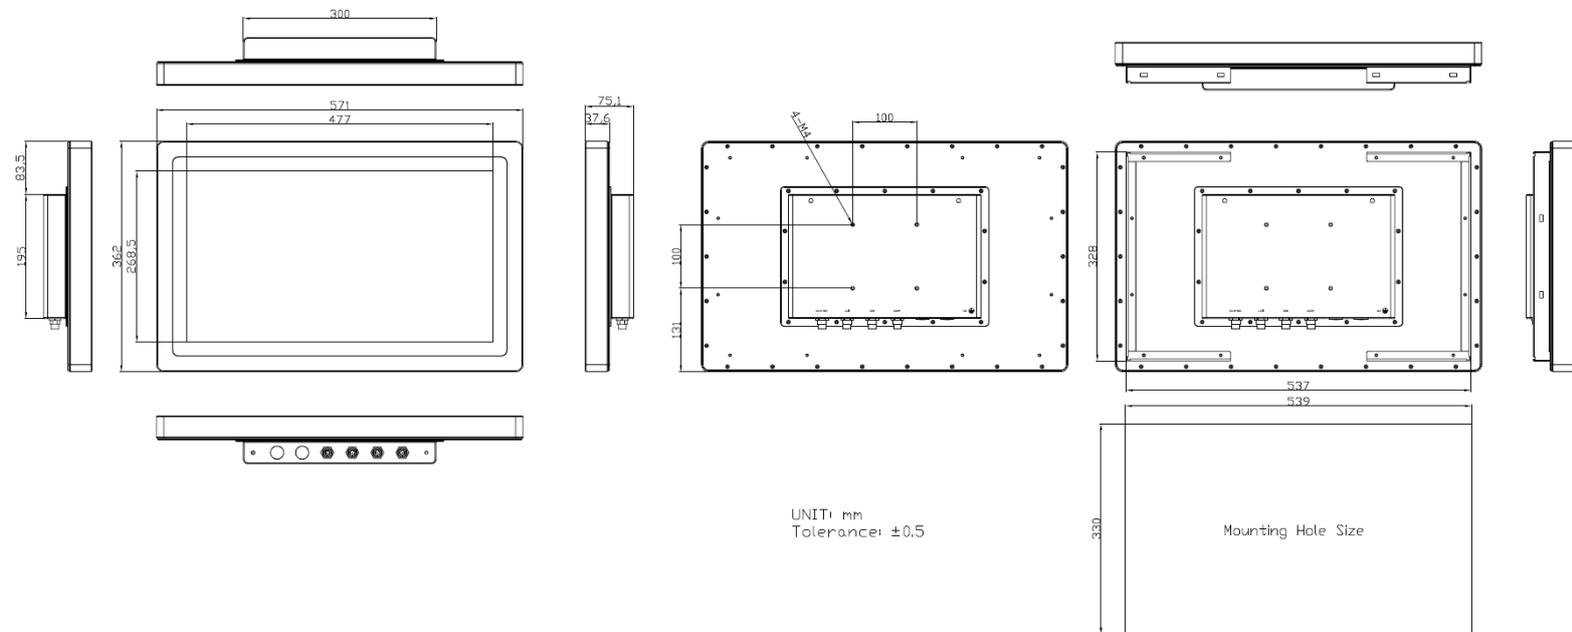


Figure 1.4: Dimensions of AEx-821P

1.4 Brief Description of AEx-8XXP(H) Series

AEx-8XXP(H) are panel PC series models for ATEX certification, which comes with full waterproof with IP66 level designed. It is powered by Intel Celeron N2930 processor and supports 8GB DDR3L onboard memory. It comes with a 15", 15.6", 19", and 21.5" color TFT display. This model are designed by full waterproof connector with 1x USB2.0 function, 2x LAN, 1x COM and 1x VGA for standard I/O port. The model supports wide range DC 9~36V power input and can be panel mounted and VESA mounted. AEx-8XXP(H) series has more outstanding features, thus you can use it in some difficult environment and give the best in monitoring and control applications.



Figure 1.5: Front View of AEx-8XXP (H) Series



Figure 1.6: Rear View of AEx-8XXP (H) Series

1.5 VESA Mounting

The AEx-8XXP(H) series is designed to be VESA mounted as shown in Picture. Just carefully place the unit through the hole and tighten the given screws from the rear to secure the mounting.

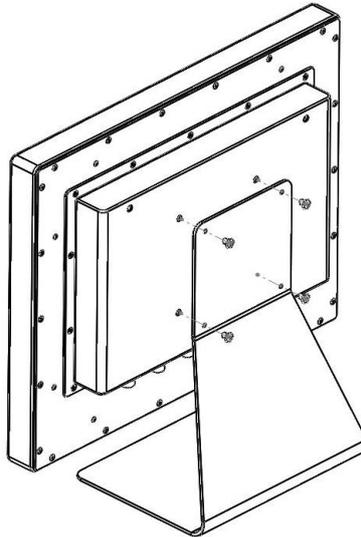


Figure 1.7: AEx-8XXP (H) Series VESA Mounting

1.6 Panel Mounting

There are six holes located along the four sides of the panel PC. Insert the clamp from the four sides and tighten them with the nuts provided.

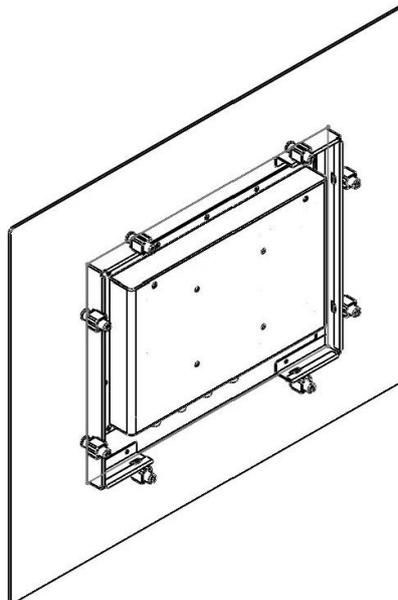


Figure 1.8: AEx-8XXP (H) Series Panel Mounting

2.1 Motherboard Introduction


SBC-7111 is a 4" industrial motherboard developed on the basis of Intel Bay trail-I/M Processors, which provides abundant peripheral interfaces to meet the needs of different customers. Also, it features dual GbE ports, 3-COM ports and one Mini PCIE configuration, one VGA port, one HDMI port, one LVDS interface. To satisfy the special needs of high-end customers, CN1 and CN2 and CN3 richer extension functions. The product is widely used in various sectors of industrial control.

2.2 Specifications

Specifications	
Board Size	170mm x 113mm
CPU Support	Intel Atom E3845 / 1.91GHz (4cores, 10W, onboard) Intel Celeron N2930 / 1.83 up to 2.16GHz (4cores, option)
Chipset	SoC
Memory Support	Onboard 2GB DDR3L SDRAM (N2930, option) Onboard 4GB DDR3L SDRAM (E3845/N2930, option) Onboard 8GB DDR3L SDRAM (N2930, option)
Graphics	Intel® HD Graphics 313/854MHz (N2930) Intel® HD Graphics 542/792MHz (E3845)
Display Mode	1 x HDMI Port 1 x LVDS (18/24-bit dual LVDS) 1 x CRT Port
Support Resolution	Up to 1920 x 1200 for HDMI Up to 1920 x 1200 for LVDS (PS8625) Up to 1920 x 1200 for CRT
Dual Display	HDMI + LVDS HDMI + CRT LVDS + CRT
Super I/O	ITE IT8518E Fintek F81216AD

BIOS	AMI/UEFI
Storage	1 x SATAII Connector (7Pin, option) 1 x SATAII Connector (7Pin + 15Pin) 1 x SD Slot (USB2 to SD, option)
Ethernet	2 x PCIe GbE LAN by Intel 82574L
USB	USB 3.0 Hub(USB5534): 2 x USB 3.0/USB 2.0 (type A)stack ports (E2_USB5/E2_USB6) 1 x USB 2.0 for Touch controller (E2_USB7) 1 x USB 2.0 Pin header for CN1 (E2_USB8) USB 2.0 Hub(USB2514) 1 x USB 2.0 Pin header for CN2 (E-USB9) 2 x USB 2.0 Pin header for CN3 (E-USB10/E-USB11) 1 x USB 2.0 for MPCIE1 (E-USB12)
Serial	1 x RS232/RS422/RS485 port, DB9 connector for external (COM1) Pin 9 w/5V/12V/Ring select 1 x RS232 port, DB9 connector for external (COM2) Pin 9 w/5V/12V/Ring select 2 x UART for CN3 (COM3,COM4) 2 x RS422/485 header for CN2 (IT8518E/COM5/COM6)
Digital I/O	8-bit digital I/O by Pin header (CN2) 4-bit digital Input 4-bit digital Output 4-bit digital I/O by Pin header (CN3) 2-bit digital Input 2-bit digital Output
Battery	Support CR2477 Li battery by 2-pin header (BAT1/CMOS)
Audio	Support Audio via Realtek ALC662-VD HD audio codec Support Line-in, Line-out, MIC by 2x6-pin header
Keyboard /Mouse	1 x PS2 keyboard/mouse by box pin header (CN3)
Expansion Bus	1 x mini-PCI-express slot 1 x PCI-express (CN3)
Touch Ctrl	1 x Touch ctrl header for TCH1 (PM6000 for USB4 or COM6)
Power Management	Wide Range DC6V~36V input 1 x 3-pin power input connector (DC_IN1/DC6~36V)

	1 x 4-pin power input connector (DC_IN2/DC12V)
Switches and LED Indicators	1 x Power on/off switch (BT1/BT2/P_SW/CN2/CN3) 1 x Reset (CN2) 1 x Power LED status (CN1) 1 x HDD LED status (CN2) 1 x Buzzer
External I/O port	2 x COM Ports (COM1/COM2) 2 x USB 3.0/2.0 Ports (stack) 2 x RJ45 GbE LAN Ports 1 x HDMI Port 1 x Stack audio Jack (Line out) 1 x Power on/off switch (BT1)
Temperature	Operating: -20°C to 70°C Storage: -40°C to 85°C
Humidity	10% - 90%, non-condensing, operating
Power Consumption	12V /0.80A (Intel Atom E3845 processor with 4GB DDR3L DRAM) 12V /0.60A (Intel Atom E3815 processor with 2GB DDR3L DRAM) 12V /0.70A (Intel Celeron N2930 processor with 4GB DDR3L DRAM)
EMI/EMS	Meet CE/FCC class A

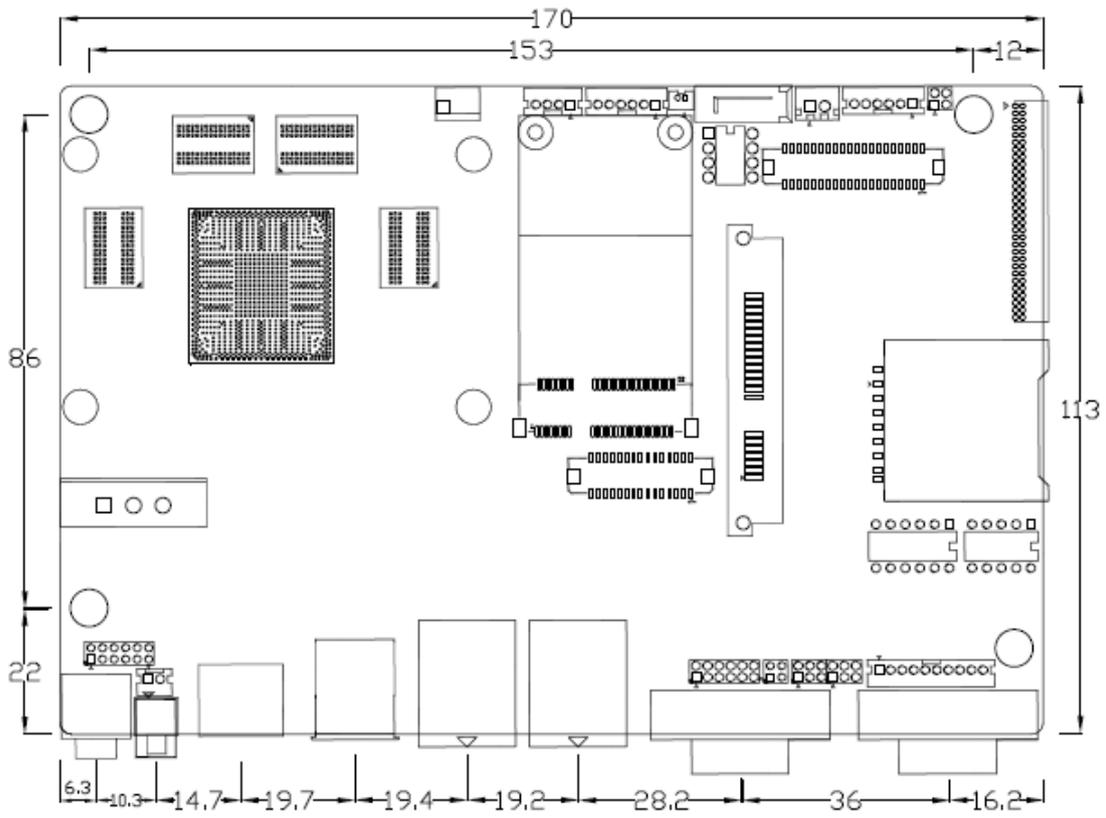

(units :mm)

Figure 2.1: Motherboard Dimensions

2.3 Jumpers and Connectors Location

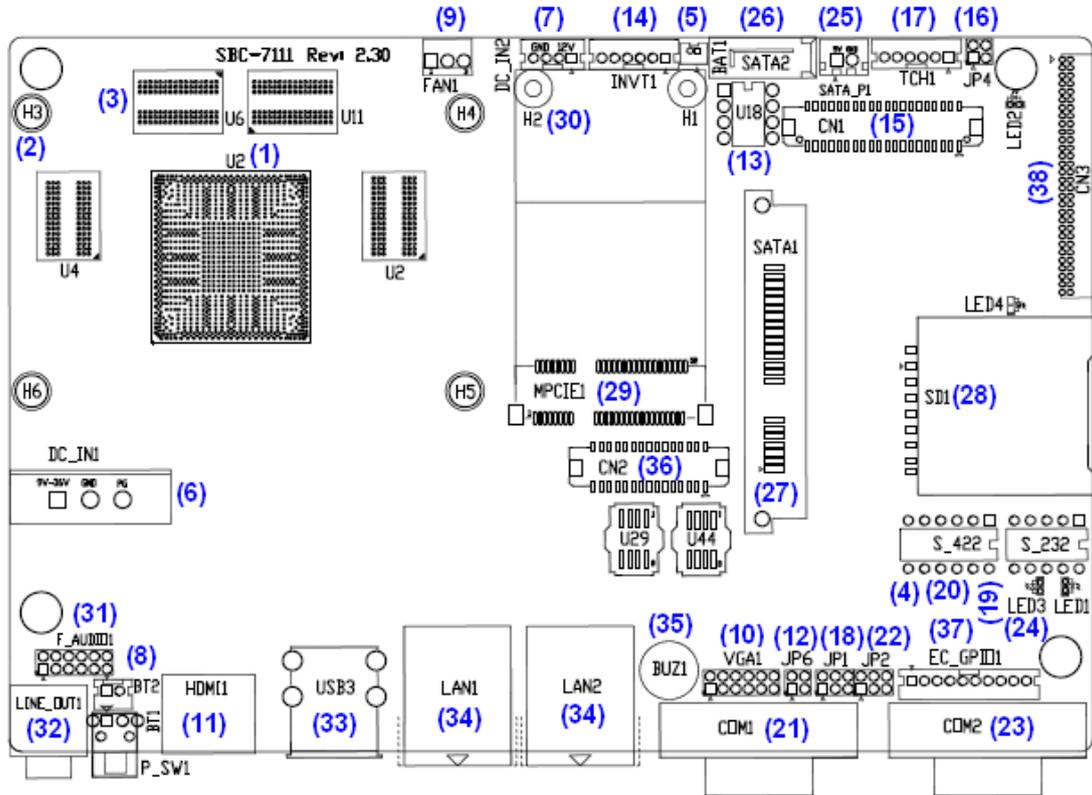


Figure 2.2: Jumpers and Connectors Location- Board Top

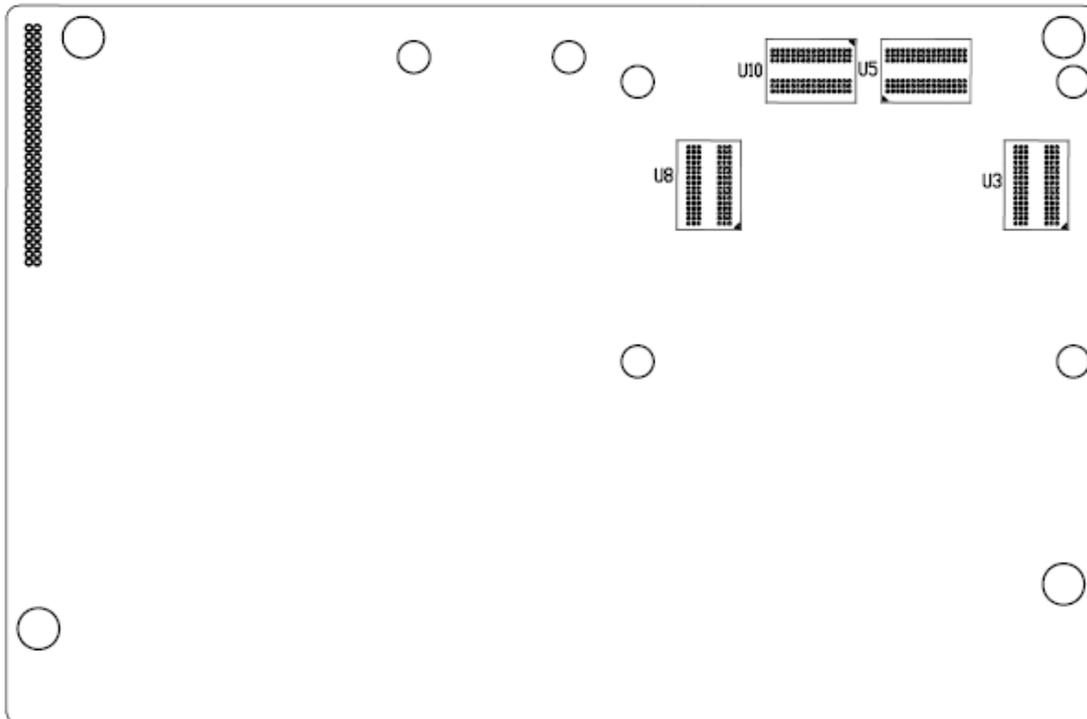


Figure 2.3: Jumpers and Connectors Location- Board Bottom

2.4 Jumpers Setting and Connectors

1. U2:

(FCBGA1170), onboard Intel Bay trail-I/M Processors.

Model	Processor				
	Number	PBF	Cores/Threads	TDP	Remarks
SBC-7111-N2930-4G	N2930	1.83 up to 2.16GHz	4 / 4	4.5/7.5W	
SBC-7111-N2930-4G-SW					
SBC-7111-N2930P-4G					
SBC-7111-N2930-2G					
SBC-7111-N2930P-CN3V-2G					
SBC-7111-N2930-8G					
SBC-7111-E3845-4G	E3845	1.91GHz	4 / 4	10W	option

2. H3/H4/H5/H6 (option):

U2 Heat Sink Screw holes, four screw holes for Intel Bay trail-I/M Processors
Heat Sink assemble.

3. U3/U4/U5/U6:

(FBGA96), Onboard DDR3L Memory.

Model	Memory
SBC-7111-N2930-4G	4GB
SBC-7111-N2930-4G-SW	4GB (option)
SBC-7111-N2930P-4G	4GB (option)
SBC-7111-E3845-4G	4GB (option)
SBC-7111-N2930-2G	2GB (option)
SBC-7111-N2930P-CN3V-2G	2GB (option)
SBC-7111-N2930-8G	8GB (option)

4. S-422 (PIN6):

(Switch), ATX Power and Auto Power on jumper setting.

S-422(Switch)	Mode
Pin6 (Off)	Manual Power on
Pin6 (On)	Auto Power on (Default)

5. BAT1:

(1.25mm Pitch 1x2 Wafer Pin Header) 3.0V Li battery is embedded to provide power for CMOS.

Pin#	Signal Name
1	VBAT
2	Ground

6. DC_IN1:

(5.08mm Pitch 1x3 Pin Connector), DC9~36V System power input connector.

Pin#	Power Input
1	DC+6V~36V
2	Ground
3	FG

Model	DC_IN1
SBC-7111-N2930-4G	180°Connector
SBC-7111-N2930-4G-SW	180°Connector
SBC-7111-N2930-2G	180°Connector
SBC-7111-N2930-8G	180°Connector
SBC-7111-E3845-4G	180°Connector
SBC-7111-N2930P-4G	45°Connector
SBC-7111-N2930P-CN3V-2G	45°Connector

7. DC_IN2 (option):

(2.0mm Pitch 1x8 wafer Pin Header) DC12V System power input connector.

Pin#	Signal Name
1	VCC_BAT (DC+12V input)
2	VCC_BAT (DC+12V input)
3	Ground
4	Ground

8. BT1/BT2/P_SW (option):

Power on/off button, it is used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

Model	BT1	BT2	P_SW1
SBC-7111-N2930-4G	●	●	○
SBC-7111-N2930P-4G	●	●	○
SBC-7111-N2930-2G	●	●	○

SBC-7111-N2930-8G	●	●	○
SBC-7111-E3845-4G	●	●	○
SBC-7111-N2930P-CN3V-2G	○	●	○
SBC-7111-N2930-4G-SW	○	●	●

9. FAN1(option):

(2.54mm Pitch 1x3 Pin Header), Fan connector, cooling fans can be connected directly for use. You may set the rotation condition of cooling fan in menu of BIOS CMOS Setup.



Pin#	Signal Name
1	Ground
2	VCC
3	Rotation detection



Note:

Output power of cooling fan must be limited under 5W.

Model	FAN1
SBC-7111-N2930-4G	○
SBC-7111-N2930-4G-SW	○
SBC-7111-N2930P-4G	○
SBC-7111-N2930P-CN3V-2G	○
SBC-7111-E3845-4G	○
SBC-7111-N2930-2G	○
SBC-7111-N2930-8G	○

10. VGA1:

(CRT 2.0mm Pitch 2x6 Pin Header), Video Graphic Array Port, Provide 2x6Pin cable to VGA Port.


Signal Name	Pin#	Pin#	Signal Name
CRT_RED	1	2	Ground
CRT_GREEN	3	4	Ground
CRT_BLUE	5	6	VGA_EN
CRT_H_SYNC	7	8	CRT_DDCDATA
CRT_V_SYNC	9	10	CRT_DDCCLK

Ground	11	12	Ground
--------	----	----	--------

VGA hot plug setting:	
VGA1 (Pin Header)	Function
Pin4-Pin6 (Close)	VGA Simulation Disabled
Pin4-Pin6 (Open)	VGA Simulation Enabled
Use the 2.0mm jumper cap to close pin4 and pin6	


11. HDMI1:

(HDMI 19P Connector), High Definition Multimedia Interface connector.

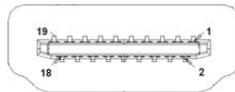

12. JP6:

(2.0mm Pitch 2x2 Pin Header), LVDS jumper setting.

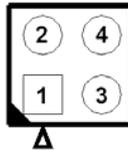

JP6	Function (CN1)
Pin1-Pin2 (Close)	Single channel LVDS
Pin1-Pin2 (Open)	Dual channel LVDS (Default)
Pin3-Pin4 (Close)	8/24 bit (Default)
Pin3-Pin4 (Open)	6/18 bit


13. U18:

AT24C02-DIP8, The EEPROM IC (U18) is the set of LVDS resolution. If you need other resolution settings, please upgrade U18 data.

Model	LVDS resolution
SBC-7111-N2930-4G	1280*1024 (Default)
SBC-7111-N2930-4G-SW	800*480 (option)
SBC-7111-N2930P-4G	800*600 (option)
SBC-7111-N2930P-CN3V-2	1024*768 (option)
G	1920*1080 (option)
SBC-7111-N2930-2G	-----
SBC-7111-N2930-8G	
SBC-7111-E3845-4G	

14. INVT1:

(2.0mm Pitch 1x6 wafer Pin Header), Backlight control connector for LVDS.

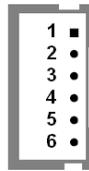

Pin#	Signal Name
1	+DC12V
2	+DC12V
3	Ground
4	Ground
5	BKLT_EN_OUT
6	BKLT_CTRL

15. CN1:


(1.25mm Pitch 2x20 Connector, DF13-40P), for 18/24-bit LVDS output connector, fully supported by Parad PS8625(DP to LVDS), the interface features dual channel 24-bit output. Low Voltage Differential Signaling, A high speed, low power data transmission standard used for display connections to LCD panels.

Function	Signal Name	Pin#	Pin#	Signal Name	Function
LVDS	12V_S0	2	1	12V_S0	LVDS
	BKLT_EN_OUT	4	3	BKLT_CTRL	
	Ground	6	5	Ground	
	LVDS_VDD5	8	7	LVDS_VDD5	
	LVDS_VDD3	10	9	LVDS_VDD3	
	Ground	12	11	Ground	
	LA_D0_P	14	13	LA_D0_N	
	LA_D1_P	16	15	LA_D1_N	
	LA_D2_P	18	17	LA_D2_N	
	LA_D3_P	20	19	LA_D3_N	
	LA_CLKP	22	21	LA_CLKN	
	LB_D0_P	24	23	LB_D0_N	
	LB_D1_P	26	25	LB_D1_N	
	LB_D2_P	28	27	LB_D2_N	
LB_D3_P	30	29	LB_D3_N		
LB_CLKP	32	31	LB_CLKN		
	Ground	34	33	Ground	E2-USB8
D2-USB8	E2-USB8_P	36	35	E2-USB8_N	
	5V_S5_USB	38	37	5V_S5_USB	

Power LED	PWR_LED+	40	39	Ground	Power LED
-----------	----------	----	----	--------	-----------

16. JP4 (Reserve):

(2.0mm Pitch 2x2 Pin Header).

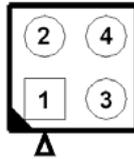

JP4	Function
Close 3-4 (default)	-
Open 1-2 (default)	-
Close 3-4 (option)	Hardware Enabled

17. TCH1:

(2.0mm Pitch 1x6 wafer Pin Header), internal Touch controller connector.

Pin#	Signal Name
1	SENSE
2	X+
3	X-
4	Y+
5	Y-
6	GND_EARCH

18. JP1:

(2.0mm Pitch 2x3 Pin Header), COM1 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM1 port.

JP1 Pin#	Function
Close 1-2	COM1 RI (Ring Indicator) (default)
Close 3-4	COM1 Pin9: DC+5V (option)
Close 5-6	COM1 Pin9: DC+12V (option)

19. S_232:

(Switch), COM1 jumper setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

Function	S_232 Pin# (switch)
RS232 (Default)	ON: Pin1, Pin2, Pin3, Pin4, Pin5
RS422 (option)	OFF: Pin1, Pin2, Pin3, Pin4, Pin5

RS485 (option)	OFF: Pin1, Pin2, Pin3, Pin4, Pin5
----------------	-----------------------------------

20. S_422:


(Switch), COM1 setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

Function	S_422 Pin# (switch)
RS232 (Default)	OFF: Pin1, Pin2, Pin3, Pin4, Pin5
RS422 (option)	ON: Pin1, Pin2, Pin3, Pin4, Pin5
RS485 (option)	ON: Pin1, Pin2, Pin3, Pin4, Pin5

S-422 (switch)	Mode
Pin6 (Off)	ATX Power
Pin6 (On)	Auto Power on (Default)

21. COM1:

(Type DB9M), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices. COM1 port is controlled by pins No.1~6 of JP1, select output Signal RI or 5V or 12V, for details, please refer to description of JP1 and S_232 and S_422 setting.

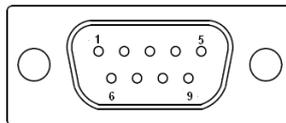

RS232 (Default)	
Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP1 select Setting (RI/5V/12V)
BIOS Setup: Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration 【RS-232】	
RS422 (option)	
Pin#	Signal Name
1	422_RX+

2	422_RX-
3	422_TX-
4	422_TX+
5	Ground
6	NC
7	NC
8	NC
9	NC
BIOS Setup: Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration 【RS-422】	

RS485 (option)	
Pin#	Signal Name
1	NC
2	NC
3	485-
4	485+
5	Ground
6	NC
7	NC
8	NC
9	NC
BIOS Setup: Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration 【RS-485】	


22. JP2:

(2.0mm Pitch 2x3 Pin Header), COM2 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM2 port.

JP2 Pin#	Function
Close 1-2	COM2 RI (Ring Indicator) (default)
Close 3-4	COM2 Pin9: DC+5V (option)
Close 5-6	COM2 Pin9: DC+12V (option)

23. COM2:

(Type DB9M), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

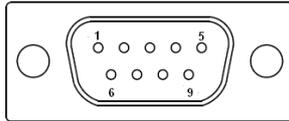

Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP2 select Setting (R1/5V/12V)

24. LED1, LED2, LED3, LED4 (option) :

LED1: LED STATUS. Green LED for Motherboard Power Good status.

LED2: LED STATUS. Green LED for Touch Power Status.

LED3: LED STATUS. Green LED for EC Power status.

LED4: LED STATUS. Green LED for Motherboard Power Good status.

25. SATA_P (option):

(2.5mm Pitch 1x2 box Pin Header), One onboard 5V output connector is reserved to provide power for SATA devices.

Pin#	Signal Name
1	+DC5V
2	Ground



Note:

Output current of the connector must not be above 1A.

Model	SATA_P (Wafer)
SBC-7111-N2930-4G	○
SBC-7111-N2930-4G-SW	○
SBC-7111-N2930P-4G	○
SBC-7111-N2930P-CN3V-2G	○
SBC-7111-E3845-4G	○
SBC-7111-N2930-2G	○
SBC-7111-N2930-8G	○

26. SATA2 (option):

(SATA 7Pin), SATA Connectors, one SATA connector is provided with transfer speed up to 3.0Gb/s.

Model	SATA2 (Connectors)
SBC-7111-N2930-4G	○
SBC-7111-N2930-4G-SW	○
SBC-7111-N2930P-4G	○
SBC-7111-N2930P-CN3V-2G	○
SBC-7111-E3845-4G	○
SBC-7111-N2930-2G	○
SBC-7111-N2930-8G	○

27. SATA1:

(SATA 7Pin+15Pin), SATA Connectors, one SATA connector is provided with transfer speed up to 3.0Gb/s.

28. SD1:

(SD card slot), Secure Digital Memory Card socket.

29. MPCIE1:

(Socket 52Pin), mini PCIe socket, it is located at the top, it supports mini PCIe devices with USB2.0 and LPC and SMBUS and PCIe signal. MPCie card size is 30x50.95mm.

30. H1/H2:

MPCIE1 SCREW HOLES, H1and H2 for mini PCIE card (30mmx50.95mm) assemble.

31. F_AUDIO1:

(2.0mm Pitch 2X6 Pin Header), Front Audio, An onboard Realtek ALC662-VD codec is used to provide high-quality audio I/O ports. Line Out can be connected to a headphone or amplifier. Line In is used for the connection of external audio source via a Line in cable. MIC is the port for microphone input audio.

Signal Name	Pin#	Pin#	Signal Name
+5V	1	2	GND_AUD
LINE-OUT-L	3	4	LINE-OUT-R
FRONT_JD	5	6	LINE1_JD
LINE_IN-L	7	8	LINE-IN-R

MIC-IN-L	9	10	MIC-IN-R
GND-AUD	11	12	MIC1_JD

32. LINE_OUT1:


(Diameter 3.5mm Jack), HD Audio port, an onboard Realtek ALC662-VD codec is used to provide high quality audio I/O ports. Line Out can be connected to a headphone or amplifier.



Model	LINE_OUT1
SBC-7111-N2930-4G	●
SBC-7111-N2930P-4G	●
SBC-7111-N2930-2G	●
SBC-7111-N2930-8G	●
SBC-7111-E3845-4G	●
SBC-7111-N2930P-CN3V-2G	○
SBC-7111-N2930-4G-SW	●

33. USB3:

USB0/USB3: (Double stack USB type A), Rear USB connector, it provides up to two USB3.0 ports, one USB2.0 port, supports USB full-speed and low-speed signaling.

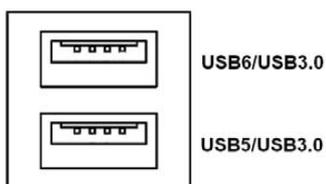


Each USB Type A Receptacle (2 Ports) Current limited value is 2.0A.

If the external USB device current exceeds 2.0A, please separate connectors into different Receptacle.

34. LAN1/LAN2:

LAN1/LAN2: (RJ45 Connector), Rear LAN port, Two standard 10/100/1000M RJ-45 Ethernet ports are provided. Use Intel 82574L chipset, LINK LED (green) and ACTIVE LED (yellow) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.

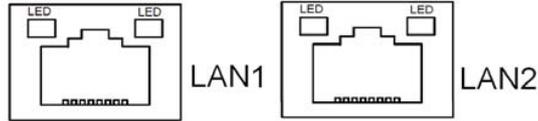

Model	RJ45(LAN1)	RJ45(LAN2)
SBC-7111-N2930-4G	●	●
SBC-7111-N2930P-4G	●	●
SBC-7111-N2930-2G	●	●
SBC-7111-N2930-8G	●	●
SBC-7111-E3845-4G	●	●
SBC-7111-N2930P-CN3V-2G	●	○
SBC-7111-N2930-4G-SW	●	●

35. BUZ1:

Onboard buzzer.

36. CN2:

(DF13-30P Connector) For expand output connector, It provides eight GPIO, one RS422 or RS485, one USB2.0, one Power on/off, one Reset.

Function	Signal Name	Pin#	Pin#	Signal Name	Function
5V	5V_S5	2	1	5V_S5	5V
SOC_GPIO10	GPIO_IN2	4	3	GPIO_IN1	SOC_SPIO09
SOC_GPIO26	GPIO_IN4	6	5	GPIO_IN3	SOC_GPIO17
SOC_GPIO05	GPIO_OUT2	8	7	GPIO_OUT1	SOC_GPIO04
SOC_GPIO08	GPIO_OUT4	10	9	GPIO_OUT3	SOC_GPIO06
	Ground	12	11	Ground	
485 or 422	485+_422TX5+	14	13	485-_422TX5-	485 or 422
RS422(COM5)	422_RX5+	16	15	422_RX5-	RS422(COM5)
485 or 422	485+_422TX6+	18	17	485-_422TX6-	485 or 422
RS422(COM6)	422_RX6+	20	19	422_RX6-	RS422(COM6)
5V	5V_S0	22	21	HDD_LED+	HDD LED
USB2.0	5V_USB09	24	23	5V_USB09	USB2.0
	E_USB9_P	26	25	E_USB9_N	
	Ground	28	27	FP_RST-	RESET
Power auto on	PWRBTN_ON	30	29	Ground	

COM5/COM6 BIOS Setup:

Advanced/IT8518Super IO Configuration/Serial Port 1 Configuration **【RS-485】**

Advanced/IT8518Super IO Configuration/Serial Port 1 Configuration **【RS-422】**

37. EC_GPIO1 (option):

(2.0mm Pitch 1X10 Pin Header)For expand connector, it provides eight GPIO.

Pin#	Signal Name
1	Ground
2	GPA0_ONOFF
3	GPA1_SPK-
4	GPE6_BKLT-
5	GPE0_BKLT+
6	SPKGPC3_SPK+
7	BKL_CTRL_PWR
8	ADC6_BKLT_CTRL
9	ADC7_L_SENSE
10	3.3V

Function	EC_GPIO1
Backlight Automatic dimming	○
Backlight manual dimming	○

38. CN3:


(1.27mm Pitch 2x30 Female Header), for expand output connector, it provides four GPIO, two USB 2.0,one PS/2 mouse, one PS/2 keyboard, two UARTs, one PCIe1, one SMBus connect to the TB-528 riser Card.

Function	Signal Name	Pin#	Pin#	Signal Name	Function
	5V_S5_USB	1	2	5V_S5_USB	
	5V_S5_USB	3	4	5V_S5_USB	
	USB1011_OC	5	6	PSON_ATX-	
Exp-USB10	E-USB10_N	7	8	E-USB10_P	Exp-USB10
Exp-USB11	E-USB11_N	9	10	E-USB11_P	Exp-USB11
	Ground	11	12	Ground	
Not Support	PS2_MSCLK	13	14	PS2_MSDATA	Not Support
	PS2_KBCLK	15	16	PS2_KBDATA	
COM4 (UART)	COM4_RI	17	18	COM4_DCD-	COM4 (UART)
	COM4_TXD	19	20	COM4_RXD	
	COM4_DTR	21	22	RICOM4_RTS-	

	COM4_DSR	23	24	COM_CTS-	
	Ground	25	26	Ground	
COM3 (UART)	COM3_RI	27	28	COM3_DCD-	COM3 (UART)
	COM3_TXD	29	30	COM3_RXD	
	COM3_DTR	31	32	DSRCOM3_RTS-	
	COM3_DSR	33	34	DTRCOM3_CTS-	
GPIO23	SOC_GPIO23	35	36	ICH_GPIO22	GPIO22
GPIO25	SOC_GPIO25	37	38	ICH_GPIO24	GPIO24
	Ground	39	40	Ground	
PCIE 1X	PCIE_TX0_DN	41	42	PCIE_TX0_DP	PCIE 1X
	PCIE_RX0_DN	43	44	PCIE_RX0_DP	
	Ground	45	46	Ground	
	PCIE_REFCLK0_DN	47	48	PCIE_REFCLK0_DP	
	PCIE0_WAKE_N	49	50	PLTRST_3P3_N	
SMBUS	SMB_CLK_S0	51	52	SMB_DATA_S0	SMBUS
PCIE	PCIE_CLKREQ0_N	53	54	Ground	
	3P3V_S5	55	56	PWRBTN_ON-	Power Auto on
	3P3V_S5	57	58	3P3V_S5	
12V	12V_S0	59	60	12V_S0	12V

Model	CN3(connector)
SBC-7111-N2930-4G	90°Connector
SBC-7111-N2930-4G-SW	90°Connector
SBC-7111-N2930-2G	90°Connector
SBC-7111-N2930-8G	90°Connector
SBC-7111-E3845-4G	90°Connector
SBC-7111-N2930P-4G	90°Connector
SBC-7111-N2930P-CN3V-2G	180°Connector

39. TB-528Series:

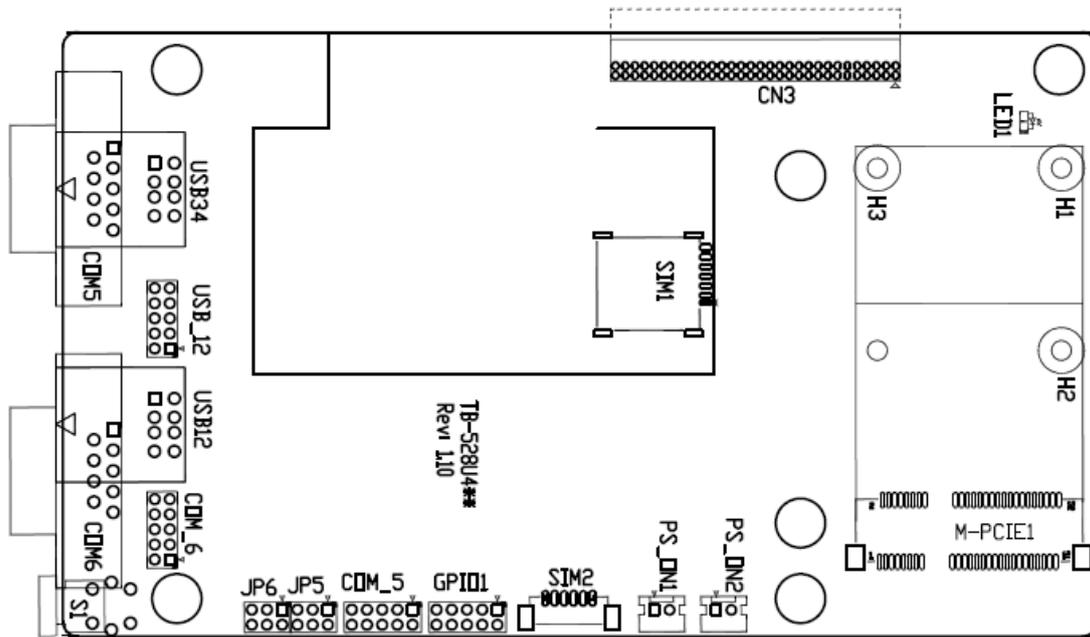

No.	Model	CN3 2*30P	S1	USB12 TypeA	USB34 TypeA	USB_12 2*5P	COM5 DB9	COM6 DB9	COM_5 2*5P	COM_6 2*5P	JP5 2*3P	JP6 2*3P	GPIO 2*5P	SIM1 Socket	SIM2 1*6P	M_PCIE1 52P	PS_ON1 1*2P	PS_ON2 1*2P
1	TB-528U4C2ME1P1 R110	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
2	TB-528U4ME1 R110	●	●	●	●	○	○	○	○	○	○	○	●	○	○	●	●	●
3	TB-528U4 R110	●	○	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○
4	TB-528C1U2P1 R110	●	●	●	○	○	●	○	○	○	●	○	○	○	○	○	●	●
5	TB-528C1U2 R110	●	○	●	○	○	●	○	○	○	●	○	●	○	○	○	●	●
6	TB-528C2ME1 R110	●	○	○	○	○	●	●	○	○	●	●	●	○	○	●	●	●
7	TB-528C2 R110	●	○	○	○	○	●	●	○	○	●	●	○	○	○	○	○	○

CN3 :

(1.27mm Pitch 2X30 Pin Header), connect to SBC-7118 CN2 pin Header.

M-PCIE1 :

(Socket 52Pin), mini PCIe socket, it is located at the top, it supports mini PCIe devices with **USB2.0(USB3)**, Smbus, SIM and PCIe signal. MPCie card size is 30x30mm or 30x50.95mm.

Signal Name	Function support
PCIe 1X	●
USB2.0 (USB2)	●
SMBus	●
SIM	●

H1/H2:

MPCIE1 SCREW HOLES, H2 for mini PCIE card (30mmx30mm) assemble. H1 for mini PCIE card (30mmx50.95mm) assemble.

LED1 :

Mini PCIe devices LED Status.

SIM1 :

(Nano SIM Socket 6 Pin), Support SIM Card devices.

SIM2(option) :

(1.25mm Pitch 1X6 Pin Wafer), For expansion SIM Card devices.


GPIO1 :

(2.0mm Pitch 2x5 Pin Header), General-purpose input/output port, it provides a group of self-programming interfaces to customers for flexible use.

Signal Name	Pin#	Pin#	Signal Name
Ground	1	2	GPIO_OUT1
GPIO_OUT2	3	4	SMB_DATA_R
SMB_CLK_R	5	6	GPIO_IN1
GPIO_IN2	7	8	GPIO_IN3
GPIO_IN4	9	10	+5V

USB12/USB34(USB-HUB) :

(Double stack USB type A), Rear USB connector, it provides up to 4 USB2.0 ports, speed up to 480Mb/s.

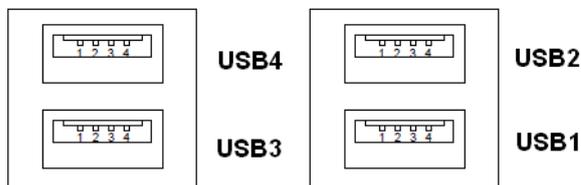**USB_12 :**

(2.0mm Pitch 2x5 Pin Header), Front USB connector, it provides two USB port via a dedicated USB cable, speed up to 480Mb/s.

Signal Name	Pin#	Pin#	Signal Name
5V_USB12	1	2	5V_USB12
E_USB1_N	3	4	E_USB2_N
E_USB1_P	5	6	E_USB2_P
Ground	7	8	Ground
NC	9	10	Ground



Note:

Before connection, make sure that pinout of the USB Cable is in accordance with that of the said tables. Any inconformity may cause system down and even hardware damages.


JP5 :

(2.0mm Pitch 2x3 Pin Header), COM5 setting jumper, pin 1~6 are used to select signal out of pin 9 of COM5 port.

JP5 Pin#	Function
Close 1-2	RI (Ring Indicator) (default)
Close 3-4	COM5 Pin9=+5V (option)
Close 5-6	COM5 Pin9=+12V (option)

COM5 :

(Type DB9), serial port, standard DB9 serial port is provided to make a direct connection to serial devices. COM5 port is controlled by pins No.1~6 of **JP5**, select output Signal RI or 5V or 12v, for details, please refer to description of JP3.

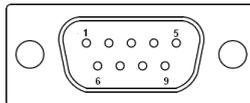

Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)

9	JP5 Setting: Pin1-2 : RI (Ring Indicator) (default) Pin3-4 : 5V Standby power (option) Pin5-6:12V Standby power (option)
---	--

COM_5 :

(2.0mm Pitch 2X5 Pin Header),COM5 Port, up to one standard RS232 port are provided. They can be used directly via COM cable connection.

Signal Name	Pin#	Pin#	Signal Name
DCD	1	2	RXD
TXD	3	4	DTR
Ground	5	6	DSR
RTS	7	8	CTS
JP6 Setting: RI/5V/12V	9	10	NC


JP6 :

(2.0mm Pitch 2x3 Pin Header), COM6 setting jumper, pin 1~6 are used to select signal out of pin 9 of COM6 port.

JP6 Pin#	Function
Close 1-2	RI (Ring Indicator) (default)
Close 3-4	COM6 Pin9=+5V (option)
Close 5-6	COM6 Pin9=+12V (option)

COM6 :

(Type DB9), serial port, standard DB9 serial port is provided to make a direct connection to serial devices. COM6 port is controlled by pins No.1~6 of **JP6**, select output Signal RI or 5V or 12v, for details, please refer to description of JP6.

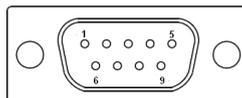

Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)

5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP6 Setting: Pin1-2 : RI (Ring Indicator) (default) Pin3-4 : 5V Standby power (option) Pin5-6:12V Standby power (option)

COM_6 :

(2.0mm Pitch 2X5 Pin Header), COM6 Port, up to one standard RS232 port are provided. They can be used directly via COM cable connection.

Signal Name	Pin#	Pin#	Signal Name
DCD	1	2	RXD
TXD	3	4	DTR
Ground	5	6	DSR
RTS	7	8	CTS
JP6 Setting: RI/5V/12V	9	10	NC

PS_ON1 :

(2.0mm Pitch 1X2 Pin Wafer), ATX Power and Auto Power on jumper setting.

PS_ON	Mode
Close 1-2	Auto Power on (Default)
Open 1-2	ATX Power

PS_ON2(option) :

(2.0mm Pitch 1X2 Pin Wafer).

S1 :


PWR BT: POWER on/off Button, They are used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

PWR LED: POWER LED status.

39-1. TB-528CAN2 R2.00:

SBC-7118 IO expansion card, providing two CAN-bus Interface.

TB-528CAN2 Top :

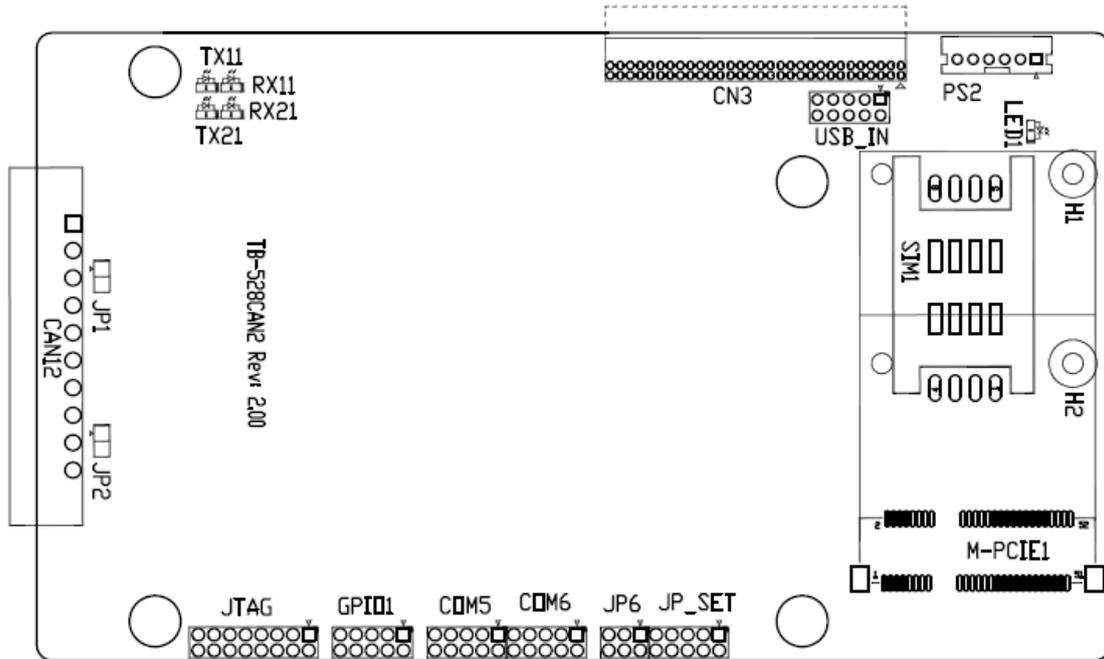

CN3 :

(1.27mm Pitch 2X30 Pin Header),connect to SBC-7118 CN2 pin Header.

M-PCIE1 :

(Socket 52Pin),mini PCIe socket, it is located at the top, it supports mini PCIe devices with Smbus,USB2.0,SIM and PCIe signal. MPCie card size is 30x30mm or 30x50.95mm.

Signal Name	Function support
PCIe 1X	Yes
USB2.0 (USB2)	Yes
SMBus	Yes
SIM	Yes

H1/H2:

MPCIE1 SCREW HOLES, H2 for mini PCIE card (30mmx30mm) assemble. H1 for mini PCIE card (30mmx50.95mm) assemble.

LED1 :

Mini PCIe devices LED Status

SIM1(option) :

(SIM Socket 6 Pin), Support SIM Card devices

PS2 :

(2.0mm Pitch 1X6 Pin Wafer), PS/2 keyboard and mouse port, the port can be connected to PS/2 keyboard or mouse via a dedicated cable for direct used.

Pin#	Signal Name
1	KBDATA
2	MSDATA
3	Ground
4	+5V
5	KBCLK
6	MSCLK

USB_IN(option) :

(2.0mm Pitch 2x5 Pin Header) ,Front USB connector, it provides two USB port via a dedicated USB cable, speed up to 480Mb/s.

Signal Name	Pin#	Pin#	Signal Name
5V_USB34	1	2	5V_USB34
NC (USB4_N)	3	4	NC (USB3_N)
NC (USB4_P)	5	6	NC (USB3_P)
Ground	7	8	Ground
NC	9	10	Ground



Note:

Before connection, make sure that pinout of the USB Cable is in accordance with that of the said tables. Any inconformity may cause system down and even hardware damages.

JP_SET(option) :

(2.0mm Pitch 2x5 Pin Header).

Signal Name	Pin#	Pin#	Signal Name
3P3V_S5_USB	1	2	3P3V_S5
3P3V_S5_USB	3	4	3P3V_S5
3P3V_S5_USB	5	6	3P3V_S5
PSON_ATX	7	8	Ground
PSON_ATX	9	10	Ground

JP6 :

(2.0mm Pitch 2x3 Pin Header), COM6 setting jumper, pin 1~6 are used to select signal out of pin 9 of COM6 port.

JP3 Pin#	Function
Close 1-2	RI (Ring Indicator) (default)
Close 3-4	COM6 Pin9 : +5V (option)
Close 5-6	COM6 Pin9 : +12V (option)

COM6(SBC-7114/COM4) :

(2.0mm Pitch 2X5 Pin Header), COM6 Port, up to one standard RS232 port are provided. They can be used directly via COM cable connection.

Signal Name	Pin#	Pin#	Signal Name
DCD	1	2	RXD
TXD	3	4	DTR
Ground	5	6	DSR
RTS	7	8	CTS
JP6 Setting : RI/5V/12V	9	10	NC

COM5(SBC-7114/COM3) :

(2.0mm Pitch 2X5 Pin Header), COM5 Port, up to one standard RS232 port are provided. They can be used directly via COM cable connection.

Signal Name	Pin#	Pin#	Signal Name
DCD	1	2	RXD
TXD	3	4	DTR
Ground	5	6	DSR
RTS	7	8	CTS
RI	9	10	NC

GPIO1 :

(2.0mm Pitch 2x5 Pin Header), General-purpose input/output port, it provides a group of self-programming interfaces to customers for flexible use.

Signal Name	Pin#	Pin#	Signal Name
Ground	1	2	NC
NC	3	4	SMB_DATA_R
SMB_CLK_R	5	6	PCH-GPIO56
PCH -GPIO57	7	8	PCH -GPIO59
PCH -GPIO58	9	10	+5V

JTAG :

(2.0mm Pitch 2x5 Pin Header), Reserve.

JP1 :

(2.0mm Pitch 1x2 Pin Header), Reserve.

JP2 :

(2.0mm Pitch 1x2 Pin Header), Reserve.

CAN1/CAN2 :

(3.5mm Pitch 1x10 Pin connector), it provides two CAN-bus Interface.

Pin#	Channel	Signal Name	Function
1	CAN2	CANL2	CAN bus Signal L
2		R2-	Terminal resistor R-(internally connected to CANL2)
3		FG	Shield cable (FG)
4		R2+	Terminal resistor R+(internally connected to CANH2)
5		CANH2	CAN bus Signal H
6	CAN1	CANL1	CAN bus Signal L
7		R1-	Terminal resistor R-(internally connected to CANL1)
8		FG	Shield cable (FG)
9		R1+	Terminal resistor R+(internally connected to CANH1)
10		CANH1	CAN bus Signal H


【 See TB-528CAN2 Manual 】

39-2. TB-528E1U2/TB-528E1U2POE/TB-528E1U2UPOE:

SBC-7111 IO expansion card, providing USB2.0 and 1xGbE Lan expansion. Can support POE(Power over Ethernet) powered device via onboard POE module

Model	USB2.0 Type-A	GbE LAN	PoE
TB-528E1U2	●	●	NA
TB-528E1U2POE	●	●	30W PD
TB-528E1U2UPOE	●	●	45W PD

TB-528E1U2POE Top :

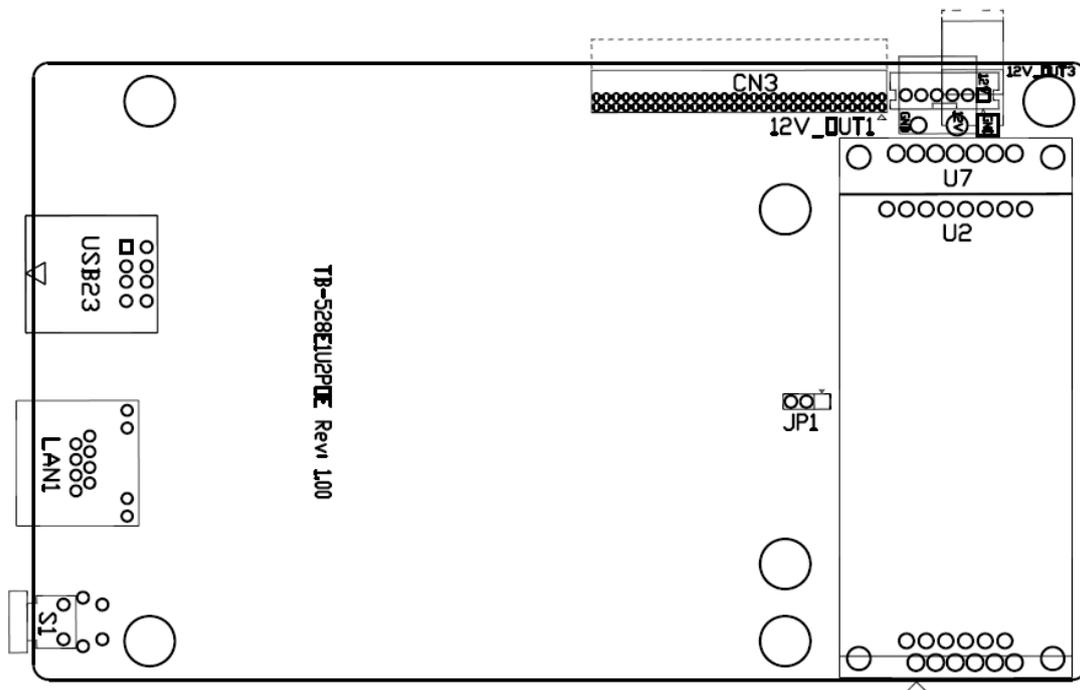


CN3 :

(1.27mm Pitch 2X30 Pin Header), connect to SBC-7118 CN2 pin Header.


USB2/3 :

(Double stack USB type A), Rear USB connector, it provides up to 2 USB2.0 ports, speed up to 480Mb/s.

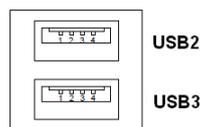

LAN1 :

(RJ45 Connector), Rear LAN port, one standard 10/100/1000M RJ-45 Ethernet ports are provided. Use Intel I211-AT chipset, LINK LED (green) and ACTIVE LED (green) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.

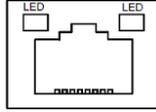

PSE Function support	
PSE output Voltage	DC44~ 57V


U2/U7 (Option) :

For onboard POE powered device module.

Model	PoE Module
TB-528E1U2POE	30W
TB-528E1U2UPOE	45W

12V_OUT1 :

(3.96mm Pitch 1x2 Pin Header), POE DC12V Output.

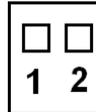

Pin#	Output Voltage
1	12V_POE
2	Ground

12V_OUT3(option) :

(2.0mm Pitch 1x6 Pin Header), Reserve.

12V_OUT1(option) :

(3.96mm Pitch 1x2 Pin Header), Reserve.

JP3(option) :

(2.0mm Pitch 1x3 Pin Header), Reserve.

S1(option) : Reserve

3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation, press [Delete] key to enter CMOS Setup.



After optimizing and exiting CMOS Setup, the POST screen displayed for the first time is as follows and includes basic information on BIOS, CPU, memory, and storage devices.

3.2 BIOS Setup Utility

Press [Delete] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.

3.3 Main Settings

Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc.					
Main	Advanced	Chipset	Security	Boot	Save & Exit
BIOS Information					Choose the system default
BIOS Vendor	American Megatrends			Language	
Core Version	5.010				
Compliancy	UEFI 2.4; PI 1.3				
Project Version	7111I 4.07 x64				
Build Date and Time	03/03/2016 15:18:10				
CPU Configuration					
Microcode Patch	901				
BayTrail SoC	DO Stepping				
KSC Information					
KSC Version	N/A				
Memory Information					
Total Memory	4096 MB (DDR3L)				
GOP Information					
Intel (R) GOP Driver	[N/A]				
TXE Information					→←: Select Screen
Sec RC Version	00.05.00.00			↑↓ : Select Item	
TXE FW Version	01.01.00.1089			Enter: Select	
System Language	[English]			+/- : Change Opt.	
System Date	[Sun 01/01/2012]			F1 : General Help	
System Time	[00:00:10]			F2: Previous Values	
				F3:Optimized Defaults	
				F4:Save and Exit	
				ESC Exit	
Version 2.17.1246. Copyright (C) 2016 American Megatrends , Inc.					

System Time:

Set the system time, the time format is:

Hour : 0 to 23

Minute : 0 to 59

Second : 0 to 59

System Date:

Set the system date, the date format is:


Day: Note that the 'Day' automatically changes when you set the date.

Month: 01 to 12

Date: 01 to 31

Year: 1998 to 2099

3.4 Advanced Settings

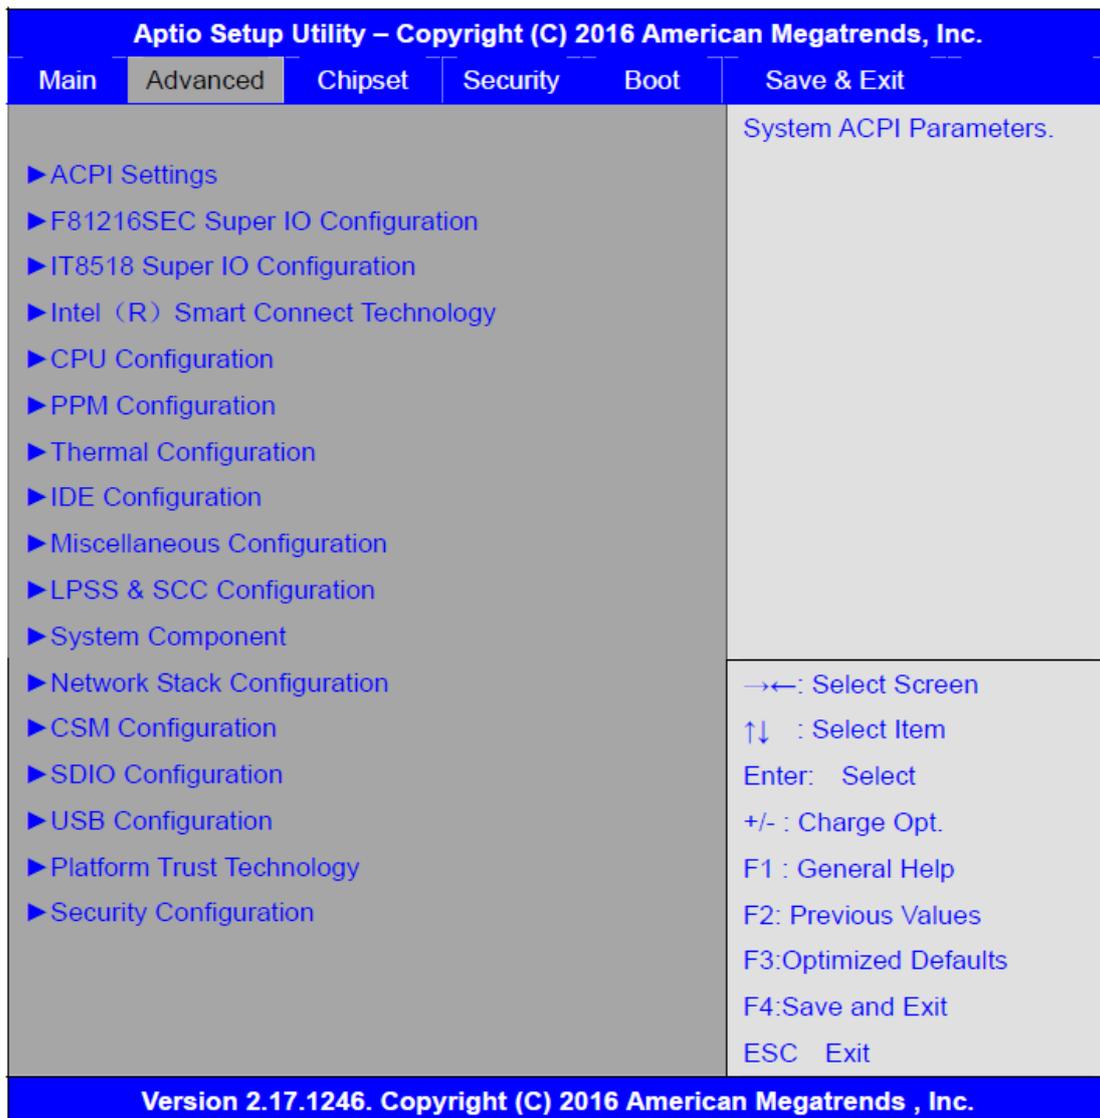

3.4.1 ACPI Settings

Enable ACPI Auto Conf:

[Disabled]

[Enabled]

Enable Hibernation:

[Enabled]

[Disabled]

ACPI Sleep State:

[S3 (Suspend to RAM)]

[Suspend Disabled]

Lock Legacy Resources:

[Disabled]

[Enabled]

3.4.2 F81216SEC Super IO Configuration

Super IO chip F81216SEC

Serial Port 1 Configuration

UART1 Mode Selection:

[RS-232]

[RS-485]

[RS-422]

Serial Port 2 Configuration

Change Settings [Auto]

Serial Port 3 Configuration

Change Settings [Auto]

Serial Port 4 Configuration

Change Settings [Auto]

3.4.3 IT8518 Super IO Configuration

Super IO chip IT8518/IT8519

Serial Port 1 Configuration

Backlight PWM Controller (COM5):

[RS-485]

[RS-422]

Serial Port 2 Configuration (COM6)

Change Settings [Auto]

[RS-485]

[RS-422]

3.4.4 Intel® Smart Connect Technology

ISCT Support

[Disabled]

[Enabled]

3.4.5 CPU Configuration

Socket 0 CPU Information

Intel® Atom™ CPU E3845 @ 1.91GHz

CPU Signature	30679
Microcode Patch	901
Max CPU Speed	1910 MHz
Mix CPU Speed	500 MHz
Processor Cores	4
Intel HT Technology	Not Supported
Intel HT-X Technology	Supported
L1 Data Cache	24KB x 4
L1 Code Cache	32KB x 4
L2 Cache	1024KB x 2
L2 Cache	Not Present

CPU Thermal configuration

CPU Speed	1918 MHz
64-bit	Supported
Hyper-Threading:	[Enabled] [Disabled]
Limit CPUID Maximum:	[Disabled] [Enabled]
Execute Disable Bit:	[Enabled] [Disabled]
Intel Virtualization Technology:	[Enabled] [Disabled]
Power Technology	[Energy Efficient] [Disabled] [Custom]

3.4.6 PPM Configuration

CPU C State Report	[Enabled] [Disabled]
Max CPU C-state	[C7] [C6] [C1]
SOix	[Disabled] [Enabled]

3.4.7 Thermal Configuration Parameters

3.4.8 IDE Configuration

Serial-ATA(SATA)	[Enabled] [Disabled]
SATA Test Mode	[Disabled] [Enabled]
SATA Speed Support	[Gen2] [Gen1]
SATA ODD Port	[No ODD] [Port0 ODD] [Port1 ODD] [Disabled]
SATA Mode	[AHCI Mode] [IDE Mode]
Serial-ATA Port 0	[Enabled] [Disabled]
SATA Port0 Hotplug	[Disabled] [Enabled]

Serial-ATA Port 1	[Enabled]
	[Disabled]
SATA Port1 Hotplug	[Disabled]
	[Enabled]
SATA Port0	
Not Present	
SATA Port1	
Not Present	

3.4.9 Miscellaneous Configuration

3.4.10 LPSS & SCC Configuration

LPSS & SCC Configuration	[ACPI Mode]
SCC Configuration	
SCC eMMC Support	[eMMC AUTO MODE]
SCC eMMC 4.5 DDR50 Support	[Enabled]
SCC eMMC 4.5 HS200 Support	[Disabled]
eMMC Secure Erase	[Disabled]
SCC SDIO Support	[Enabled]
SCC SD Card Support	[Enabled]
SDR25 Support for SDCard	[Disabled]
SDR50 Support for SDCard	[Enabled]
MIPI HSI Support	[Disabled]
LPSS Configuration	
LPSS DMA #1 Support	[Enabled]
LPSS DMA #2 Support	[Enabled]
LPSS I2C #1 Support	[Enabled]
LPSS I2C #2 Support	[Enabled]
LPSS I2C #3 Support	[Enabled]
LPSS I2C #4 Support	[Enabled]
LPSS I2C #5 Support	[Enabled]
LPSS I2C #6 Support	[Enabled]
LPSS I2C #7 Support	[Enabled]
NFC	[Disabled]
Touch Pad	[Disabled]

I2C touch Device Address	
LPSS HSUART #1 Support	[Disabled]
LPSS HSUART #2 Support	[Disabled]
LPSS PWM #1 Support	[Enabled]
LPSS PWM #2 Support	[Enabled]
LPSS SPI Support	[Enabled]

3.4.11 System Component

3.4.12 Network Stack Configuration

Network Stack	[Disabled]
---------------	------------

3.4.13 CSM Configuration

CSM Support	[Enabled]
CSM16 Module Version	07.76
GateA20 Active	[Upon Request]
	[Always]
Option ROM Messages	[Force BIOS]
	[Keep Current]
Boot option filter	[UEFI and Legacy]
	[Legacy only]
	[UEFI only]
Network	
	[UEFI]
	[Do not launch]
	[Legacy]
Storage	
	[UEFI]
	[Do not launch]
	[Legacy]
Video	
	[Legacy]
	[UEFI]
	[Do not launch]
Other PCI devices	
	[UEFI]
	[Do not launch]
	[Legacy]

3.4.14 SDIO Configuration

3.4.15 USB Configuration

USB Configuration

USB Module Version 8.11.02

USB Devices:

1 keyboard, 1 Mouse, 2 Hubs

Legacy USB Support:

[Enabled]

[Disabled]

XHCI Hand-off:

[Enabled]

[Disabled]

EHCI Hand-off:

[Disabled]

[Enabled]

USB Mass Storage Driver Support

[Enabled]

[Disabled]

USB hardware delays and time-outs:

USB transfer time-out:

[20 sec]

[10 sec]

[5 sec]

[1 sec]

Device reset time-out:

[20 sec]

[10 sec]

[30 sec]

[40 sec]

Device power-up delay

[Auto]

[Manual]

3.4.16 Platform Trust Technology


Ftpm

[Disabled]

[Enabled]

3.4.17 Security Configuration

3.5 Chipset Settings

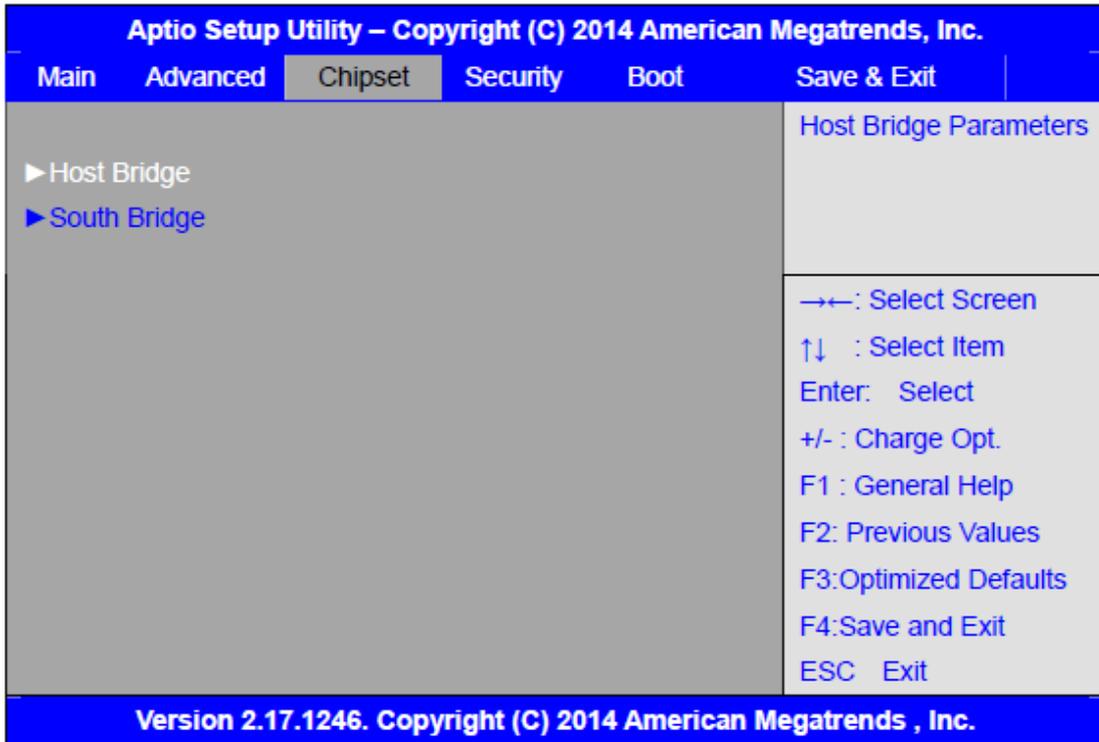

3.5.1 Host Bridge

▶ Intel IGD Configuration

▶ IGD – LCD Control

Force Lid Status	[On] [Off]
BIA	[Auto]
ALS Support	[Disabled]
IGD Flat Panel	[Auto]
Pannel Scaling	[Auto]

▶ Memory Frequency and Timing

▶ Graphics Power Management Control

Memory Information	
Total Memory	4096 MB(DDR3L)
Memory Slot0	4096 MB(DDR3L)
DIMM#1	Not Present
Max TOLUD	[Dynamic] [2GB]


	[2.25GB]
	[2.5GB]
	[2.75GB]
	[3GB]
Backlight PWM or DC Control	
	[PWM]
	[DC]
Backlight PWM Control	
	[PWM Normal by BIOS]
BIOS Control Backlight Level	
	[Level 7]
	[Level 0]
	[Level 1]
	[Level 2]
	[Level 3]
	[Level 4]
	[Level 5]
	[Level 6]
	[Level 8]
	[Level 9]
	[Level 10]
	[Level 11]
	[Level 12]
	[Level 13]
	[Level 14]
	[Level 15]
LCD Minimum brightness By Knob	
	[0%]
	[1%]
	[20%]

3.5.2 South Bridge

- ▶ Azalia HD Audio
- ▶ USB Configuration
 - USB OTG Support [Disabled]
 - USB VBUS [On]
 - XHCI Mode [Smart Auto]
 - USB2 Link Power Management [Enabled]

USB 2.0(EHCI) Support	[Enabled]
USB EHCI debug	[Disabled]
USB Per Port Control	[Enabled]
USB Port 0	[Enabled]
USB Port 1	[Enabled]
USB Port 2	[Enabled]
USB Port 3	[Enabled]

3.6 Security Settings

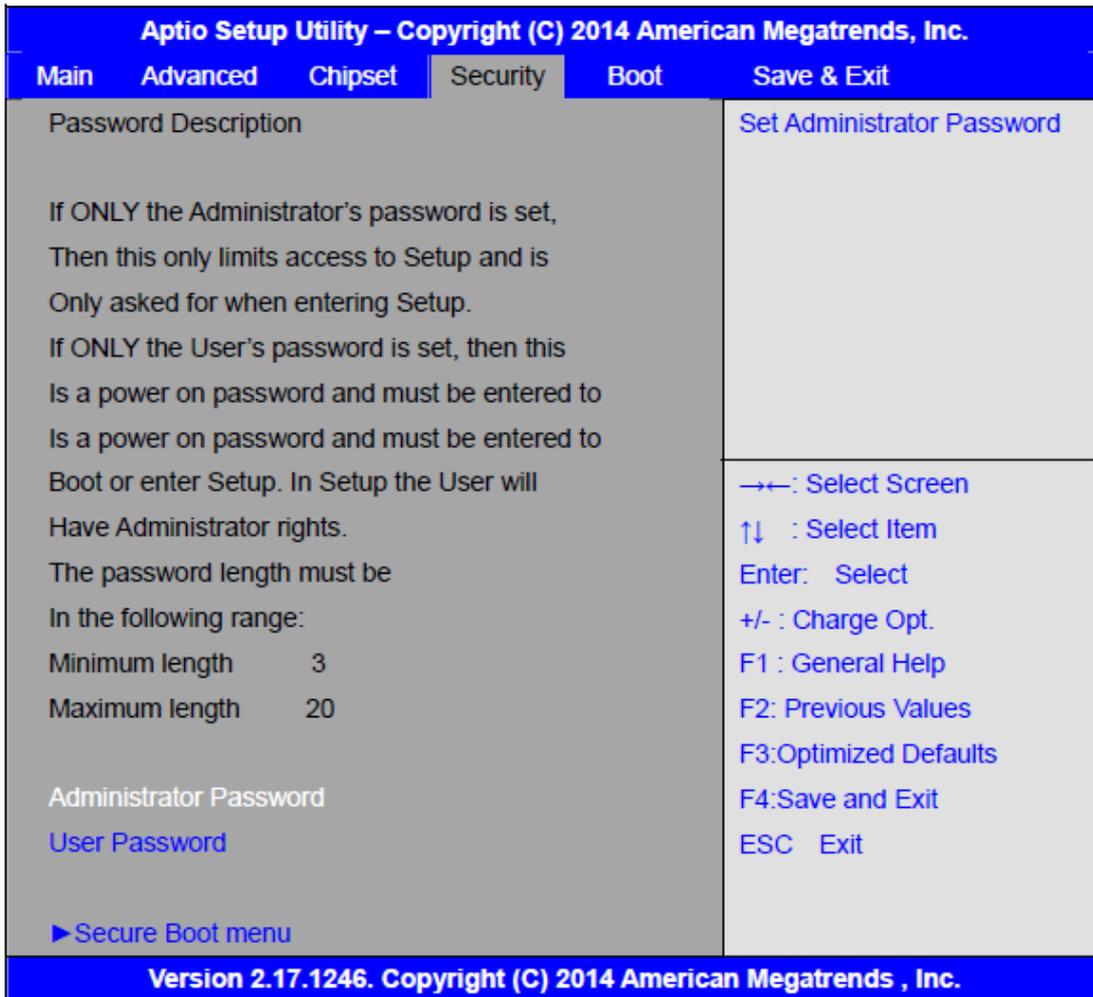

3.6.1 Administrator Password



3.6.2 User Password



Type the password with up to 20 characters and then press **<Enter>** key. This will clear all previously typed CMOS passwords. You will be requested to confirm the password. Type the password again and press **<Enter>** key. You may press **<Esc>** key to abandon password entry operation.


To clear the password, just press **<Enter>** key when password input window pops up. A confirmation message will be shown on the screen as to whether the password

will be disabled. You will have direct access to BIOS setup without typing any password after system reboot once the password is disabled.

Once the password feature is used, you will be requested to type the password each time you enter BIOS setup. This will prevent unauthorized persons from changing your system configurations.


Also, the feature is capable of requesting users to enter the password prior to system boot to control unauthorized access to your computer. Users may enable the feature in Security Option of Advanced BIOS Features. If Security Option is set to System, you will be requested to enter the password before system boot and when entering BIOS setup; if Security Option is set to Setup, you will be requested for password for entering BIOS setup.

3.7 Boot Settings

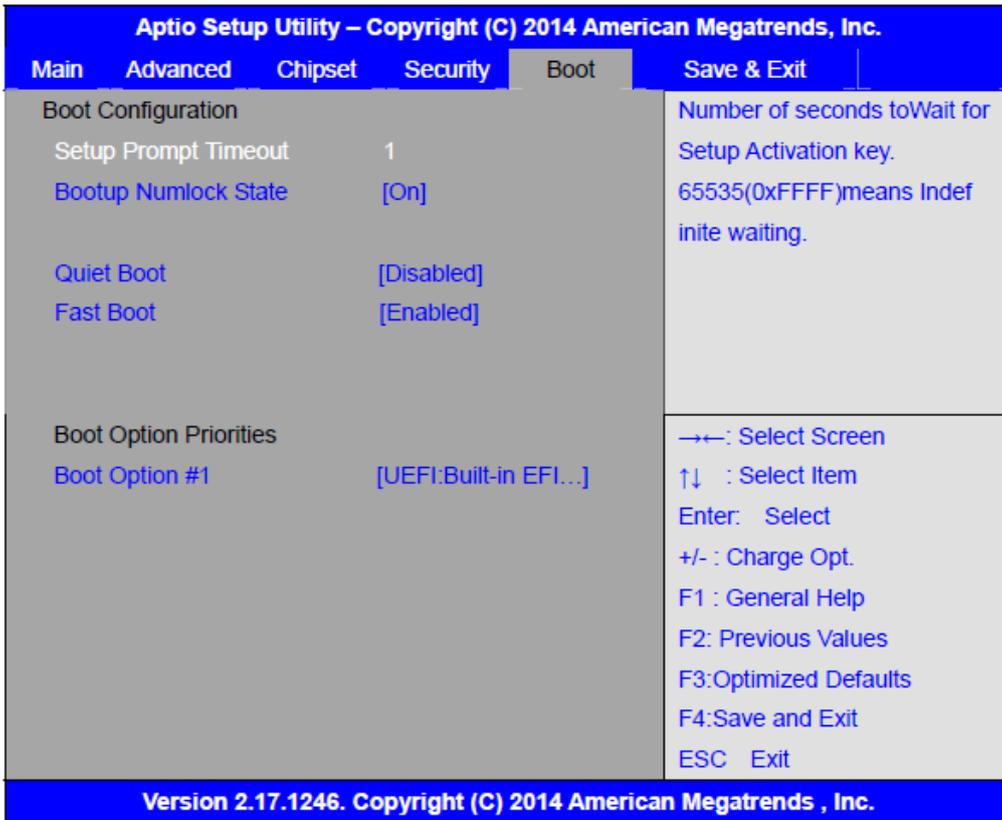

Setup Prompt Timeout	[1]
Bootup Numlock State	[On]
Quiet Boot	[off]
Fast Boot	[Disabled]
	[Enabled]
Boot Option Priorities	[Disabled]
Boot Option #1	[Enabled]
Hard Drive BBS Priorities	Sets the system boot order [SATA PM:*** ...] Boot Option #1 SATA PM:***... ***** Disabled

3.8 Save & Exit Settings

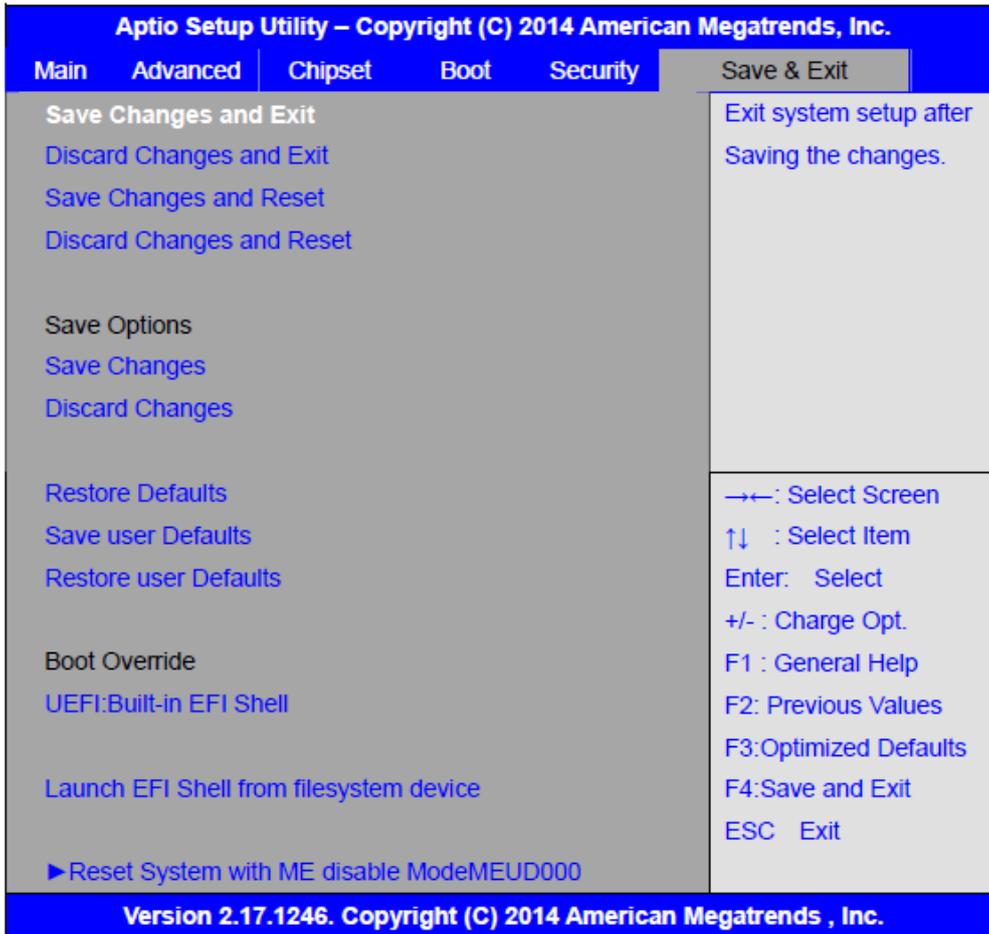

Save Changes and Exit

Save & Exit Setup save Configuration and exit ?

[Yes]

[No]

Discard Changes and Ext

Exit Without Saving Quit without saving?

[Yes]

[No]

Save Changes and Reset

Save & reset Save Configuration and reset?

[Yes]

[No]

Discard Changes and Reset

Reset Without Saving Reset without saving?

[Yes]

[No]

Save Changes

Save Setup Values Save configuration?

[Yes]

[No]

Discard Changes

Load Previous Values Load Previous Values?

[Yes]

[No]

Restore Defaults

Load Optimized Defaults Load optimized Defaults?

[Yes]

[No]

Save user Defaults

Save Values as User Defaults Save configuration?

[Yes]

[No]

Restore user Defaults

Restore User Defaults Restore User Defaults?

[Yes]

[No]

Launch EFI Shell from filesystem device

WARNING Not Found

[ok]

Reset System with ME disable ModeMEUD000

ME will runs into the temporary disable mode, Ignore if ME Ignition
FWMEUD001.

Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows 8.1 & 10. The software and drivers are included with the motherboard. The contents include **Intel/VGA chipset driver, Audio driver, Com Driver, and TXE(Win) Driver** Installation instructions are given below.

Important Note:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.




4.1 Intel® Atom™ SoC Chipset

To install the Intel chipset driver, please follow the steps below.


Step1. Select Intel® Atom™ SoC Chipset from the list




Step2. Here is welcome page. Please make sure you save and exit all programs before install. Click **Next**.

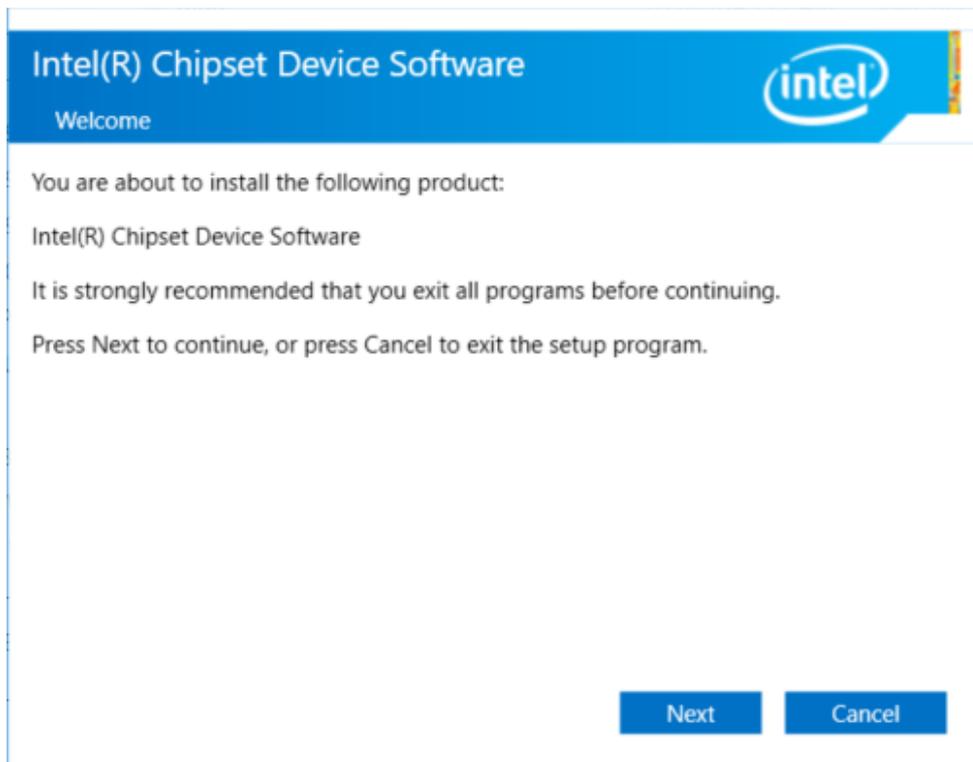

Step3. Read the license agreement. Click **Accept** to accept all of the terms of the license agreement.

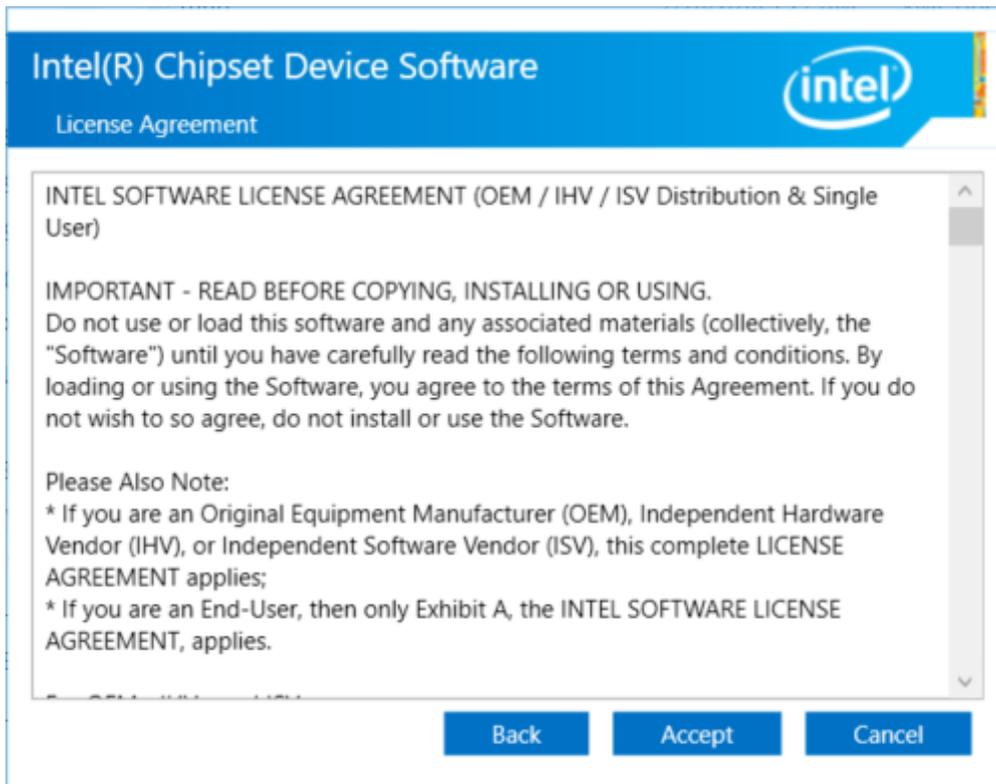

Step4. Click **Install** to begin the installation.

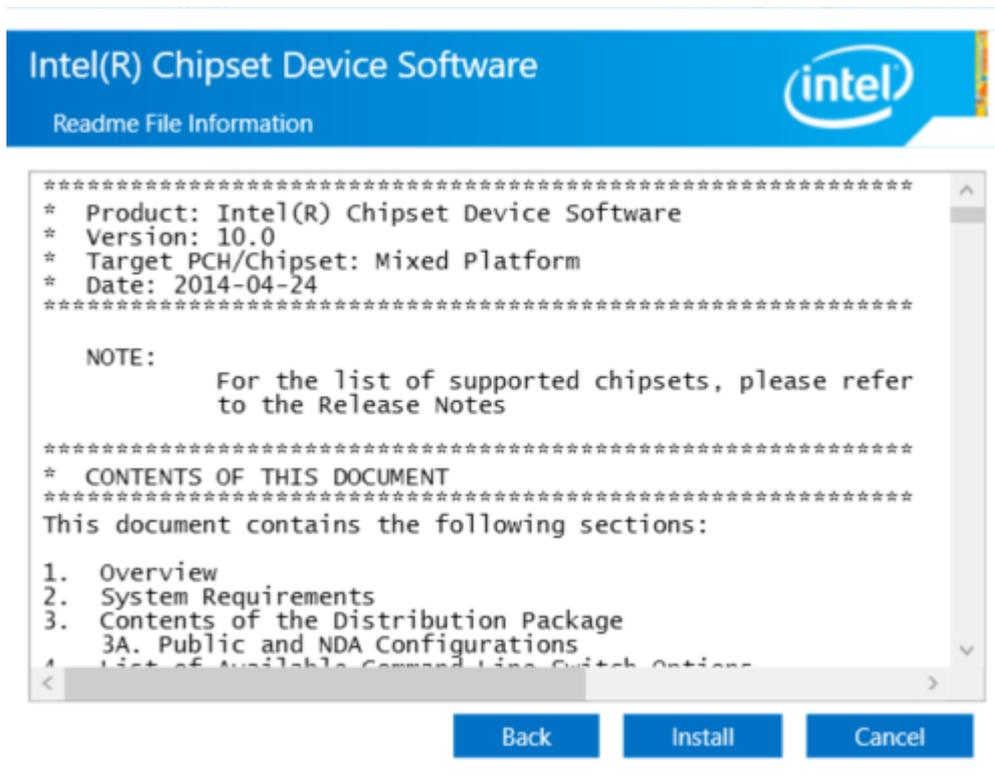

Step5. Click **Finish** to exit the wizard.




4.2 Intel® VGA Chipset

To install the Intel® VGA Chipset, please follow the steps below.


Step1. Select **Intel® VGA Chipset** from the list.




Step2. Click **Next**.

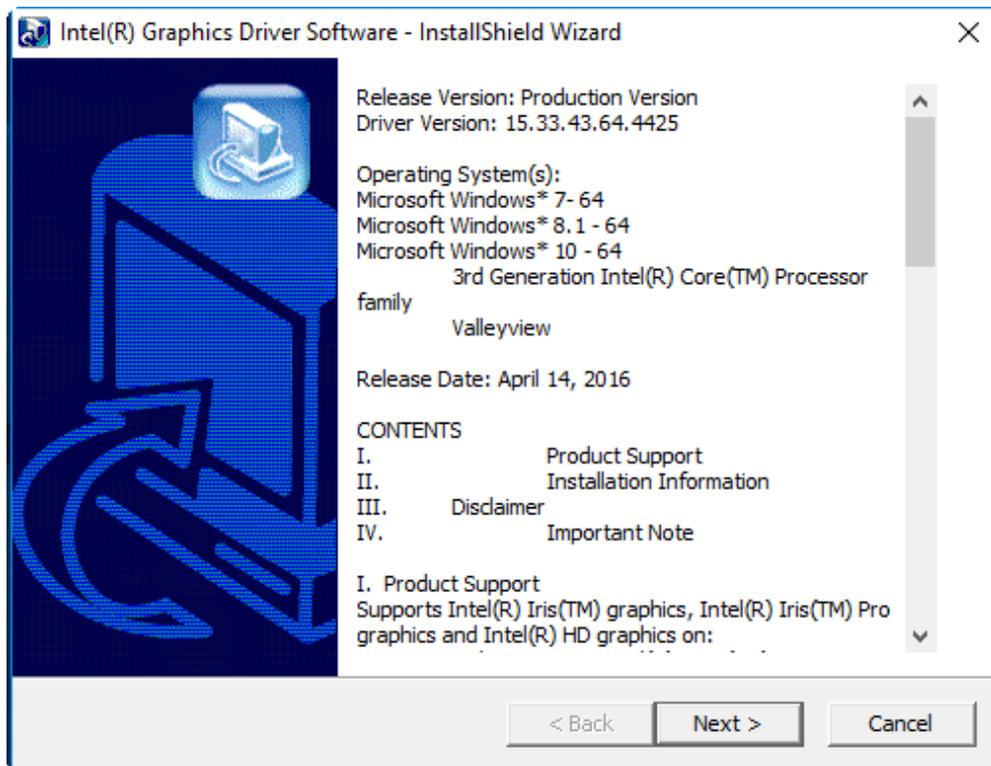


Step3. Choose **automatically run** function and Click **Next** to setup program.

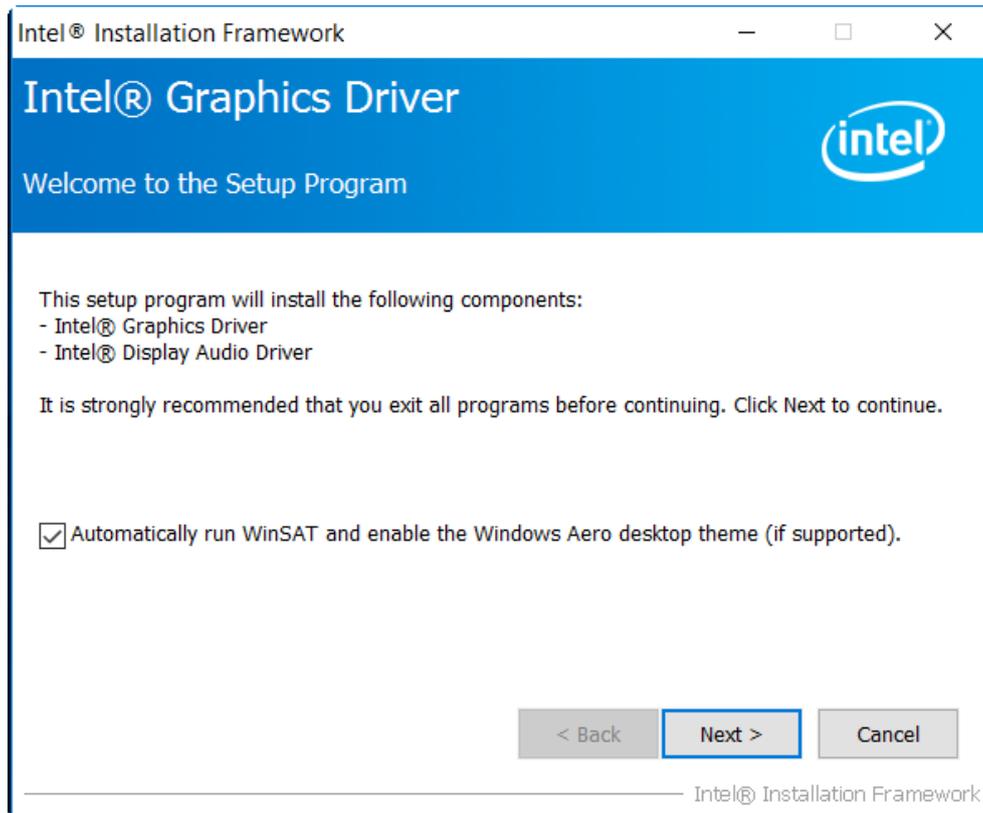


Step4. Read the license agreement. Click **Yes** to accept all of the terms of the license agreement.

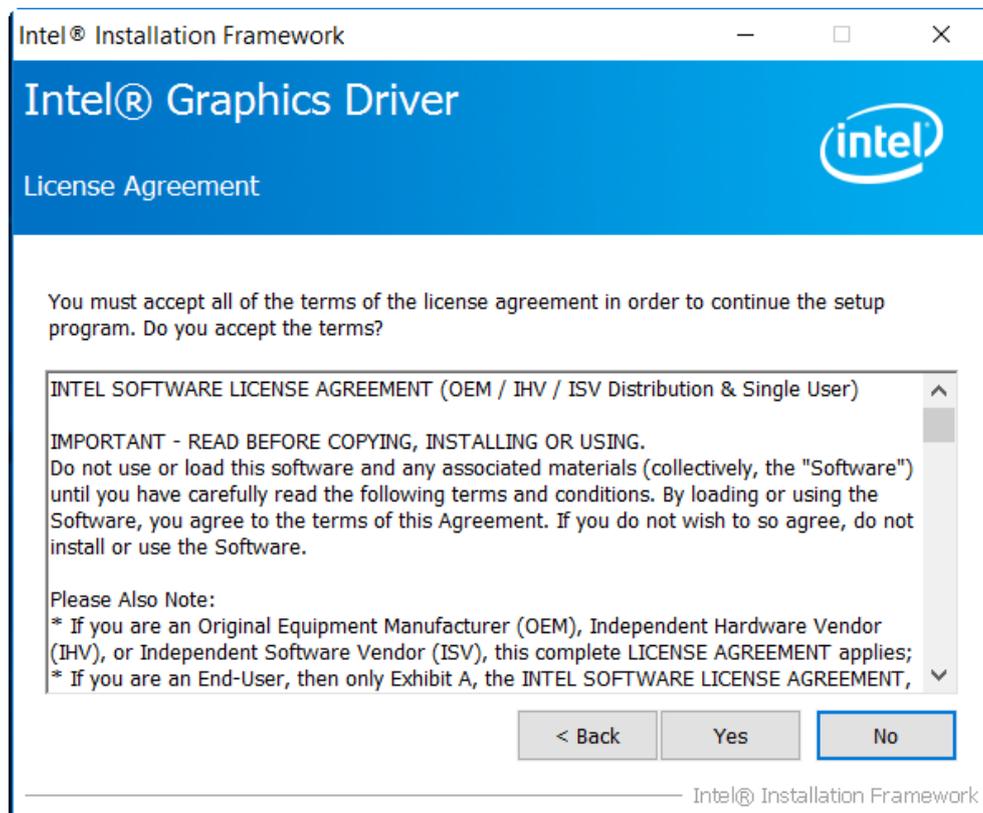


Step5. Click **Next** to continue.

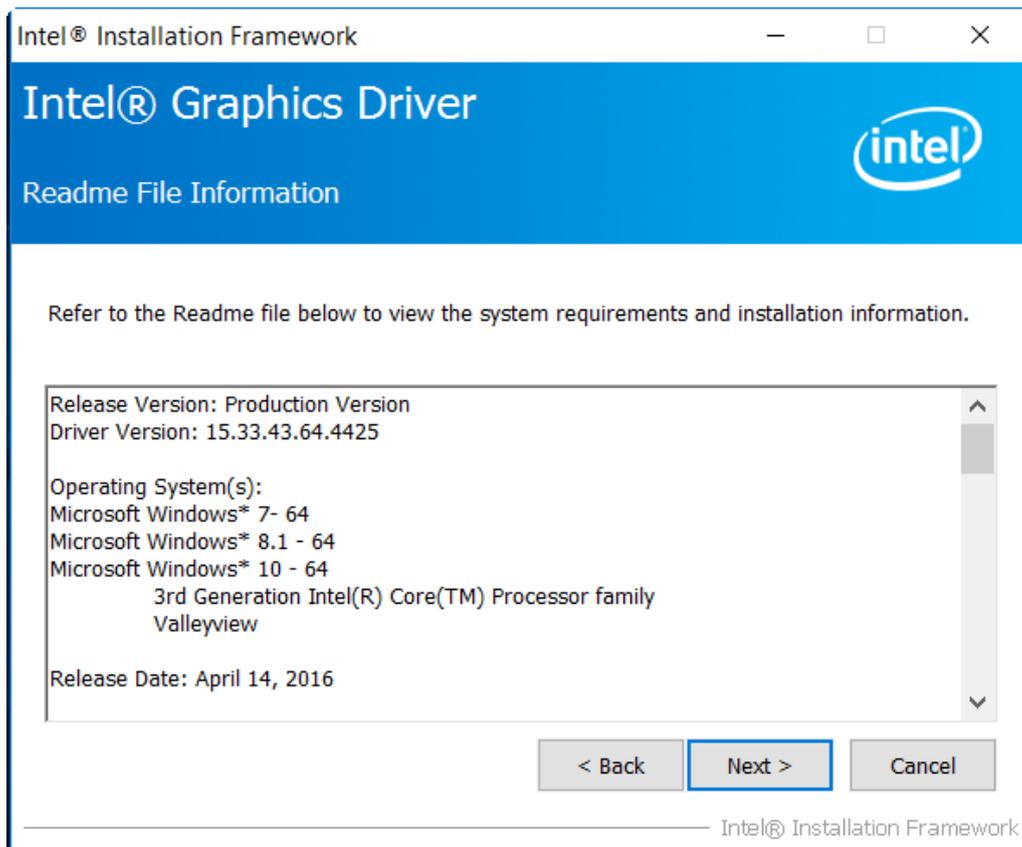

Step6. Click **Next** to continue.

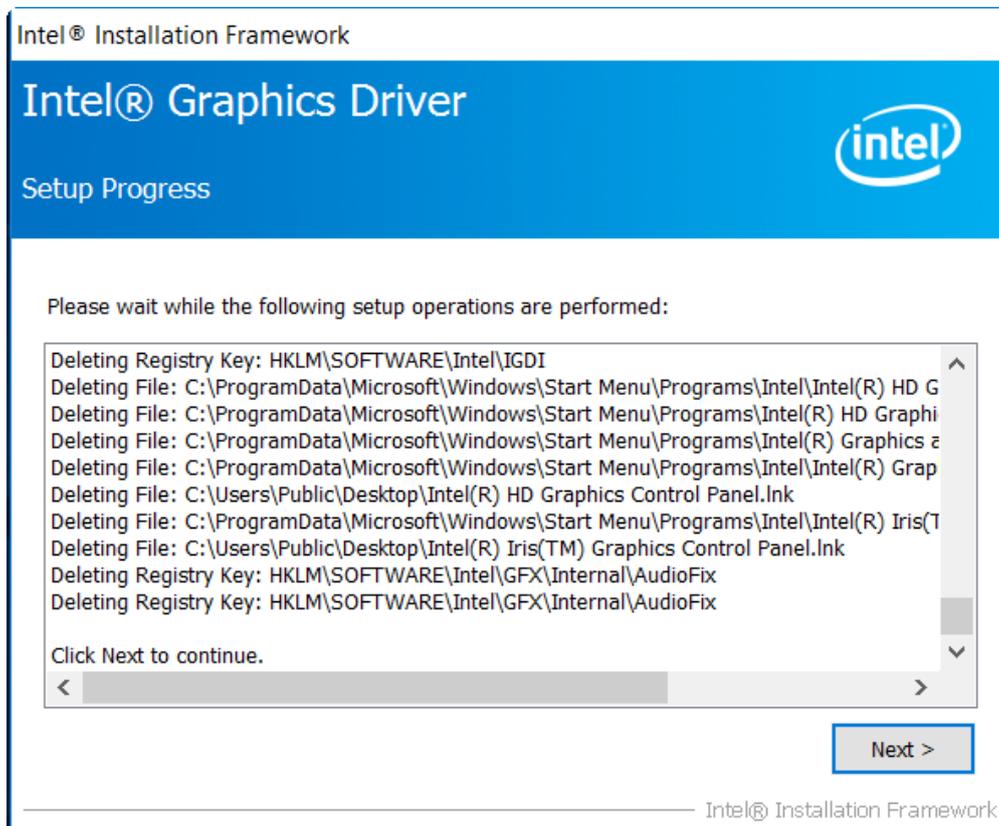

Step7. Select **Yes, I want to restart this computer now.** Click **Finish**, then remove any installation media from the drives.

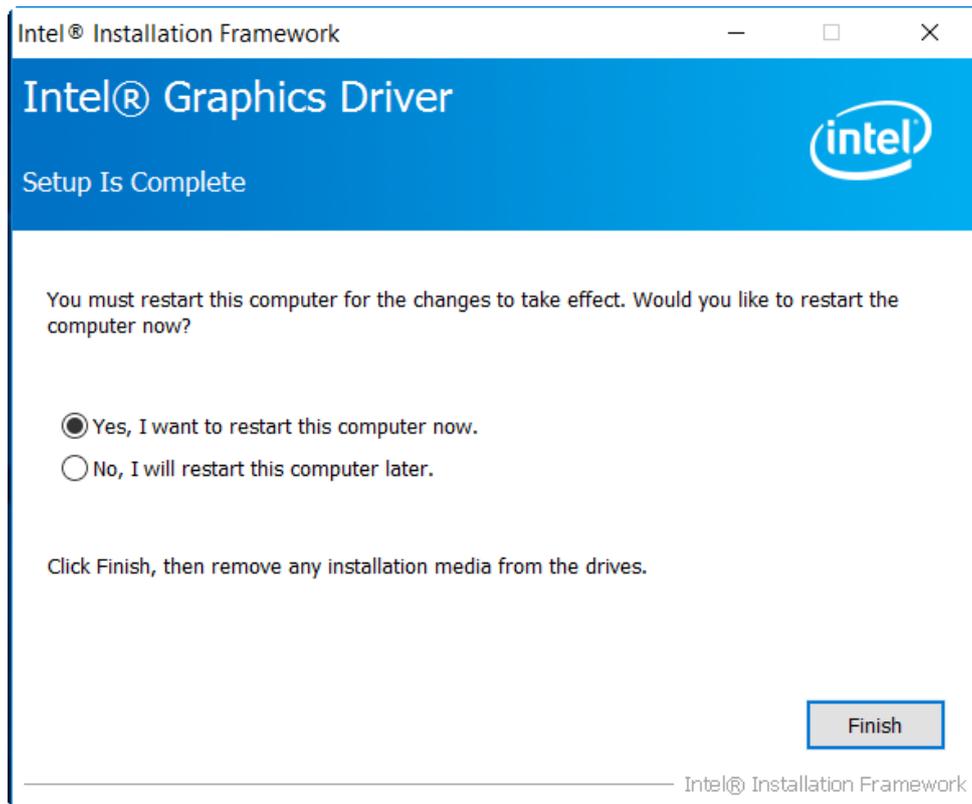


4.3 Realtek ALC662 HD Audio Driver Installation

To install the Realtek ALC662 HD Audio Driver, please follow the steps below.


Step1. Select **Realtek AL662 HD Audio Driver** from the list



Step2. Click **Next** to continue.

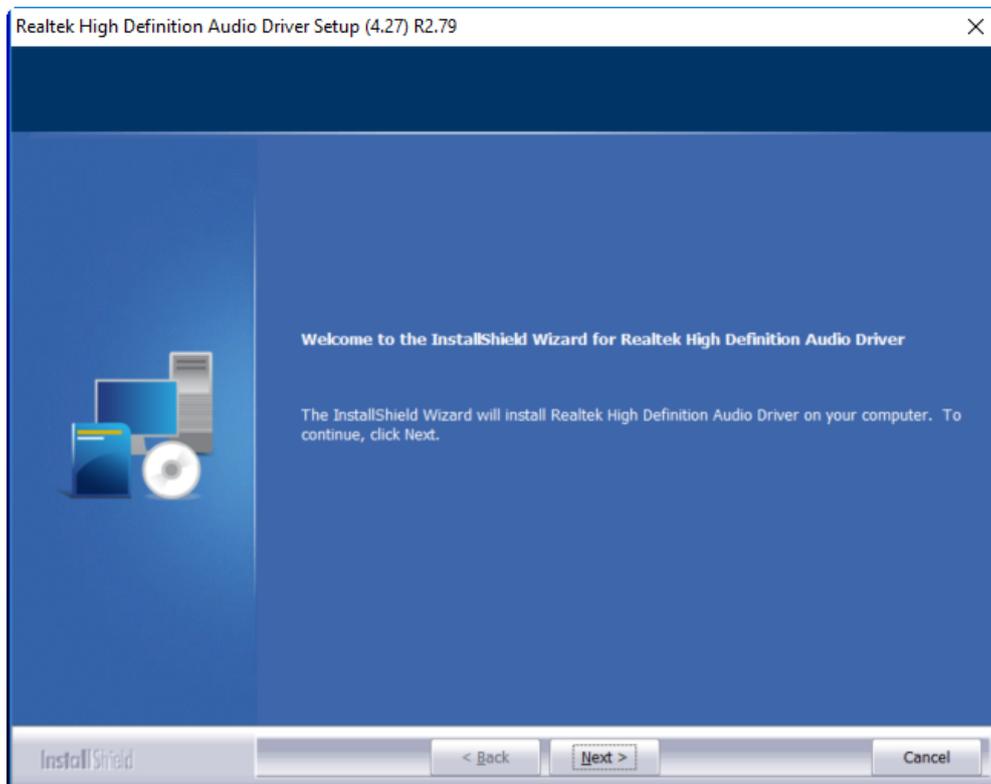

Step3. Click **Yes, I want to restart my computer now.** Click **Finish** to complete the installation.

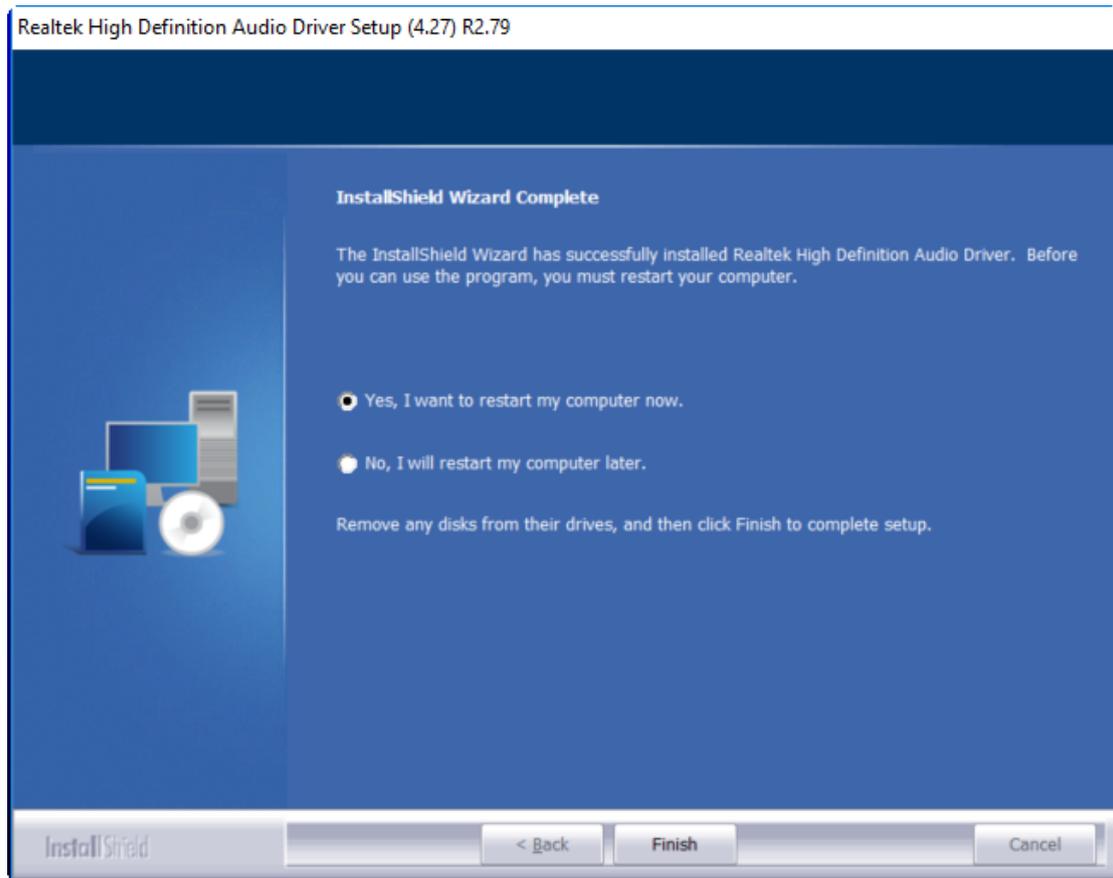


4.4 Com Driver

To install the Com Driver, please follow the steps below.


Step1. Select **Com Driver** from the list




Step2. Select setup language you need. Click **Next** to continue.

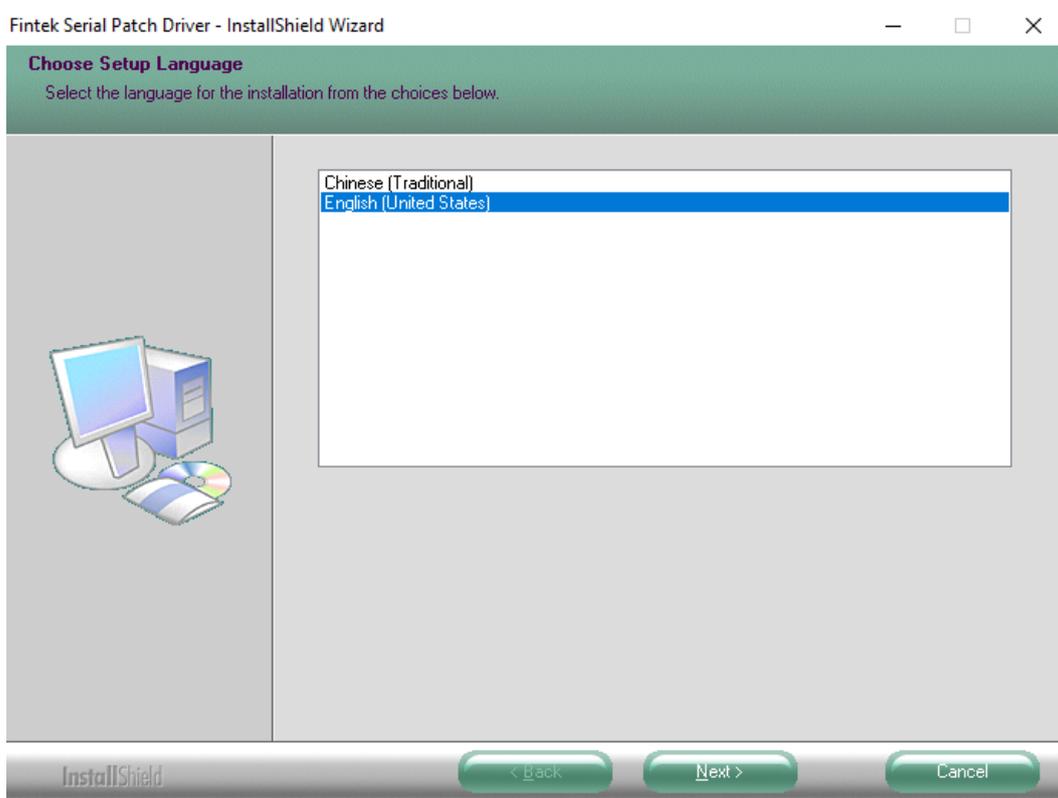

Step3. Click **Next** to begin the installation.

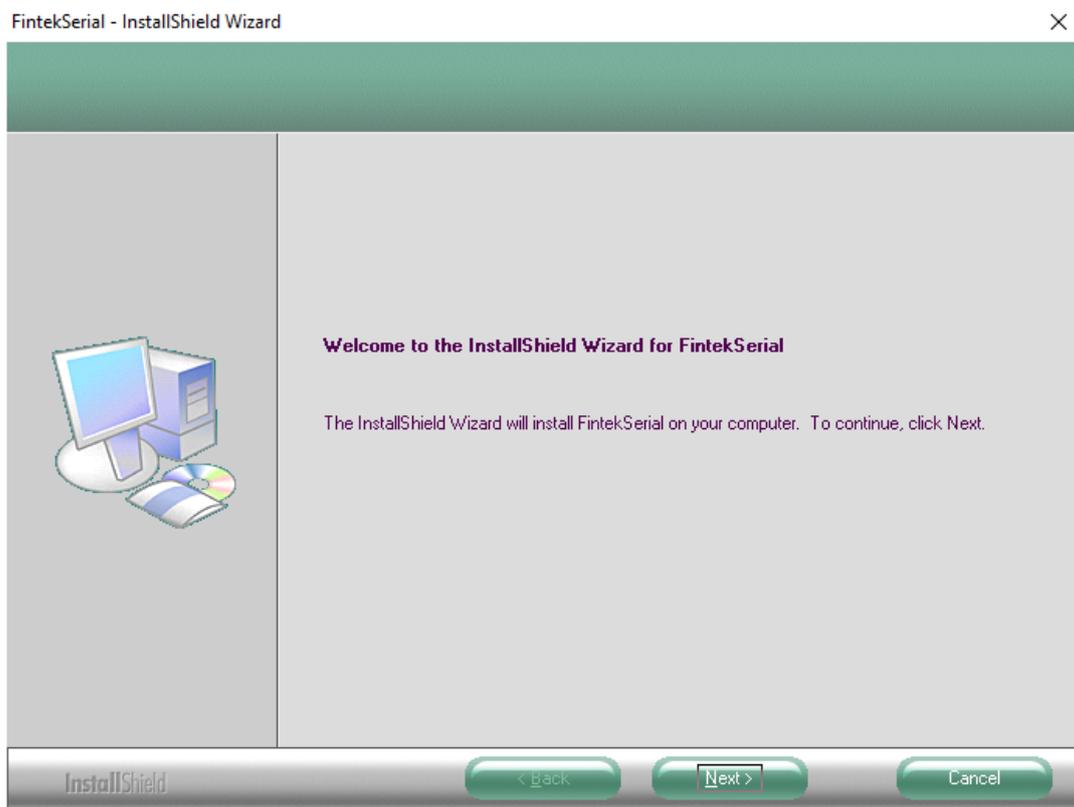

Step4. Choose **Yes, I want to restart my computer now.** Click **Finish** to complete the installation.

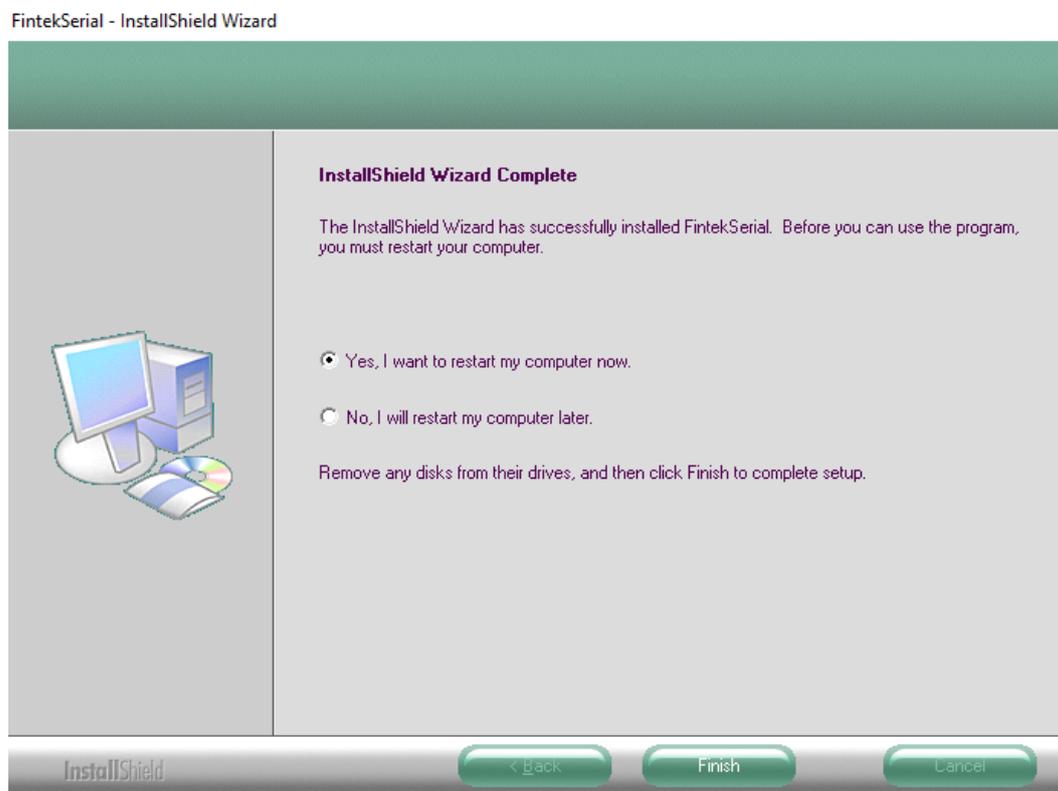


4.5 Intel_TXE(Win) Driver

To install the Intel_TXE(Win) Driver, please follow the steps below.


Step1. Select Intel_TXE(Win) Driver from the list




Step2. Click **Next** to continue.

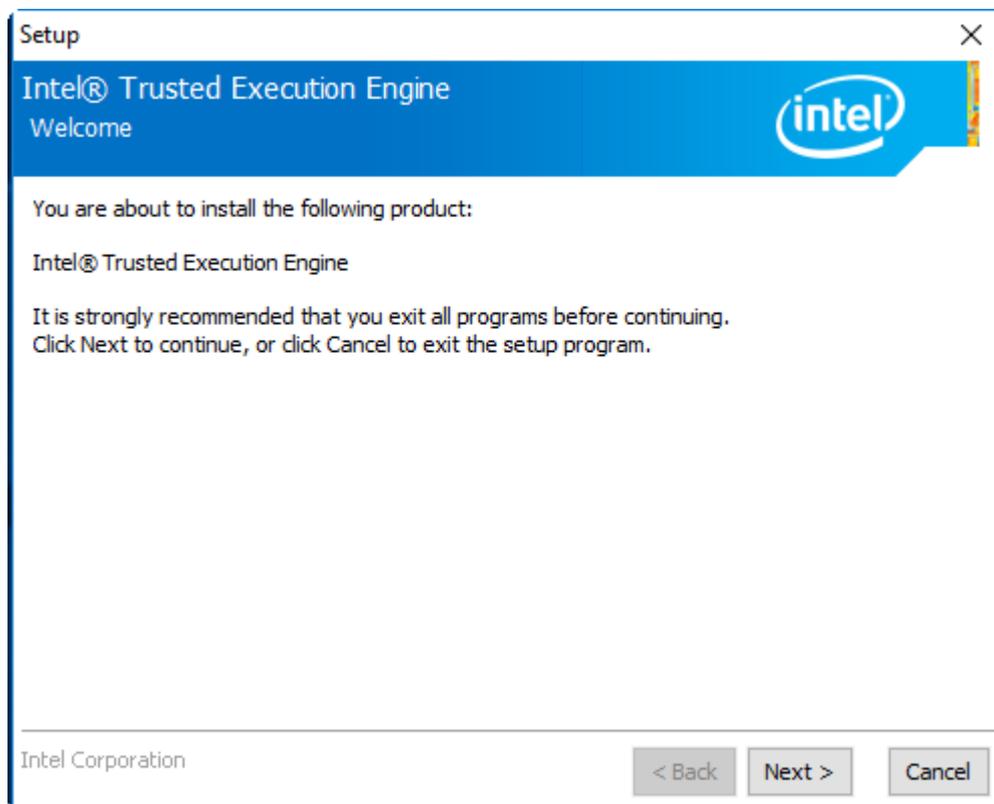


Step3. Read the license agreement. Choose **Accept** and click **Next** to accept all of the terms of the license agreement.

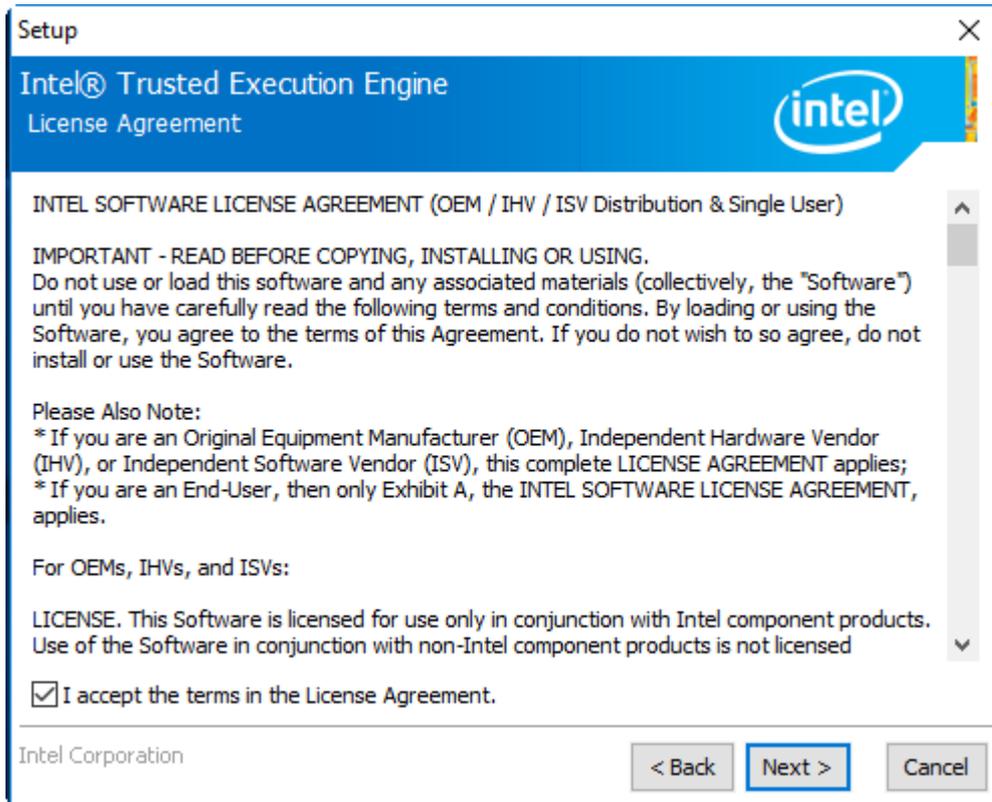

Step4. Click **Next** to continue.

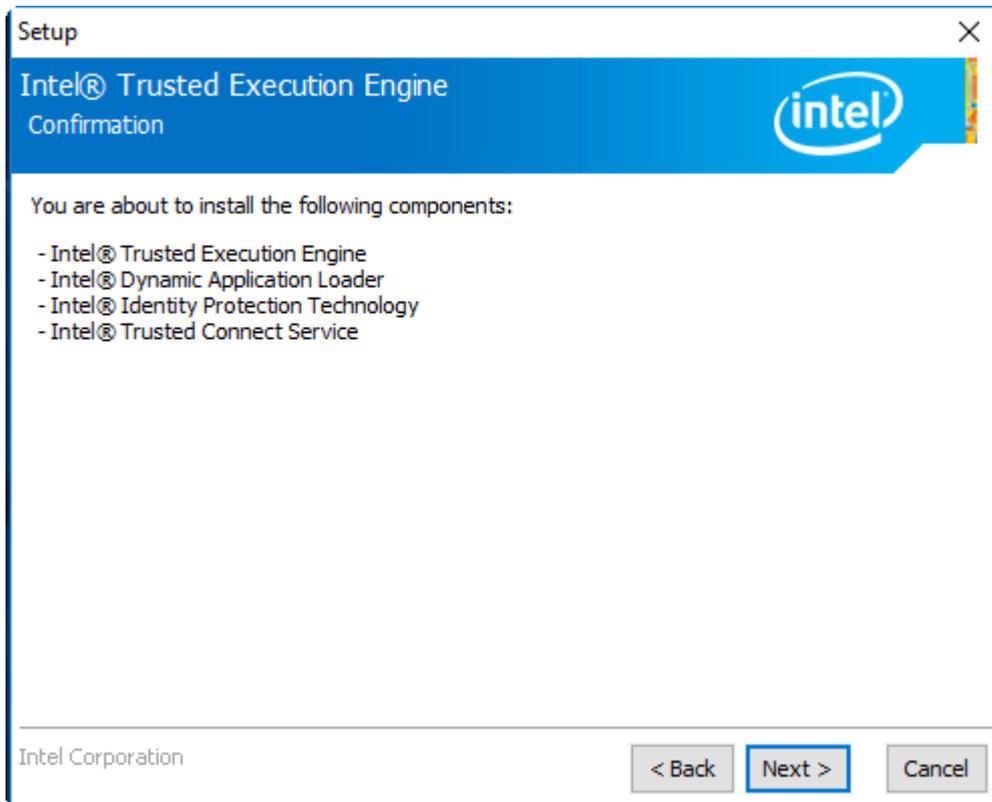

Step5. Click **Finish** to complete the installation.

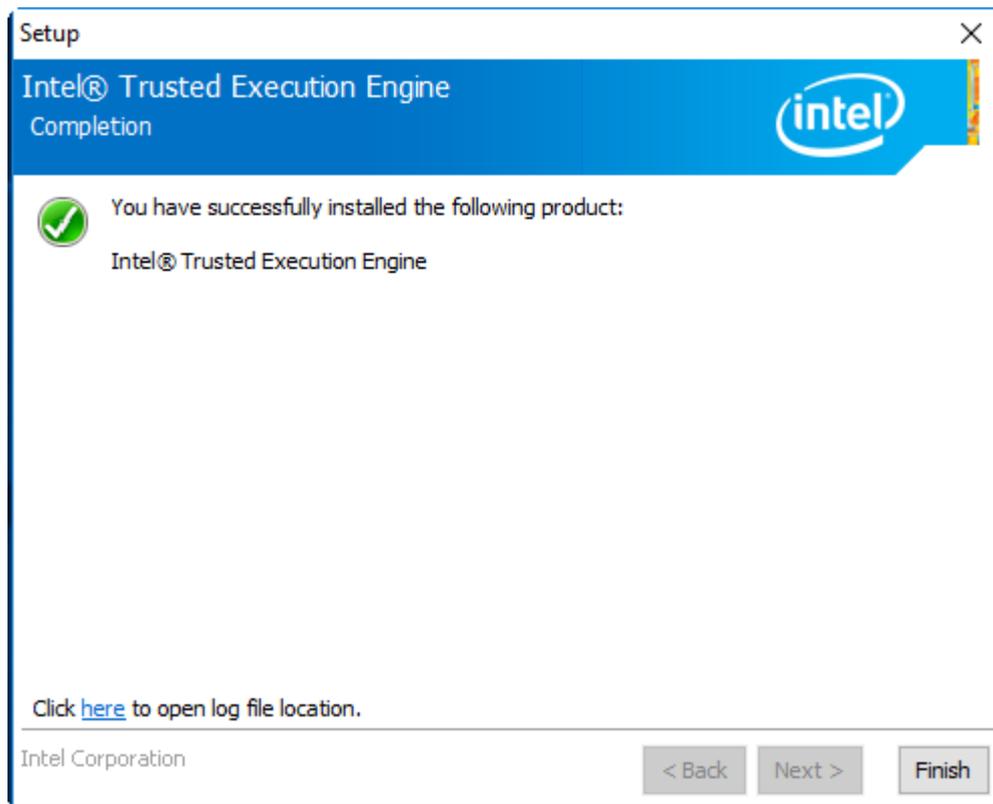

Chapter 5 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your touch screen work with different operating systems.

5.1 Windows 8.1/10 Universal Driver Installation for PenMount 6000 Series

Before installing the Windows 8.1/10 driver software, you must have the Windows 8.1/10 system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.


5.1.1 Installing Software

If you have an older version of the PenMount Windows 7 driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 Windows 8.1/10 driver.


Step1. Insert the product CD, the screen below would appear. Click **Touch Panel Driver**.




Step2. Click **Next** to continue.

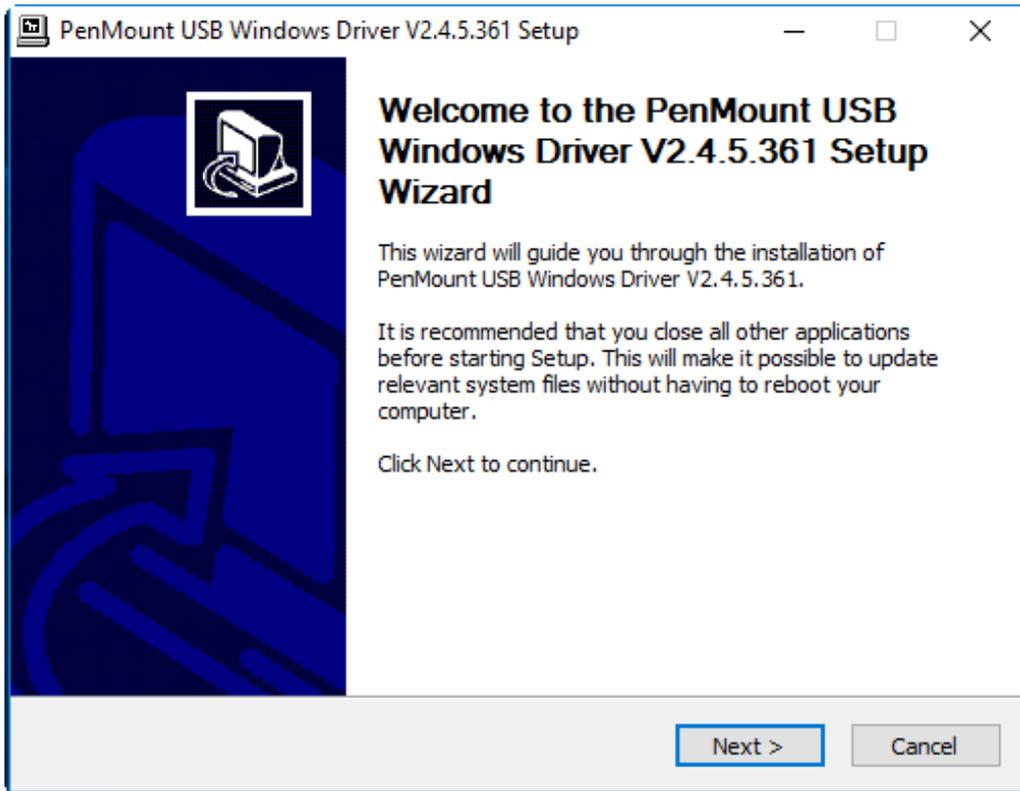


Step3. Read the license agreement. Click **I Agree** to agree the license agreement.

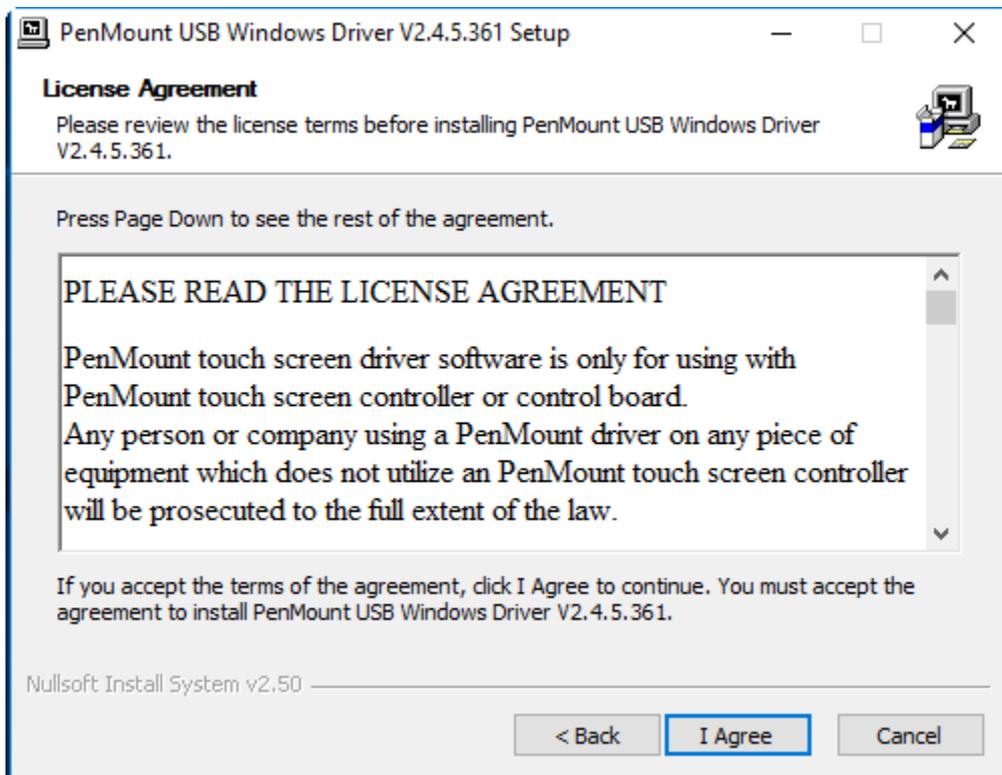


Step4. Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

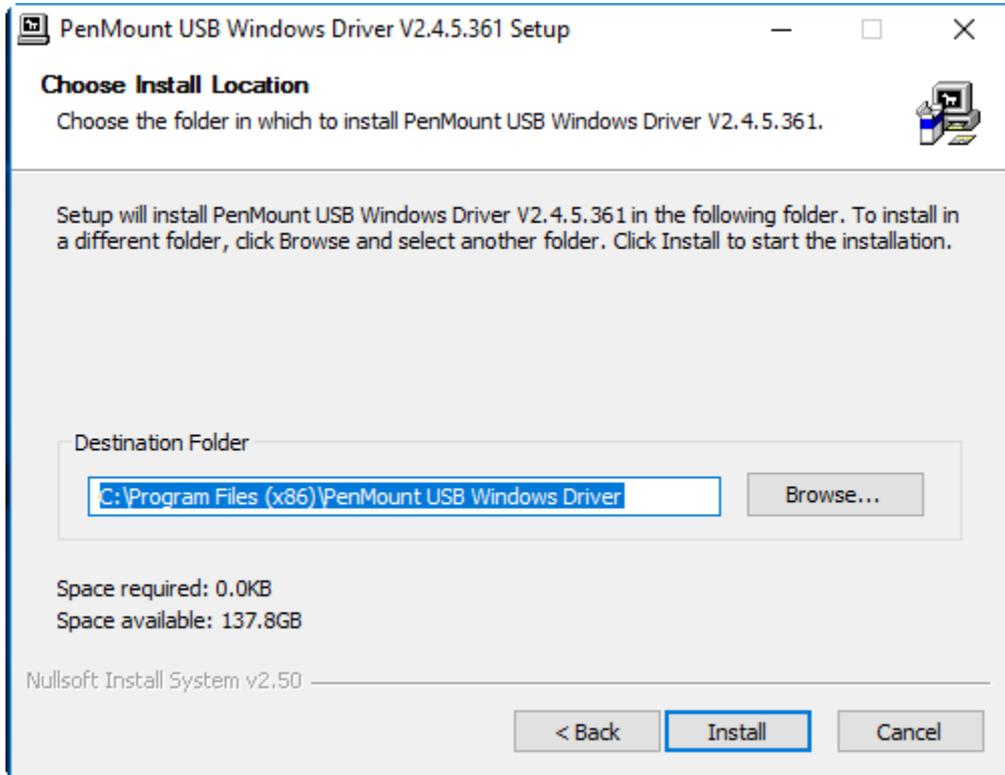

Step5. Wait for installation. Then click **Yes** to continue.

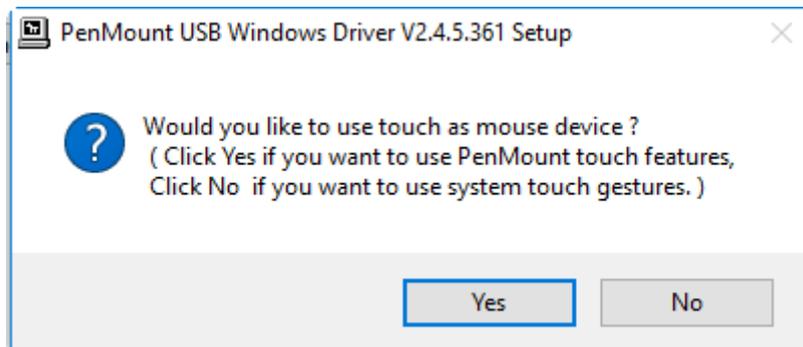

Step6. Click **Finish** to complete the installation.

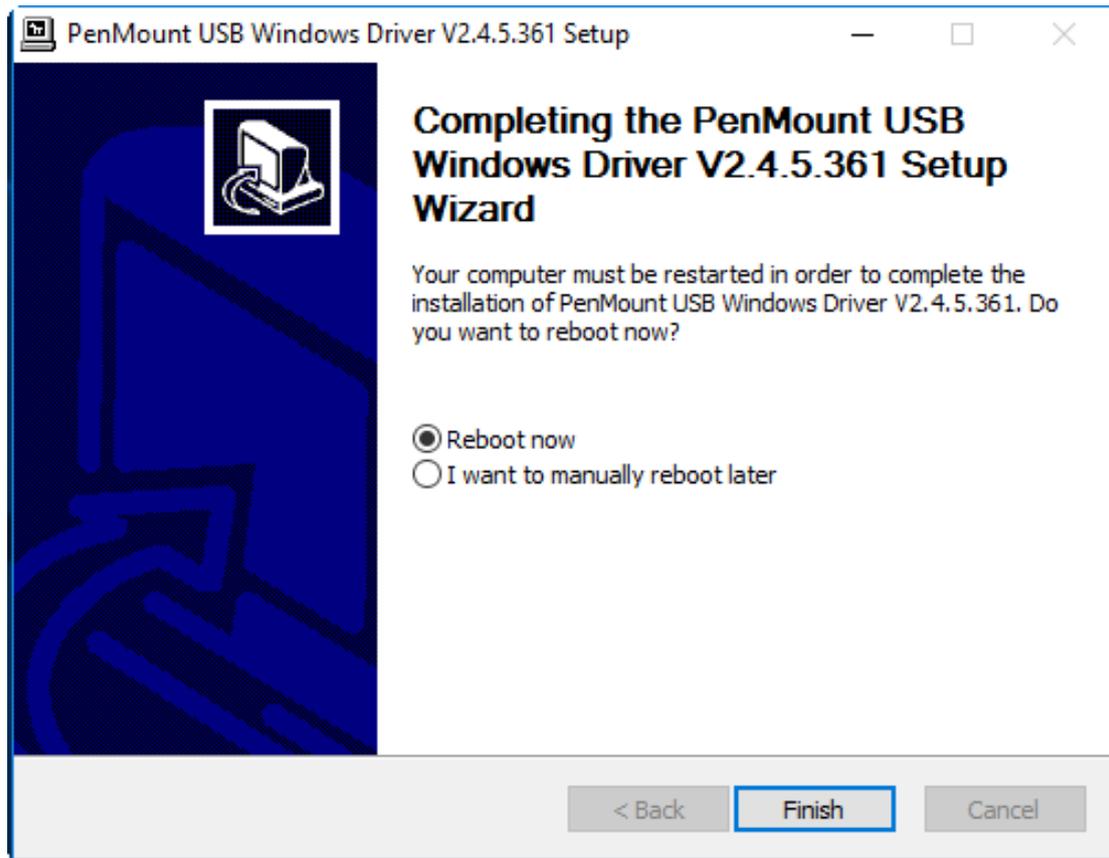

5.2 Software Functions

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

PenMount Control Panel

The functions of the PenMount Control Panel are **Device**, **Multiple Monitor**, **Tools** and **About**, which are explained in the following sections.

Device

In this window, you can find out that how many devices be detected on your system.

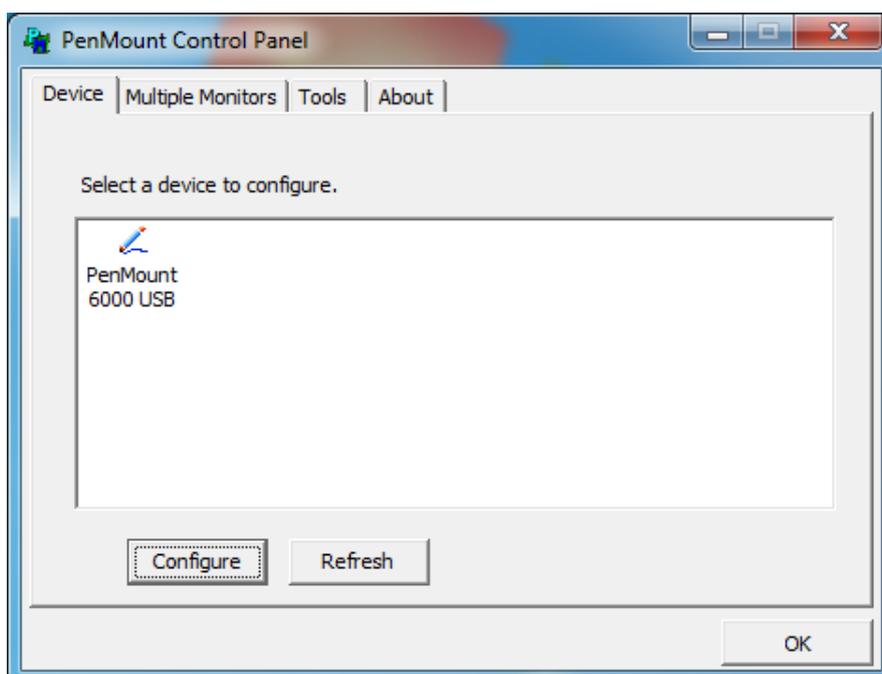


Calibrate



This function offers two ways to calibrate your touch screen. 'Standard Calibration' adjusts most touch screens. 'Advanced Calibration' adjusts aging touch screens.

Standard Calibration	Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press 'ESC'.
Advanced Calibration	Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'.

Step1. Please select a device then click "Configure". You can also double click the device too.

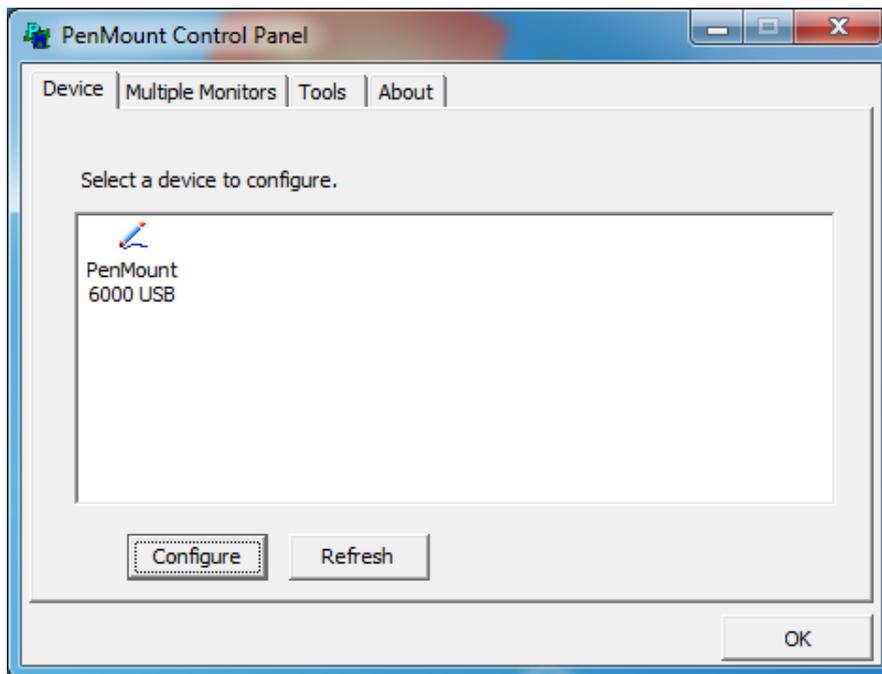


Step 2. Click “Standard Calibration” to start calibration procedure

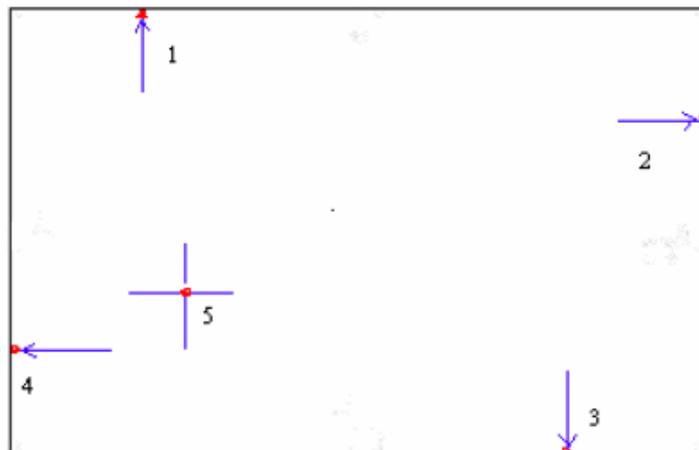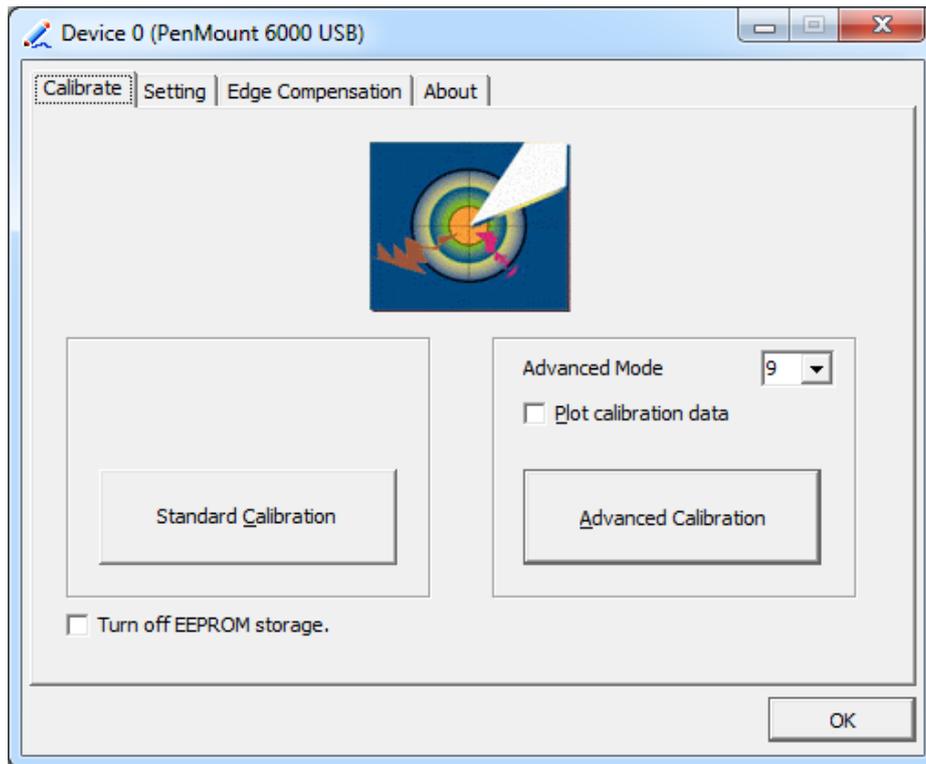


NOTE: The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

Step3. Select **Device** to calibrate, then you can start to do **Advanced Calibration**.

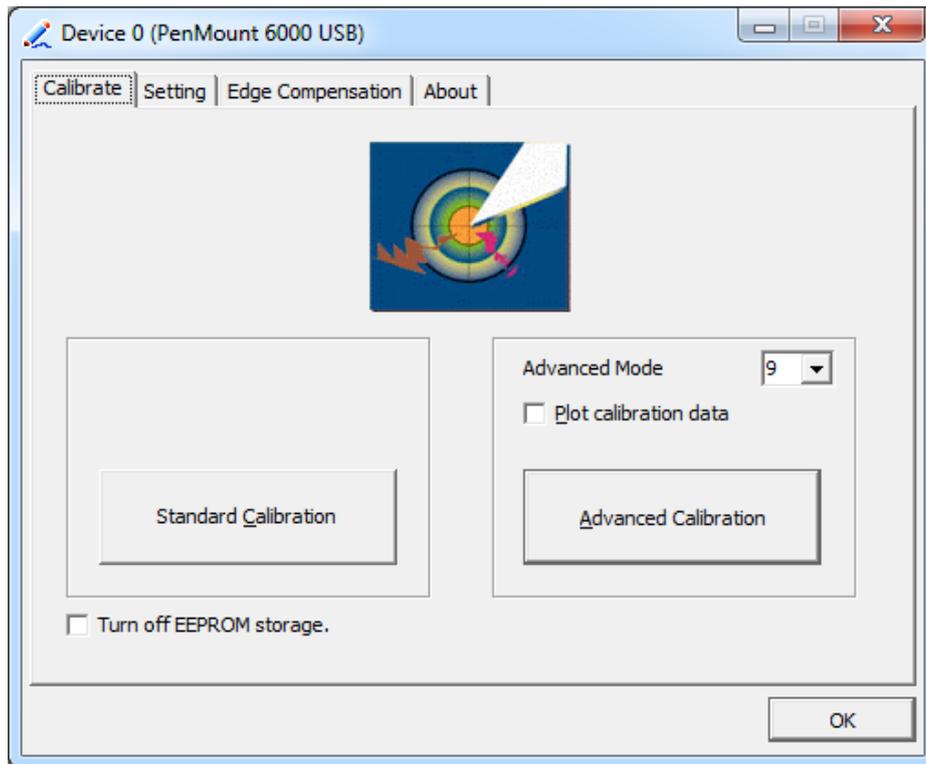


NOTE: Recommend to use a stylus during Advanced Calibration for greater accuracy.

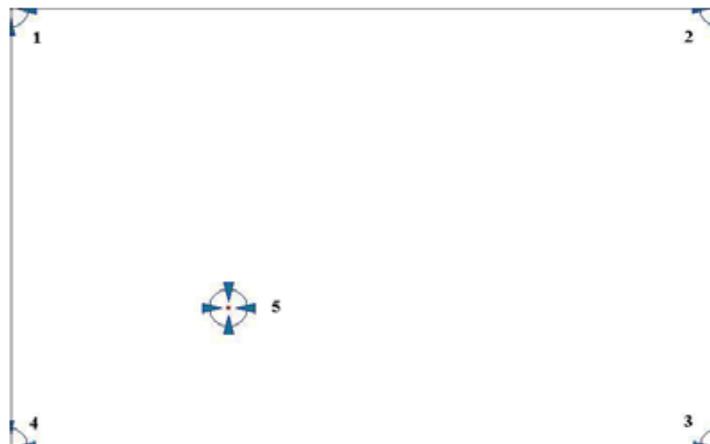

Plot Calibration Data	Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration.
Turn off EEPROM storage	The function disable for calibration data to write in Controller. The default setting is Enable.


Setting

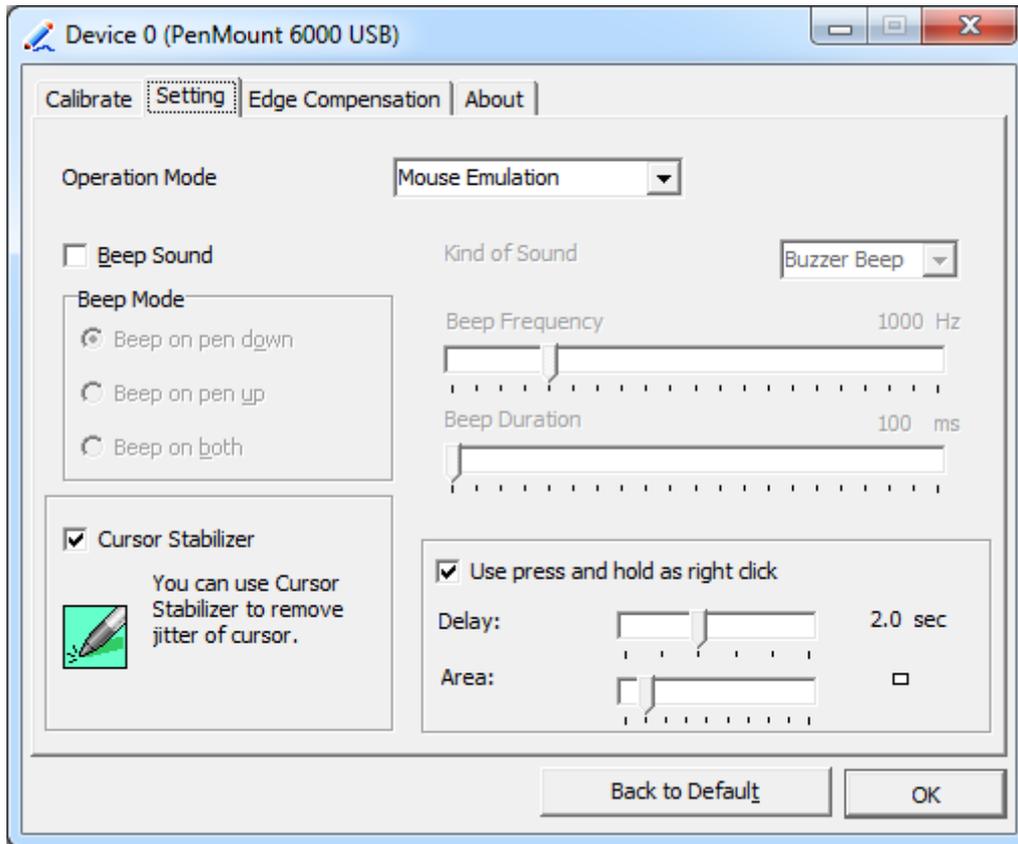

Touch Mode	<p>This mode enables and disables the mouse's ability to drag on-screen icons – useful for configuring POS terminals.</p> <p>Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.</p> <p>Click on Touch – Select this mode and mouse only provides a click function, and dragging is disabled.</p>
Beep Sound	<p>Enable Beep Sound – turns beep function on and off</p> <p>Beep on Pen Down – beep occurs when pen comes down</p> <p>Beep on Pen Up – beep occurs when pen is lifted up</p> <p>Beep on both – beep occurs when comes down and lifted up</p> <p>Beep Frequency – modifies sound frequency</p> <p>Beep Duration – modifies sound duration</p>
Cursor Stabilizer	<p>Enable the function support to prevent cursor shake.</p>
Use press and hold as right click	<p>You can set the time out and area for you need.</p>


Edge Compensation

You can use Edge Compensation to calibrate more subtly.

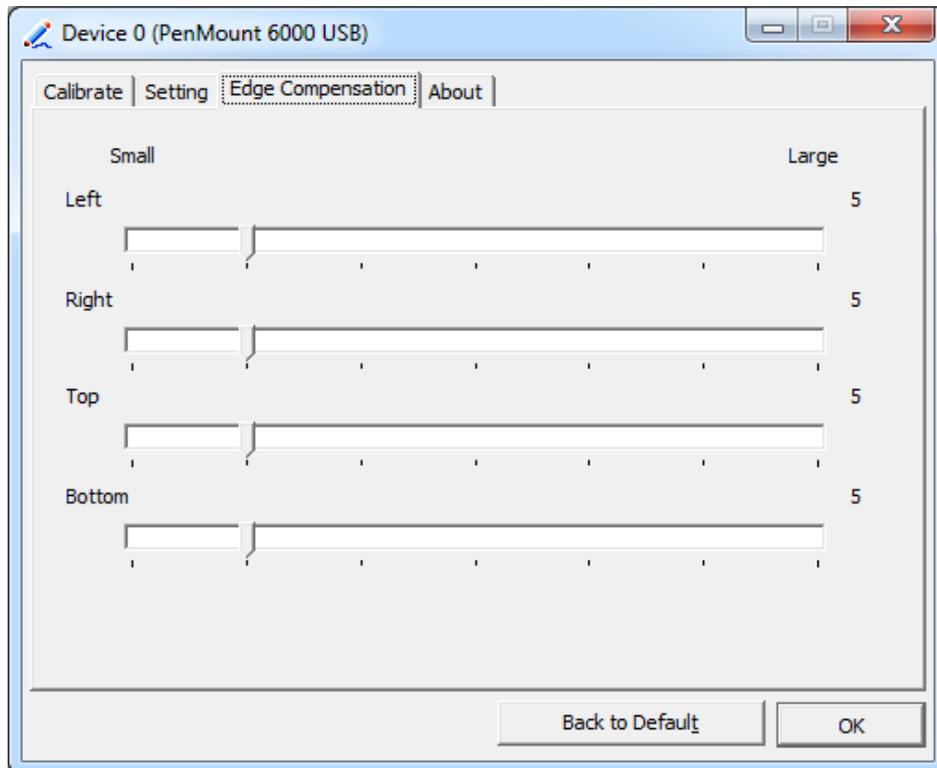

About

This panel displays information about the PenMount controller and driver version.

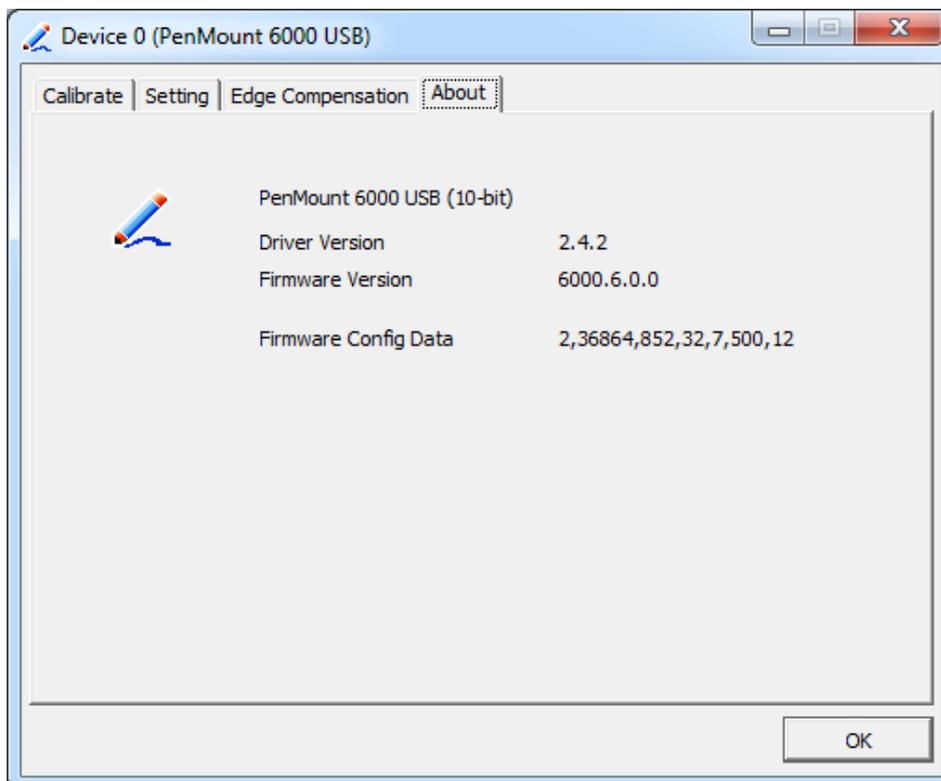

Multiple Monitors


Multiple Monitors support from two to six touch screen displays for one system. The PenMount drivers for Windows 8.1/10 support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the USB interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors support the following modes:

Windows Extends Monitor Function
Matrox DualHead Multi-Screen Function
nVidia nView Function


NOTE: The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.

Enable the multiple display function as follows:

1. Check the **Enable Multiple Monitor Support** box; then click **Map Touch Screens** to assign touch controllers to displays.

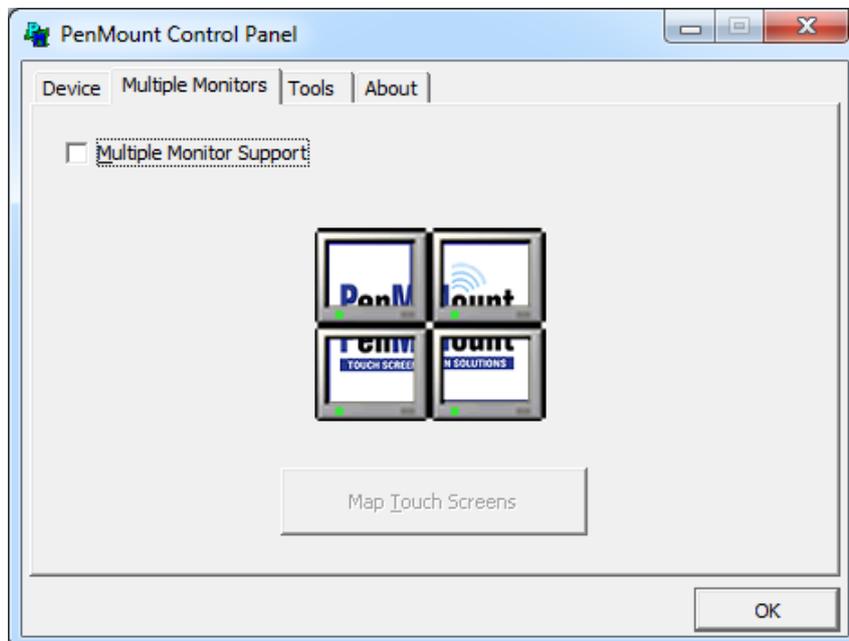

2. When the mapping screen message appears, click **OK**.
3. Touch each screen as it displays “Please touch this monitor”. Following this sequence and touching each screen is called **mapping the touch screens**.

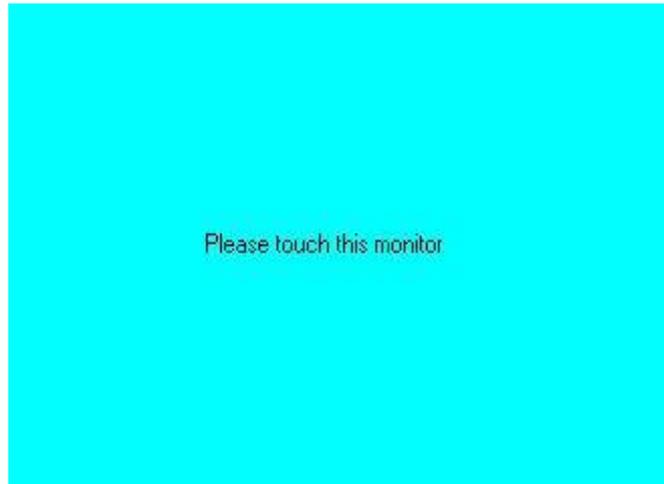

4. Touching all screens completes the mapping and the desktop reappears on the monitors.
5. Select a display and execute the "Calibration" function. A message to start calibration appears. Click **OK**.




6. "Touch this screen to start its calibration" appears on one of the screens. Touch the screen.
7. "Touch the red square" messages appear. Touch the red squares in sequence.
8. Continue calibration for each monitor by clicking **Standard Calibration** and touching the red squares.

NOTES:

1. If you use a single VGA output for multiple monitors, please do not use the **Multiple Monitor** function. Just follow the regular procedure for calibration on each of your desktop monitors.
2. The Rotating function is disabled if you use the Multiple Monitor function.
3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens**, so the system understands where the displays are.

About

This panel displays information about the PenMount controller and this driver version.

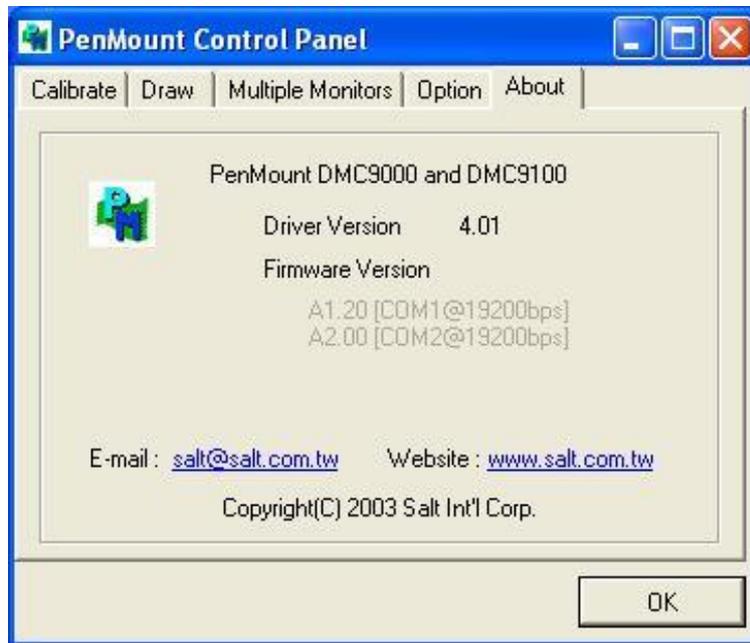


PenMount Monitor Menu Icon

The PenMount monitor icon (PM) appears in the menu bar of Windows 8.1/10 system when you turn on PenMount Monitor in PenMount Utilities.



PenMount Monitor has the following function

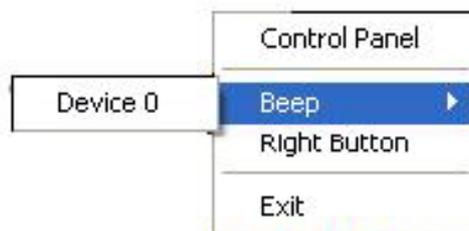


Control Panel	Open Control Panel Windows
Beep	Setting Beep function for each device
Right Button	When you select this function, a mouse icon appears in the right-bottom of the screen. Click this icon to switch between Right and Left Button functions.
Exit	Exits the PenMount Monitor function.



Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

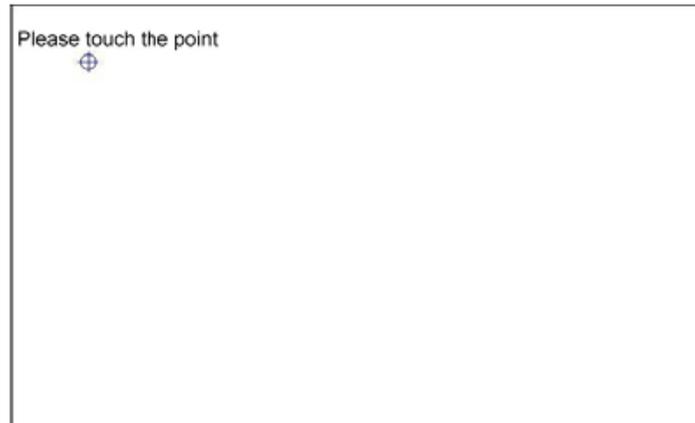

NOTE: The Rotate function is disabled if you use Monitor Mapping.