

QBiX-Pro-ADNAN97H-A1

QBiX-Pro Industrial Embedded System
Quick Start Guide

Copyright Notice

This document is copyrighted, 2024. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, GIGAIPC assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

GIGAIPC reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation
- Core, Atom are trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
System kit	1
Screw I Head For 2.5" HDD M3x8L (25KSG-130081-K1R)	4
Thermal Pad for Memory (25ST3-200086-T5R)	1
SATA Cable (25CRI-150001-S9R)	1
Terminal Blocks Male Plug (25IO0-5ESDV0-D2R)	1
Exsiccator (25g)	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the GIGAIPC.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.

13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
- 18. DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

High Temperature Warning

(1) This equipment is intended to be used in Restrict Access Location. The access can only be gained by Skilled person or by Instructed person who have been instructed about the metal chassis of the equipment is so hot that Skilled person have to pay special attention or take special protection.

Only authorized by well trained professional person can access the restrict access location.

(2) External metal parts are hot!! Before touching it, special attention or protection is necessary

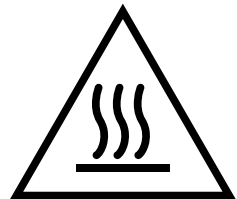


Table Contents

QBiX-Pro Industrial Embedded System	1
Quick Start Guide	
Copyright Notice	2
Acknowledgement	3
Packing List.....	4
About this Document.....	5
Safety Precautions	6
FCC Statement.....	8
High Temperature Warning	8
Chapter 1 - Product Specifications	13
1.1 Specifications	15
Chapter 2 – QBiX-Pro-ADNAN97H-A1	
Industrial Embedded System Kit	17
2.1 Dimension	18
2.2 Getting Familiar with Your Unit.....	19
2.3 A) Memory Installation: DDR5 SO-DIMM	21
2.4 B) M.2 SSD Installation: How to safely install the M.2 2280 SSD	22
2.5 C) Wireless Module : How to safely install the Module (Wireless Module inclusion may vary based on local distribution)	23
2.6 D) Mini PCIe Card Installation: How to safely install the Mini PCIe Card	24
2.7 E) 2.5” HDD/SSD installation: How to install 2.5” HDD/SSD	25

2.8	Antenna Installation (Antenna inclusion may vary based on local distribution)	26
2.9	Cable Pin-define	27
2.10	Support	28
2.11	Safety and Regulatory Information.....	29

Chapter 3 – Hardware Information 30

3.1	Jumpers and Connectors	31
3.2.1	FAN (FAN connector)	34
3.2.2	BATTERY	35
3.2.3	SODIMMA (DDR5 SO-DIMM socket).....	36
3.2.4	FUSB20 (USB 2.0 header)	37
3.2.5	SATA0 (SATA 6Gb/s Connector).....	38
3.2.6	SATAPW (SATA power connector).....	39
3.2.7	SYS_PANEL (Front panel header)	40
3.2.8	DC_IN (DC IN 1x4pin power connector)	41
3.2.9	GPIO_CNT (General Purpose input/output header) ...	42
3.2.10	JCOM1 (RI# pin RI#/5V/12V Select jumper for COM1 Port)	43
3.2.11	COM1, COM2, COM3, COM4 (Serial port header)	44
3.2.12	FP_AUDIO (Front panel audio header).....	45
3.2.13	SPKR (Speaker out connector)	46
3.2.14	ME (ME Disable jumper)	47
3.2.15	AT_CN (AT/ATX mode select jumper).....	48
3.2.16	BKL_CN (Backlight Control connector)	49
3.2.17	LVDS (LVDS connector).....	50
3.2.18	M2E (M.2 slot, 2230 E-key)	51

3.2.19	MPCIE (Mini PCIe slot).....	52
3.2.20	BUZZER (Buzzer header).....	53
3.2.21	SIM_CARD (3G/4G SIM Slot)	54
3.2.22	M2M (M.2 Slot, 2280 M-Key)	55
3.2.23	HP (LINE out connector).....	56
3.2.24	LAN1, LAN2 (LAN connector).....	57
3.2.25	HDMI_21 (HDMI connector)	58
3.2.26	USB32 (USB 3.2 Gen 2x1 connector)	59
3.2.27	USB2 (USB 2.0 connector).....	60







Chapter 4 – BIOS 61

4.1	Introduction	62
4.2	The Main Menu.....	63
4.3	Advanced	64
4.3.1	TPM Configuration.....	65
4.3.2	CPU Configuration	67
4.3.3	SATA Configuration	68
4.3.4	IT8786 Super IO Configuration	69
4.3.5	Hardware Monitor	70
4.3.6	S5 RTC Wake Settings	71
4.3.7	Network Stack Configuration.....	72
4.3.8	NVMe Configuration.....	73
4.3.9	Offboard SATA Controller Configuration	74
4.3.10	Digital IO Port Configuration	75
4.3.11	Tls Auth Configuration	76
4.3.12	Intel(R) Ethernet Controller (3) I225-V -	

	74:56:3C:BC:5D:E2 (MAC address may varied based on different motherboard)	77
4.3.13	Intel(R) Ethernet Controller (3) I225-V - 74:56:3C:BC:5D:E3 (MAC address may varied based on different motherboard)	78
4.4	Chipset	79
4.5	Security	80
4.6	Boot.....	83
4.7	Save & Exit	84

Chapter 1

Chapter 1 - Product Specifications

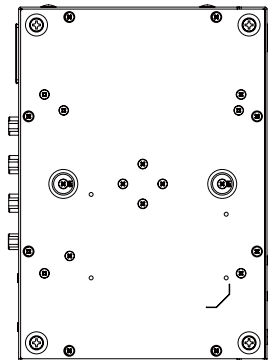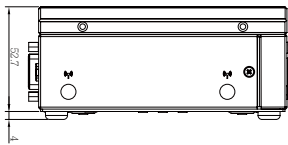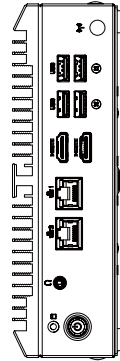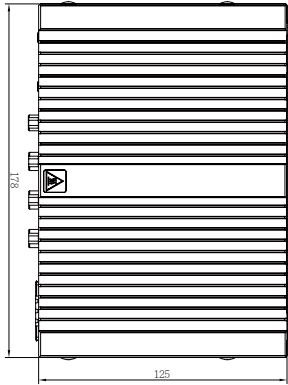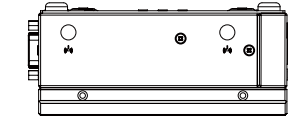

1.1 Specifications


System	QBiX-Pro-ADNAN97H-A1
Dimension	178W x 125D x 52.7H (mm)
CPU	Intel® Processor N97 Intel 7, 4 cores, 4 threads, up to 3.60 GHz
Memory	1 x DDR5 SO-DIMM sockets, Max. Capacity 16 GB Support Single channel DDR5 4800 MHz memory modules
Ethernet	2 x 2.5GbE LAN Ports (Intel® I225V)
Graphic support	Integrated Graphics Processor - Intel® UHD Graphics support: 2 x HDMI 2.0 port, supporting a maximum resolution of 4096x2160 @60Hz (2 independent display outputs)
Audio	Realtek® ALC897
Storage	1 x 2.5" HDD/SSD (SATA 6Gb/s)
Expansion Slots	1 x 2280 M.2 M-Key (PCIe x2) 1 x 2230 M.2 E-Key 1 x Full-size mini PCIe with SIM slot
Front I/O	2 x RJ45 LAN Ports 2 x USB 3.2 Gen 2x1 2 x USB 2.0 2 x HDMI 1 x Power button with LED 1 x HDD LED 1 x Headphone jack
Rear I/O	2 x USB 2.0 1 x COM Port (RS-232/422/485 & RI/5V/12V) 1 x COM Port (RS-232/422/485) 1 x COM Port (RS-232) 1 x GPIO (8 bits) 1 x 3-pin Terminal Block
Side I/O	2 x External Antenna Holes (Optional)
TPM	Onboard TPM 2.0 security chip INFINEON SLB9670VQ2.0
Power	+12V~36VDC (Full Range)

System	QBiX-Pro-ADNAN97H-A1
Operation temperature	Operating temperature: 0°C to 50°C Operating humidity: 0-90% (non-condensing) Non-operating temperature: -40°C to 85°C Non-operating humidity: 0%-95% (non-condensing) Use wide temperature range memory and storage
Vibration During Operation	Operation: IEC 60068-2-64, 3 Grms, random, 5 ~ 500 Hz, 1 hr / Per Axis, With SSD/M.2 2280 Non-operation: IEC 60068-2-6, 2 G, Sine, 10 ~ 500 Hz, 1 Oct/ min, 1 hr / Per Axis
Shock During Operation	Operation: IEC 60068-2-27, 50 G, half sine, 11 ms duration, With SSD
Packaging Content	Carton size: 505 x 333 x 231 (mm) Packing Capacity: 5pcs Single Box size: 313 x 191 x 95 (mm) Including: Screw I Head For 2.5" HDD M3x8L x 4 (P/N: 25KSG-130081-K1R) Thermal Pad for Memory x 1 (P/N: 25ST3-200086-T5R) SATA Cable x 1 (P/N: 25CRI-150001-S9R) Terminal Blocks Male Plug x 1 (P/N:25IO0-5ESDV0-D2R)
Mounting	Wall mount P/N: 25HB2-CGAA20-CHR x 1 (Optional) VESA 75/100 P/N: 25HB1-TPL021-S8R x 1 + 25KSD-000002-COR x 1 (Screw) (Optional)
Order Information	System : 6BQPN970AMR-SI (Box packing)

Chapter 2


Chapter 2 – QBiX-Pro-ADNAN97H-A1
Industrial Embedded System Kit

2.1 Dimension

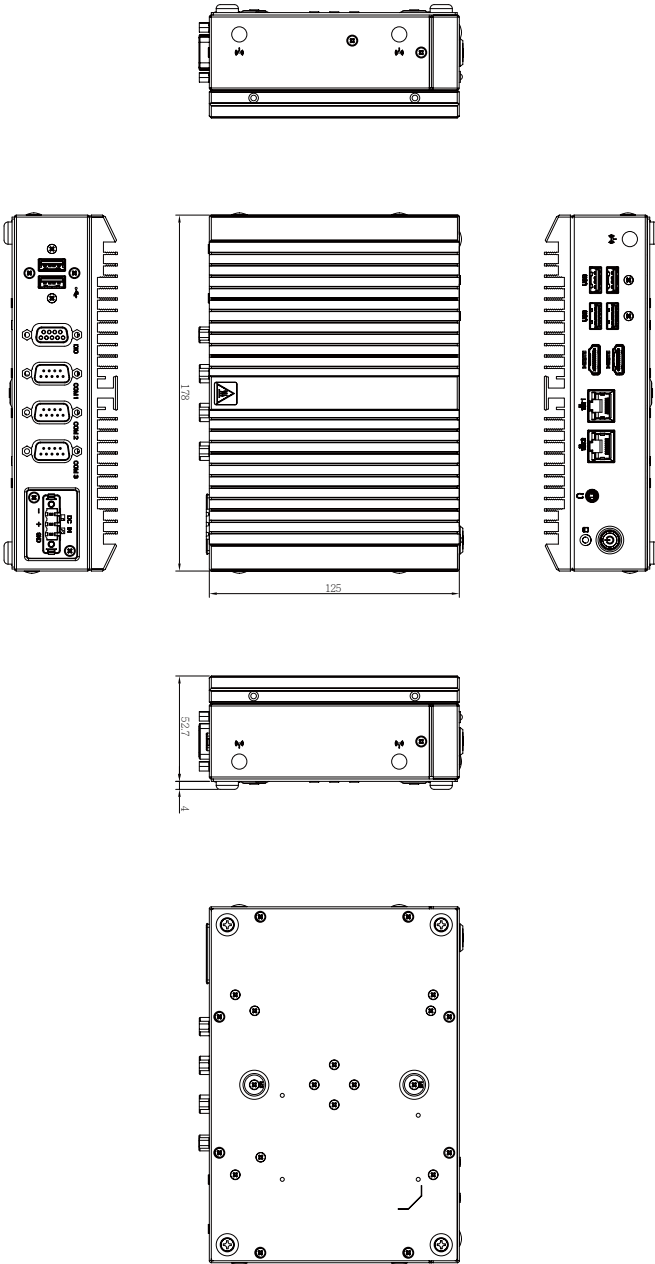


2.2 Getting Familiar with Your Unit


[Front Side]

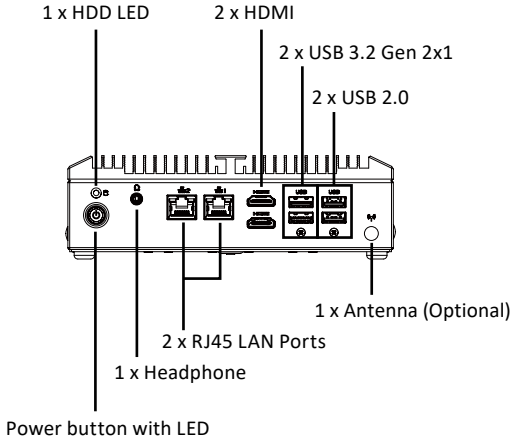


[Left Side]

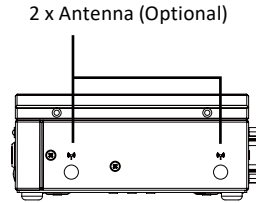

[Rear Side]

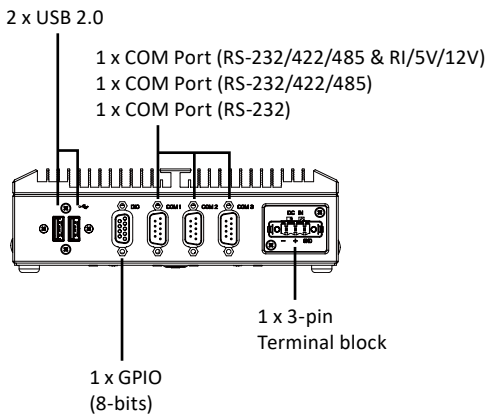


[Right Side]

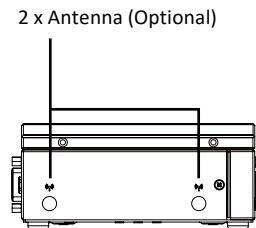

[Install]



- * Before opening the case, make sure to unplug the power cord.
- * Before Connecting the power, make sure to fasten the case securely.

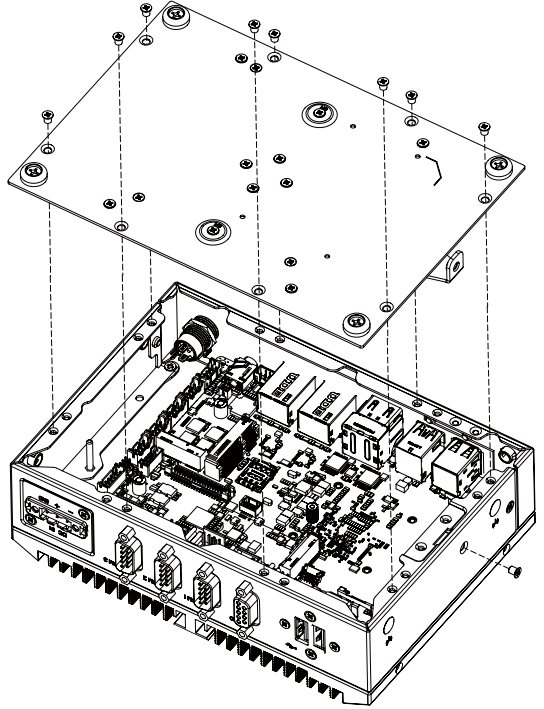

[Bottom PCB Side]

Information	
A	1 x DDR5 SO-DIMM sockets, Max. Capacity 16 GB
B	1 x M.2 slot 2280 M-Key


Information	
C	1 x M.2 slot 2230 E-Key
D	1 x Full-size mini PCIe with SIM slot
E	support 2.5" Hard drive/SSD

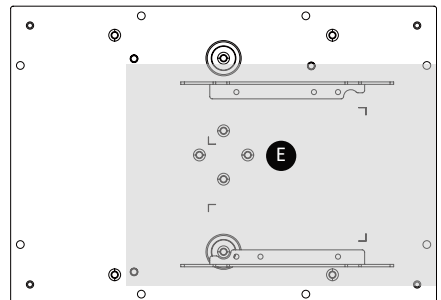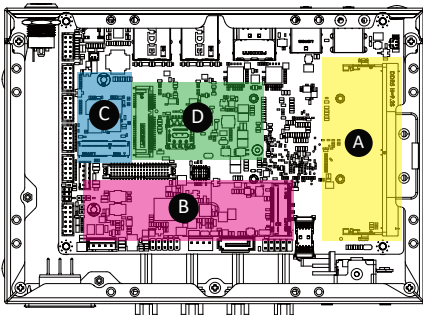


2.3 A) Memory Installation: DDR5 SO-DIMM

1


Carefully insert SO-DIMM memory modules.

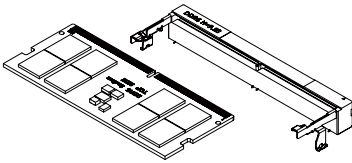**2**

Push down until the modules click into place.

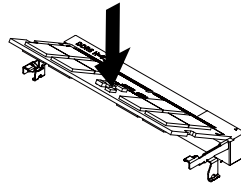**3**


Make sure the module is completely installed.

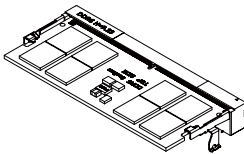

2.4 B) M.2 SSD Installation: How to safely install the M.2 2280 SSD


1

Remove the screw from the screw hole
(Location : MSO2)

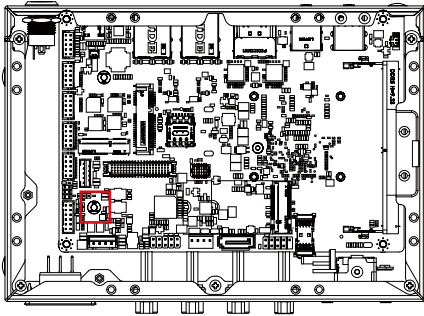

2


Carefully insert the M.2 SSD into the slot, and
secure with the screw.

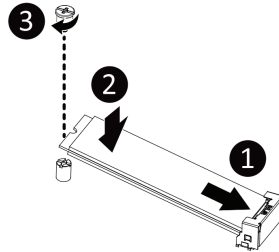


2.5 C) Wireless Module : How to safely install the Module (Wireless Module inclusion may vary based on local distribution)

1


Carefully insert the wireless module into the M.2 slot

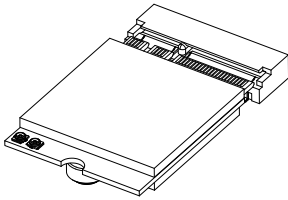**2**

Lock the screw in the middle.

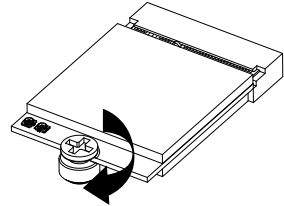**3**


Install the antenna on the left side of the connection wireless module down.

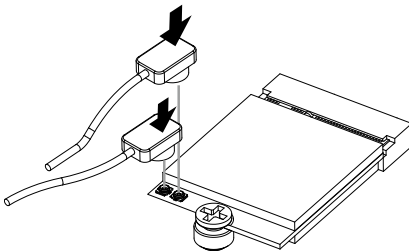

2.6 D) Mini PCIe Card Installation: How to safely install the Mini PCIe Card


1

Remove the screw from the screw hole
(Location : MSO1)

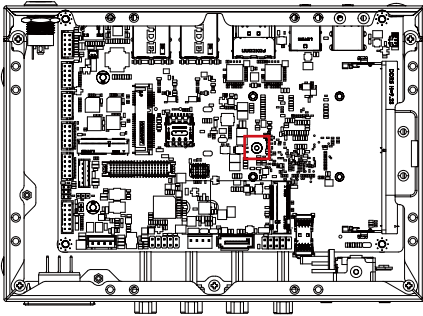


2

Carefully insert the Mini PCIe Card into the slot.

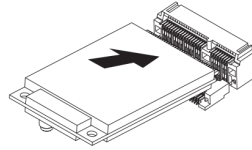



3

Secure the Mini PCIe Card with screw.

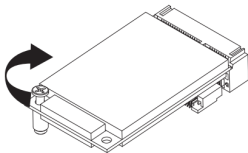

2.7 E) 2.5" HDD/SSD installation: How to install 2.5" HDD/SSD


- 1** Remove 3 screws to remove the bracket. (Corresponding 3 screw locations can be found in the bottom right drawing.)
- 2** First : assemble the SATA cable and 2.5" HDD/SSD.
Second : remove 2 release papers on the thermal pad which located on the bottom cover.
Third : install 2.5" HDD/SSD (Gold finger of 2.5" HDD/SSD must face down), and secure with 4 screws.
Fourth : install the bracket back with 3 screws.
- 3** Assemble the SATA cable on the SATA connector, and lock the bottom cover.

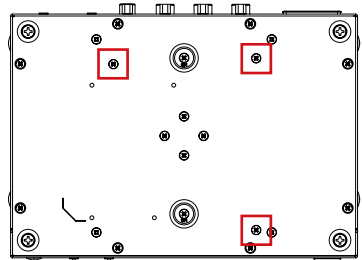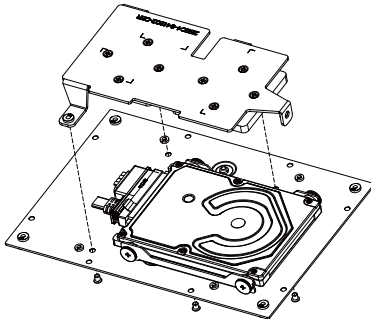

2.8 Antenna Installation (Antenna inclusion may vary based on local distribution)


1

Carefully insert the antennas into the connectors.

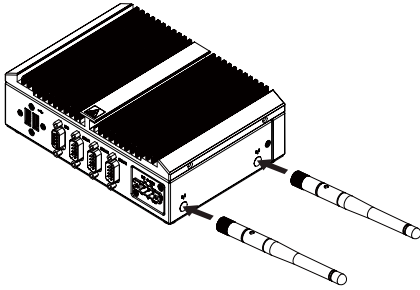


2

Turn the antennas clockwise until they are completely secure on the connectors.

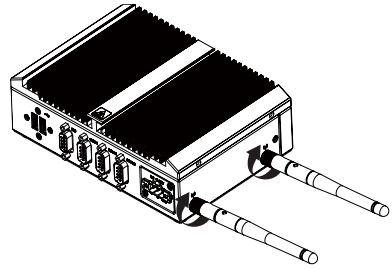


3

Flip up the antenna heads so that they are perpendicular to the machine.

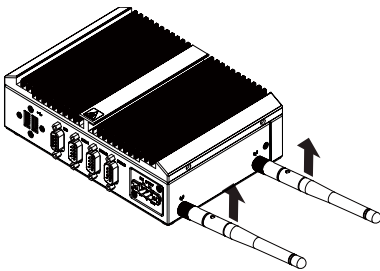

2.9 Cable Pin-define


1. DB9 COM (25CF8-180620-S9R)

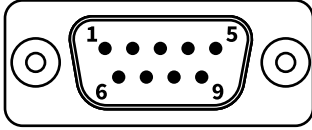

DB9 Pin Define

DB9 Pin	RS-232	RS-422 Full Duplex	RS-485 Half Duplex
1	DCD	TXD-	D-
2	RXD	TXD+	D+
3	TXD	RXD+	-
4	DTR	RXD-	-
5	GND		
6	DSR	-	-
7	RTS	-	-
8	CTS	-	-
9	RI	-	-

2. DBP DIO (25CR5-150606-S9R)

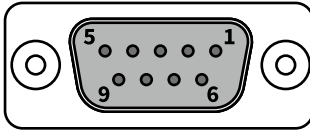

DBP DIO Pin	Pin Name
1	GPIO-output_1
2	GPIO-input_1
3	GPIO-output_2
4	GPIO-input_2
5	GPIO-output_3
6	GPIO-input_3
7	GPIO-output_4
8	GPIO-input_4
9	5V

2.10 Support

- For a list of tested memory, M.2, 2.5" SSD, wireless adapters and OS supported, go to: <http://www.gigaipc.com>
- To download the latest drivers and BIOS updates, go to: <http://www.gigaipc.com>
- For product support, go to: <http://www.gigaipc.com>

2.11 Safety and Regulatory Information

Risk of explosion if the battery is replaced with an incorrect type. Batteries should be recycled where possible.

Disposal of used Batteries must be in accordance with local environmental regulations.

Failure to use the included Power Adapter may violate regulatory compliance and may expose the user to safety hazards.

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE






At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Chapter 3

Chapter 3 – Hardware Information

3.1 Jumpers and Connectors

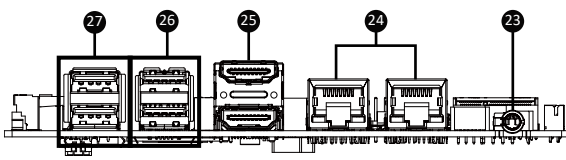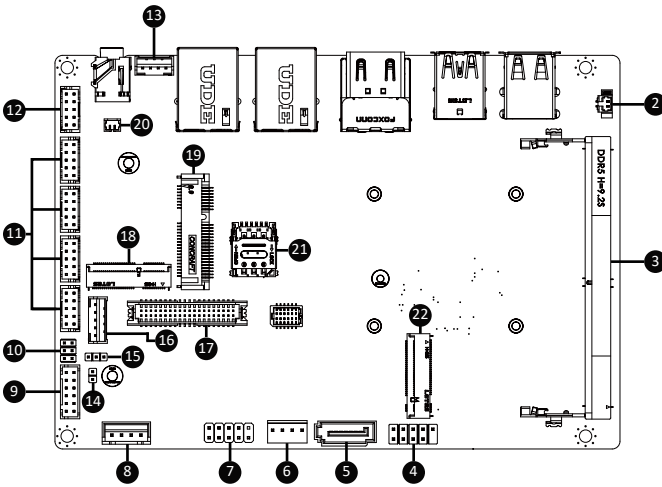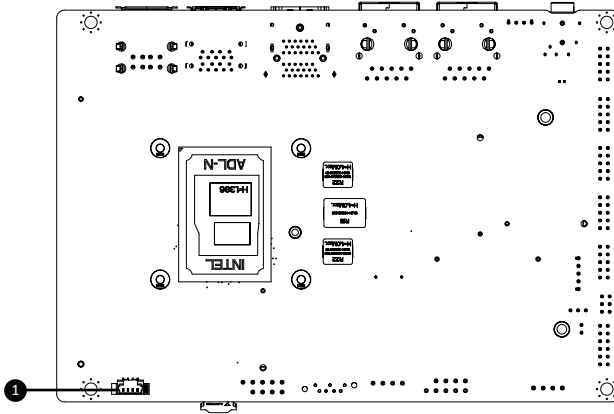


No	Code	Description
1	FAN	FAN connector
2	BATTERY	Battery cable connector
3	SODIMMA	DDR5 SO-DIMM socket
4	FUSB20	USB 2.0 header
5	SATA0	SATA 6Gb/s connector
6	SATAPW	SATA power connector
7	SYS_PANEL	Front panel header
8	DC_IN	DC IN 1x4pin power connector
9	GPIO_CNT	General Purpose input/output header
10	JCOM1	RI# pin RI#/5V/12V Select jumper for COM1 port
11	COM1 COM2 COM3 COM4	Serial port header COM1 : RS-232/422/485 & RI/5V/12V COM2 : RS-232/422/485 COM3, COM4 : RS-232
12	FP_AUDIO	Front panel audio header
13	SPKR	Speaker out connector
14	ME	ME Disable jumper
15	AT_CN	AT/ATX mode select jumper
16	BKL_CN	Backlight Control connector
17	LVDS	LVDS connector
18	M2E	M.2 slot, 2230 E-key
19	MPCIE	Mini-PCIe slot
20	BUZZER	Buzzer header
21	SIM_CARD	3G/4G SIM Slot

No	Code	Description
22	M2M	M.2 slot, 2280 M-key
23	HP	Line out connector
24	LAN1, LAN2	LAN connector
25	HDMI_21	HDMI connector
26	USB32	USB 3.2 Gen 2x1 connector
27	USB2	USB 2.0 connector

3.2.1 FAN (FAN connector)

1

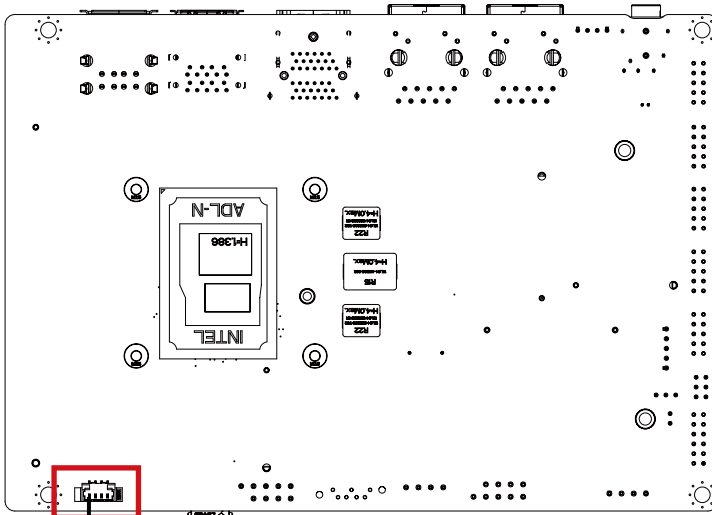

Pin 1

CPU/System FAN





Connector PN	Vendor
85205-0470N	ACES
A1250WV-S-04PC	JOINT-TECH

Connector type
1x4pin header, pitch 1.25mm

Pin No.	Definition
1	GND
2	12V
3	Detect
4	Speed Control

3.2.2 BATTERY

2

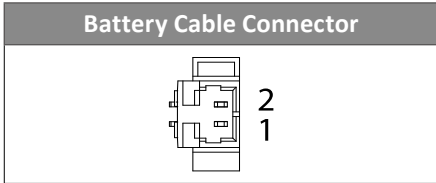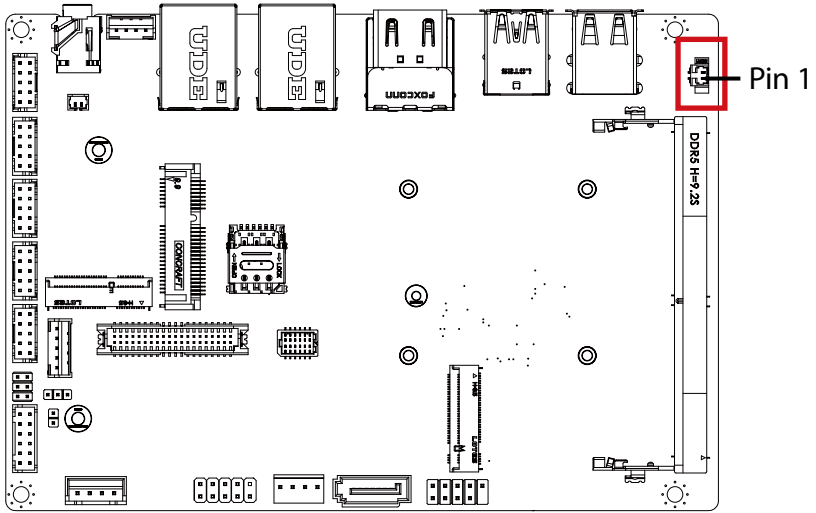


Connector PN	Vendor
85205-0270L	ACES
A1250WV-S-02PC	JOINT-TECH
Connector type	
1x2pin header, pitch 1.25mm	

Pin No.	Definition
1	3V
2	GND


3.2.3 SODIMMA (DDR5 SO-DIMM socket)

3

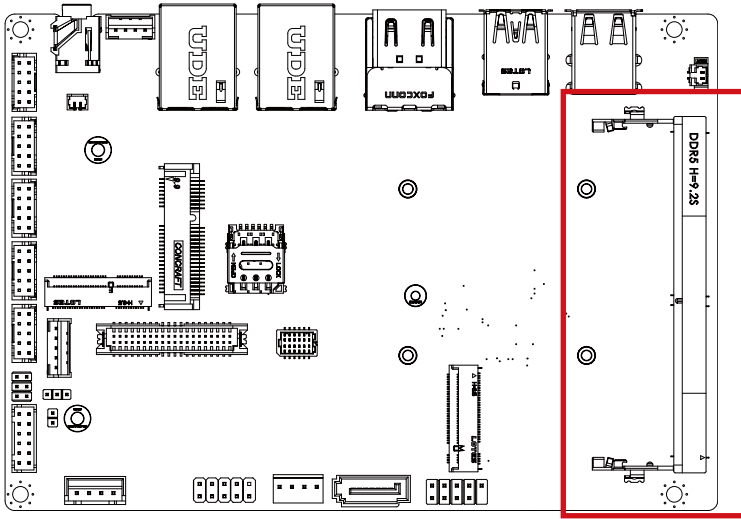

3.2.4 FUSB20 (USB 2.0 header)

4

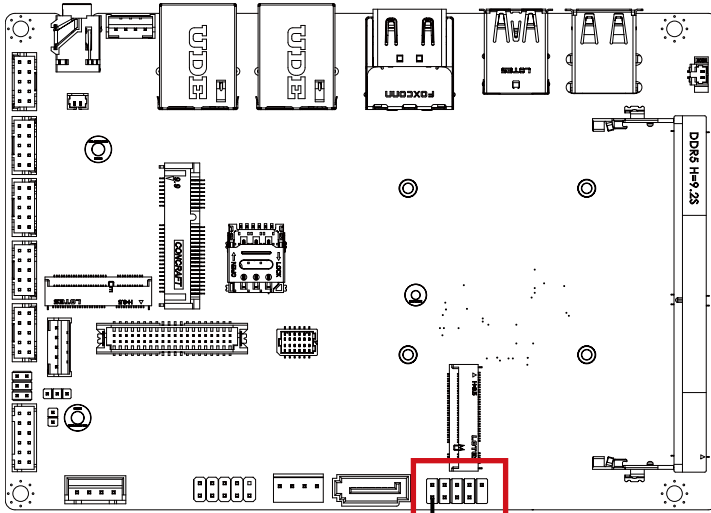

Pin 1

USB 2.0 Header	
2	10
1	9


Connector PN	Vendor
210-92-05GB04	PINREX
PH10R53BAZ009	HORNGTONG

Connector type
2x5pin header, pitch 2.54mm

Pin No.	Definition
1	5V
2	5V
3	D2n
4	D1n
5	D2p
6	D1p
7	GND
8	GND
9	No Pin
10	No Connect

3.2.5 SATA0 (SATA 6Gb/s Connector)

5

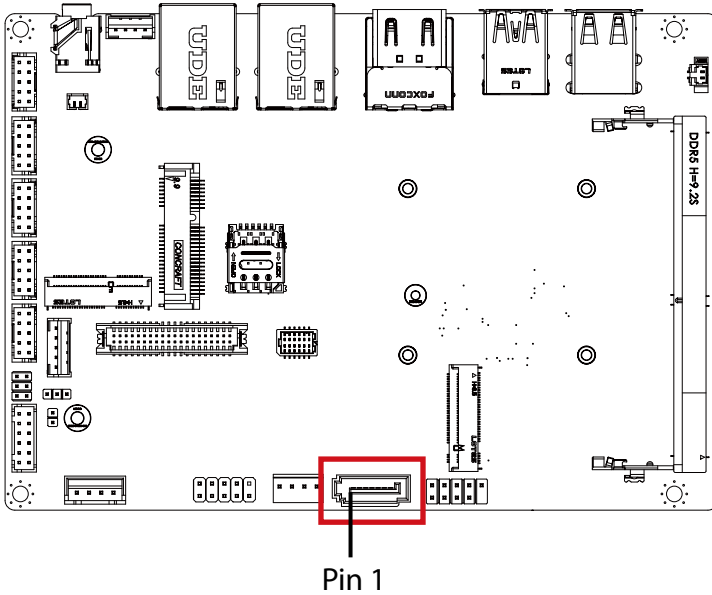

SATA 6Gb/s Connector



Connector PN

WAT3M-07A1G3BU4W

Vendor

WINWIN



ABA-SAT-054-S15

LOTES

Pin No.	Definition
1	GND
2	TXp
3	TXn
4	GND
5	RXn
6	RXp
7	GND

3.2.6 SATAPW (SATA power connector)

6

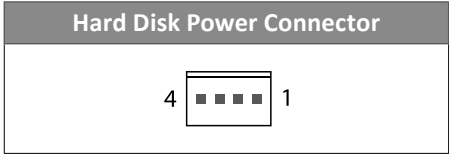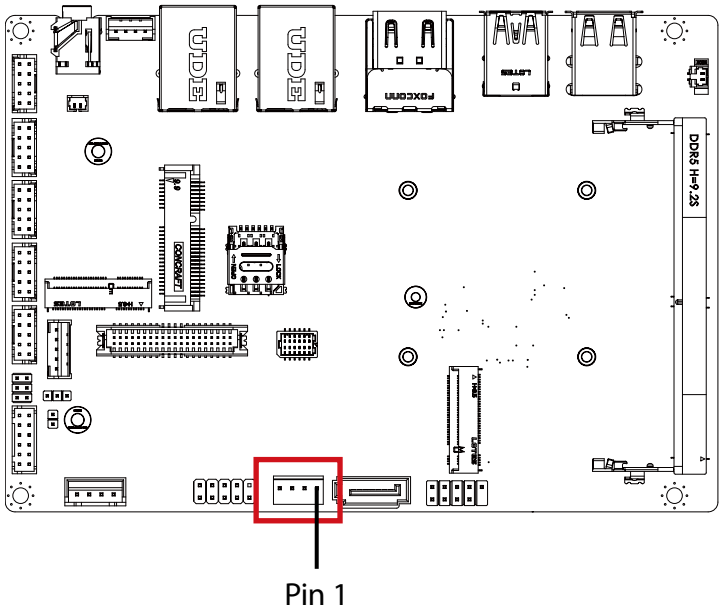

Connector PN	Vendor
743-91-045W00	PINREX


Connector type

1x4pin header, pitch 2.54mm

Pin No.	Definition
1	12V
2	GND
3	GND
4	5V

3.2.7 SYS_PANEL (Front panel header)

7

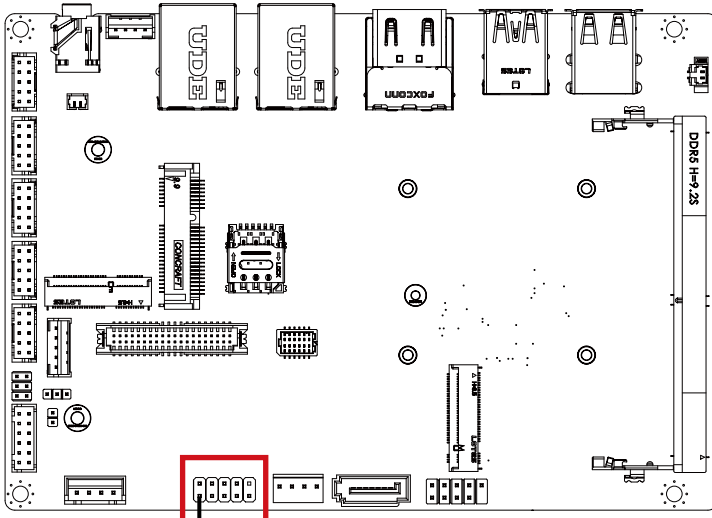

Pin 1

System Panel Header



Connector PN

210-92-05GW5W

Vendor

PINREX


Connector type

2x5pin header, pitch 2.54mm


Pin No.	Definition
1	HDD LED_p
2	Power LED_p
3	HDD LED_n
4	Power LED_n
5	GND
6	Power button_p
7	Reset Button
8	Power button_n
9	No Connect
10	No Pin

3.2.8 DC_IN (DC IN 1x4pin power connector)

8

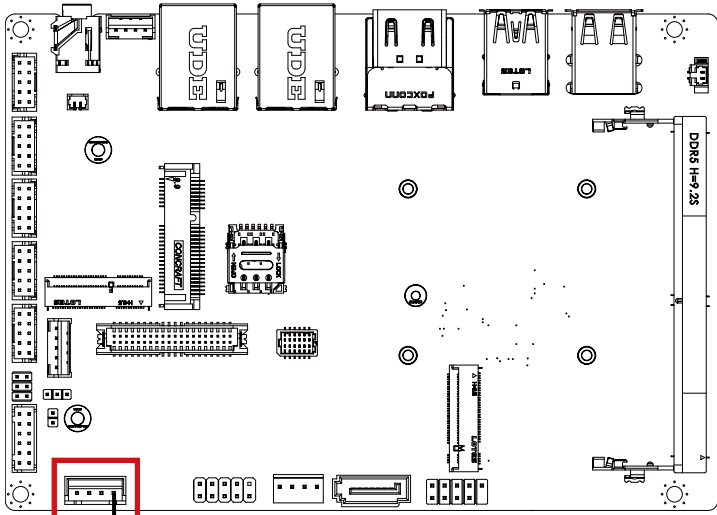

Pin 1

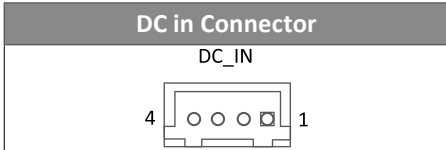



Connector PN	Vendor
753-81-04TW00	PINREX

Connector type
1x4pin header, pitch 2.5mm

Pin No.	Definition
1	GND
2	DC in
3	DC in
4	GND

3.2.9 GPIO_CNT (General Purpose input/output header)

9

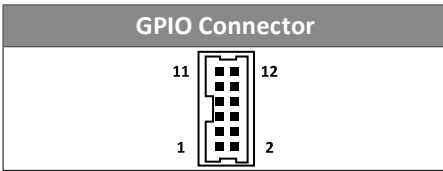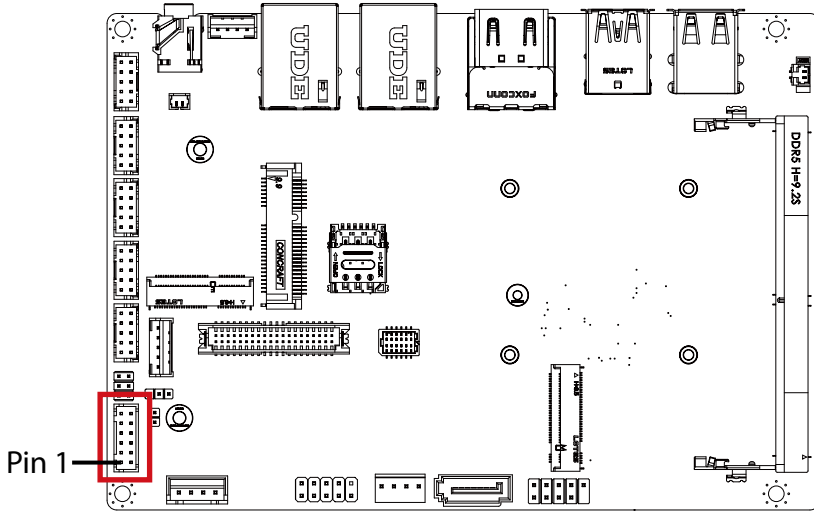

Pin No.	Definition
1	GPIO-output_1
2	GPIO-input_1
3	GPIO-output_2
4	GPIO-input_2
5	GPIO-output_3
6	GPIO-input_3
7	GPIO-output_4
8	GPIO-input_4
9	SMBus Clock
10	SMBus DATA


Pin No.	Definition
11	5V
12	GND

Connector PN	Vendor
725-81-12TW00	PINREX

Connector type
2x6pin header, pitch 2.0mm

3.2.10 JCOM1 (RI# pin RI#/5V/12V Select jumper for COM1 Port)

10

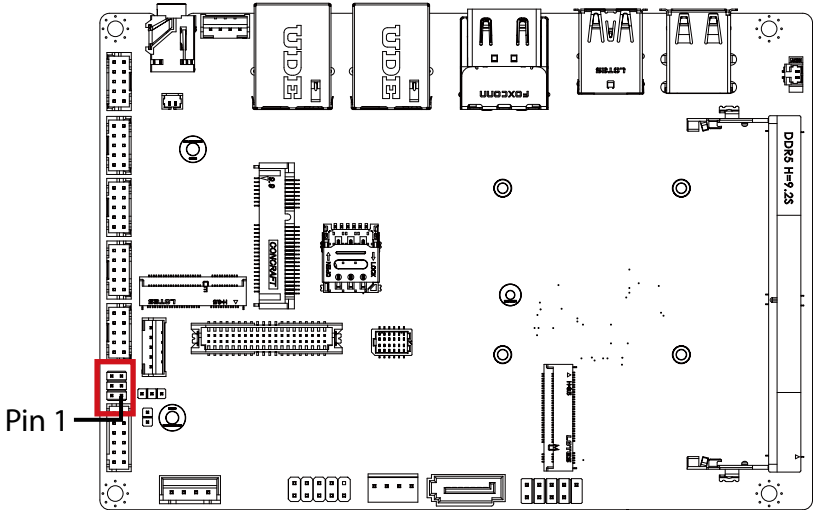


JCOM1 Jumper Select	
	1-2 Close: 5V (Power COM)
	3-4 Close: RI (Stand COM)
	5-6 Close: 12V (Power COM)


Connector PN	Vendor
220-97-03GB01	PINREX
PH06N53BAZ000	HORNGTONG
Connector type	
2x3pin header, pitch 2.0mm	

3.2.11 COM1, COM2, COM3, COM4 (Serial port header)

11

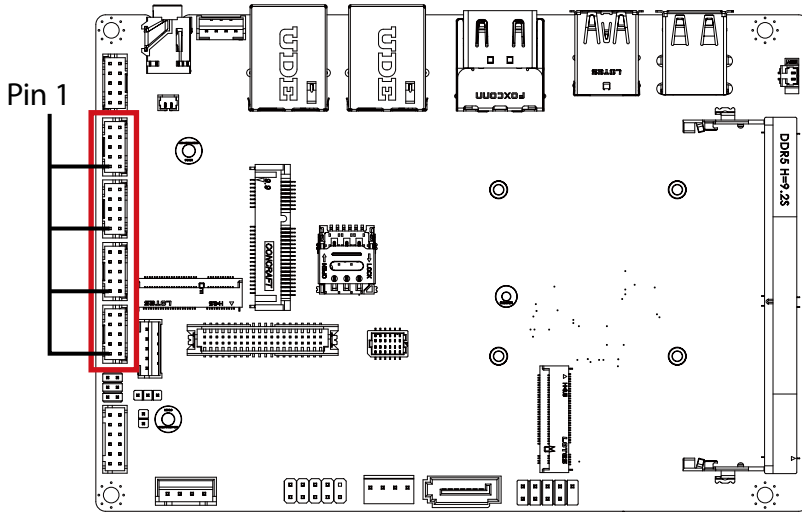

Serial Port Cable Connector



Connector PN

725-81-10TW00

Vendor

PINREX

Connector type

2x5pin header, pitch 2.0mm

Note :

COM1 : Support RS-232/422/485 & RI/5V/12V
For RI/5V/12V jumper setting, please see P. 43

COM2 : Support RS-232/422/485


COM3, COM4 : Support RS-232 only

Pin No.	RS-232	RS-422 Full Duplex	RS-485 Half Duplex
1	RXD	TXD+	D+
2	DCD	TXD-	D-
3	DTR	RXD-	-
4	TXD	RXD+	-
5	DSR	-	-
6	GND	-	-
7	CTS	-	-
8	RTS	-	-
9	No Connect	-	-
10	RI/5V/12V	-	-

3.2.12 FP_AUDIO (Front panel audio header)

12

Pin 1

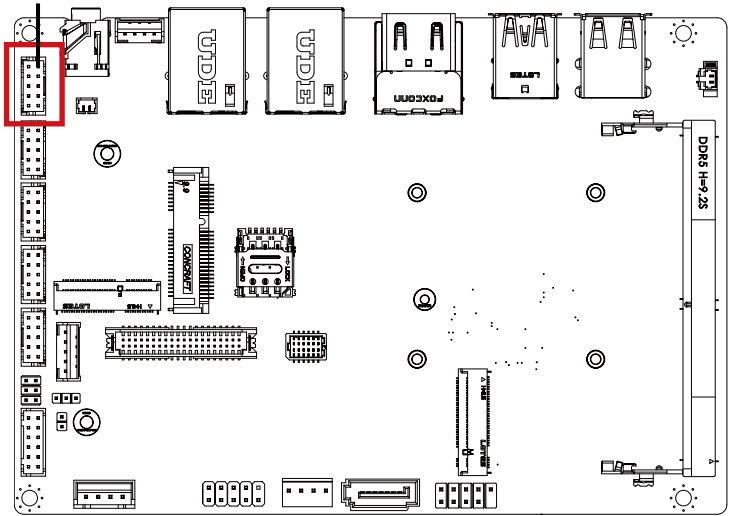


Front panel audio Connector

Connector PN	Vendor
725-81-10TW00	PINREX
Connector type	
2x5pin header, pitch 2.0mm	

Pin No.	Definition
1	MIC-LEFT
2	GND
3	MIC-RIGHT
4	Detect
5	LINE-RIGHT
6	GND
7	JACKSENCE Detect
8	NC
9	LINE-LEFT
10	GND

3.2.13 SPKR (Speaker out connector)

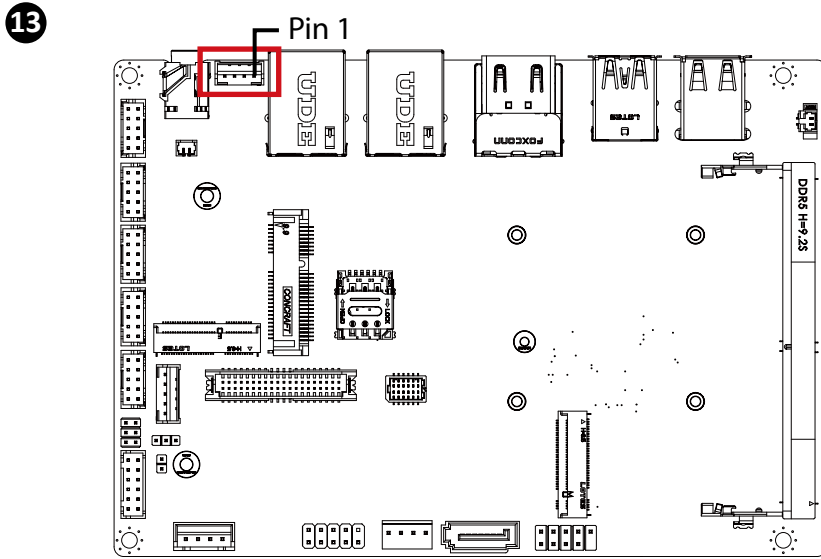

Speaker out connector



Pin No.	Definition
1	Speaker Out L+
2	Speaker Out L-
3	Speaker Out R-
4	Speaker Out R+

Connector PN

A2001WV-04P146

Vendor


JOINT-TECH


Connector type



1x4pin header, pitch 2.0mm

3.2.14 ME (ME Disable jumper)

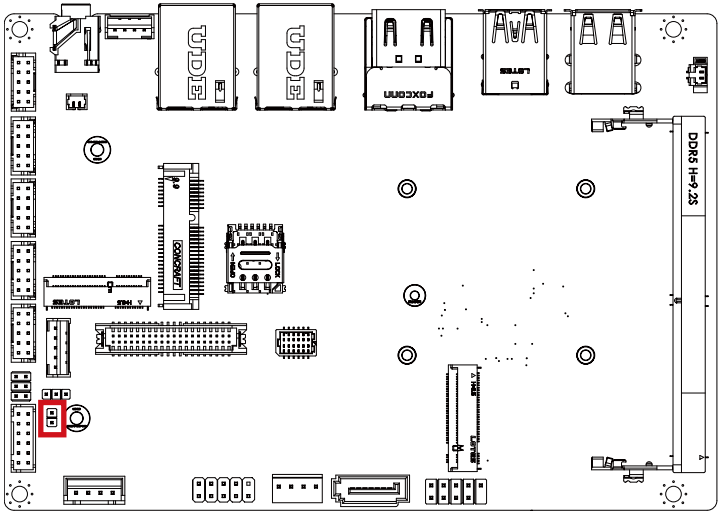14

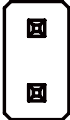

ME Disable Connector	
	


ME Disable jumper	
	Enable (Default setting)
	Disable

Connector PN	Vendor
220-96-02GBK1	PINREX


Connector type
1x2pin header, pitch 2.0mm

3.2.15 AT_CN (AT/ATX mode select jumper)

15

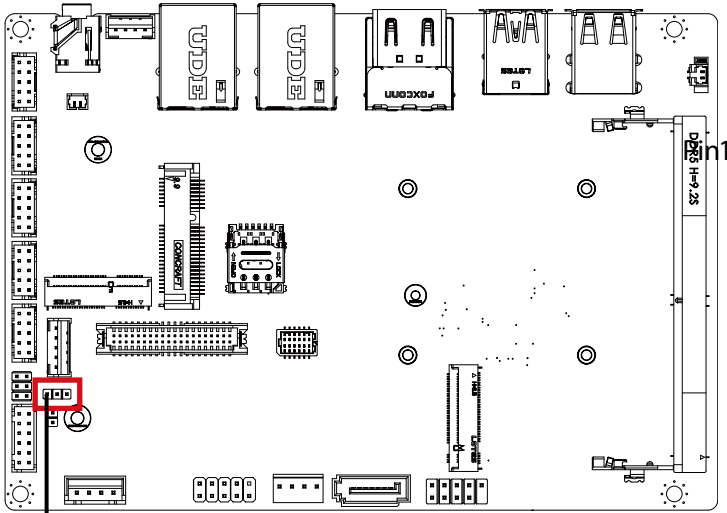

Pin 1



AT/ATX mode select jumper	
1  3	1-2 Close : AT mode.
	2-3 Close : ATX mode. (Default setting)

Connector PN	Vendor
220-96-03GB01	PINREX
Connector type	
1x3pin header, pitch 2.0mm	

Pin No.	Definition
1	AT MODE
2	Detect
3	ATX MODE

3.2.16 BKL_CN (Backlight Control connector)

16

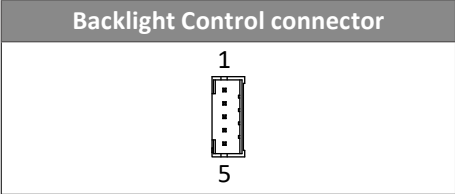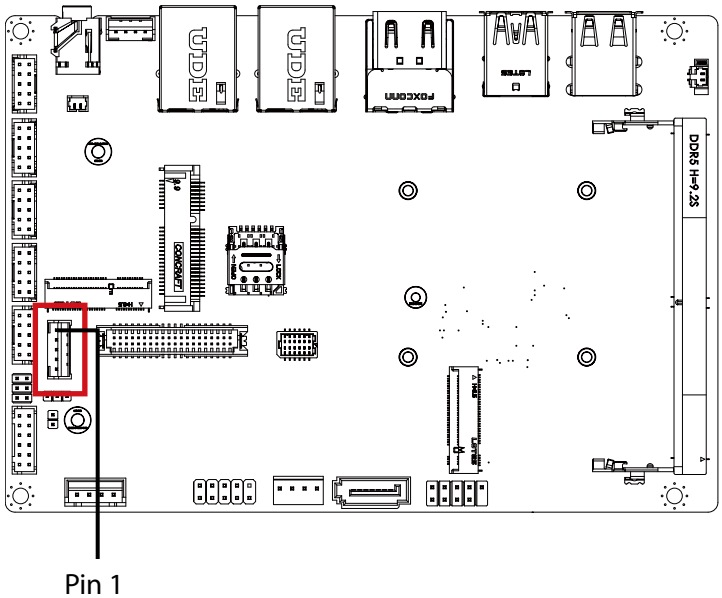

Connector PN	Vendor
721-81-05TW00	PINREX


Connector type

1x5pin header, pitch 2.0mm


Pin No.	Definition
1	5V (optional 12V)
2	PWM
3	Backlight Enable
4	GND
5	12V

3.2.17 LVDS (LVDS connector)

17

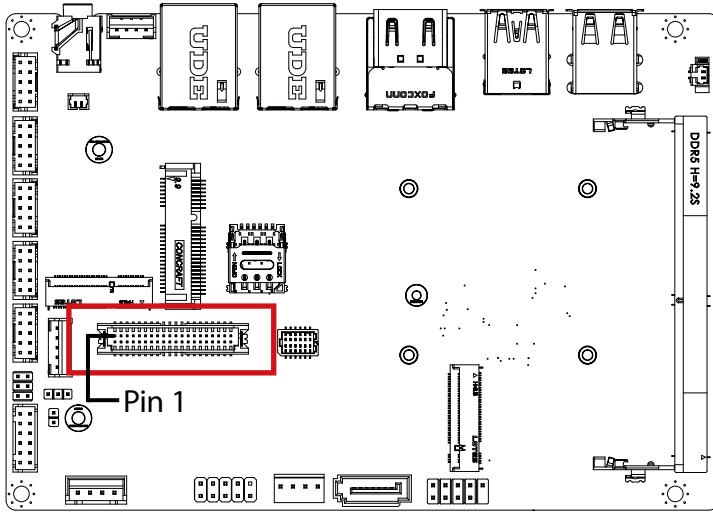

LVDS Connector



Pin No.	Definition	Pin No.	Definition
17	A3-	37	GND
18	A2-	38	GND
19	GND	39	12V
20	GND	40	12V

For each model support LVDS function.

But below model no need to add.

A0~A3 is odd channel 0~3, A4~A7 is even channel.

Pin No.	Definition	Pin No.	Definition
1	3.3V	21	A5+
2	5V	22	A4+
3	3.3V	23	A5-
4	5V	24	A4-
5	SPE0	25	GND
6	SPED0	26	GND
7	GND	27	A7+
8	GND	28	A6+
9	A1+	29	A7-
10	A0+	30	A6-
11	A1-	31	GND
12	A0-	32	GND
13	GND	33	CLK2+
14	GND	34	CLK1+
15	A3+	35	CLK2-
16	A2+	36	CLK1-

Connector PN	Vendor
712-76-40GWE0	PINREX
A1252WV-SF-2X20PD01	JOINT-TECH


Connector type

2x20pin header, pitch 1.25mm

Note: *The LVDS output connector of the unit is only intended to be connected to an UL/IEC/EN approval equipment with fire enclosure.

3.2.18 M2E (M.2 slot, 2230 E-key)

18

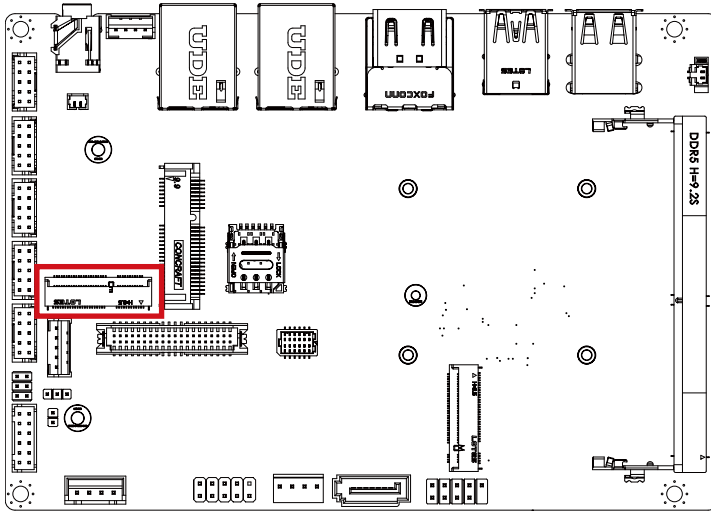

M.2 E Key Connector

74
75

2
1



Pin No.	Definition	Pin No.	Definition
1	GND	2	3V
3	USB_Dp	4	3V
5	USB_Dn	6	NC
7	GND	8	NC
9	NC	10	NC
11	NC	12	NC
13	NC	14	NC
15	NC	16	NC
17	NC	18	GND
19	NC	20	NC
21	NC	22	NC
23	NC		


Pin No.	Definition	Pin No.	Definition
33	GND	32	NC
35	PCIe1 TXp	34	NC
37	PCIe1 TXn	36	NC
39	GND	38	NC

41	PCIe1 RXp	40	NC
43	PCIe1 RXn	42	NC
45	GND	44	NC
47	CLK_Dp	46	NC
49	CLK_Dn	48	NC
51	GND	50	SUSCLK
53	CLK_REQ	52	PCIe_RST
55	PCIe_WAKE	54	BT_Disable
57	GND	56	WLAN_DISABLE
59	NC	58	NC
61	NC	60	NC
63	GND	62	NC
65	NC	64	NC
67	NC	66	PE Reset
69	GND	68	NC
71	NC	70	NC
73	NC	72	3V
75	GND	74	3V


Connector PN	Vendor
APCI0095-P002A	LOTES
80152-8521	BELLWETHER
2E0BC21-S85BE-LH	FOXCONN

3.2.19 MPCIE (Mini PCIe slot)

19

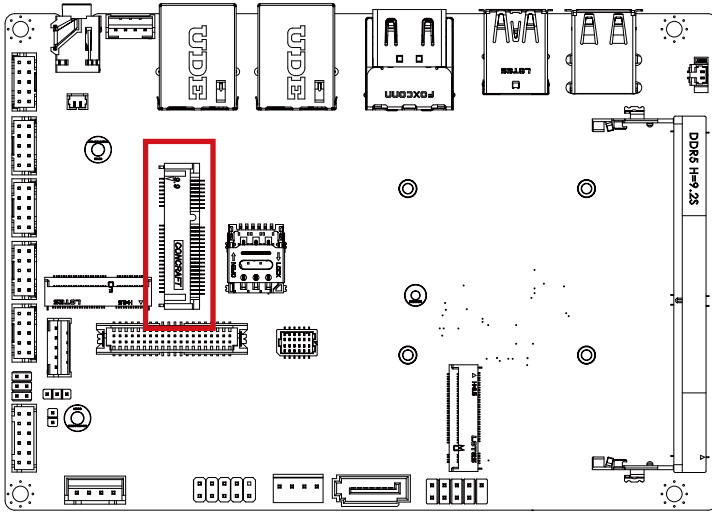

Mini PCIe Connector




Pin No.	Definition	Pin No.	Definition
1	PCIE WAKE	2	3.3V
3	NC	4	GND
5	NC	6	NC
7	PCIE Clock Request	8	SIM VCC
9	GND	10	SIM DATA
11	PCIE Clock n	12	SIM Clock
13	PCIE Clock p	14	SIM Reset
15	GND	16	VPP
17	NC	18	GND
19	NC	20	WLAN_DISABLE
21	GND	22	Reset

Pin No.	Definition	Pin No.	Definition
23	PCIE RXn	24	3.3V
25	PCIE RXp	26	GND
27	GND	28	NC
29	GND	30	SMB Clock
31	PCIE TXn	32	SMB DATA
33	PCIE TXp	34	GND
35	GND	36	USB Dn
37	GND	38	USB Dp
39	3.3V	40	GND
41	3.3V	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	NC
49	NC	50	GND
51	NC	52	3.3V
53	GND	54	GND

Connector PN	Vendor
AS0B221-S99Q-7H	FOXCONN

3.2.20 BUZZER (Buzzer header)

20

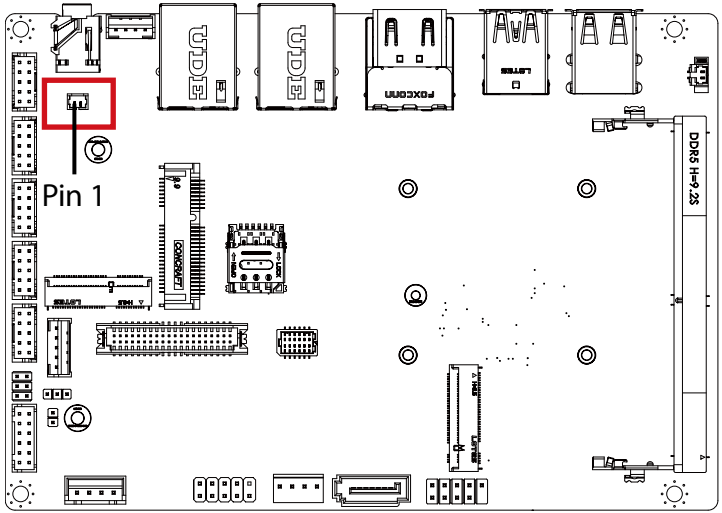

Buzzer header	


Connector PN	Vendor
712-71-02TW01	PINREX
A1250WV-02P	JOINT-TECH

Pin No.	Definition
1	Buzzer
2	5V

Connector type
1x2pin header, pitch 1.25mm



3.2.21 SIM_CARD (3G/4G SIM Slot)

21

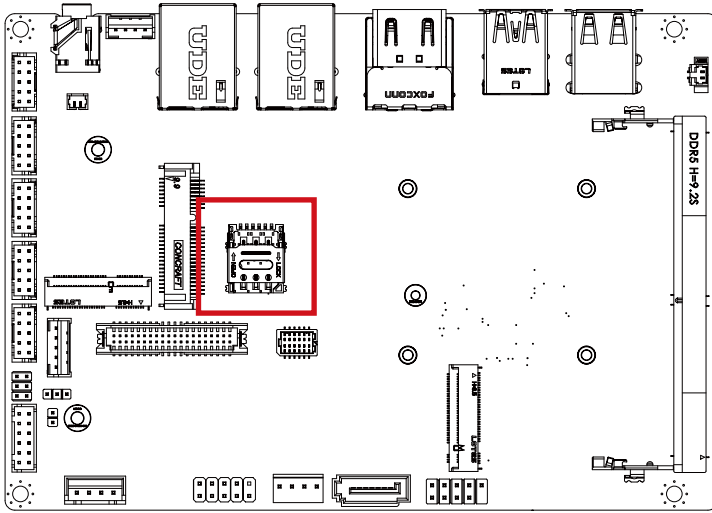

3.2.22 M2M (M.2 Slot, 2280 M-Key)

22

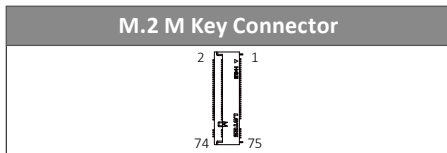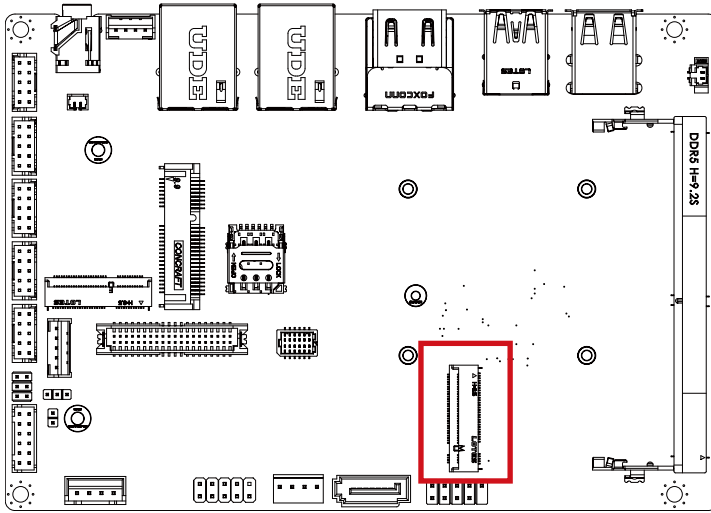

Pin No.	Definition	Pin No.	Definition
1	GND	2	3.3V
3	GND	4	3.3V
5	NC	6	NC
7	NC	8	NC
9	GND	10	SSD LED
11	NC	12	3.3V
13	NC	14	3.3V
15	GND	16	3.3V
17	NC	18	3.3V
19	NC	20	NC
21	GND	22	NC
23	NC	24	NC
25	NC	26	NC
27	GND	28	NC
29	PCIe1 RXn	30	NC
31	PCIe1 RXp	32	NC
33	GND	34	NC


Pin No.	Definition	Pin No.	Definition
35	PCIe1 TXn	36	NC
37	PCIe1 TXp	38	NC
39	GND	40	NC
41	PCIe0 RXn	42	NC
43	PCIe0 RXp	44	NC
45	GND	46	NC
47	PCIe0 TXn	48	NC
49	PCIe0 TXp	50	PCI Reset
51	GND	52	PCIe Clock Request
53	PCIe Clock n	54	NC
55	PCIe Clock p	56	NC
57	GND	58	NC

Pin No.	Definition	Pin No.	Definition
67	NC	68	SUS_CLK
69	Detect	70	3.3V
71	GND	72	3.3V
73	GND	74	3.3V
75	GND		

Connector PN	Vendor
80159-8521	BELLWETHER

3.2.23 HP (LINE out connector)

23

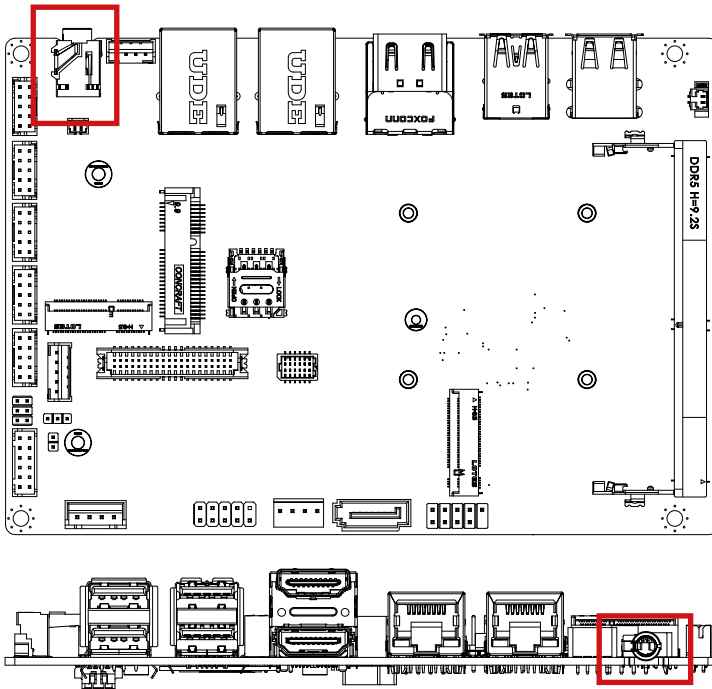

Audio Connector




Connector PN

WTJ-035-47ABZ1

Vendor



KYOYAKU

Pin No.	Definition
1	GND
2	LINE out - Left
3	LINE out - Right
4	JackSense
5	GND
6	GND
7	NC

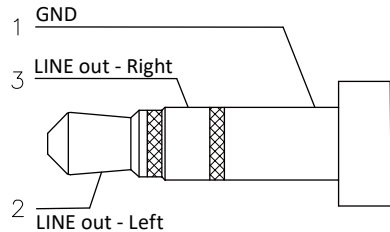


3.2.24 LAN1, LAN2 (LAN connector)

24

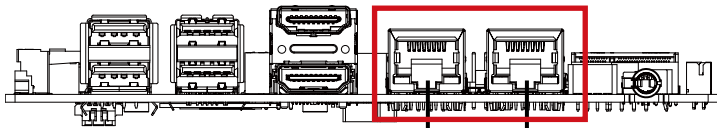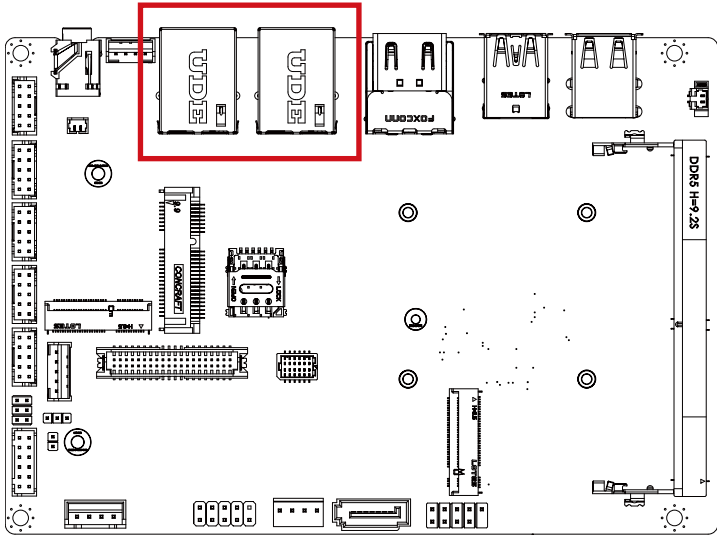

LAN 1 LAN 2

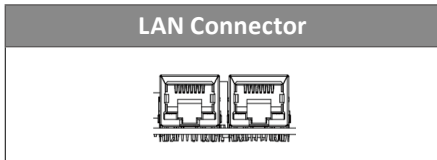



State	Description
Yellow On	2.5Gbps data rate
Green On	1Gbps data rate
Off	100M & 10Mbps data rate

Pin No.	Definition
1	TX1+
2	TX1-
3	TX2+
6	TX2-
4	TX3+
5	TX3-
7	TX4+
8	TX4-


Connector PN	Vendor
RB1-GB-0010	UDE

3.2.25 HDMI_21 (HDMI connector)

25

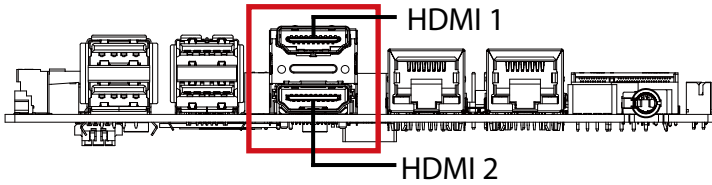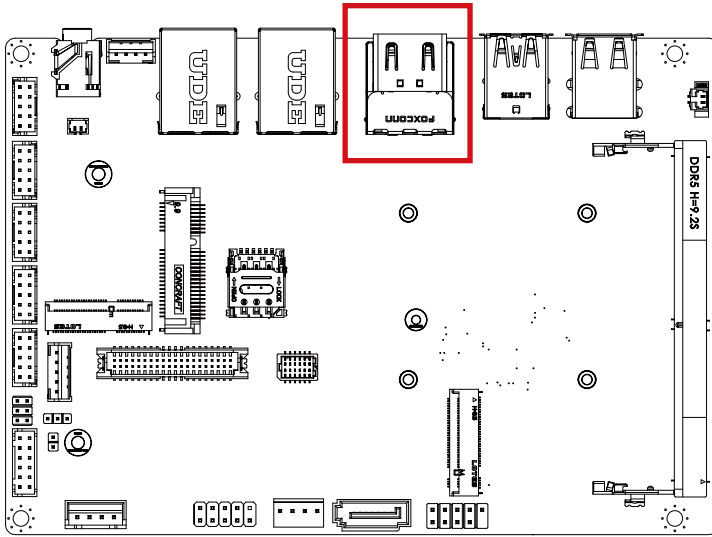

HDMI Connector





Pin No.	Definition	Pin No.	Definition
1	TX2p	20	TX2p
2	GND	21	GND
3	TX2n	22	TX2n
4	TX1p	23	TX1p
5	GND	24	GND
6	TX1n	25	TX1n
7	TX0p	26	TX0p
8	GND	27	GND
9	TX0n	28	TX0n
10	CLKp	29	CLKp

Pin No.	Definition	Pin No.	Definition
11	GND	30	GND
12	CLKn	31	CLKn
13	NC	32	NC
14	NA	33	NA
15	DDC Clock	34	DDC Clock
16	DDC Data	35	DDC Data
17	GND	36	GND
18	5V	37	5V
19	Hot Plug Detect	38	Hot Plug Detect

Connector PN	Vendor
QJ11191-DFB1-4F	FOXCONN

3.2.26 USB32 (USB 3.2 Gen 2x1 connector)

26

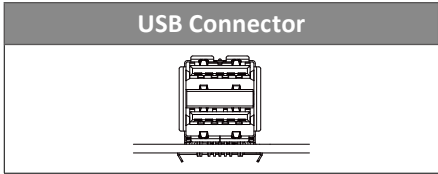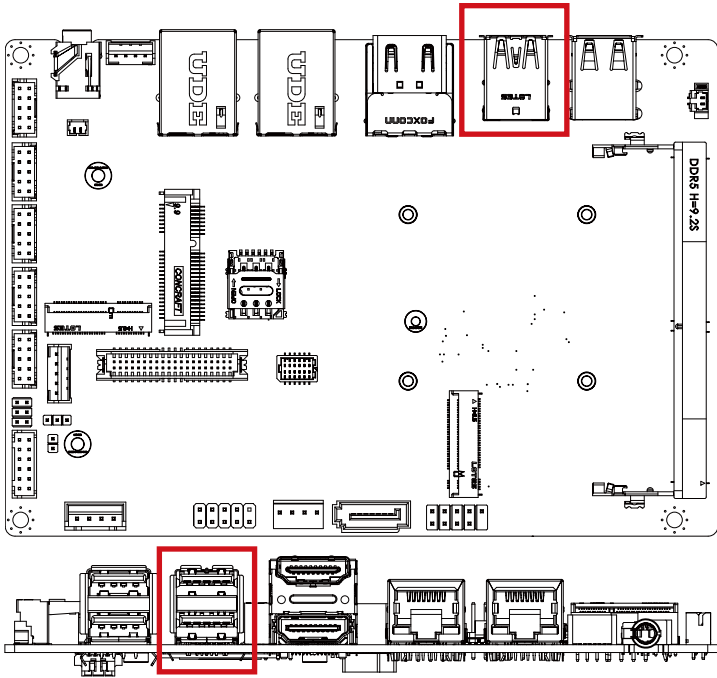


Connector PN	Vendor
18-A5950-6A33-A	TCONN


Pin No.	Definition	Pin No.	Definition
1	5V	10	5V
2	USB_Dn	11	USB_Dn
3	USB_Dp	12	USB_Dp
4	GND	13	GND
5	USB3_RXn	14	USB3_RXn
6	USB3_RXp	15	USB3_RXp
7	GND	16	GND
8	USB3_TXn	17	USB3_TXn
9	USB3_TXp	18	USB3_TXp

3.2.27 USB2 (USB 2.0 connector)

27

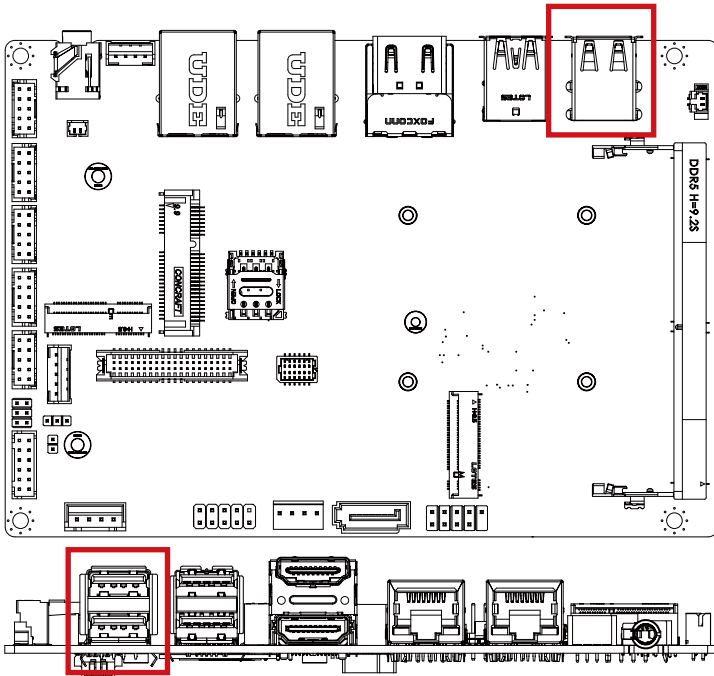

USB Connector



Connector PN	Vendor
UB1112C-8FDE-4F	FOXCONN
185-0820112-GB	YSELEC

Pin No.	Definition
1	5V
2	D1n
3	D1p
4	GND
5	5V
6	D2n
7	D2p
8	GND

Chapter 4

Chapter 4 – BIOS

4.1 Introduction

BIOS (Basic input/output system) provides hardware detailed information and boot-up options, which include firmware to control, set-up and test all hardware settings. Therefore, BIOS is the communication bridge between OS/application software and hardware.

4.1.1 How to Entering into BIOS menu


Once the system is power on, press the key as soon as possible to access into BIOS Setup program.

4.1.2 Function Keys to setup in BIOS Setup program

Function keys	Description
→←	Select Screen
↑↓	Select Item
Enter	Execute command or enter the submenu
+	Increase the numeric value or make changes
—	Decrease the numeric value or make changes
F1	General Help
F2	Previous Values
F3	Load Optimized Defaults Settings
F4	Save changes & Exit the BIOS Setup program
ESC	Exit the BIOS Setup program

4.2 The Main Menu


The main menu shows the basic system information. Use arrow keys to move among the items.

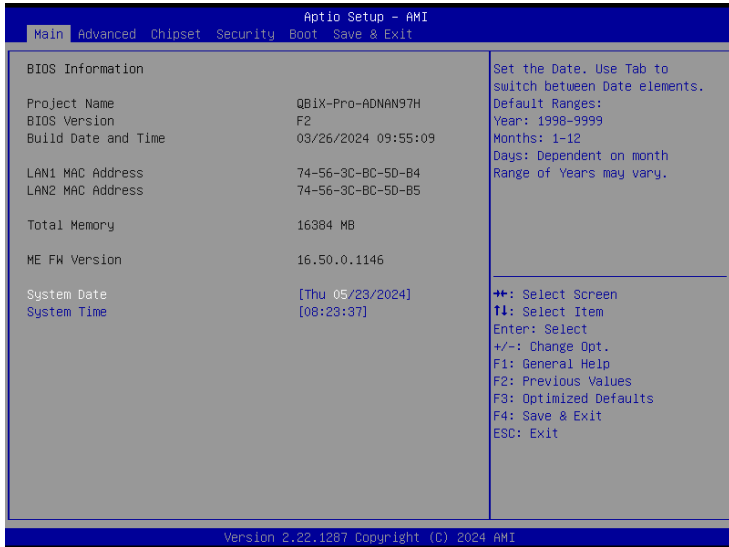

Items	Description
Project Name	Shows Project name information
BIOS Version	Shows the BIOS version of the system
Build Date and Time	Shows the Build Date and Time when the BIOS was created.
LAN1 MAC Address	Shows LAN1 MAC Address information
LAN2 MAC Address	Shows LAN2 MAC Address information
Total Memory	Shows the total memory size of the installed memory
ME FW version	Shows ME firmware version
System Date	Set the Date for the system (Format : Week - Month - Day - Year)
System Time	Set the time for the system (Format : Hour - Minute - Second)


4.3 Advanced

The Advanced menu is to configure the functions of hardware settings through submenu. Use arrow keys to move among the items, and press <Enter> to access into the related submenu.

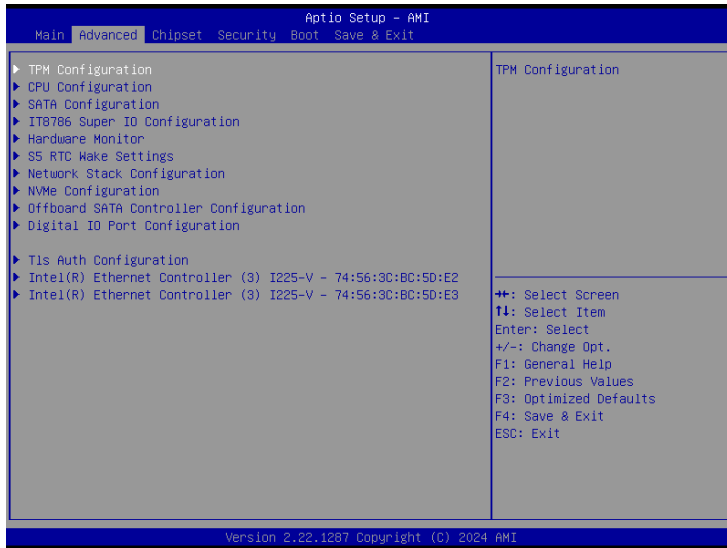


4.3.1 TPM Configuration

Use TPM Configuration submenu to choose TPM interface.

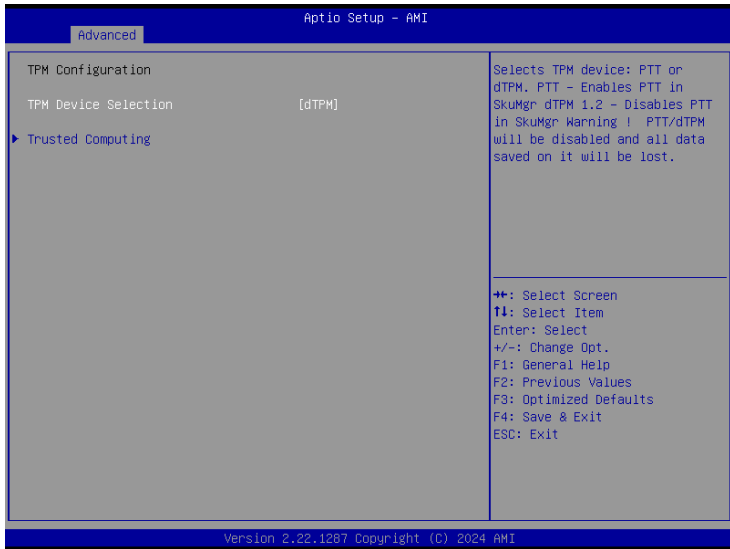

Item	Description
TPM Device Selection	PTT : Internal TPM dTPM : External TPM (When using External TPM module or having TPM chip on MB)(Default setting)


Trusted Computing : Shows TPM information, and TPM module configuration setting.

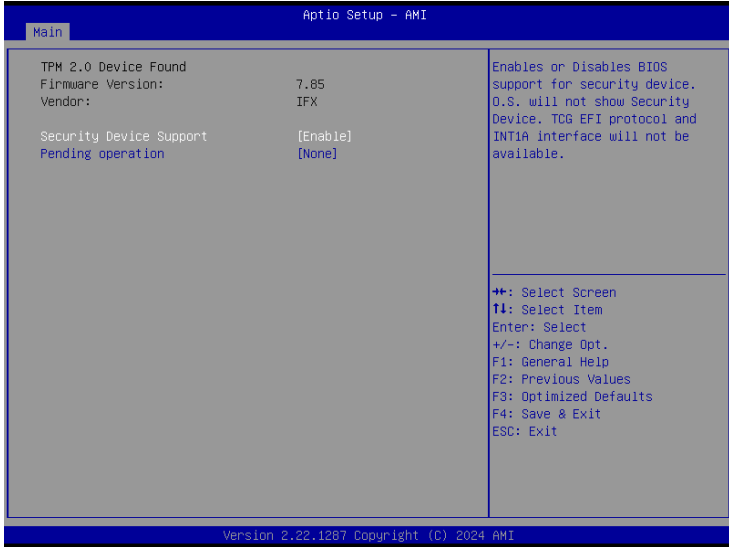

Item	Description
Security Device support	Enabled : Enables TPM feature (Default setting) Disabled : Disables TPM feature
Pending operation	None : No execution will be conducted (Default setting) TPM clear : Set to clear data on TPM


4.3.2 CPU Configuration

This submenu shows detailed CPU informations.

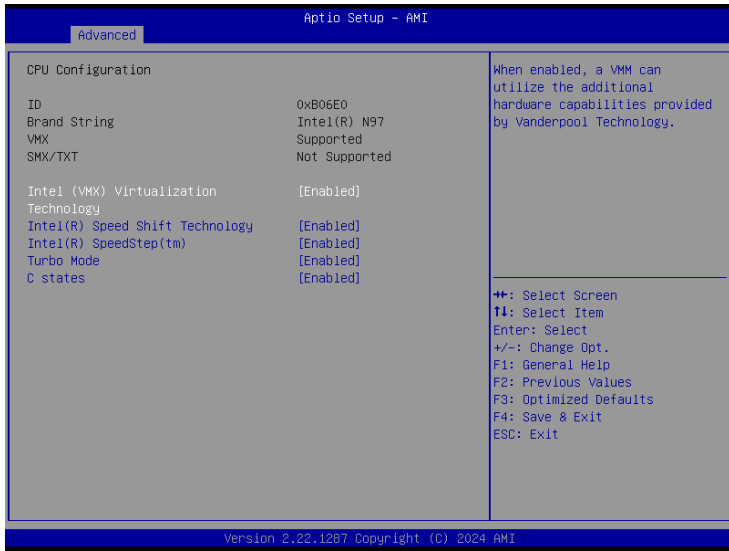


Item	Description
Intel (VMX) Virtualization Technology	Virtualization enhanced by Intel® Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple virtual systems. Enabled : Enables Intel Virtualization Technology (Default setting) Disabled : Disables Intel Virtualization Technology
Intel(R) Speed Shift Technology	To speed up CPU frequency transition time from basic frequency to maximum frequency. Enabled : Enables Intel(R) Speed Shift Technology (Default setting) Disabled : Disables Intel(R) Speed Shift Technology
Intel(R) SpeedStep(tm)	According to Intel CPU loading, Intel SpeedStep Technology will automatically adjust the CPU voltage and core frequency to decrease heat and power consumption for power saving. Enabled : Enables Intel(R) SpeedStep Technology (Default setting) Disabled : Disables Intel(R) SpeedStep Technology
Turbo Mode	Enabled : Enables Turbo Mode (Default setting) Disabled : Disables Turbo Mode
C states	Command CPU to enter into low power consumption mode when CPU is under idle mode. Enabled : Enables C states (Default setting) Disabled : Disables C states

4.3.3 SATA Configuration

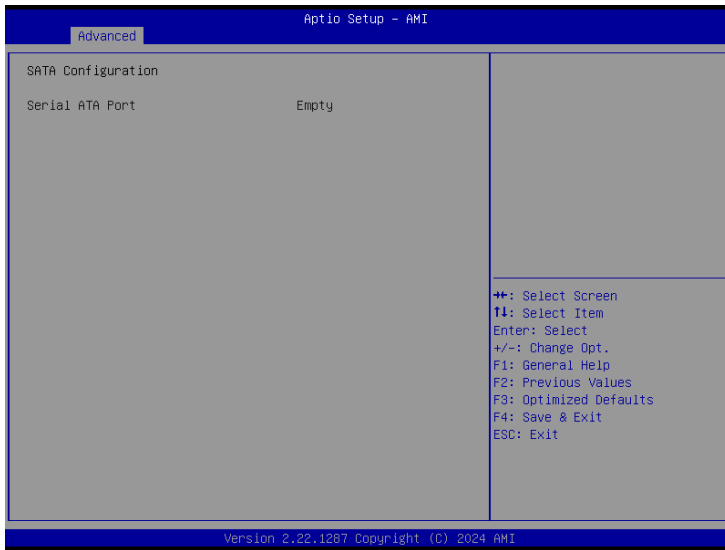


Item	Description
Serial ATA Port	shows 2.5" SATA HDD/SSD information

4.3.4 IT8786 Super IO Configuration

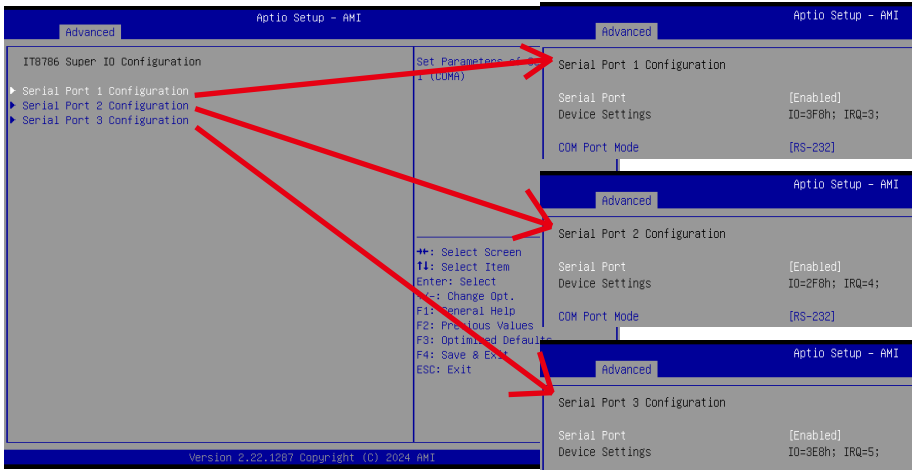

Item	Description
Serial Port 1 Configuration	Press [Enter] to configure advanced items : Serial Port : Enabled : Enables allows you to configure the serial port settings Disabled : if Disabled, displays no configuration for the serial port
Serial Port 2 Configuration	Device settings : Display the specified Serial Port base I/O address and IRQ COM Port Mode : Choose RS-232, RS-422, or RS-485 feature
Serial Port 3 Configuration	Press [Enter] to configure advanced items : Serial Port : Enabled : Enables allows you to configure the serial port settings Disabled : if Disabled, displays no configuration for the serial port Device settings : Display the specified Serial Port base I/O address and IRQ

4.3.5 Hardware Monitor

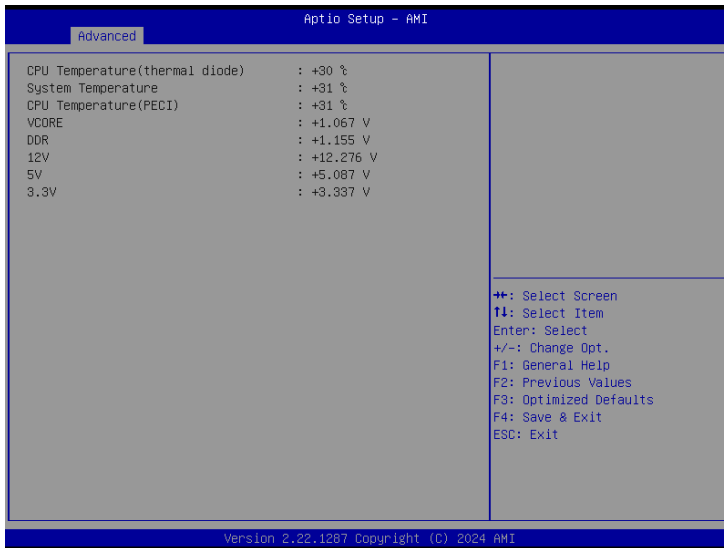


Item	Description
CPU Temperature (thermal diode)	Shows current CPU temperature
System Temperature	Shows current system temperature
CPU Temperature (PECI)	Shows current CPU temperature

4.3.6 S5 RTC Wake Settings




Item	Description
<p>Wake system from S5</p>	<p>Enable or Disable System to wake on a specific time. Disabled : Disables system to wake on a specific time (Default setting) Fixed Time : Enables system to wake on a specific time (Format : hr : min : sec)</p>

4.3.7 Network Stack Configuration

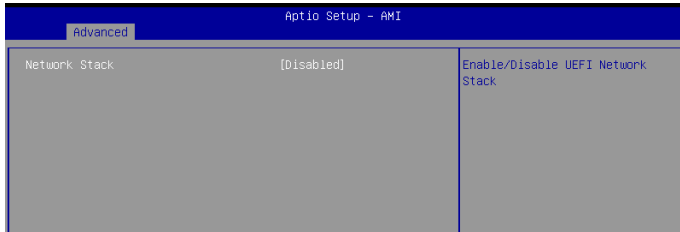

When Network stack is enabled :

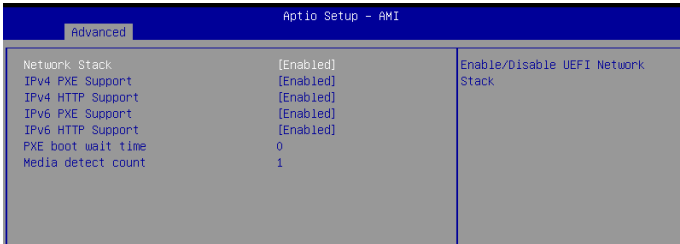


Item	Description
Network Stack	When system is power on, install LAN driver under UEFI mode Disabled : Disables UEFI Network Stack (Default setting) Enabled : Enables UEFI Network Stack
IPv4 PXE Support	When Network stack is enabled : Disabled : Disables IPv4 PXE Support Enabled : Enables IPv4 PXE Support
IPv4 HTTP Support	When Network stack is enabled : Disabled : Disables IPv4 HTTP Support Enabled : Enables IPv4 HTTP Support
IPv6 PXE Support	When Network stack is enabled : Disabled : Disables IPv6 PXE Support Enabled : Enables IPv6 PXE Support
IPv6 HTTP Support	When Network stack is enabled : Disabled : Disables IPv6 HTTP Support Enabled : Enables IPv6 HTTP Support
PXE boot wait time	Wait time in seconds, or use ESC key to abort the PXE boot.
Media detect count	Number of times the presence of media will be checked.

4.3.8 NVMe Configuration


NVMe Configuration shows information when your M.2 NVMe PCIe SSD is installed.



4.3.9 Offboard SATA Controller Configuration

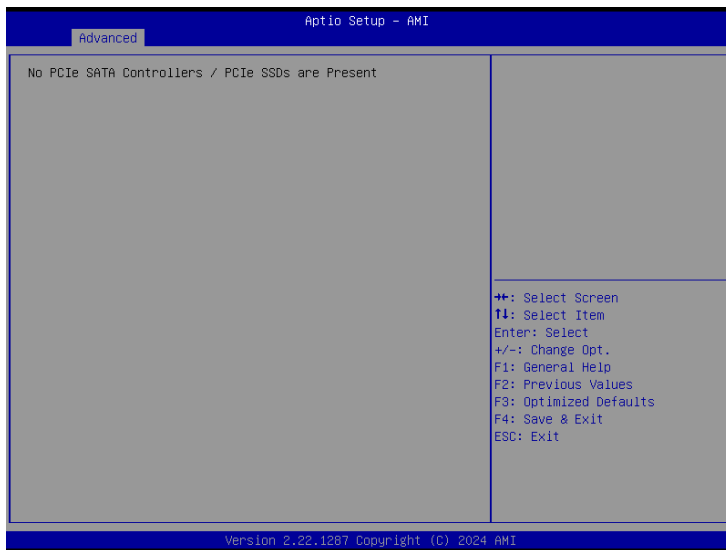


4.3.10 Digital IO Port Configuration

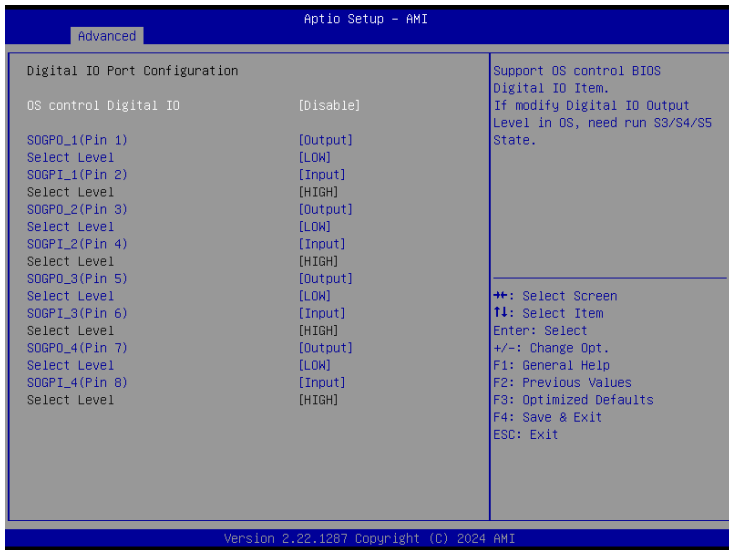

Item	Description
OS control Digital IO	<p>Disabled : If Digital IO Output value/level is modified in OS, they will not be memorized and kept. (Default setting)</p> <p>Enabled : If Digital IO Output value/level is modified in OS, they will be memorized and kept.</p>
SOGPO_1 (Pin 1) SOGPI_1 (Pin 2) SOGPO_2 (Pin 3) SOGPI_2 (Pin 4) SOGPO_3 (Pin 5) SOGPI_3 (Pin 6) SOGPO_4 (Pin 7) SOGPI_4 (Pin 8)	Configure Digital IO Input or Output values for each pin.


4.3.11 Tls Auth Configuration

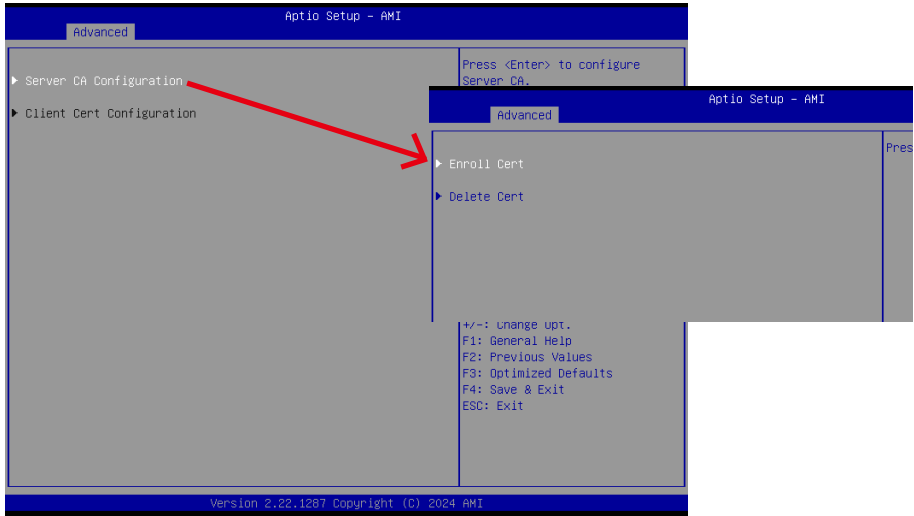

Item	Description
Enroll Cert	<p>Press [Enter] to configure advanced items :</p> <p>Server CA Configuration :</p> <p>Enroll Cert :</p> <ol style="list-style-type: none"> 1. Enroll Cert Using File 2. Cert GUID : Input digit character in 11111111-2222-3333-4444-1234567 890ab format. 3. Commit Changes and Exit 4. Discard Changes and Exit

4.3.12 Intel(R) Ethernet Controller (3) I225-V - 74:56:3C:BC:5D:E2 (MAC address may varied based on different motherboard)


Shows Intel Ethernet controller information

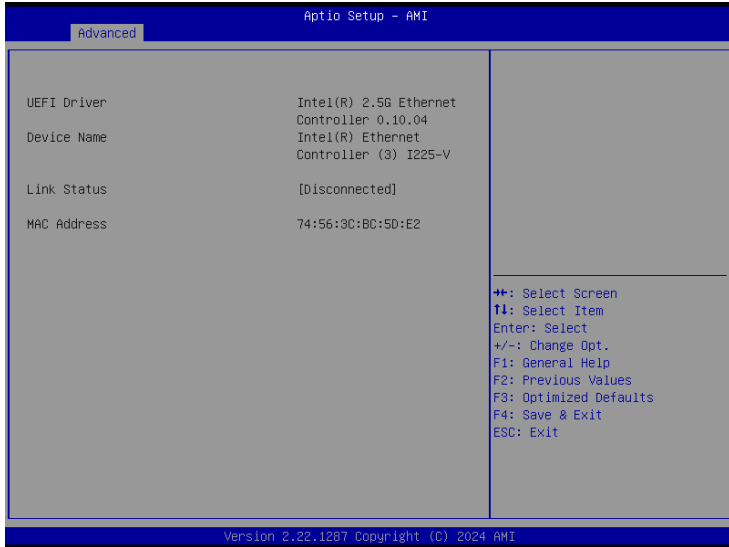

NOTE : MAC address may varied based on different motherboard


4.3.13 Intel(R) Ethernet Controller (3) I225-V - 74:56:3C:BC:5D:E3 (MAC address may varied based on different motherboard)

Shows Intel Ethernet controller information

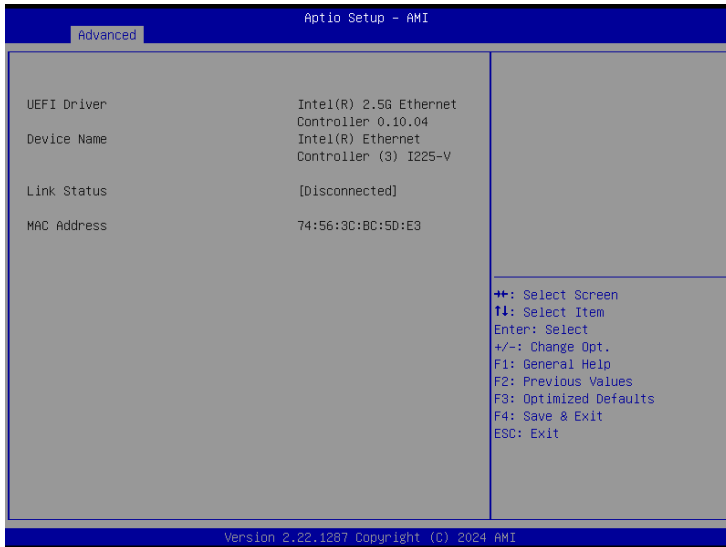


NOTE : MAC address may varied based on different motherboard

4.4 Chipset

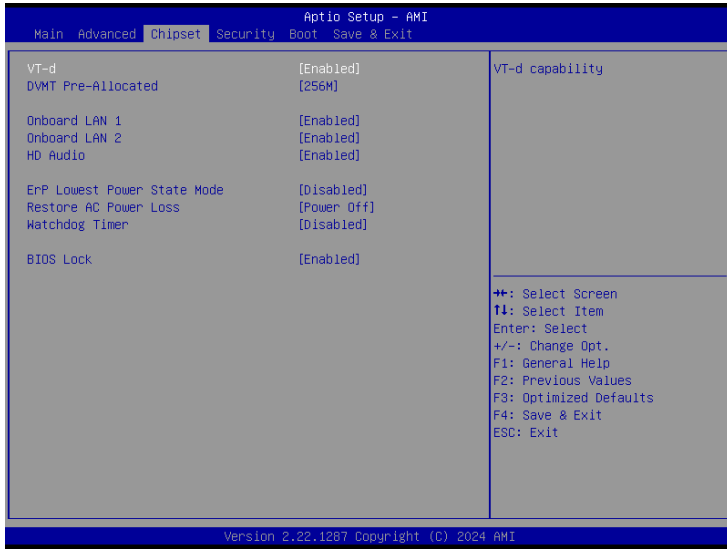

Item	Description
VT-d	Enabled : Enables VT-d function (Default setting) Disabled : Disables VT-d function
DVMT Pre-Allocated	Use DVMT Pre-Allocated to set the amount of system memory which is installed to the integrated graphics processor Option items : 32M , 64M, 128M , 256M(Default setting)
Onboard LAN1 Onboard LAN2	Enable/Disable onboard LAN controller Enabled : Enables onboard LAN controller (Default setting) Disabled : Disables onboard LAN controller
HD Audio	Enable/Disable onboard audio controller Enabled : Enables onboard audio controller (Default setting) Disabled : Disables onboard audio controller
ErP Lowest Power State Mode	Enable/Disable Enables ErP Lowest Power State Mode Enabled : Enables ErP Lowest Power State Mode Disabled : Disables ErP Lowest Power State Mode (Default setting)
Restore AC Power Loss	To set which option the system should returns if a sudden power loss occurred Power off : Do not power on when the power is back (Default setting) Power on : System power on when the power is back Last state : Restore the system to the state before power loss occurs
Watchdog Timer	Enable/Disable Watchdog Timer function Enabled : Enables Watchdog Timer function Disabled : Disabled Watchdog Timer function (Default setting)
BIOS Lock	Enable/Disable BIOS Lock function Enabled : Enables BIOS Lock function (Default setting) Disabled : Disabled BIOS Lock funtion


4.5 Security

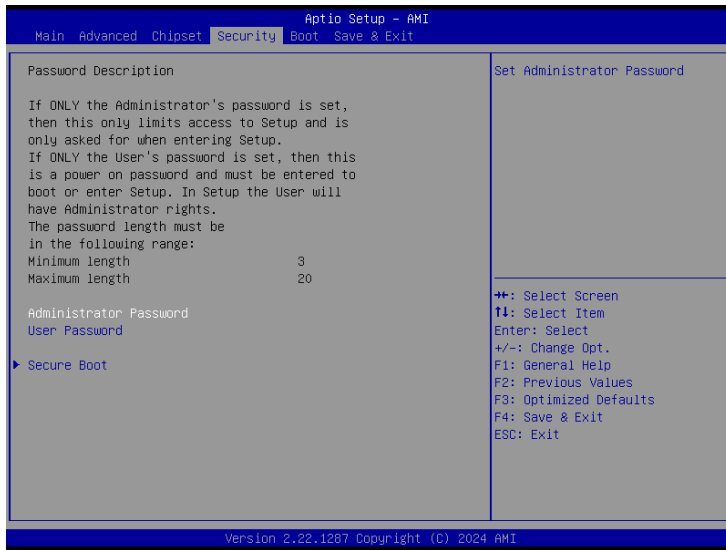

Item	Description
Administrator Password	To set up Administrator's password Minimum length : 3 Maximum length : 20
User Password	To set up User's password Minimum length : 3 Maximum length : 20
Secure Boot	Press <Enter> to configure the advanced items



Item	Description
Secure Boot	Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates Enabled : Enables Secure Boot function Disabled : Disables Secure Boot function (Default setting)
Secure Boot Mode	Standard : Standard mode Custom : Custom mode (Default setting)
Restore Factory Keys	To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings
Reset To Setup Mode	Yes : Agree to setup mode No : Cancel to setup mode
Key Management	Enables expert users to modify Secure boot policy variables without full authentication Press <Enter> to configure the advanced items

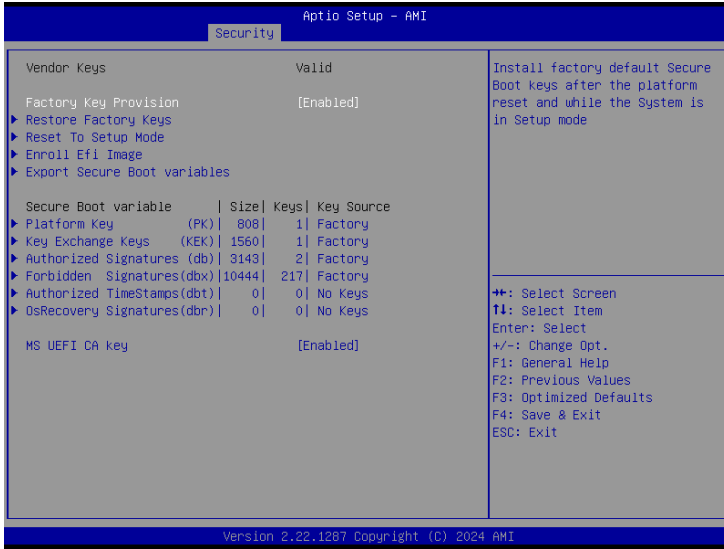


Item	Description
Factory Key Provision	Install factory default Secure Boot keys after the platform reset and while the system is in Setup mode Enabled : Enables Factory Key Provision (Default setting) Disabled : Disables Factory Key Provision
Restore Factory Keys	To restore factory settings Yes : Agree to restore factory settings No : Cancel to restore factory settings
Reset To Setup Mode	Yes : Agree to setup mode No : Cancel to setup mode
Enroll Efi Image	Allow the image to run in Secure Boot mode
Export Secure Boot variables	Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device

Item	Description
Platform Key (PK)	These items allows you to enroll factory defaults or load Certificates from a file.
Key Exchange Keys (KEK)	
Authorized Signatures (db)	
Forbidden Signatures (dbx)	
Authorized TimeStamps (dbt)	
OsRecovery Signatures (dbr)	
MS UEFI CA key	Enabled : Enables MS UEFI CA Key (Default setting) Disabled : Disables MS UEFI CA Key


4.6 Boot

This Boot menu allows you to set/change system boot options

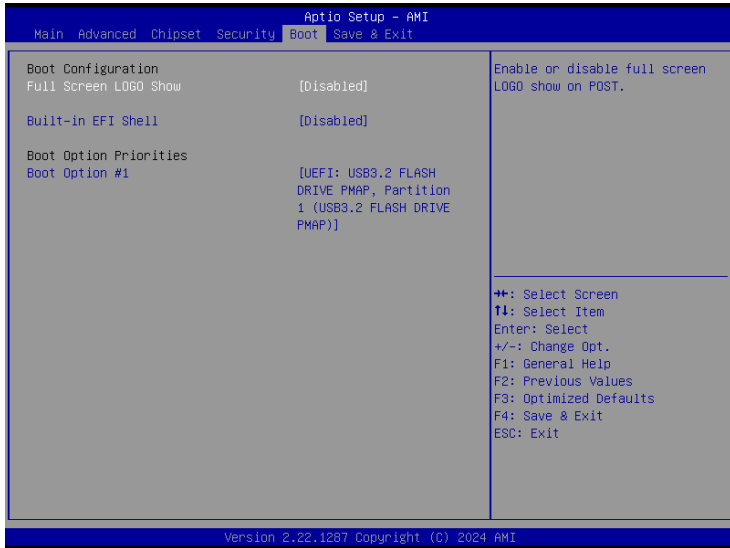

Item	Description
Full Screen LOGO Show	Enable/Disable full screen LOGO show on POST screen Enabled : Enables Full screen LOGO Show on POST screen Disabled : Disables Full screen LOGO Show on POST screen (Default setting)
Built-in EFI Shell	Enabled : Enables Built-in EFI Shell Disabled : Disables Built-in EFI Shell (Default setting)
Boot Option #1	Shows the information of the storage that be installed in the system Choose/set the boot priority

4.7 Save & Exit

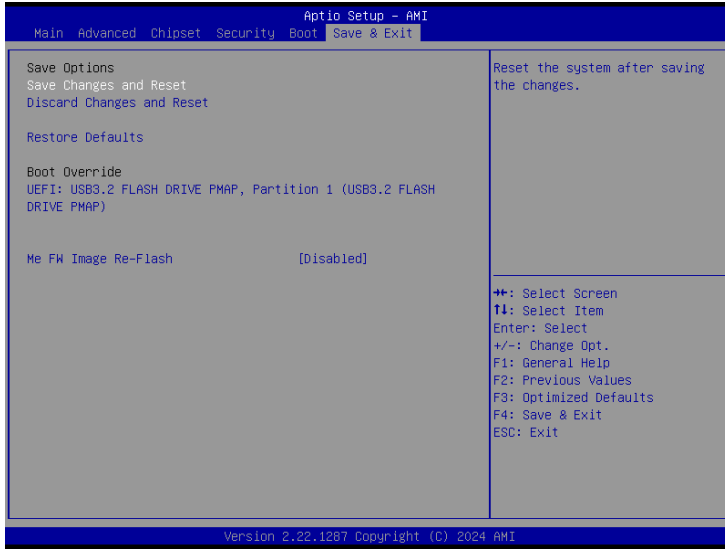

Item	Description
Save Changes and Reset	After configuring all the options that you wish to change, choose this option to save all the changes and reboot the system Yes : Agree to save and reset No : Cancel to save and reset
Discard Changes and Reset	Choose this option to reboot the system without saving any changes Yes : Agree to discard changes and reset No : Cancel to discard changes and reset
Restore Defaults	Restore/Load default values for all the setup options Yes : Agree to load optimized defaults No : Cancel to load optimized defaults
Me FW Image Re-Flash	Enable/Disable Me FW image re-flash function Enabled : Enables Me FW image re-flash function Disabled : Disables Me FW image re-flash function (Default setting)