

Quick Installation Guide

Introduction

RGS-P9000 is a modular managed Ethernet switch with 4 slots, providing you with great operational flexibility. You can make the best of the switch by installing different modules based on your needs. The switch supports up to 24 Gigabit SFP ports and 4 10Gigabit ports.

Package Contents

Contents	Pictures	RGS-P9000-LV	RGS-P9000-HV_US	RGS-P9000-HV_EU
Console Cable		X 1	X 1	X 1
CD		X 1	X 1	X 1
QIG		X 1	X 1	X 1
Screw (M3 X4)		X 8	X 8	X 8
Rack-mounted kit (L&R)		X 1	X 1	X 1
Power cord		-	X 2 (US Type)	X 2 (EU Type)

Preparation

Before you begin installing the switch, make sure you have all of the package contents available and a PC with Microsoft Internet Explorer 6.0 or later, for using web-based system management tools.


Safety & Warnings

- Elevated Operating Ambient:** If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.
- Reduced Air Flow:** Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- Mechanical Loading:** Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- Circuit Overloading:** Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- External metal parts of this equipment are extremely hot!! Before touching the equipment, be sure to protect your hands and body from serious injury.


RGS-P9000 Series

Managed Gigabit Ethernet Switch

Dimension Unit =mm (Tolerance ±0.5mm)

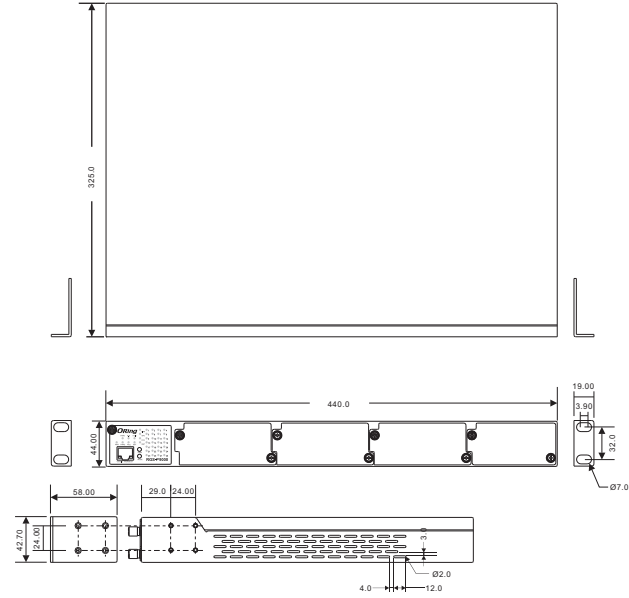

Panel Layouts

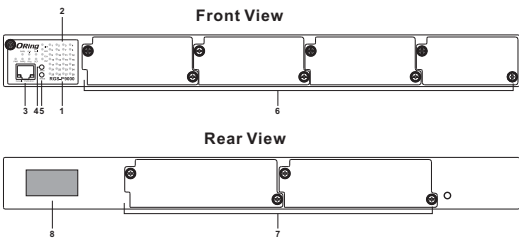


- 1. Model name
- 2. Port status LEDs
- 3. Serial console port
- 4. Reset button
- 5. LED mode button
- 6. Ethernet modules slots
- 7. Power input module slots
- 8. Terminal block

Installation

Rack-mounting

- Step 1:** Install left and right front mounting brackets to the switch using 4 M3 screws on each side provided with switch.
- Step 2:** With front brackets orientated in front of the rack, nest front and rear brackets together. Fasten together using remaining M4 screws into counter sunk holes.
- Step 3:** Fasten the front mounting bracket to the front of the rack.

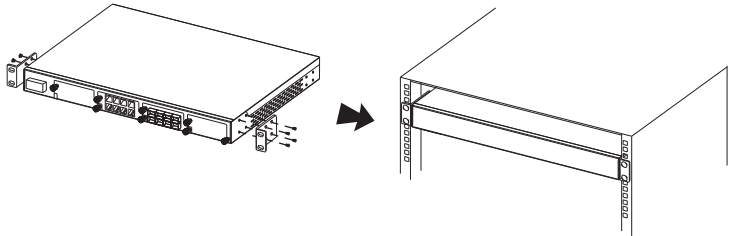

Network Connection

The series have standard Ethernet ports. According to the link type, the switch uses CAT 3, 4, 5, 5e UTP cables to connect to any other network devices (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

Cable Types and Specifications:

Cable	Type	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45
1000BASE-T	Cat. 5 / Cat. 5e 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

With 10/100BASE-T(X) cables, pins 1 and 2 are used for transmitting data, and pins 3 and 6 are used for receiving data. The device also supports auto MDI/MDI-X operation. You can use a cable to connect the switch to a PC.

For pin assignments for different types of cables, please refer to the following tables.

1000 Base-T RJ-45			10/100 Base-T(X) RJ-45		
Pin Number	Assignment		Pin Number	Assignment	
1	BI_DA+		1	TD+	
2	BI_DA-		2	TD-	
3	BI_DB+		3	RD+	
4	BI_DC+		4	Not used	
5	BI_DC-		5	Not used	
6	BI_DB-		6	RD-	
7	BI_DD+		7	Not used	
8	BI_DD-		8	Not used	

1000Base-T MDI/MDI-X			10/100 Base-T(X) MDI/MDI-X		
Pin Number	MDI port	MDI-X port	Pin Number	MDI port	MDI-X port
1	BI_DA+	BI_DB+	1	TD+(transmit)	RD+(receive)
2	BI_DA-	BI_DB-	2	TD-(transmit)	RD-(receive)
3	BI_DB+	BI_DA+	3	RD+(receive)	TD+(transmit)
4	BI_DC+	BI_DD+	4	Not used	Not used
5	BI_DC-	BI_DD-	5	Not used	Not used
6	BI_DB-	BI_DA-	6	RD-(receive)	TD-(transmit)
7	BI_DD+	BI_DC+	7	Not used	Not used
8	BI_DD-	BI_DC-	8	Not used	Not used


Console cable

To connect the console port to an external management device, you need an RJ-45 to DB-9 cable, which is also included in the package. Please see the table for the console port pin assignment information.

PC pin out (male) assignment	RS-232 with DB9 female connector	DB9 to RJ 45
Pin #2 RD	Pin #2 TD	Pin #2
Pin #3 TD	Pin #3 RD	Pin #3
Pin #5 GND	Pin #5 GND	Pin #5

RS-232 baud rate setting: 9600, 8, N, 1

Wiring

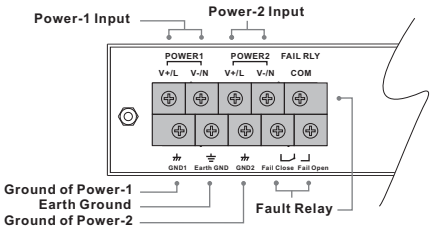

Power inputs

The RGS-PR9000 series support dual redundant power supplies, Power Supply 1 (PWR1) and Power Supply 2 (PWR2). The connections for PWR1, PWR2 and the RELAY are located on the terminal block.

# Quick Installation Guide

**STEP 1:** Remove the transparent protective cover from the terminal block

**STEP 2:** Insert the negative/positive DC wires into the V-/V+ terminals, respectively.

**STEP 3:** To keep the DC wires from pulling loose, use a small flat-blade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

**STEP4:** After wiring is completed, put the transparent cover back to the terminal block.

## Relay contact

The switch provides fail open and fail close options for you to form relay circuits based on your needs. If you want the relay device to start operating at power failure, attach the two wires to COM and fail close to form a close circuit, vice versa. The relay contact of the 2-pin terminal block connector will respond to user-configured events according to the wiring.

## Grounding

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screws to the grounding surface prior to connecting devices.


## Configurations

After installing the RGS-P9000 and connecting cables, start the switch by turning on power. The green power LED should turn on.

### LED indication table

PWR	Green	System ready
	Blinking	Upgrading firmware
PWR1	Green	Power is being supplied to the main module's power input PWR1
PWR2	Green	Power is being supplied to the main module's power input PWR2
R.M.	Green	O-Ring Master mode activated
Ring	Green	O-Ring mode activated
	Green Blinking	Ring is broken
Fault	Amber	Unexpected event occurs
DEF	Green	System being reset to default configuration
RMT	Green	System is accessed remotely

1. Launch the Internet Explorer and type in IP address of the switch. The default static IP address is **192.168.10.1**



2. Log in with default user name and password (both are **admin**). After logging in, you should see the following screen. For more information on configurations, please refer to the user manual. For information on operating the switch using ORing's Open-Vision management utility, please go to ORing website.



### Resetting

To reboot the switch, press the **Reset** button for 5 seconds.

To restore the switch configurations back to the factory defaults, press the **Reset** button for 5 seconds.

## Specifications

ORing Switch Model		RGS-P9000-LV	RGS-P9000-HV
Physical Ports			
Slot Number		4 (up to 3 slots for 8x1G ports and 1 slot for 4x10G port)	
Technology			
Ethernet Standards	IEEE 802.3 for 10Base-T IEEE 802.3u for 100Base-TX and 100Base-FX IEEE 802.3z for 1000Base-X IEEE 802.3ab for 1000Base-T IEEE 802.3ae for 10Gigabit Ethernet IEEE 802.3x for Flow contro IEEE 802.3ad for LACP (Link Aggregation Control Protocol ) IEEE 802.1p for COS (Class of Service) IEEE 802.1Q for VLAN Tagging IEEE 802.1w for RSTP (Rapid Spanning Tree Protocol) IEEE 802.1s for MSTP (Multiple Spanning Tree Protocol) IEEE 802.1x for Authentication IEEE 802.1AB for LLDP (Link Layer Discovery Protocol)		
MAC Table	8K		
Packet Buffer	32Mbits		
Flash Memory	128Mbits		
DRAM Size	1Gbits		
Jumbo frame	Up to 10K Bytes		
Priority Queues	8		
Processing	Store-and-Forward		
Switch Properties	Switch latency: 7 us Switch bandwidth: 128Gbps Max. Number of Available VLANs: 4095 VLAN ID range: VID 1 to 4094 IGMP multicast groups: 128 for each VLAN Port rate limiting: User Define		
Security Features	Device Binding security feature Enable/disable ports, MAC based port security Port based network access control (802.1x) MAC-based authentication (802.1x) VLAN (802.1Q) to segregate an secure network traffic Radius centralized password management SNMPv3 encrypted authentication and access security SSH / SSH enhance network security Web and CLI authentication and authorization IP source guard		
Software Features	IEEE 1588v2 clock synchronization IEEE 802.1D Bridge, auto MAC address learning/aging and MAC address (static) Multiple Registration Protocol (MRP) MSTP (RSTP/STP compatible) Redundant Ring (O-Ring) with recovery time less than 30ms TOS/Diffserv supported Quality of Service (802.1p) for real-time traffic VLAN (802.1Q) with VLAN tagging Guest VLAN GVRP IGMP v2/v3 Snooping Application-based QoS management DOS/DDOS auto prevention Port configuration, status, statistics, monitoring, security DHCP Server/Client/Relay Modbus TCP SMTP Client SNTP server Firmware upgrade and configuration backup and restore		
Network Redundancy	O-Ring, O-Chain, MRP( <b>Note1</b> ), MSTP (RST/PSTP compatible), ERPS		
RS-232 Serial Console Port	RS-232 in RJ45 connector with console cable. 115200bps, 8, N, 1		
LED Indicators			
System Ready Indicator (PWR)	Green : Indicates that the system ready. The LED is blinking when the system is upgrading firmware		
Power Indicator (PWR1/PWR2)	Green : Power LED x2		
Ring Master Indicator (R.M.)	Green : Flashing to indicate system operated in O-Ring Master mode		
O-Ring Indicator (Ring)	Green : Indicates that the system operating in O-Ring mode Green Blinking : Indicates that the Ring is broken.		
Fault Indicator (Fault)	Amber : Indicate unexpected event occurred		
Reset To Default Setting Indicator (DEF)	Green : System resets to default configuration		
Supervisor Login Indicator (RMT)	Green : System is accessed remotely		
Smart LED Display system	Link/Act(LINK) / Speed(SPD) / Duplex(FDX) / Remote (RMT) green LED indicator x 4 Mode select Button (MODE): Link/Act(LINK) / Speed(SPD) / Duplex(FDX) / Remote (RMT) mode select button Port 1 ~ 28 Link/Act(LK/ACT) LED show : Green x 28		
Fault contact			
Relay	Relay output to carry capacity of 1A at 24VDC		
Power			
Overload current protection	Dual 24/48VDC (20~72VDC) power inputs at terminal block ( <b>Note2</b> )	Dual 100~240VAC/ 125~370VDC power inputs at terminal block	
Power consumption(Typ.)	46Watts max.	43.5Watts max.	
Overload current protection	Present		
Physical Characteristic			

## Managed Gigabit Ethernet Switch

Enclosure	19 inches rack mountable	
	IP-30	
Dimension (W x D x H)	6450g	6600g
Weight (g)	440 (W) x 325 (D) x 44 (H) mm (17.32 x 12.8 x 1.73 inches)	
Environmental		
Storage Temperature	-40 to 85°C (-40 to 185°F)	
Operating Temperature	24VDC~ 10G SFP + module absent: -40 to 75°C	10G SFP + module absent: -40 to 85°C 10G SFP + module used: -20 to 60°C
	36VDC~ 10G SFP + module used: -20 to 50°C	
	36VDC~ 10G SFP + module absent: -40 to 85°C	
	72VDC~ 10G SFP + module used: -20 to 60°C	
Operating Humidity	5% to 95% Non-condensing	
Regulatory Approvals		
EMC	EN 55032, EN 55024 (CE EMC), EN 50121-1, EN 50121-4, FCC Part 15 B, EN 61000-6-2, EN 61000-6-4, IEC 61000-3-2, IEC 61000-3-3	
EMI	CISPR 32, EN 55032, FCC Part 15 B Class A	
EMS	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge),EN61000-4-6 (CS), EN61000-4-8 (PFMF), EN61000-4-11 (DIP)	
Shock	IEC60068-2-27	
Free Fall	IEC60068-2-31	
Vibration	IEC60068-2-6	
Safety	EN60950-1, UL 60950-1, EN60950-1	
Power Automation	IEC 61850-3, IEEE 1613	
Transport	NEMA TS1&TS2	
MTBF(Not3)	246,537 hours	316,958 hours
MTBF(Not4)	608,907 hours	647,420 hours
Warranty	5 years	

**Note1:** This function is available by request only

**Note2:** Different DC power inputs have different operating temperature.

**Note3:** The value is calculated under the combination of 3 SWM-80GT and 1 SWM-04GP+ module. (Worst case)


**Note4:** The value is calculated without any module slot.

## Interface modules

### For 10G Slot



### For 1G Slot

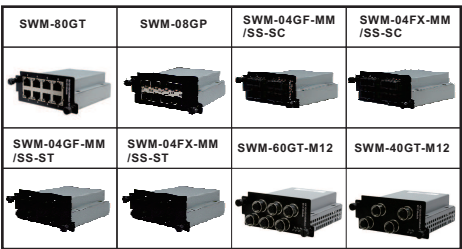
**ORing**

 Copyright© 2013 ORing  
All rights reserved.

**ORing Industrial Networking Corp.**

 TEL: +886-2-2218-1066 Website: www.oringnet.com  
 FAX: +886-2-2218-1014 E-mail: support@oringnet.com