

IBR215 / IBR215L
Ruggedized Embedded Computer
with NXP ARM[®] Cortex[®]
A53 i.MX8M Plus Quad / QuadLite SoC

User's Manual

Version 1.2
(March 2025)



Copyright

© 2025 IBASE Technology, Inc. All rights reserved.

No part of this publication may be reproduced, copied, stored in a retrieval system, translated into any language or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without the prior written consent of IBASE Technology, Inc. (hereinafter referred to as "IBASE").

Disclaimer

IBASE reserves the right to make changes and improvements to the products described in this document without prior notice. Every effort has been made to ensure the information in the document is correct; however, IBASE does not guarantee this document is error-free. IBASE assumes no liability for incidental or consequential damages arising from misuse or inability to use the product or the information contained herein, and for any infringements of rights of third parties, which may result from its use.

Trademarks

All the trademarks, registrations and brands mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Compliance

CE

This product bears a CE marking, affirming its compliance with all relevant European Union directives. To maintain this compliance, only use CE-compliant parts and adhere to specified cabling techniques.

FCC

The product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used according to the manufacturer's instructions, it may cause harmful interference to radio communications.

WEEE



In compliance with the EU directive for waste electrical and electronic equipment (WEEE - 2012/19/EU), this product must not be disposed of with normal household waste. Instead, it should be disposed of by returning it to a municipal recycling collection point. Check local regulations for disposal of electronic products to ensure environmental responsibility.

Green IBASE



This product complies with RoHS 2 restrictions, restricting the use of hazardous substances in electrical and electronic equipment. The following substances must not exceed the specified concentrations:

- Hexavalent chromium: 1,000 ppm
- Poly-brominated biphenyls (PBBs): 1,000 ppm
- Poly-brominated diphenyl ethers (PBDEs): 1,000 ppm
- Cadmium: 100 ppm
- Mercury: 1,000 ppm
- Lead: 1,000 ppm
- Bis(2-ethylhexyl) phthalate (DEHP): 1,000 ppm
- Butyl benzyl phthalate (BBP): 1,000 ppm
- Dibutyl phthalate (DBP): 1,000 ppm
- Diisobutyl phthalate (DIBP): 1,000 ppm

Important Safety Information

Carefully read the following safety information before using this device.

Setting up your system:

- Position the device horizontally on a stable and solid surface.
- Avoid using this product near water or any heat sources such as heaters or radiators.
- Ensure adequate ventilation by leaving plenty of space around the device. Do not block the ventilation openings. Never drop or insert any objects into these openings.

Care during use:

- Do not place heavy objects on top of the device.
- Ensure that the device is connected to the correct voltage. Using incorrect voltage could damage the unit.
- Avoid stepping on the power cord or placing heavy objects on it.
- If using an extension cord, ensure the total ampere rating of all devices connected to the extension cord does not exceed the cord's ampere rating.
- Keep the device dry and avoid spilling any liquids on it.
- Always unplug the power cord from the wall outlet before cleaning.
- Use only neutral cleaning agents for cleaning the device.
- Use a computer vacuum cleaner to remove dust and particles from the vents.

Product Disassembly

Do not attempt to repair, disassemble, or modify the device yourself. Unauthorized modifications will void the warranty and could cause damage to the product or result in personal injury.



CAUTION

When replacing parts, use only the same or equivalent types recommended by the manufacturer. Dispose of used batteries according to local regulations.

Warranty Policy

- **IBASE standard products:**

Offer a 24-month (2-year) warranty from the date of shipment. If the shipment date is unclear, product serial numbers may be used to approximate the shipping date.

- **3rd-party parts:**

Include a 12-month (1-year) warranty from the delivery date for components not manufactured by IBASE, such as CPUs, CPU coolers, memory, storage devices, power adaptors, display panels, and touch screens.

- **Exclusions:**

Products that fail due to misuse, accidents, improper installation, or unauthorized repairs will be considered out of warranty. Charges will apply for repairs and shipping in such cases.

Technical Support & Services

1. Visit the IBASE website at www.ibase.com.tw to find the latest information about the product.
2. If you encounter any technical problems and require assistance from your distributor or sales representative, please prepare and send the following information:
 - Product model name
 - Product serial number
 - Detailed description of the problem
 - Error messages in text or screenshots if any
 - The arrangement of the peripherals
 - Software used (such as OS and application software)
3. If repair service is required, please visit the IBASE website to apply for an RMA number.

Table of Contents

Chapter 1	General Information.....	1
1.1	Introduction.....	2
1.2	Features	2
1.3	Packing List	2
1.4	Specifications	3
1.5	Product View	5
1.6	Dimensions.....	6
Chapter 2	Hardware Configuration	7
2.1	Mini-PCIe & M.2 Cards Installation.....	8
2.2	Setting the Jumpers.....	9
2.3	Jumpers & Connector Locations on IBR215	10
2.4	Jumpers & Connector on IBR215 main board.....	11
2.4.1	RTC Lithium Cell Connector (CN1)	12
2.4.2	Audio Line-In & Line-Out Connector (CN2)	13
2.4.3	I2C Connector (CN13)	14
2.4.4	DC Power Input (P17, CN18)	15
2.4.5	M.2 B-Key 3052 Slot (P8).....	16
2.4.6	System On/Off Button (SW2, CN17)	18
2.4.7	Running Mode (SW1)	19
2.4.8	Serial Port (P16)	20
2.4.9	IO Board Port (P18, P19, P20)	21
2.5	Jumper & Connector Locations on IBR215-IO board	23
2.6	Jumpers & Connectors on IBR215-IO Board	24
2.6.1	COM RS-232/422/485 Selection (SW3)	25
2.6.2	COM RS-232/422/485 Port (P14).....	26
2.6.3	LVDS Display Connector (CN6, CN7)	27
2.6.4	COM RS232 Connector (CN12)	29
2.6.5	LVDS Backlight Control Connector (CN9)	30
2.6.6	MIPI-CSI Connector (CN4, CN5).....	31
2.6.7	Dual USB 3.0 Type-A Port (CN3)	33
2.6.8	NGFF M.2 E2230 Slot (P8).....	34
2.6.9	Mini-PCIe Slot (P6)	36
2.6.10	BKLT_LCD Power Setup (P11)	37
2.6.11	LVDS_VCC Power Setup (P10)	37

2.6.12	PCIE / M.2 Audio Option (P5).....	38
2.6.13	I2C Connector (CN11)	39
2.6.14	CAN bus (CN14).....	40
Chapter 3	Software Setup.....	41
3.1	Make a Recovery SD Card.....	42
3.1.1	Preparing the Recovery SD card to Install Linux / Android image into eMMC	42
3.1.2	Upgrade Firmware through the Recovery SD Card.....	43
Chapter 4	BSP Source Guide	45
4.1	Building BSP Source	46
4.1.1	Preparation	46
4.1.2	Building release	47
4.1.2.1	For Yocto/Ubuntu/Debian	47
4.1.3.2	For Android.....	47
4.1.3	Installing release to board.....	47
Appendix	48

Chapter 1


General Information

The information provided in this chapter includes:

- Introduction
- Features
- Packing List
- Specifications
- Product View
- Dimensions

1.1 Introduction

IBR215 is an ARM®-based embedded system with NXP Cortex® i.MX8M Plus A53 processor. The device offers 2D, 3D graphics and multimedia accelerations while it also features numerous peripherals that are well suited for industrial applications, including RS-232/422/485, GPIO, USB, USB OTG, LAN, HDMI display, M.2 B-Key for 5G, M.2 E2230 for wireless connectivity and mini-PCIe for expansion.

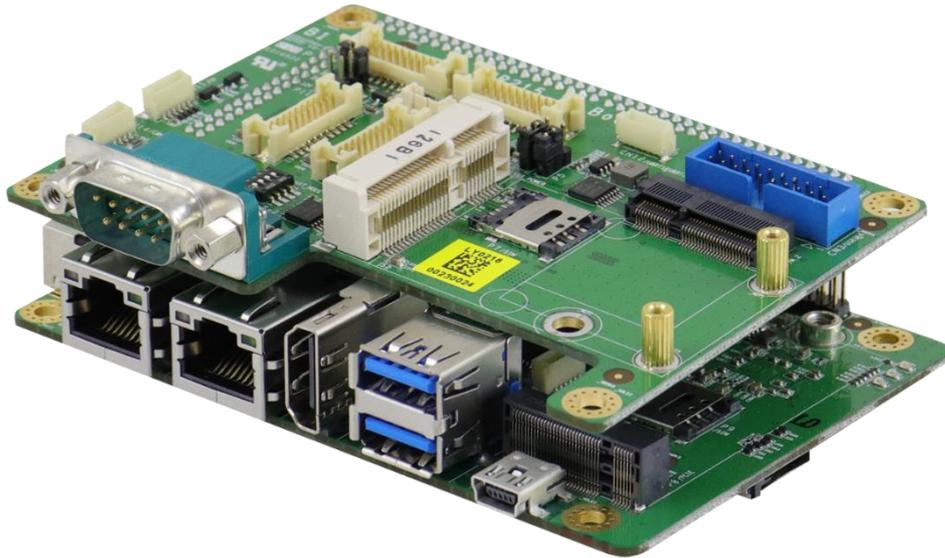

1.2 Features

- NXP ARM® Cortex® A53 i.MX8M Plus Quad 1.6GHz Industrial Grade processor
- 3 GB LPDDR4, 16 GB eMMC and SD socket
- External connectivity including USB, HDMI, Ethernet
- Supports M.2 B-Key (3052) for 5G module
- Rich I/O expansion signals for IO board design to support Wi-Fi/BT, 4G/LTE, LCD, Camera, NFC, QR-code, etc.
- Ruggedized and fanless design

1.3 Packing List

Your product package should include the items listed below. If any of the item below is missing, contact the distributor or the dealer from whom you have purchased the product. The user manual is downloadable from our website.

- IBR215-Q316I
- IBR215L-Q316I
- IBR215-IO

1.4 Specifications


Product	IBR215-Q316I ARM-based IoT Gateway, NXP Cortex®-A53, i.MX 8M Plus Quad 1.6GHz processor, 3GB LPDDR4, 16GB eMMC
Product	IBR215L-Q316I ARM-based IoT Gateway, NXP Cortex®-A53, i.MX 8M Plus QuadLite 1.6GHz processor, 3GB LPDDR4, 16GB eMMC
Product	IBR215-IO Expansion Board for IBR215
System Main Board	
Board name	IBR215
Operating System	<ul style="list-style-type: none"> • Android 11 • Yocto v3.0 • Other OS (by request)
CPU Type	NXP Cortex™ A53 i.MX8M Plus Quad Core 1.6 GHz Industrial Grade SoC
CPU Speed	1.6 GHz
Memory	<ul style="list-style-type: none"> • System memory: 3 GB LPDDR4 • Data Memory: 16 GB eMMC
Video Codec (IBR215 Only)	<ul style="list-style-type: none"> • Decoder 1080p60. H.265. H.264. VP9. VP8. • Encoder 1080p60. H.265. H.264.
RTC	IDT 1337AGDVG18
Wireless	M.2 B-Key (3052) for 5G module
Power Supply	12V/24V DC-In
Watchdog Timer	Yes (128 segments, 0, 1, 2...128 secs)
Edge I/O	<ul style="list-style-type: none"> 1x On/Off button 1x 12V DC-in jack 1x SD socket (UHS-I SDR-104, 104MB/s max.) 1x Boot select switches (boot from eMMC or SD) 1x HDMI 2.0a 2x USB 3.0 Type-A 2x RJ45 GbE LAN 1x Mini-USB OTG

Internal I/O	1x M.2 3052 Key-B with SIM socket (for 5G module) 2x I2C / 4x GPIO in a 6-pin header 1x Audio Line-in and Line-out in a 6-pin header 1x DC power supply in a 4-pin header 3x IO expansion headers (2x20-pin) with the following signals: 1x USB2.0 1x PCM 2x UART(RX,TX) 1x SDIO 1x UART(Tx,Rx,CTS,RTS) 2x USB 3.0 1x LVDS 2ch with Back light control 1x I2C 2x PWM 3x GPIO 1x Cap touch IF 2x MIPI-CSI for cameras 2x CAN-FD 5V, 12V(DC_IN)
Dimensions	105mm x 72mm x 20mm (W x H x D)
RoHS	Yes
Operating Temperature	0 ~ 60 °C (32 ~ 140 °F)
Relative Humidity	10 ~ 90 %, non-condensing
Certification	CE, FCC Class B
Expansion I/O Board	
Board name	IBR215-IO
Expansion I/O	3x 2mm pitch 2x20-pin headers for main board connection 1x M.2 E-Key 2230 (SDIO, UART) for Wi-Fi/BT module 1x mPCIe (USB2.0, SIM, PCM) for 4G/LTE/Wi-Fi modules 1x DB-9 RS232/422/485 port 2x USB 3.0 in 2x10 pin header 1x LVDS 2ch with Back light control 1x Cap touch IF 2x MIPI-CSI for cameras 2x CAN-FD
Dimensions	100mm x 72mm x 15mm (W x H x D)


All specifications are subject to change without prior notice.

1.5 Product View

Top View

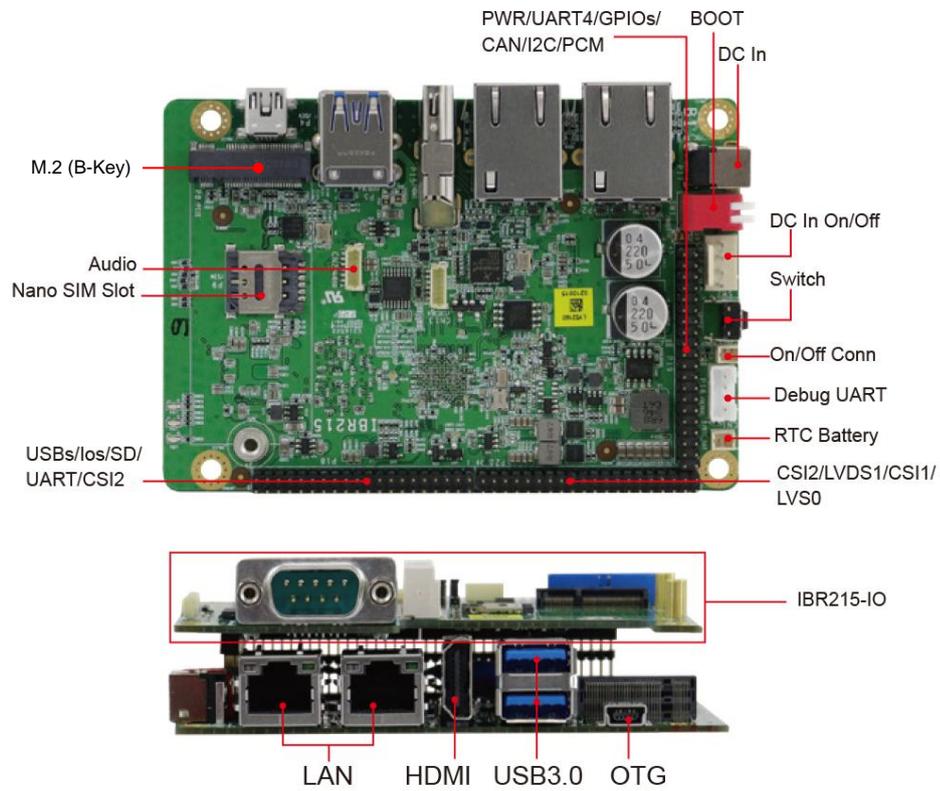


I/O View

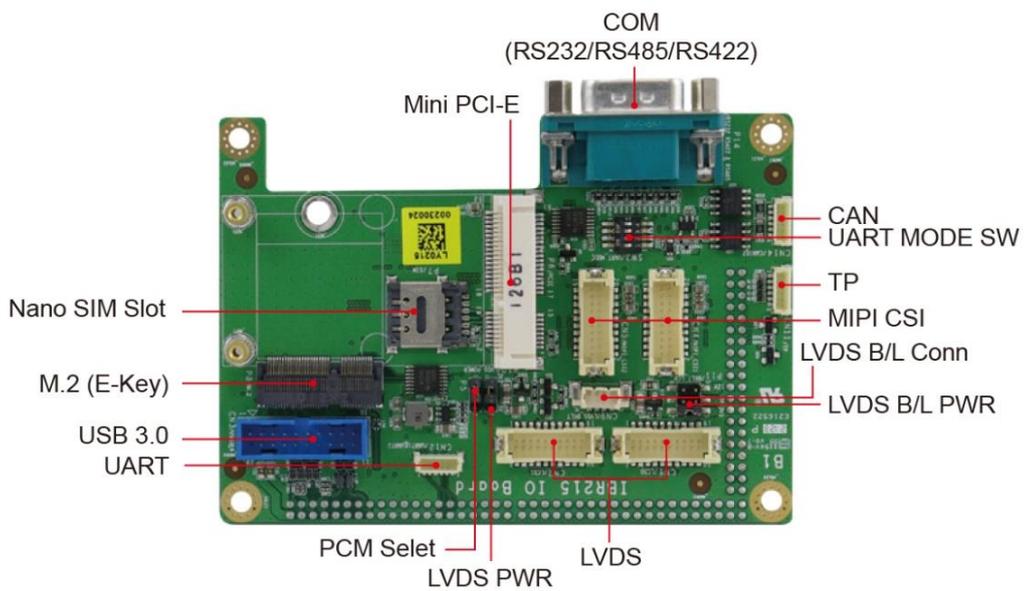

1.6 Dimensions

Unit:mm

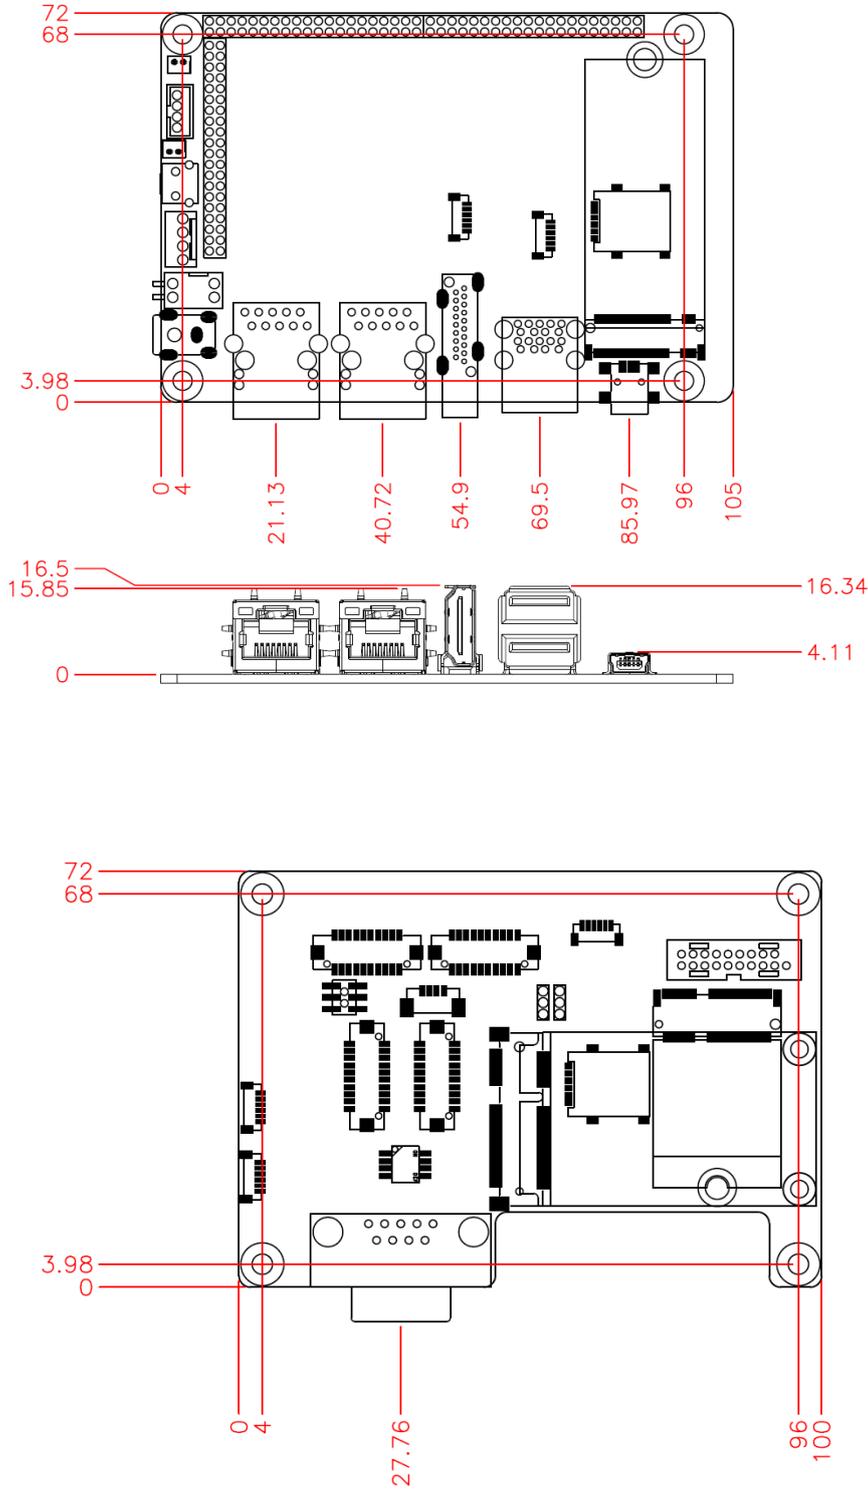

Chapter 2

Hardware Configuration


This section contains general information about:

- Installations
- Jumpers and connectors


2.1 Mini-PCle & M.2 Cards Installation

To install the mini-PCle & NGFF M.2 card, remove the device cover first as mentioned above, locate the slot inside the device, and perform the following steps.

- 1) Align the keys of the mini-PCle card with that of the mini-PCle interface, and insert the card slantwise.
(Insert the M.2 card in the same way.)

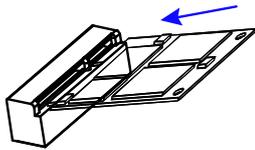


- 2) Push the mini-PCle card downwards as shown in the picture below, and fix it onto the brass standoff with a screw.
(Fix the M.2 card also with one screw.)

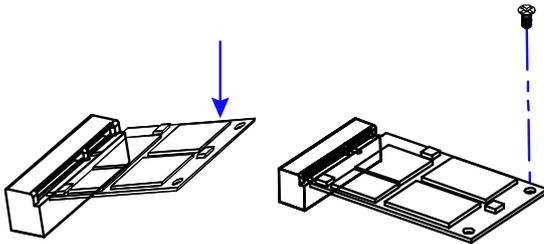






2.2 Setting the Jumpers

Configure your device by using jumpers to enable the features that you need based on your applications. Contact your supplier if you have doubts about the best configuration for your use.

Jumpers are short-length conductors consisting of several metal pins with a base mounted on the circuit board. Jumper caps are placed (or removed) on the pins to enable or disable functions or features. If a jumper has 3 pins, you can connect Pin 1 with Pin 2 or Pin 2 with Pin 3 by shorting the jumper.

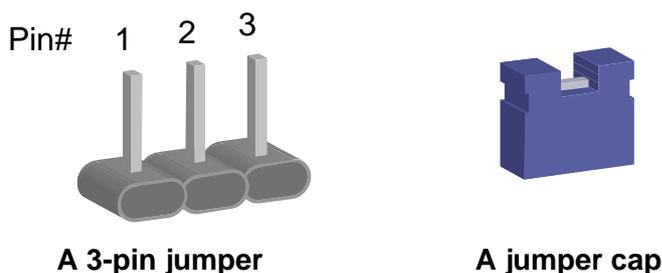

Refer to the illustration below to set jumpers.

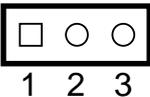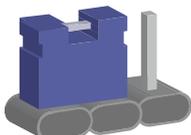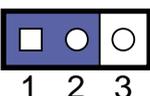
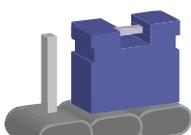
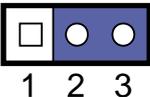
Pin closed	Oblique view	Illustration in the manual
Open		 1 2 3
1-2		 1 2 3
2-3		 1 2 3

When two pins of a jumper are encased in a jumper cap, this jumper is **closed**, i.e. turned **On**.

When a jumper cap is removed from two jumper pins, this jumper is **open**, i.e. turned **Off**.

2.3 Jumpers & Connector Locations on IBR215

Motherboard: IBR215

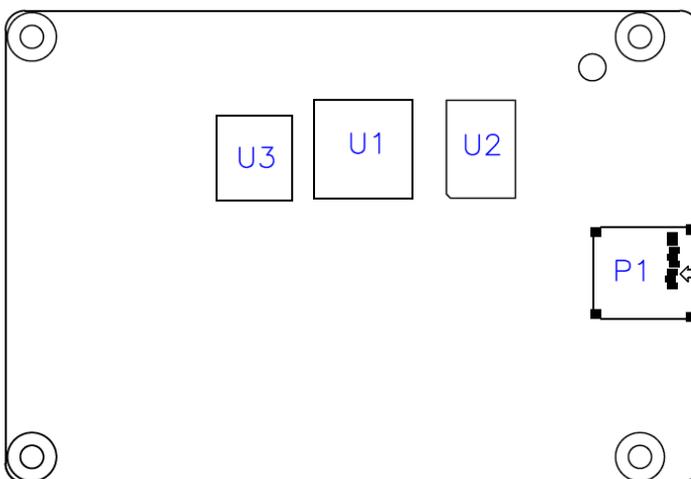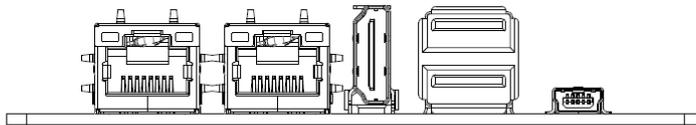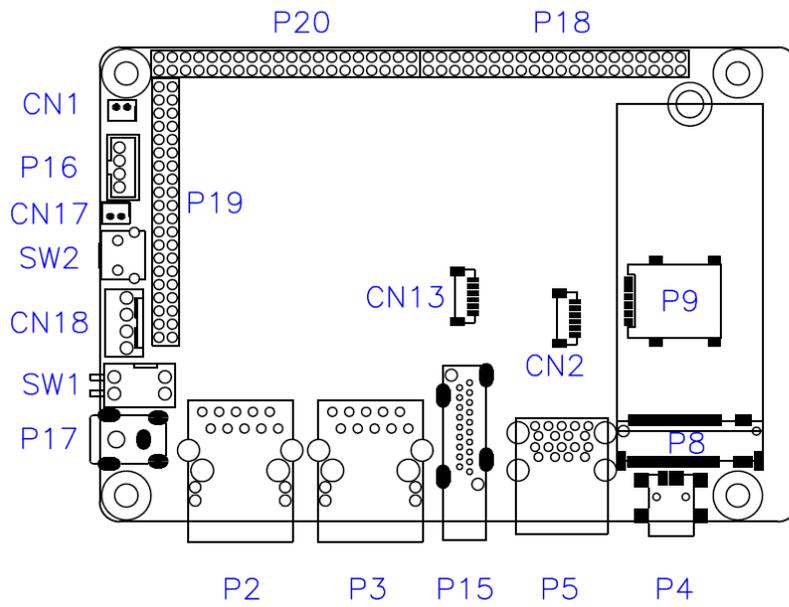


2.4 Jumpers & Connector on IBR215 main board

Function	Connector Name	Page
RTC Lithium Cell Connector	CN1	12
Audio Line-In & Line-Out Connector	CN2	13
I ² C Connector	CN13	14
DC Power Input	P17, CN18	15
SD Card Slot	P1	--
HDMI Port	P15	--
GbE LAN Port	P2, P3	--
Dual USB 3.0 Type-A Port	P5	--
Mini-USB OTG Port	P4	--
M.2 B-Key 3052 Slot	P8	16
SIM Card Socket	P9	--
System On/Off Button	SW2, CN17	18
Running Mode	SW1	19
Serial Port	P16	20
IO Board Port	P18, P19, P20	21

2.4.1 RTC Lithium Cell Connector (CN1)




CN1
 Wafer_Conn
 Pitch=1.25mm
 2pin, DIP, Straight

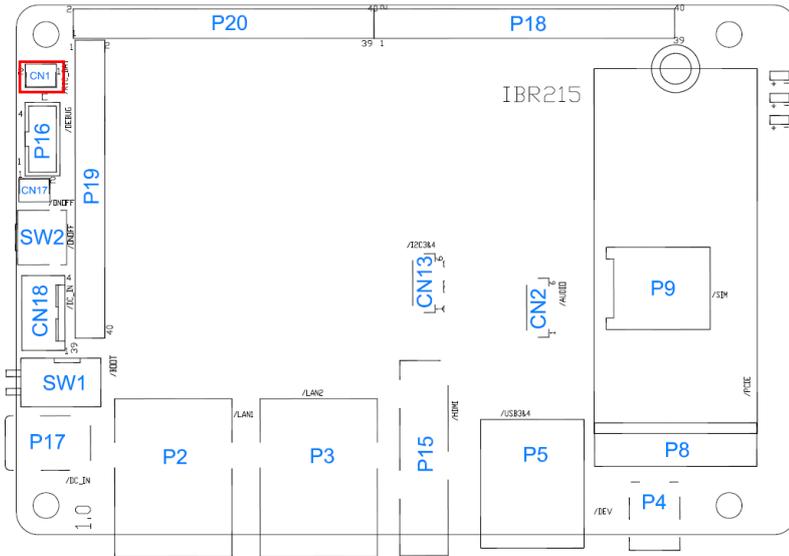


Pin	Signal Name	Pin	Signal Name
1	RTC_VCC	2	Ground

2.4.2 Audio Line-In & Line-Out Connector (CN2)

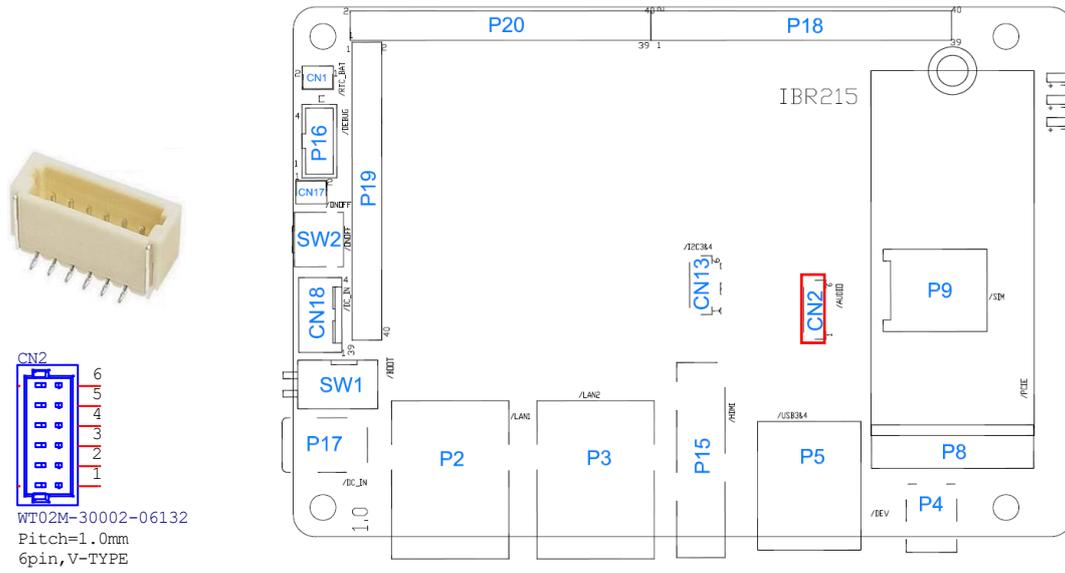


Pin	Signal Name	Pin	Signal Name
1	Ground	2	HP_R
3	HP_L	4	Ground
5	INR	6	INL

2.4.3 I2C Connector (CN13)

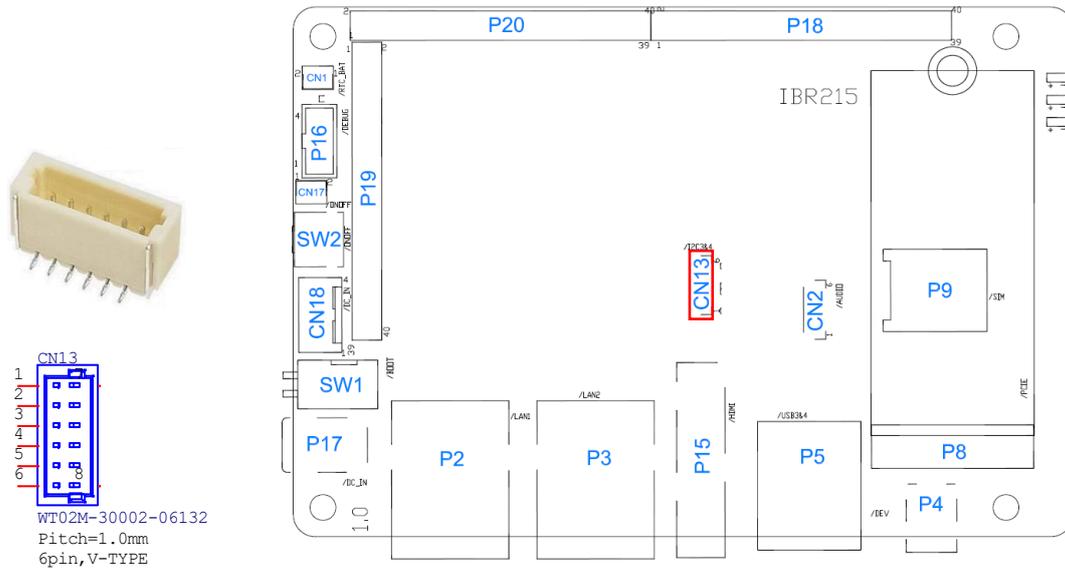

Pin	Signal Name	Pin	Signal Name
1	I2C3_SCL	2	I2C3_SDA
3	Ground	4	I2C4_SCL
5	I2C4_SDA	6	Ground

2.4.4 DC Power Input (P17, CN18)

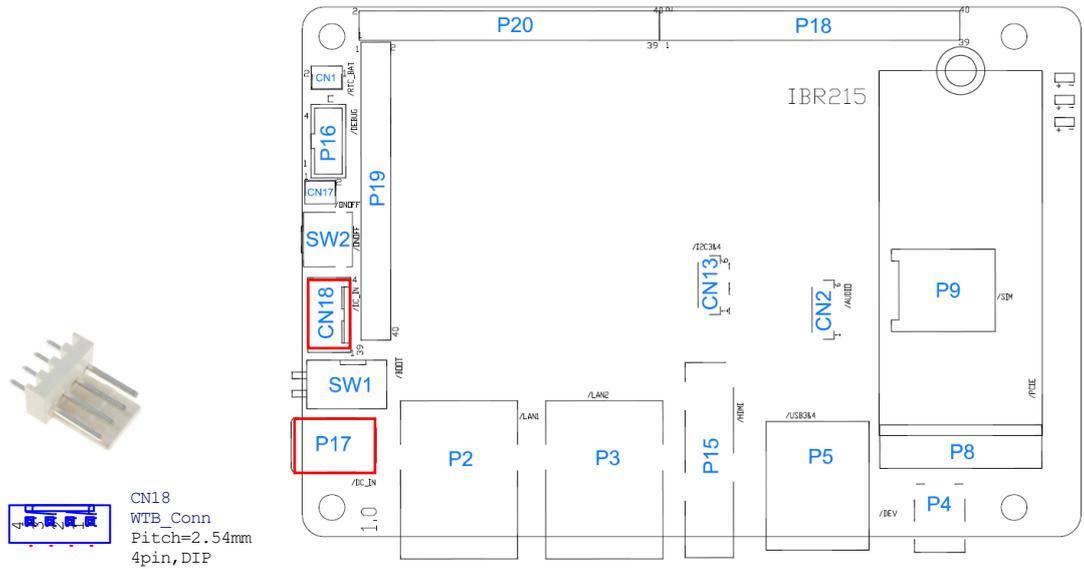


CN18: DC Input/Output Header

Pin	Signal Name	Pin	Signal Name
1	Ground	2	Ground
3	12V~24V	4	12V~24V

P17: 12V~24V DC input

2.4.5 M.2 B-Key 3052 Slot (P8)

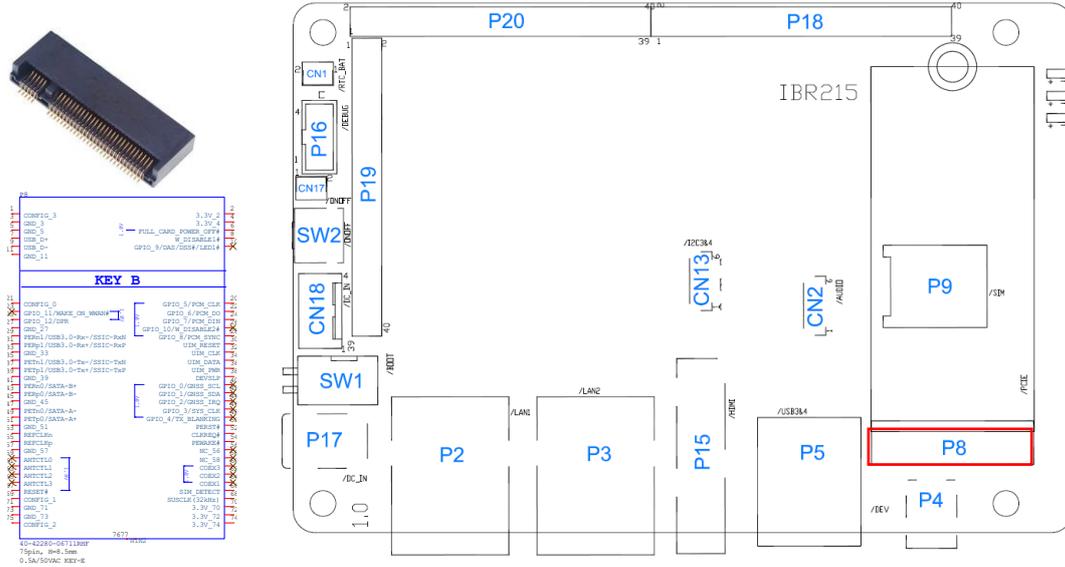

P8:

Pin	Signal Name	Pin	Signal Name
1	N/C[CONFIG_3]	2	3.3V
3	GND	4	3.3V
5	GND	6	POWER_OFF#(O)(0/1.8V)
7	USB_D+	8	W_DISABLE1#(O)(0/1.8V)
9	USB_D-	10	N/C
11	GND		Connector Key
	Connector Key		Connector Key
	Connector Key		Connector Key
	Connector Key		Connector Key
	Connector Key		Connector Key
	Connector Key		Connector Key
21	N/C[CONFIG_0]	22	N/C[PCM_CLK(IO)(0/1.8V)/0V]
23	N/C	24	N/C[PCM_DO(IO)(0/1.8V)]
25	N/C	26	N/C[PCM_DIN(IO)(0/1.8V)/3.3V]
27	GND	28	N/C
29	USB3_Rx-	30	N/C[PCM_SYNC(IO)(0/1.8V)]
31	USB3_Rx+	32	UIM_RESET
33	GND	34	UIM_CLK
35	USB3_Tx-	36	UIM_DATA
37	USB3_Tx+	38	UIM_PWR
39	GND	40	N/C[3.3V]
41	PCIe_Rx-	42	N/C
43	PCIe_Rx+	44	N/C
45	GND	46	N/C
47	PCIe_Tx-	48	N/C

49	PCIe_Tx+	50	PERST#(O)(0/3.3V)
51	GND	52	CLKREQ#(IO)(0/1.8V)
53	PCIe_CLK-	54	PEWAKE#(IO)(0/1.8V)
55	PCIe_CLK+	56	N/C
57	GND	58	N/C
59	N/C	60	N/C
61	N/C	62	N/C
63	N/C	64	N/C
65	N/C	66	N/C[SIM_DETECT]
67	RESET#(O)(0/1.8V)	68	N/C[SUSCLK(32kHz) (O)(0/3.3V)/3.3V/1.8V]
69	N/C[CONFIG_1]	70	3.3V
71	GND	72	3.3V
73	GND	74	3.3V
75	N/C[CONFIG_2]		


Note:

“N/C” means not connected.

“N/C[X/XX/XXX]” means not connected and option X or XX or XXX function.

“(IO)(0/x.xV)” means “input/output” and IO lever.

2.4.6 System On/Off Button (SW2, CN17)

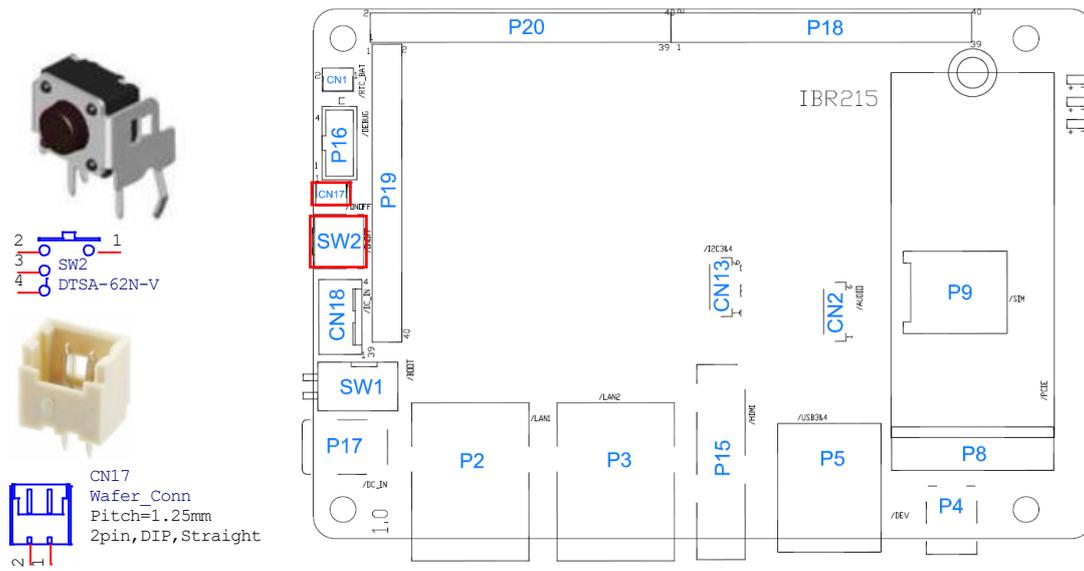


SW2: On/Off Switch

CN17: On/Off Signal Header


Pin	Signal Name	Pin	Signal Name
1	Ground	2	ONOFF_B

2.4.7 Running Mode (SW1)

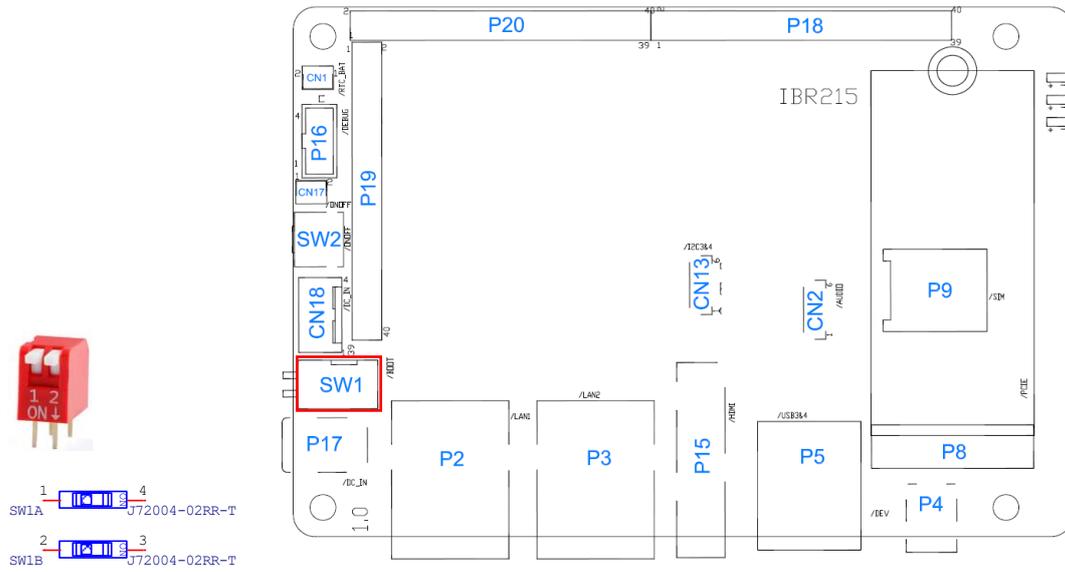


Running Mode	SW1A	SW1B
SDHC1(eMMC)	OFF	OFF
SDHC2(SD)	OFF	ON
USB Download	ON	OFF

2.4.8 Serial Port (P16)

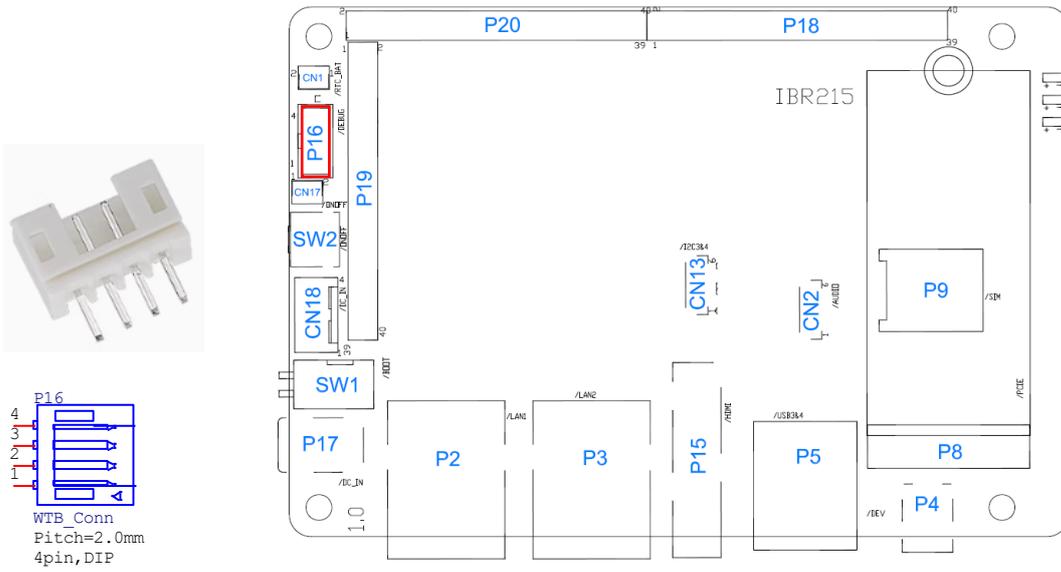

Pin	Signal Name	Pin	Signal Name
1	DEBUG_RX	2	DEBUG_TX
3	Ground	4	N/A

2.4.9 IO Board Port (P18, P19, P20)

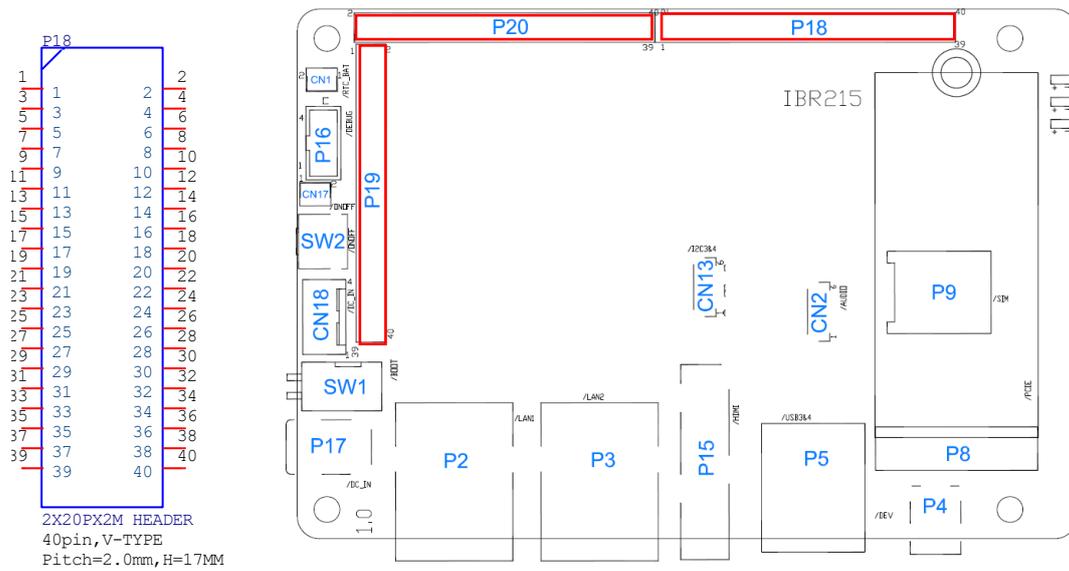

P18:

Pin	Signal Name	Pin	Signal Name
1	CSI_P2_DN2	2	CSI_P2_DP2
3	CSI_P2_DN3	4	CSI_P2_DP3
5	SD1_DATA0	6	SD1_DATA1
7	SD1_CMD	8	SD1_CLK
9	SD1_DATA2	10	SD1_DATA3
11	UART1_TXD	12	UART1_RXD
13	UART_TX3/RTS1	14	UART_RX3/CTS1
15	VDCDC3_1V8	16	VDCDC5_3V3
17	CLKO1_CSI1_MCLK	18	CLKO2_CSI2_MCLK
19	LCD_BL_PWM/GPIO1_01/PWMO1	20	GPIO1_00/32K_OUT
21	Ground	22	Ground
23	HUB_DP6	24	HUB_DM6
25	HUB_DP1	26	HUB_DM1
27	HUB_TXDP1	28	HUB_TXDM1
29	HUB_RXDP1	30	HUB_RXDM1
31	Ground	32	Ground
33	HUB_DP2	34	HUB_DM2
35	HUB_TXDP2	36	HUB_TXDM2
37	HUB_RXDP2	38	HUB_RXDM2
39	USB_PWR_OUT1	40	USB_PWR_OUT2


P19 :

Pin	Signal Name	Pin	Signal Name
1	VDCDC6_5V	2	VDCDC6_5V
3	DC_IN	4	DC_IN
5	GPIO2_11/PCIe_PWEN	6	UART4_RTS/CSPI2_SS0
7	UART4_TXD/CSPI2_MOSI	8	UART4_RXD/CSPI2_SCLK
9	UART4_CTS/CSPI2_MISO	10	GPIO4_28/M2_WAKE_B
11	GPIO4_24/PCIe_WAKE_B	12	GPIO4_21/TP_EN_B
13	GPIO4_22/M2_RST_B	14	GPIO4_26/PCIe_DIS_B
15	GPIO5_03/M2_BT_DIS_B	16	GPIO4_27/TP_RST_B
17	GPIO4_25/PCIe_REQ_B	18	GPIO4_23/PCIe_RST_B
19	GPIO4_19/LVDS_BL_PWEN	20	GPIO5_04/M2_WIFI_DIS_B
21	GPIO5_05/M2_I2C_IRQ_B	22	GPIO3_21/CSI2_PWEN_B
23	CAN1_RX	24	CAN1_TX
25	CAN2_RX	26	CAN2_TX
27	GPIO3_20/CSI1_PWEN_B	28	Ground
29	GPIO3_19/CSI1_RST_B	30	GPIO4_01/LVDS_EN
31	GPIO4_18/TP_INT_B	32	GPIO4_03/CSI2_RST_B
33	I2C2_SCL	34	I2C2_SDA
35	I2C1_SCL	36	I2C1_SDA
37	1V8_PCM_DO	38	1V8_PCM_DIN
39	1V8_PCM_CLK	40	1V8_PCM_SYNC

P20 :

Pin	Signal Name	Pin	Signal Name
1	Ground	2	Ground
3	Ground	4	Ground
5	LVDS0_TX3_N	6	LVDS0_TX3_P
7	LVDS0_TX2_N	8	LVDS0_TX2_P
9	LVDS0_CLK_N	10	LVDS0_CLK_P
11	LVDS0_TX1_N	12	LVDS0_TX1_P
13	LVDS0_TX0_N	14	LVDS0_TX0_P
15	CSI_P1_DN3	16	CSI_P1_DP3
17	CSI_P1_DN2	18	CSI_P1_DP2
19	CSI_P1_CKN	20	CSI_P1_CKP
21	CSI_P1_DN1	22	CSI_P1_DP1
23	CSI_P1_DN0	24	CSI_P1_DP0
25	LVDS1_TX3_N	26	LVDS1_TX3_P
27	LVDS1_TX2_N	28	LVDS1_TX2_P
29	LVDS1_CLK_N	30	LVDS1_CLK_P
31	LVDS1_TX1_N	32	LVDS1_TX1_P
33	LVDS1_TX0_N	34	LVDS1_TX0_P
35	CSI_P2_DN0	36	CSI_P2_DP0
37	CSI_P2_DN1	38	CSI_P2_DP1
39	CSI_P2_CKN	40	CSI_P2_CKP


2.5 Jumper & Connector Locations on IBR215-IO board

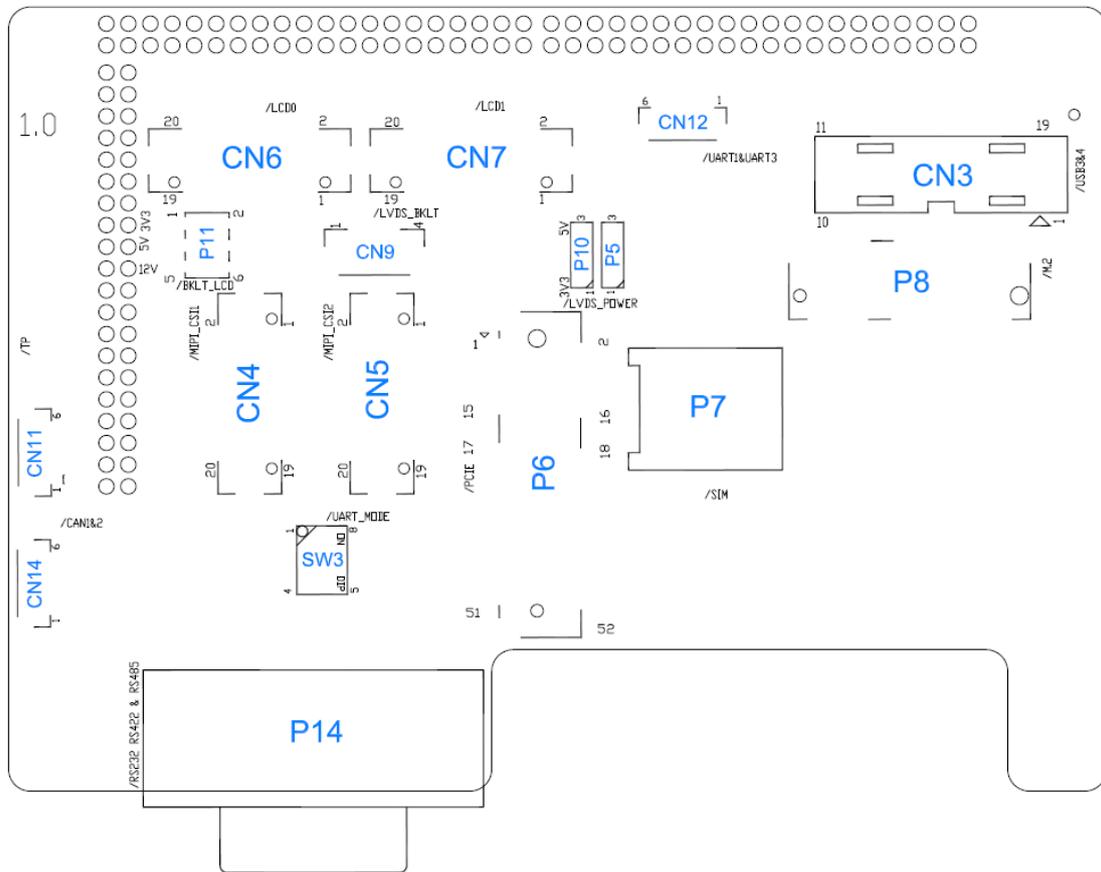

2.6 Jumpers & Connectors on IBR215-IO Board



Function	Connector Name	Page
COM RS-232/422/485 Selection	SW3	25
COM RS-232/422/485 Port	P14	26
LVDS Display Connector	CN6, CN7	27
COM RS232 Connector	CN12	29
LVDS Backlight Control Connector	CN9	30
MIPI-CSI Connector	CN4, CN5	31
Dual USB 3.0 Type-A Port	CN3	33
NGFF M.2 E2230 Slot	P8	34
Mini-PCIe Slot	P6	36
SIM Card Socket	P7	--
BKLT_LCD Power Setup	P11	37
LVDS_VCC Power Setup	P10	37
PCIE/M.2 PCM select	P5	38
I ² C Connector	CN11	39
CAN bus	CN14	40

2.6.1 COM RS-232/422/485 Selection (SW3)

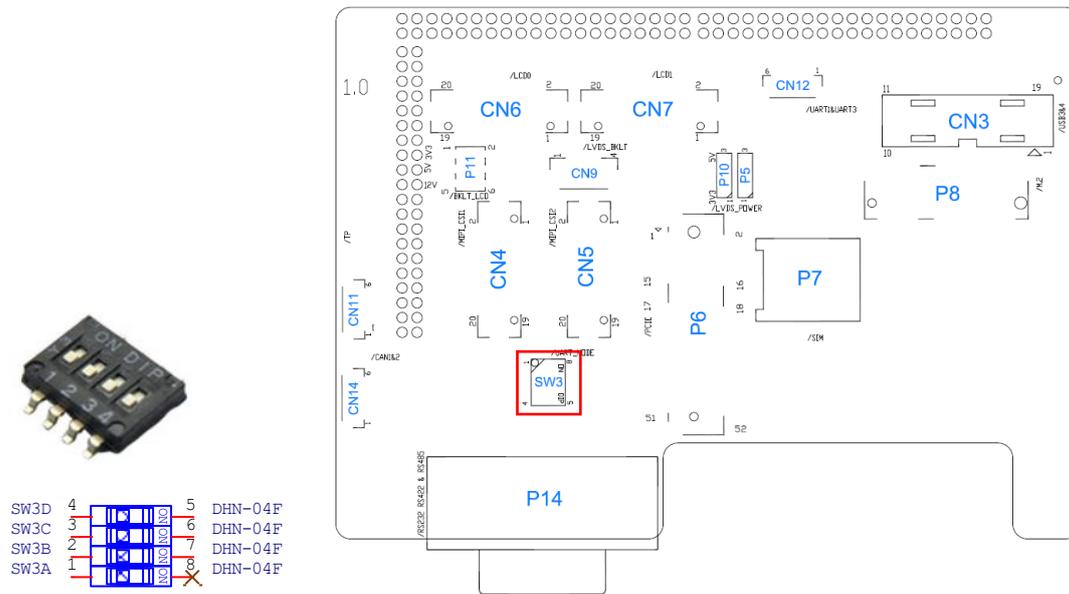

Panel Type	1-8	2-7	3-6	4-5
RS-422 Full Duplex	Off	On	On	On
RS-232 (Default)	Off	Off	On	On
RS-485 Half Duplex (TX Low-Active)	Off	On	Off	On
RS-485 Half Duplex (TX High-Active)	Off	Off	Off	On
RS-422 Full Duplex	Off	On	On	Off
RS-485 Half Duplex	Off	On	Off	Off
Shutdown	Off	Off	Off	Off

2.6.2 COM RS-232/422/485 Port (P14)


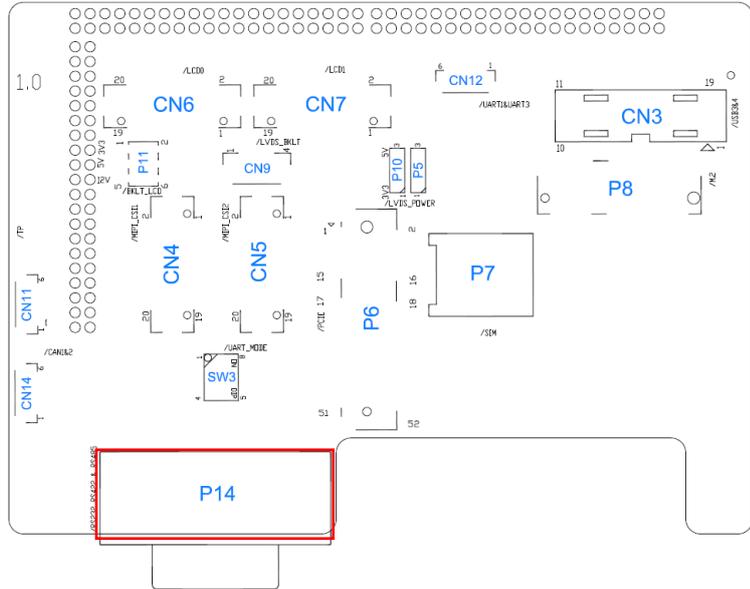
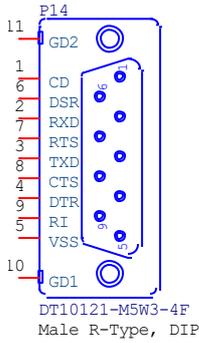


Pin	Signal Name	Pin	Signal Name
1	DCD, Data carrier detect	6	DSR, Data set ready
2	RXD, Receive data	7	RTS, Request to send
3	TXD, Transmit data	8	CTS, Clear to send
4	DTR, Data terminal ready	9	RI, Ring Indicator
5	Ground		




Refer to the SW3 setting for RS-232/422/485 mode selection.

Pin	Signal Name		
	RS-232	RS-422	RS-485
1	NC	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	NC
4	NC	RX-	NC
5	Ground	Ground	Ground
6	NC	NC	NC
7	RTS	NC	NC
8	CTS	NC	NC
9	NC	NC	NC

2.6.3 LVDS Display Connector (CN6, CN7)

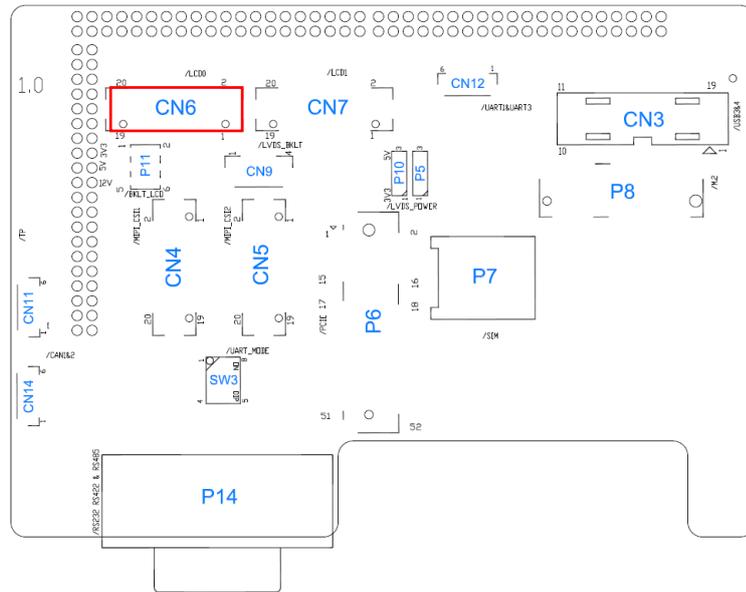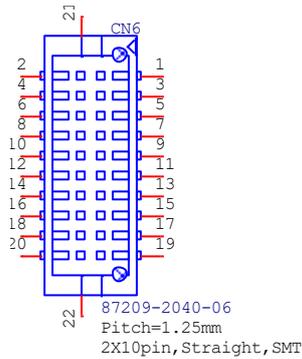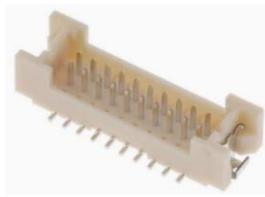


Pin	Signal Name	Pin	Signal Name
1	LCD0_TX0_P	2	LCD0_TX0_N
3	Ground	4	Ground
5	LCD0_TX1_P	6	LCD0_TX1_N
7	Ground	8	LCD_VDD
9	LCD0_TX3_P	10	LCD0_TX3_N
11	LCD0_TX2_P	12	LCD0_TX2_N
13	Ground	14	Ground
15	LCD0_CLK_P	16	LCD0_CLK_N
17	BTL_PWM	18	LCD_VDD
19	BKLT_VCC	20	BKLT_VCC

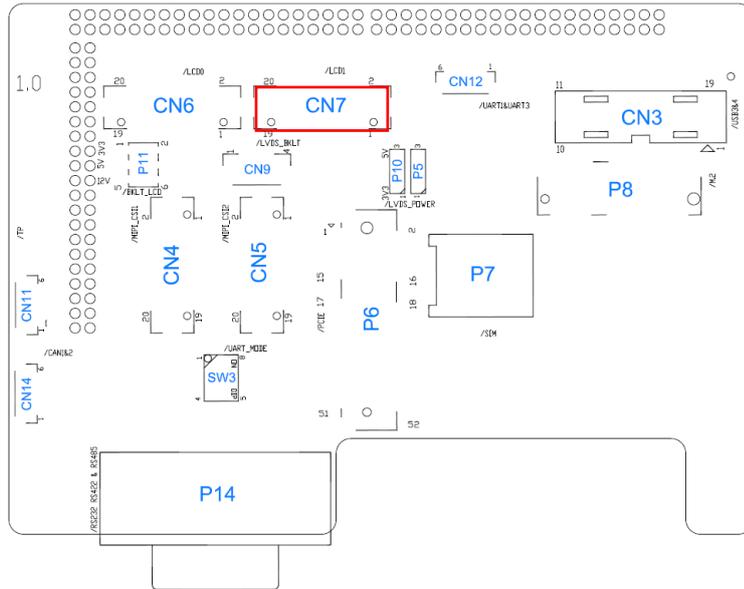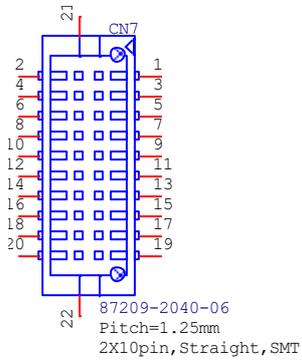
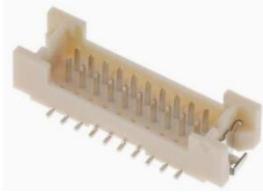


Pin	Signal Name	Pin	Signal Name
1	LCD1_TX0_P	2	LCD1_TX0_N
3	Ground	4	Ground
5	LCD1_TX1_P	6	LCD1_TX1_N
7	Ground	8	LCD_VDD
9	LCD1_TX3_P	10	LCD1_TX3_N
11	LCD1_TX2_P	12	LCD1_TX2_N
13	Ground	14	Ground
15	LCD1_CLK_P	16	LCD1_CLK_N
17	BTL_PWM	18	LCD_VDD
19	BKLT_VCC	20	BKLT_VCC

2.6.4 COM RS232 Connector (CN12)



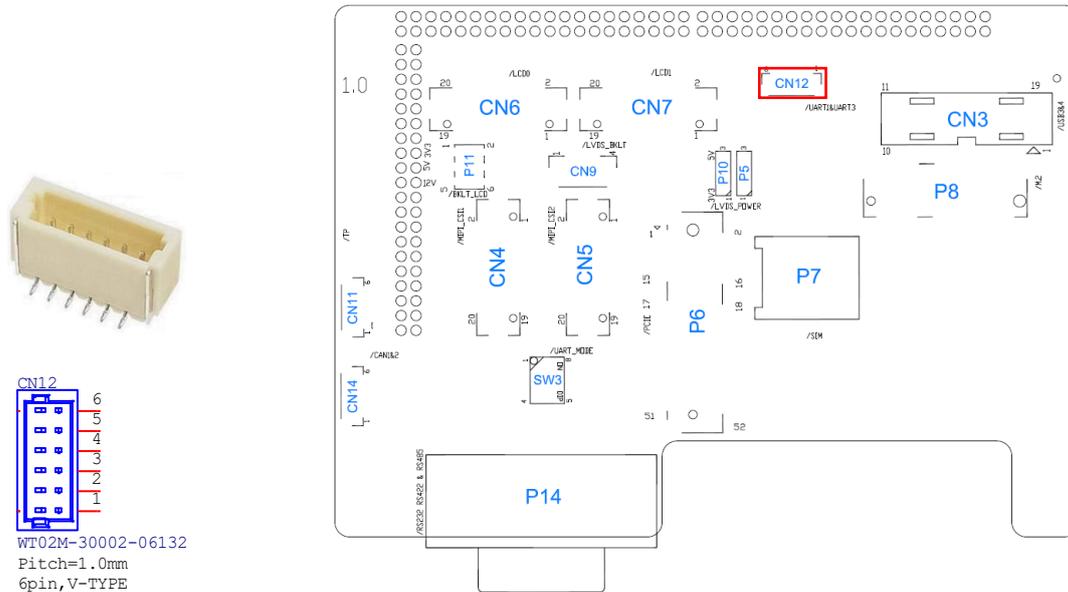


2.6.5 LVDS Backlight Control Connector (CN9)

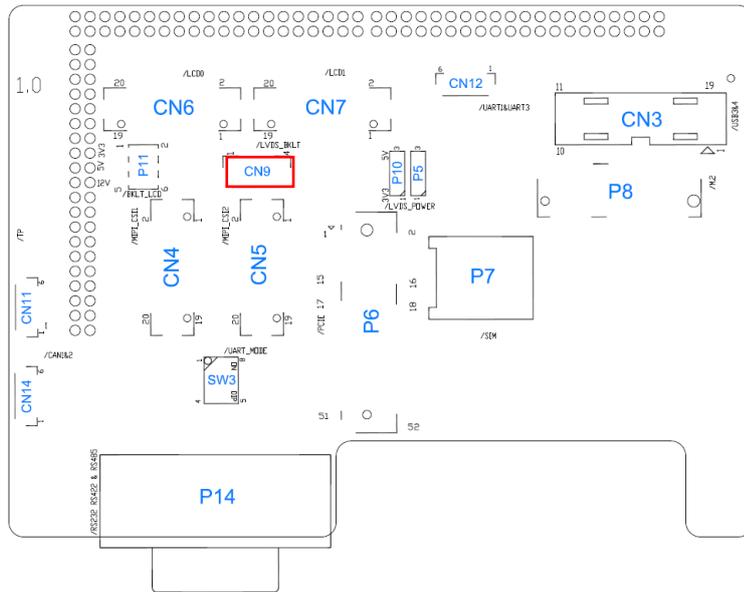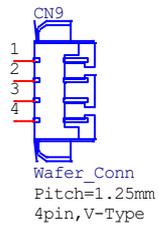




Pin	Signal Name	Pin	Signal Name
1	LVDS_BKLT	2	LVDS_BKLT_EN
3	LVDS_BKLT_PWM	4	Ground

2.6.6 MIPI-CSI Connector (CN4, CN5)

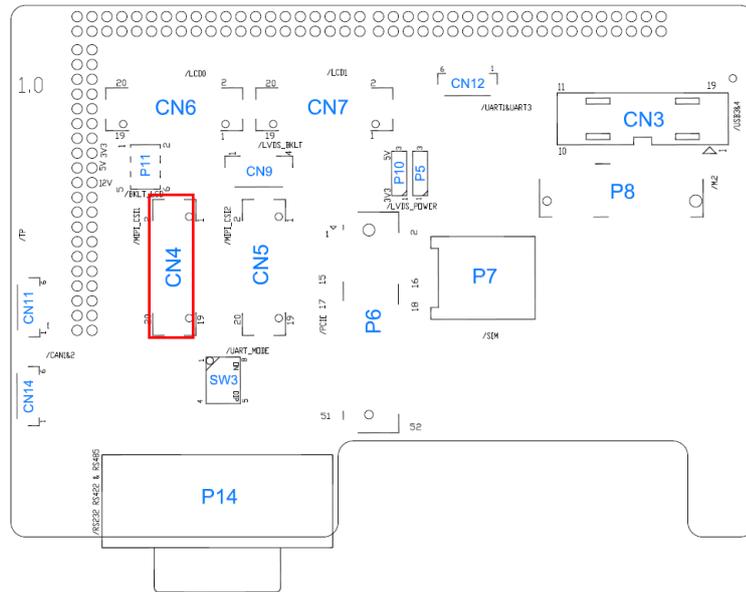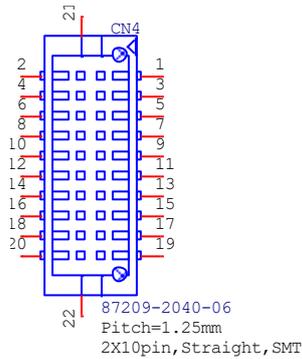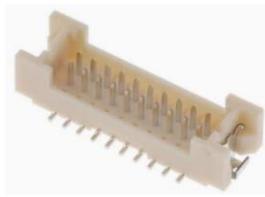

CN4 :


Pin	Signal Name	Pin	Signal Name
1	MIPI_CSI1_CKP	2	MIPI_CSI1_CKN
3	MIPI_CSI1_DP0	4	MIPI_CSI1_DN0
5	MIPI_CSI1_DP1	6	MIPI_CSI1_DN1
7	MIPI_CSI1_DP2	8	MIPI_CSI1_DN2
9	MIPI_CSI1_DP3	10	MIPI_CSI1_DN3
11	GND	12	GND
13	CSI1_SCL	14	CSI1_SDA
15	CSI1_RST_B	16	VDD_2V8
17	CSI1_PWEN_B	18	VDD_1V8
19	CSI1_MCLK	20	GND

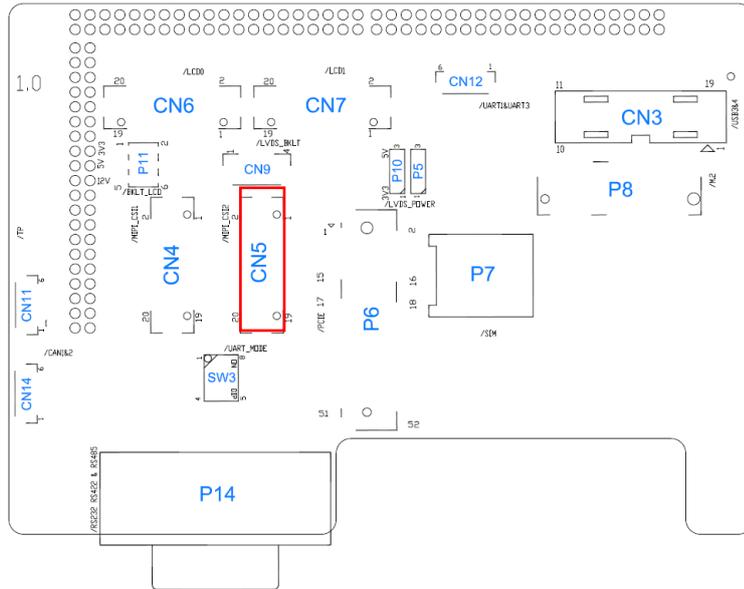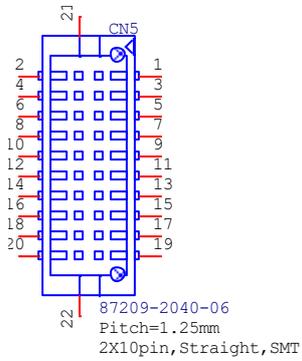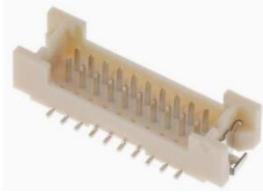

CN5:



Pin	Signal Name	Pin	Signal Name
1	MIPI_CSI2_CKP	2	MIPI_CSI2_CKN
3	MIPI_CSI2_DP0	4	MIPI_CSI2_DN0
5	MIPI_CSI2_DP1	6	MIPI_CSI2_DN1
7	MIPI_CSI2_DP2	8	MIPI_CSI2_DN2
9	MIPI_CSI2_DP3	10	MIPI_CSI2_DN3
11	GND	12	GND
13	CSI2_SCL	14	CSI2_SDA
15	CSI2_RST_B	16	VDD_2V8
17	CSI2_PWEN_B	18	VDD_1V8
19	CSI2_MCLK	20	GND

2.6.7 Dual USB 3.0 Type-A Port (CN3)

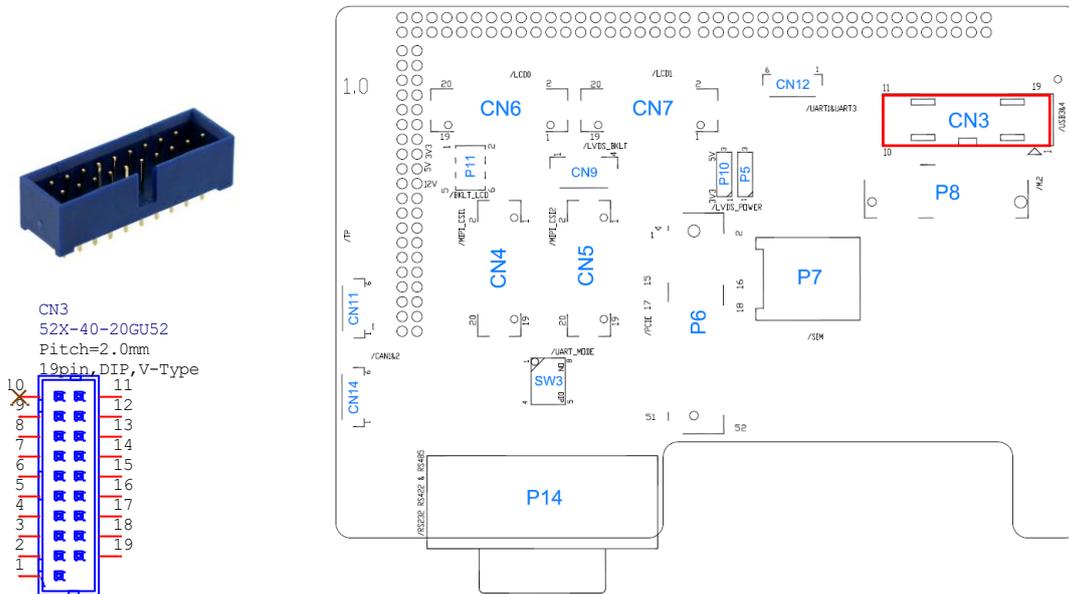

Pin	Signal Name	Pin	Signal Name
10	NC	11	P1_U2_D+
9	P2_U2_D+	12	P1_U2_D-
8	P2_U2_D-	13	GND
7	GND	14	P1_SSTX+
6	P2_SSTX+	15	P1_SSTX-
5	P2_SSTX-	16	GND
4	GND	17	P1_SSRX+
3	P2_SSRX+	18	P1_SSRX-
2	P2_SSRX-	19	VBUS1(900mA)
1	VBUS2(900mA)	X	

2.6.8 NGFF M.2 E2230 Slot (P8)

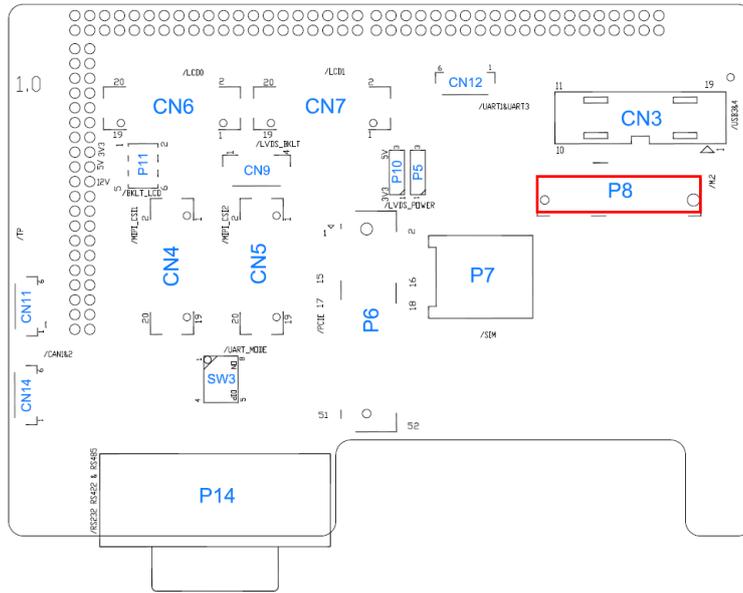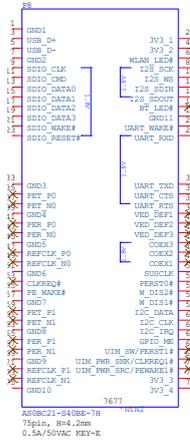

Pin	Signal Name	Pin	Signal Name
1	GND	2	3.3V
3	USB_D+	4	3.3V
5	USB_D-	6	N/C
7	GND	8	PCM_CLK(O)(0/1.8V)
9	SDIO_CLK(O)(0/1.8V)	10	PCM_SYNC(O)(0/1.8V)
11	SDIO_CMD(IO)(0/1.8V)	12	PCM_IN(I)(0/1.8V)
13	SDIO_DAT0(IO)(0/1.8V)	14	PCM_OUT(O)(0/1.8V)
15	SDIO_DAT1(IO)(0/1.8V)	16	N/C
17	SDIO_DAT2(IO)(0/1.8V)	18	GND
19	SDIO_DAT3(IO)(0/1.8V)	20	N/C[BT_WAKE#(I)(0/3.3V)]
21	SDIO_Wake#(I)(0/1.8V)	22	UART_RXD(I)(0/1.8V)
23	SDIO_Reset#(O)(0/1.8V)		Connector Key
	Connector Key		Connector Key
	Connector Key		Connector Key
	Connector Key		Connector Key
	Connector Key	32	UART_TXD(O)(0/1.8V)
33	GND	34	UART_CTS(I)(0/1.8V)
35	N/C	36	UART_RTS(O)(0/1.8V)
37	N/C	38	N/C
39	GND	40	N/C
41	N/C	42	N/C
43	N/C	44	N/C
45	GND	46	N/C
47	N/C	48	N/C
49	N/C	50	SUSCLK(32kHz)(O)(0/3.3V)

51	GND	52	PERST0#(O)(0/3.3V)
53	N/C	54	BT_DISABLE#(0)(0/3.3V)
55	N/C[PE_WAKE#(I)(0/3.3V)]	56	WIFI_DISABLE#(0)(0/3.3V)
57	GND	58	I2C_DATA(IO)(0/3.3)
59	N/C	60	I2C_CLK(O)(0/3.3)
61	N/C	62	I2C_IRQ(I)(0/3.3)
63	GND	64	N/C[3.3V]
65	N/C	66	N/C
67	N/C	68	N/C
69	GND	70	N/C
71	N/C	72	3.3V
73	N/C	74	3.3V
75	GND		


Note:

“N/C” means not connected

“N/C[X/XX/XXX]” means not connected and option X or XX or XXX function.


“(IO)(0/x.xV)” means “input/output” and IO level.

2.6.9 Mini-PCle Slot (P6)

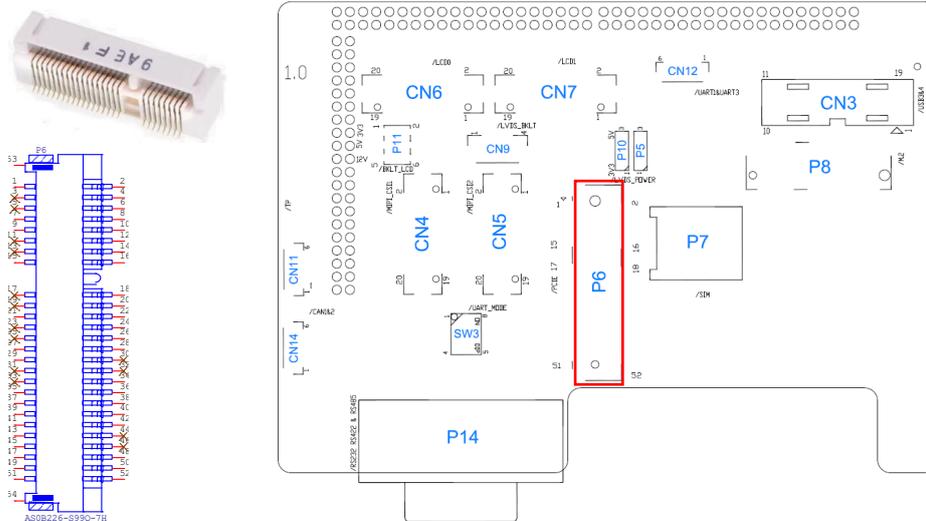


Pin	Signal Name	Pin	Signal Name
1	PCIe_WAKE_B(I)(0/1.8V)	2	3.3V
3	N/C	4	GND
5	N/C	6	N/C[1.5V]
7	PCIe_REQ_B(I)(0/1.8V)	8	SIM_PWR
9	GND	10	SIM_DAT
11	N/C	12	SIM_CLK
13	N/C	14	SIM_RST
15	GND	16	SIM_VPP
17	N/C	18	GND
19	N/C	20	PCIe_DIS_B(O)(0/1.8V)
21	GND	22	PCIe_RST_B(O)(0/1.8V)
23	N/C	24	3.3V
25	N/C	26	GND
27	GND	28	N/C[1.5V]
29	GND	30	N/C
31	N/C	32	N/C
33	N/C	34	GND
35	GND	36	USB_D-
37	GND	38	USB_D+
39	3.3V	40	GND
41	3.3V	42	N/C
43	GND	44	N/C
45	PCM_CLK(O)(0/1.8V)	46	N/C
47	PCM_DIN(I)(0/1.8V)	48	N/C[1.5V]
49	PCM_DO(O)(0/1.8V)	50	GND
51	PCM_SYNC(O)(0/1.8V)	52	3.3V

2.6.10 BKLT_LCD Power Setup (P11)

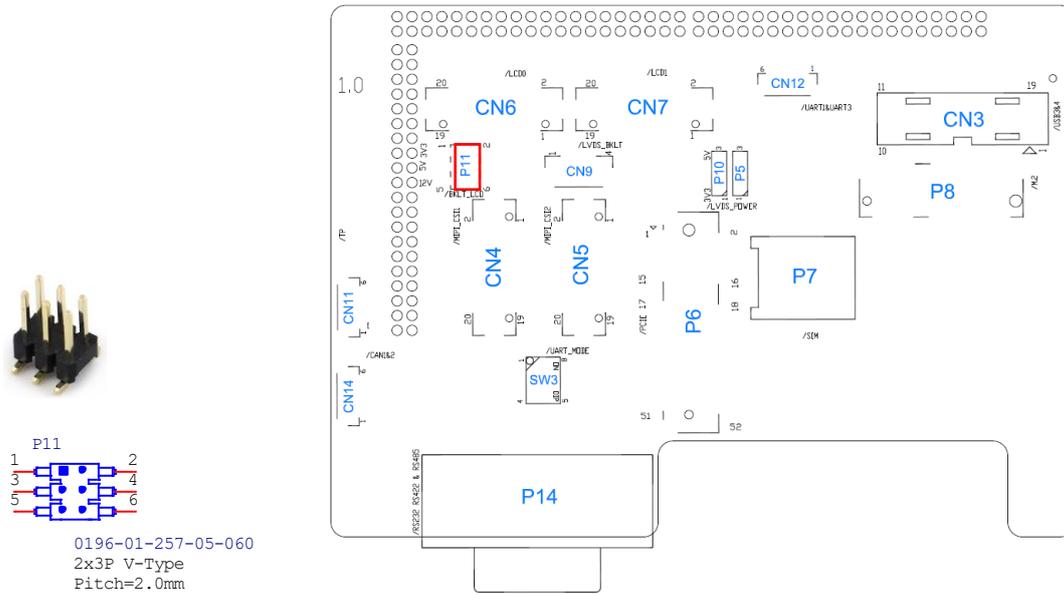


Panel Type	1-2	3-4	5-6
BKLT_LCD Power Setup	3.3V	5V	12V

2.6.11 LVDS_VCC Power Setup (P10)

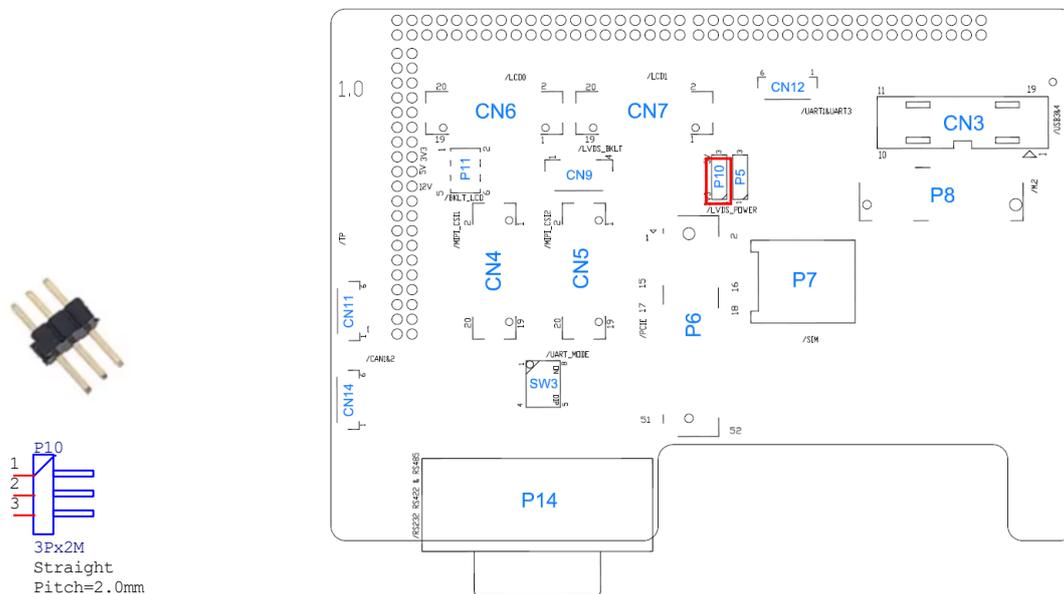


Panel Type	1-2	2-3
LVDS_VCC Power Setup	3.3V	5V

2.6.12 PCIE / M.2 Audio Option (P5)

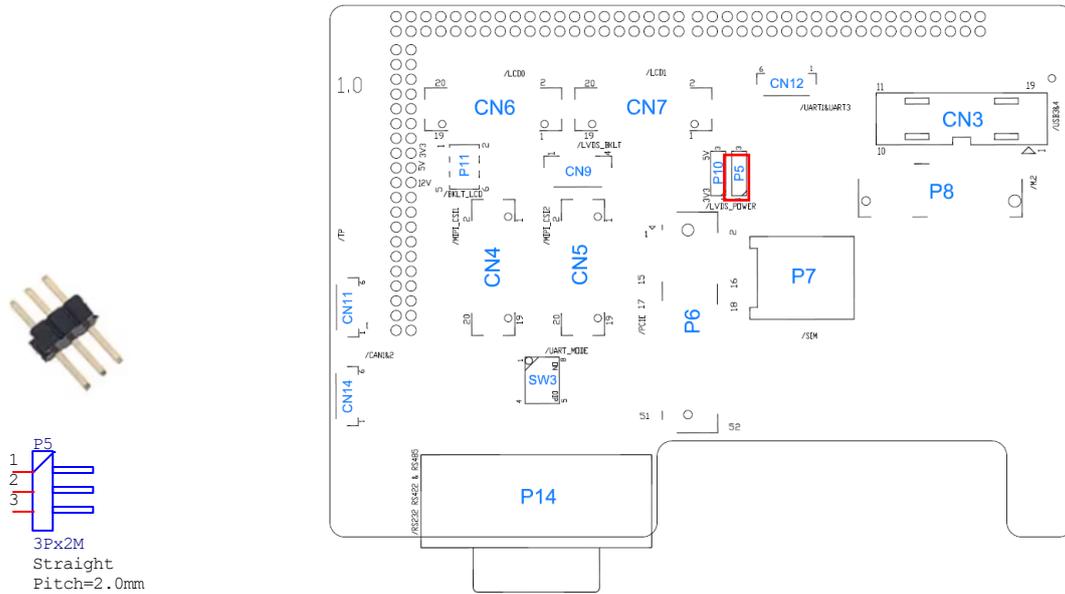


Panel Type	1-2	2-3
PCIE/M.2 PCM select	PCIE PCM	M.2 PCM

2.6.13 I2C Connector (CN11)

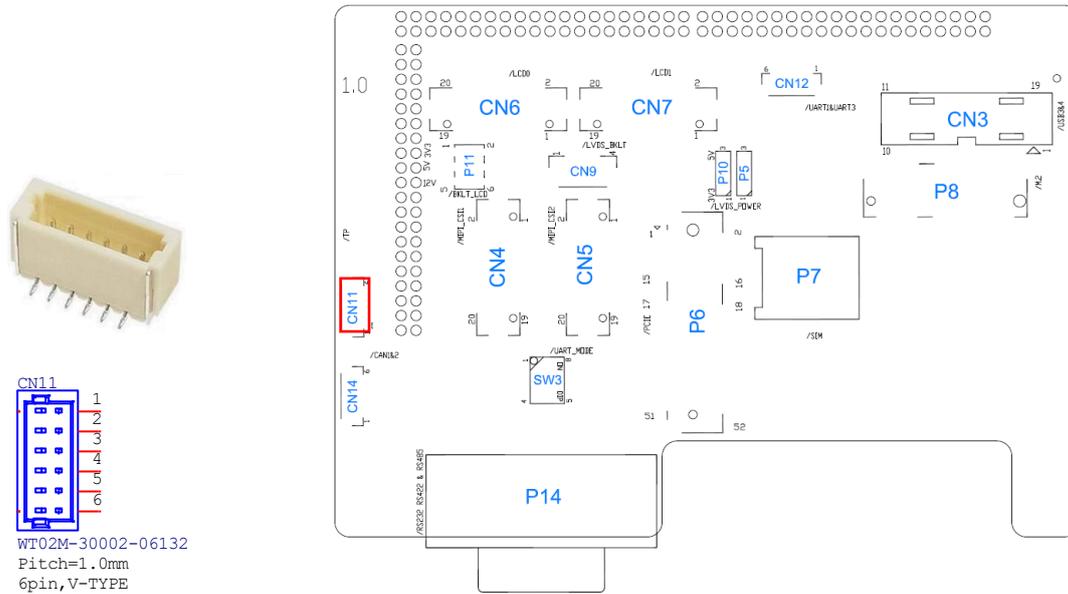

Pin	Signal Name	Pin	Signal Name
1	TP_VIO	4	TP_SCL
2	TP_INT_B	5	TP_SDA
3	TP_RST_B	6	GND

2.6.14 CAN bus (CN14)

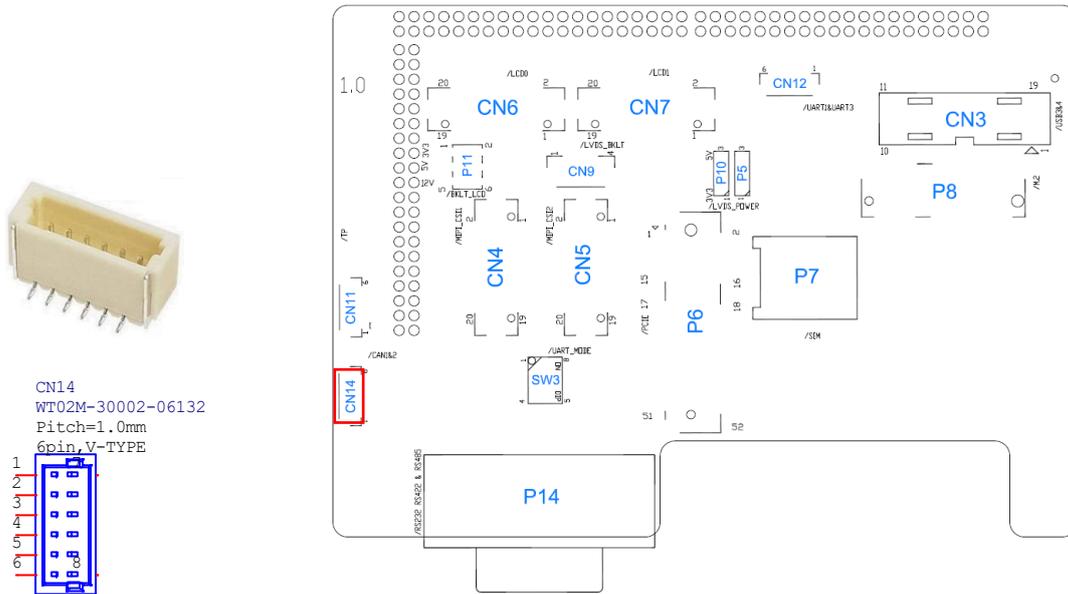

Pin	Signal Name	Pin	Signal Name
1	CAN1_H	4	CAN2_H
2	CAN1_L	5	CAN2_L
3	GND	6	GND

Chapter 3

Software Setup

This chapter introduces the following setup on the device:

(for advanced users only)

- Make a recovery SD card
- Upgrade firmware through the recovery SD card

3.1 Make a Recovery SD Card

Note: This is for advanced users who has IBASE standard image file only.


Basically, IBR215 is preloaded with O.S (Android or Yocto) into eMMC by default. Connect the HDMI with IBR215, and 12V-24V power directly.

This chapter guides you to make a recovery boot-up microSD card.

3.1.1 Preparing the Recovery SD card to Install Linux / Android image into eMMC

Note: All data in the eMMC will be erased.

- 1) System requirements:
Operating System: Windows 7 or later
Tool: uuu
SD card: 4GB or greater in size
- 2) Insert your SD card to this board (i.e. the P1 connector), connect the board to PC through the mini-USB port (i.e. the P4 connector), and change the boot mode to download mode.

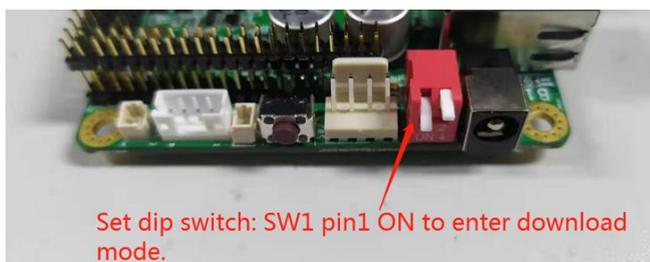

- 3) boot IBR215 and flash SD via CMD command “uuu.exe uuu-sdcard.auto” or double click “FW_down-sdcard.bat” (Same way as PCBA update)


名称	修改日期	类型	大小
changelog.txt	2021/7/23 14:51	TXT 文件	1 KB
FW_down-sdcard.bat	2021/7/23 13:57	Windows 批处理...	1 KB
FW_down-uboot.bat	2021/7/23 13:57	Windows 批处理...	1 KB
IBR215-sd-recovery-guideline.docx	2021/8/19 18:01	Microsoft Word ...	348 KB
imx-boot-imx8mpevk-sd.bin-flash_evk	2021/7/23 13:57	BIN-FLASH_EVK ...	1,233 KB
imx-boot-imx8mpevk-sd.bin-flash_evk-download	2021/7/23 13:57	BIN-FLASH_EVK-...	1,233 KB
imx-image-multimedia-imx8mpevk.sdcard	2021/7/23 14:37	SDCARD 文件	603,920 KB
uuu_1.4.95.exe	2021/7/23 13:57	应用程序	1,273 KB
uuu-sdcard.auto	2021/7/23 13:57	AUTO 文件	1 KB
uuu-uboot.auto	2021/7/23 13:57	AUTO 文件	2 KB

3.1.2 Upgrade Firmware through the Recovery SD Card

1) Put recovery files into USB flash disk (FAT32)


A> Yocto/Ubuntu: Copy all recovery files into PATH:

`/USB_flash_disk/hmsupdate/yocto/`

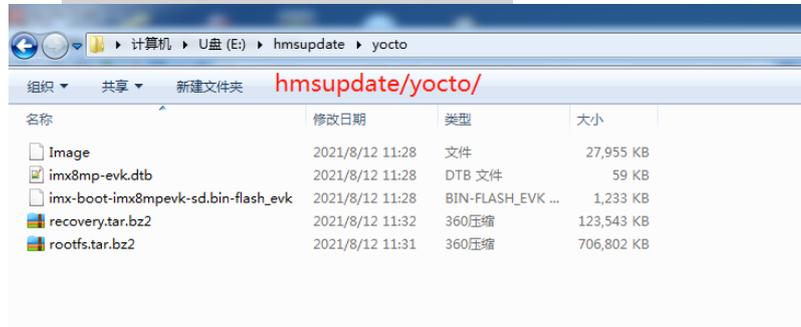


B> Android: Copy all recovery files into PATH:

`/USB_flash_disk/hmsupdate/android/`

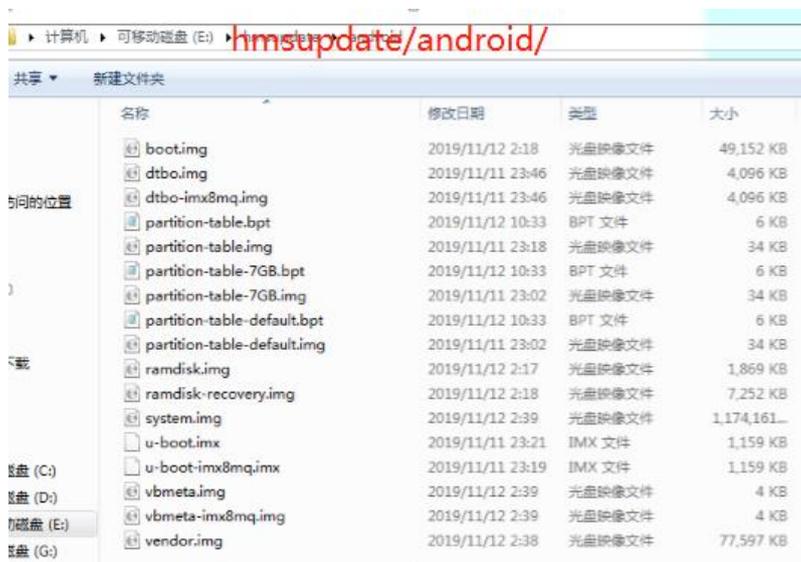

- 2) Plug (step1) SD and (step2) USB flash disk into IBR215
- 3) Normal boot IBR215 (SW1 Pin1 OFF), start recovery eMMC automatically.
- 4) The update information will show on HDMI.

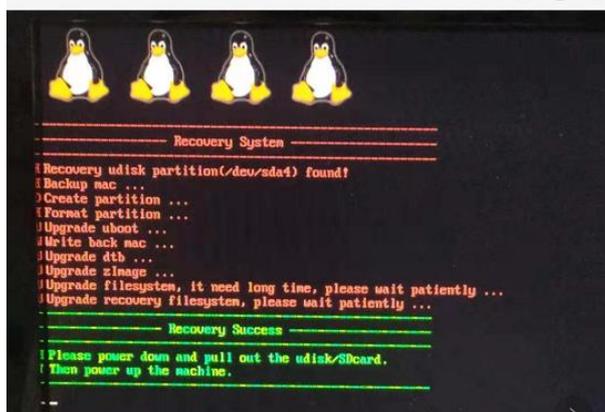

- 5) Show "Flashing successfully completed", then power off and remove recovery SD and USB flash disk.

Chapter 4

BSP Source Guide

This chapter is dedicated for advanced software engineers only to build BSP source. The topics covered in this chapter are as follows:

- Preparation
- Building release
- Installing release to board

4.1 Building BSP Source

4.1.1 Preparation

The recommended minimum Ubuntu version is 18.04 or later.

- 1) Install necessary packages before building:

```
sudo apt-get install gawk wget git-core diffstat unzip texinfo gcc-multilib \
build-essential chrpath socat cpio python python3 python3-pip python3-pexpect \
xz-utils debianutils iputils-ping python3-git python3-jinja2 libegl1-mesa libsdl1.2-dev \
pylint3 xterm
```

- 2) Download toolchain

- A) The clang used to compile Linux kernel needs to be a newer version. Perform the following steps to set the clang to be used to compile Linux kernel:

```
sudo git clone https://android.googlesource.com/platform/prebuilts/clang/host/linux-x86 /opt/ prebuilt-
android-clang -b master
cd /opt/prebuilt-android-clang
sudo git checkout 007c96f100c5322acc37b84669c032c0121e68d0 export CLANG_PATH=/opt/prebuilt-
android-clang
```

The preceding export commands can be added to "/etc/profile". When the host boots up, "AARCH64_GCC_CROSS_COMPILE" and "CLANG_PATH" are set and can be directly used.

- B) Prepare the build environment for U-Boot and Linux kernel.
This step is mandatory because there is no GCC cross-compile tool chain in the one in AOSP codebase.
 - a. Download the tool chain for the A-profile architecture on arm Developer GNU-A Downloads page. It is recommended to use the 8.3 version for this release. You can download the "gcc-arm-8.3-2019.03-x86_64-aarch64-elf.tar.xz" or "gcc-arm-8.3-2019.03-x86_64-aarch64-linux-gnu.tar.xz". The first one is dedicated for compiling bare-metal programs, and the second one can also be used to compile the application programs.
 - b. Decompress the file into a path on local disk, for example, to "/opt/". Export a variable named "AARCH64_GCC_CROSS_COMPILE" to point to the tool as follows:

```
# if "gcc-arm-8.3-2019.03-x86_64-aarch64-elf.tar.xz" is used
sudo tar -xvJf gcc-arm-8.3-2019.03-x86_64-aarch64-elf.tar.xz -C /opt export
AARCH64_GCC_CROSS_COMPILE=/opt/gcc-arm-8.3-2019.03-x86_64-aarch64-elf/bin/aarch64-elf-
# if "gcc-arm-8.3-2019.03-x86_64-aarch64-linux-gnu.tar.xz" is used
sudo tar -xvJf gcc-arm-8.3-2019.03-x86_64-aarch64-linux-gnu.tar.xz -C /opt export
AARCH64_GCC_CROSS_COMPILE=/opt/gcc-arm-8.3-2019.03-x86_64-aarch64-
linuxgnu/bin/aarch64-linux-gnu
```

- 3) Decompress the IBR215 source file (example ibr215-bsp.tar.bz2) into "/home/" folder.

4.1.2 Building release

4.1.2.1 For Yocto/Ubuntu/Debian

```
cd /home/bsp-folder
./build-bsp-5.4.sh
```

4.1.3.2 For Android

```
cd /home/bsp-folder
source build/envsetup.sh
lunch evk_8mp-userdebug
make ANDROID_COMPILE_WITH_JACK=false
./imx-make.sh -j4
Make -j4
```

4.1.3 Installing release to board

```
cd /home/bsp-folder
for yocto/Ubuntu/debian
1. cp file in release/ to windows
2. set board to download mode, and connect otg to usb
3. run uuu.exe uuu.auto
```

for android11

1. copy out the following file in out/target/product/imx8mp/

```
boot-debug.img dtbo-imx8mp-lvds-panel.img partition-table-28GB-dual.img ramdisk.img u-boot-imx8mp-trusty.img vbmata-imx8mp
boot.img dtbo-imx8mp-mipi-panel.img partition-table-28GB.img ramdisk-recovery.img u-boot-imx8mp-trusty-powersave.img vbmata-imx8mp
bootloader-imx8mp-dual.img dtbo-imx8mp-ov5640.img partition-table.bpt super_empty.img u-boot-imx8mp-trusty-recovery-unlock.img vbmata-imx8mp
bootloader-imx8mp-trusty-dual.img dtbo-imx8mp-powersave.img partition-table-default.bpt super.img uuu_imx_android_flash.bat vbmata-imx8mp
dtb.img dtbo-imx8mp-powersave-non-rpmag.img partition-table-default.img system_ext.img vbmata.img vbmata-imx8mp
dtbo.img dtbo-imx8mp-rpmag.img partition-table-dual.bpt system.img vbmata-imx8mp-basler.img vbmata-imx8mp
dtbo-imx8mp-basler.img fastboot_imx_flashall.bat partition-table-dual.img u-boot.img vbmata-imx8mp-basler-ov5640.img vendor_boot.img
dtbo-imx8mp-basler-ov5640.img imx8mp_dci_demo.img partition-table.img u-boot-imx8mp-evk-uuu.img vbmata-imx8mp.img vbmata-imx8mp
dtbo-imx8mp.img partition-table-28GB.bpt product.img u-boot-imx8mp.img vbmata-imx8mp-lvds.img vendor.img
dtbo-imx8mp-lvds.img partition-table-28GB-dual.bpt ramdisk-debug.img u-boot-imx8mp-powersave.img vbmata-imx8mp-lvds-panel.img
/
```

2. set board to download mode, and connect otg to usb
 3. download uuu.exe from <https://github.com/NXPmicro/mfgtools/releases>
 run : uuu_imx_android_flash.bat -f imx8mp -e

Appendix

How to Use GPIO in Linux

```
# GPIO Value Rule : gpioX_N >> 32*(X-1)+N
# Take gpio5_18 as example, export value should be 32*(5-1)+18=146

# GPIO example 1: Output
echo 32 > /sys/class/gpio/export
echo out > /sys/class/gpio/gpio146/direction
echo 0 > /sys/class/gpio/gpio146/value
echo 1 > /sys/class/gpio/gpio146/value

# GPIO example 2: Input
echo 32 > /sys/class/gpio/export
echo in > /sys/class/gpio/gpio146/direction
cat /sys/class/gpio/gpio146/value
```

How to Use Watchdog in Linux

```
// create fd
int fd;
//open watchdog device
fd = open("/dev/watchdog", O_WRONLY);
//get watchdog support
ioctl(fd, WDIOCG_GETSUPPORT, &ident);
//get watchdog status
ioctl(fd, WDIOCG_GETSTATUS, &status);
//get watchdog timeout
ioctl(fd, WDIOCG_GETTIMEOUT, &timeout_val);
//set watchdog timeout
ioctl(fd, WDIOCG_SETTIMEOUT, &timeout_val);
//feed dog
ioctl(fd, WDIOCG_KEEPAKIVE, &dummy);
```

eMMC Test

Note: This operation may damage the data stored in eMMC flash. Before starting the test, make sure there is no critical data in the eMMC flash being used.

- **Read, write, and check**

```
MOUNT_POINT_STR="/var"

#create data file
dd if=/dev/urandom of=/tmp/data1 bs=1024k count=10
#write data to emmc
dd if=/tmp/data1 of=$MOUNT_POINT_STR/data2 bs=1024k
count=10
#read data2, and compare with data1
cmp $MOUNT_POINT_STR/data2 /tmp/data1
```

- **eMMC speed test**

```
MOUNT_POINT_STR="/var"

#get emmc write speed"
time dd if=/dev/urandom of=$MOUNT_POINT_STR/test bs=1024k
count=10
# clean caches
echo 3 > /proc/sys/vm/drop_caches
#get emmc read speed"
time dd if=$MOUNT_POINT_STR/test of=/dev/null bs=1024k
count=10
```

USB (flash disk) Test

Insert the USB flash disk. Then make sure it is in IBR210 device list.

Note: This operation may damage the data stored in the USB flash disk.
Before starting the test, make sure there is no critical data in the eMMC flash being used.

- **Read, write, and check**

```
USB_DIR="/run/media/mmcblk1p1"
#create data file
dd if=/dev/urandom of=/var/data1 bs=1024k count=100
#write data to usb flash disk
dd if=/var/data1 of=$USB_DIR/data2 bs=1024k count=100
#read data2, and compare with data1
cmp $USB_DIR/data2 /var/data1
```

- **USB speed test**

```
USB_DIR="/run/media/mmcblk1p1"
# usb write speed
dd if=/dev/zero of=$BASIC_DIR/$i/test bs=1M count=1000
oflag=nocache

# usb read speed
dd if=$BASIC_DIR/$i/test of=/dev/null bs=1M oflag=nocache
```

SD Card Test

When IBR210 is booted from eMMC, SD card is “/dev/mmcblk1” and able to see by “ls /dev/mmcblk1*” command:

```
/dev/mmcblk1 /dev/mmcblk1p2 /dev/mmcblk1p4  
/dev/mmcblk1p5 /dev/mmcblk1p6
```

Note: This operation may damage the data stored the SD card. Before starting the test, make sure there is no critical data in the eMMC flash being used.

- **Read, write, and check**

```
SD_DIR="/run/media/mmcblk1"  
#create data file  
dd if=/dev/urandom of=/var/data1 bs=1024k count=100  
#write data to SD card  
dd if=/var/data1 of=$SD_DIR/data2 bs=1024k count=100  
#read data2, and compare with data1  
cmp $SD_DIR/data2 /var/data1
```

- **SD card speed test**

```
SD_DIR="/run/media/mmcblk1"  
  
# SD write speed  
dd if=/dev/zero of=$SD_DIR/test bs=1M count=1000  
oflag=nocache  
  
# SD read speed  
dd if=$SD_DIR/test of=/dev/null bs=1M oflag=nocache
```

RS-232 Test

```
//open ttymxc1
fd = open(/dev/ttymxc1,O_RDWR );

//set speed
tcgetattr(fd, &opt);
cfsetispeed(&opt, speed);
cfsetospeed(&opt, speed);
tcsetattr(fd, TCSANOW, &opt)

//get_speed
tcgetattr(fd, &opt);
speed = cfgetispeed(&opt);

//set_parity
// options.c_cflag
options.c_cflag &= ~CSIZE;
options.c_cflag &= ~CSIZE;
options.c_lflag &= ~(ICANON | ECHO | ECHOE | ISIG); /*Input*/
options.c_oflag &= ~OPOST; /*Output*/
//options.c_cc
options.c_cc[VTIME] = 150;
options.c_cc[VMIN] = 0;
#set parity
tcsetattr(fd, TCSANOW, &options)

//write ttymxc1
write(fd, write_buf, sizeof(write_buf));

//read ttymxc1
read(fd, read_buf, sizeof(read_buf))
```

RS-485 Test

```
//open ttymxc1
fd = open(/dev/ttymxc1,O_RDWR );

//set speed
tcgetattr(fd, &opt);
cfsetispeed(&opt, speed);
cfsetospeed(&opt, speed);
tcsetattr(fd, TCSANOW, &opt

//get_speed
tcgetattr(fd, &opt);
speed = cfgetispeed(&opt);

//set_parity
// options.c_cflag
options.c_cflag &= ~CSIZE;
options.c_cflag &= ~CSIZE;
options.c_cflag &= ~CRTSCTS;
options.c_lflag  &= ~(ICANON | ECHO | ECHOE | ISIG); /*Input*/
options.c_oflag  &= ~OPOST; /*Output*/
//options.c_cc
options.c_cc[VTIME] = 150;
options.c_cc[VMIN] = 0;
#set parity
tcsetattr(fd, TCSANOW, &options)

//write ttymxc1
write(fd, write_buf, sizeof(write_buf));

//read ttymxc1
read(fd, read_buf, sizeof(read_buf))
```

Audio Test

```
Yocto/debian/ubuntu
// play mp3 by audio (ALC5640)
gplay-1.0 /home/root/ testscript/audio/a.mp3 --audio-
sink="alsasink -device=hw:1"
// record mp3 by audio (ALC5640)
```

```
arecord -f cd $basepath/b.mp3 -D plughw:1,0  
for android:  
please record and playback apk
```

Ethernet Test

- **Ethernet Ping test**

```
#ping server 192.168.1.123  
ping -c 20 192.168.1.123 >/tmp/ethernet_ping.txt
```

- **Ethernet TCP test**

```
#server 192.168.1.123 run command "iperf3 -s"  
#communicate with server 192.168.1.123 in tcp mode by  
iperf3  
iperf3 -c 192.168.1.123 -i 1 -t 20 -w 32M -P 4
```

- **Ethernet UDP test**

```
#server 192.168.1.123 run command "iperf3 -s"  
#communicate with server 192.168.1.123 in udp mode by  
iperf3  
iperf3 -c $SERVER_IP -u -i 1 -b 200M
```

LVDS Test(android not support)

```
//Open the file for reading and writing
framebuffer_fd = open("/dev/fb0", O_RDWR);

// Get fixed screen information
ioctl(framebuffer_fd, FBIOGET_FSCREENINFO, &finfo)

// Get variable screen information
ioctl(framebuffer_fd, FBIOGET_VSCREENINFO, &vinfo)

// Figure out the size of the screen in bytes
screensize = vinfo.xres * vinfo.yres * vinfo.bits_per_pixel / 8;

// Map the device to memory
fbp = (char *)mmap(0, screensize, PROT_READ | PROT_WRITE,
MAP_SHARED, framebuffer_fd, 0);

// Figure out where in memory to put the pixel
memset(fbp, 0x00, screensize);

//draw point by fbp
long int location = 0;
location = (x+g_xoffset) * (g_bits_per_pixel/8) +
(y+g_yoffset) * g_line_length;
*(fbp + location + 0) = color_b;
*(fbp + location + 1) = color_g;
*(fbp + location + 2) = color_r;

//close framebuffer fd
close(framebuffer_fd);
```

HDMI Test

- **HDMI display test**

```
//Open the file for reading and writing
framebuffer_fd = open("/dev/fb2", O_RDWR);

// Get fixed screen information
ioctl(framebuffer_fd, FBIOGET_FSCREENINFO, &finfo)

// Get variable screen information
ioctl(framebuffer_fd, FBIOGET_VSCREENINFO, &vinfo)

// Figure out the size of the screen in bytes
screensize = vinfo.xres * vinfo.yres * vinfo.bits_per_pixel / 8;

// Map the device to memory
fbp = (char *)mmap(0, screensize, PROT_READ | PROT_WRITE,
MAP_SHARED, framebuffer_fd, 0);

// Figure out where in memory to put the pixel
memset(fbp, 0x00, screensize);

//draw point by fbp
long int location = 0;
location = (x+g_xoffset) * (g_bits_per_pixel/8) +
(y+g_yoffset) * g_line_length;
*(fbp + location + 0) = color_b;
*(fbp + location + 1) = color_g;
*(fbp + location + 2) = color_r;

//close framebuffer fd
close(framebuffer_fd);
```

- **HDMI audio test**

```
#enable hdmi audio
echo 0 > /sys/class/graphics/fb2/blank
#play wav file by hdmi audio
aplay /home/root/testscript/hdmi/1K.wav -D plughw:0,0
```

3G Test (not for android, android have 3g config in setting)

- **Checking 3G state**

```
#Check UC20 module state and sim state  
cat /dev/ttyUSB4 &
```

- **Testing 3G**

```
# the command will connect 3g to network  
# make sure that the simcard is inserted right, and ANT  
connected  
pppd call quectel-ppp  
  
echo "ping www.baidu.com to make sure the network ok"  
ping www.baidu.com
```

Onboard Connector Types

Function	Connector Name	Onboard Type	Compatible Mating Type for Reference
LVDS Display Connector	CN6,CN7	Hirose DF13E-10DP-1.25V	Hirose DF13E-10DP-1.25C
UART Connector	CN12	TechBest WT02M-30002-06132	JST SHR-03V-S-B
LVDS Backlight Control Connector	CN9	TechBest 01024041008	Molex 51021-0400
Audio Line-In & Line-Out Connector	CN2	TechBest WT02M-30002-06132	JST SHR-03V-S-B
USB Hub Connector	CN3	PINREX 52X-40-20GU52	Molex 51110-2050
MIPI-CSI Connector	CN4,CN5	Hirose DF13E-10DP-1.25V	Hirose DF13E-10DP-1.25C
I ² C Connector	CN13	TechBest WT02M-30002-06132	JST SHR-03V-S-B
CAN bus	CN14	TechBest WT02M-30002-06132	JST SHR-03V-S-B
Internal DC Power Input	CN18	TechBest 2542-WS-04-LF	Molex 22013047

Connector types may be subject to change without prior notice.